 





Owner Manual

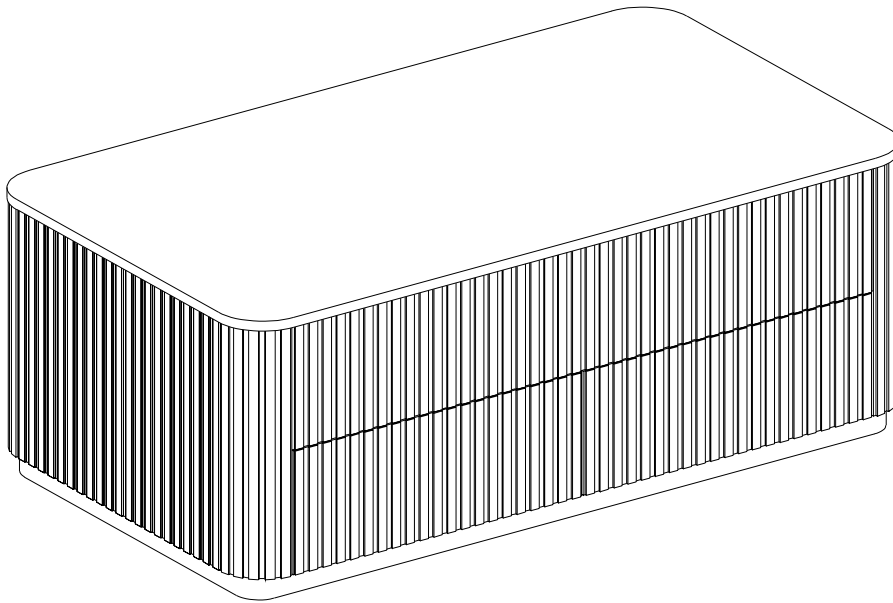

Thank you for purchasing this coffee table.















Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. We are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.

   Exploded Diagram

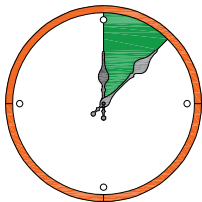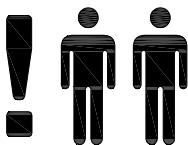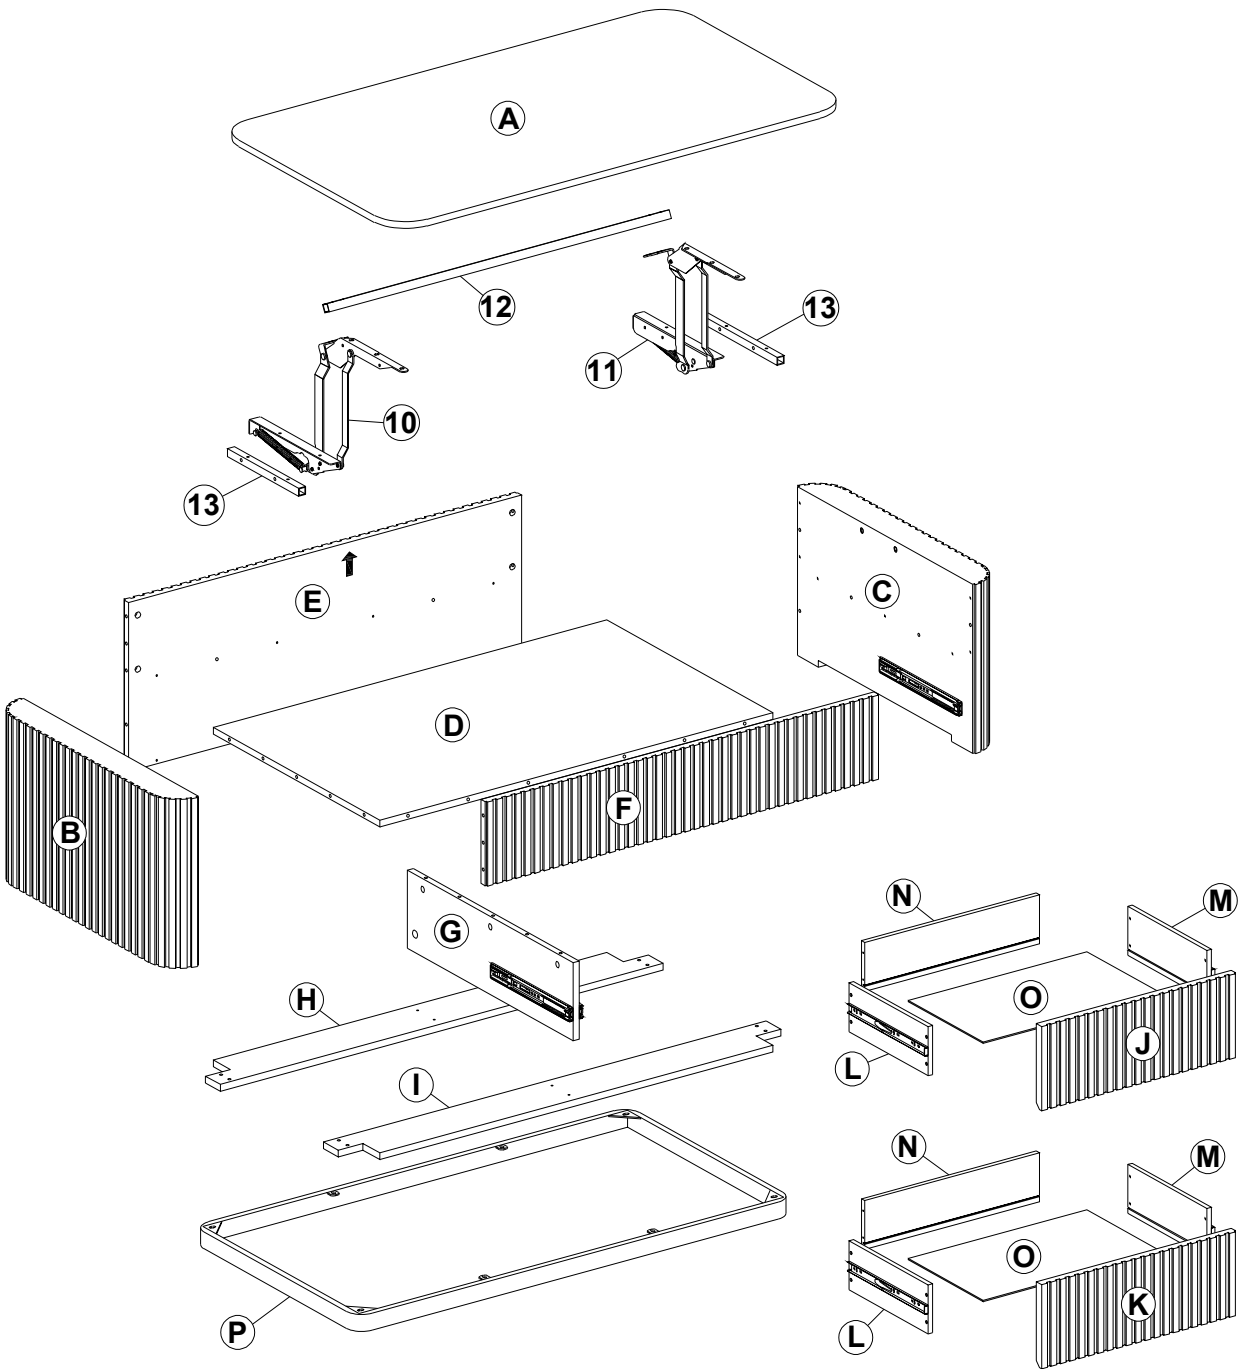



Around 40 min

              PARTS LIST

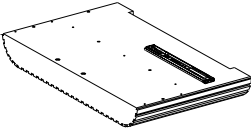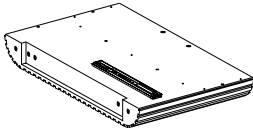A  Top Panel	X1	B  Left Side Panel	X2	C  Right Side Panel	X1	D  Fixed Shelf	X1
E  Back Panel	X1	F  Front Panel	X1	G  Middle Fixed Panel	X1	H  Bottom Back Rail	X1
I  Bottom Front Rail	X1	J  Left Drawer Panel	X1	K  Right Drawer Panel	X1	L  Drawer Left Side Panel	X2
M  Drawer Right Side Panel	X2	N  Drawer Back Panel	X1	O  Drawer Bottom Panel	X1	P  Bottom Metal Frame	X1












NOTE DIFFERENT MODELS

  QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



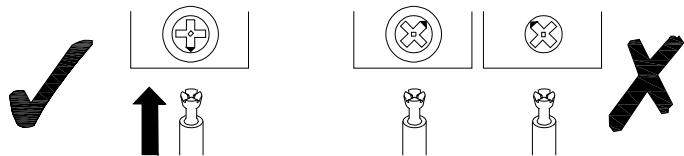
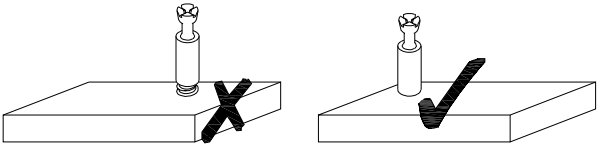


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

           HARDWARE LIST

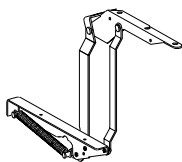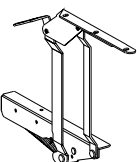1	x 30	2	x 17	3	x 30	4	x 16
							
Cam Bolt		Wood Dowel Ø8x30mm		Cam Lock		Bolt M6*35mm	
5	x 1	6	x 20	7	x 18	8	x 4
							
Allen Key 4mm		Flat Head Screw Ø4X40mm		Bolt M6*12mm		Nut M6	
9	x 1	10		11	x 1	12	x 1
							
Wrench 10#		Left Lift Mechanism		Right Lift Mechanism		Metal Crossbar	
13	x2	14	x1				
							
Metal Fixed Tube		Screwdriver					

    SPARE LIST

1	x 3	2	x 2	3	x 3	4	x 2
							
Cam Bolt		Wood Dowel Ø8x30mm		Cam Lock		Bolt M6*35mm	
6	x 2	7	x 2	8	x 1		
							
Flat Head Screw Ø4X40mm		Bolt M6*12mm		Nut M6			

Before your installation, please make sure that you have all the parts listed on the manual.

If you find something missing, stop installing and contact your supplier immediately.


NOTE: Should be assembled on soft surface to keep balance.

ASSEMBLY INSTRUCTION

STEP 1

1		x30
14		x1


 
NOTE:
Check if the slide
rail limit switch
has returned
to its home
position.

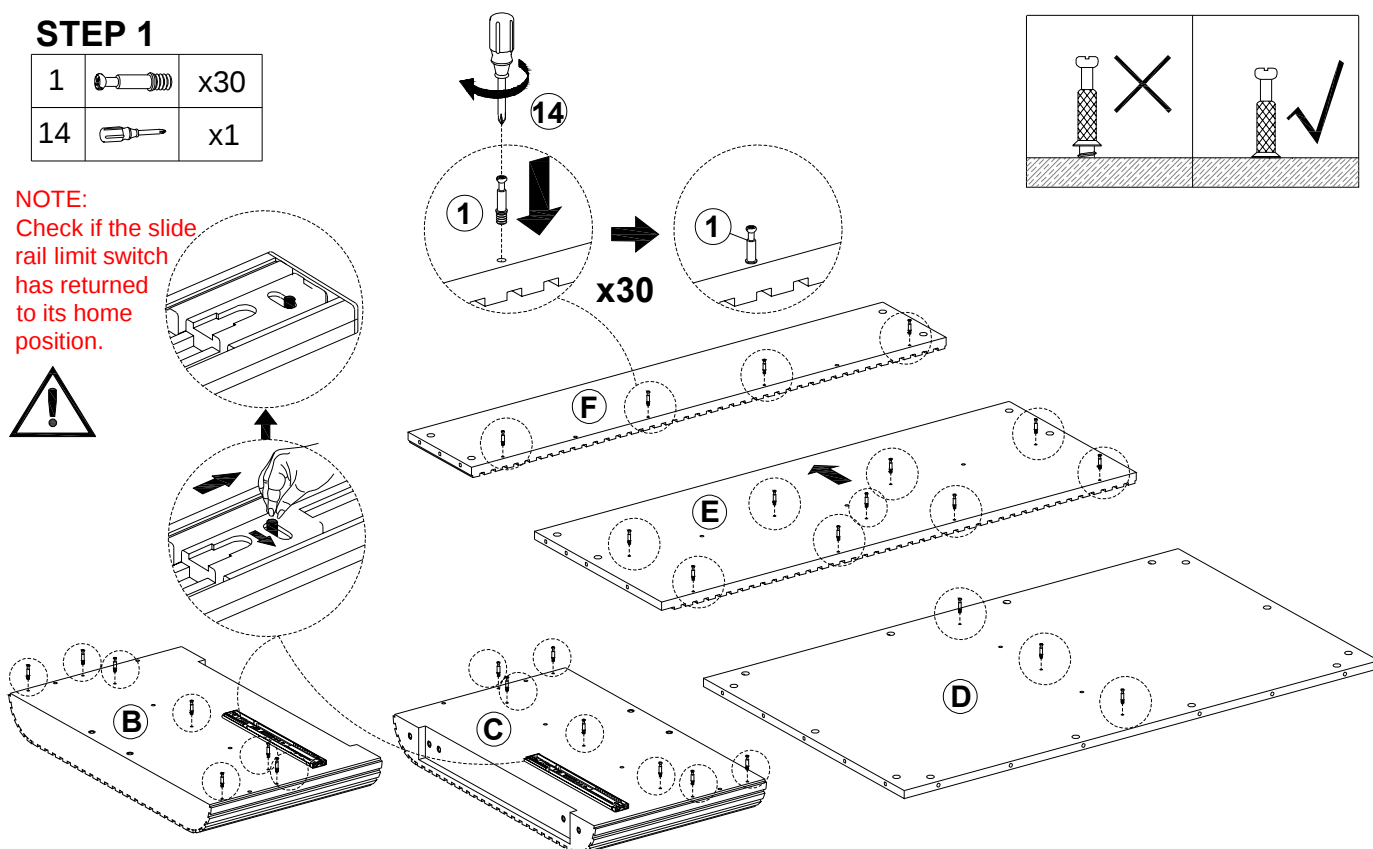

Insert the cam bolt (1) into the left side panel (B), right side panel (C), bracket (D), back panel (E), and front panel (F), and tighten it with a screwdriver (14) according to the instructions.

STEP 2


2		x 2
3		x 3

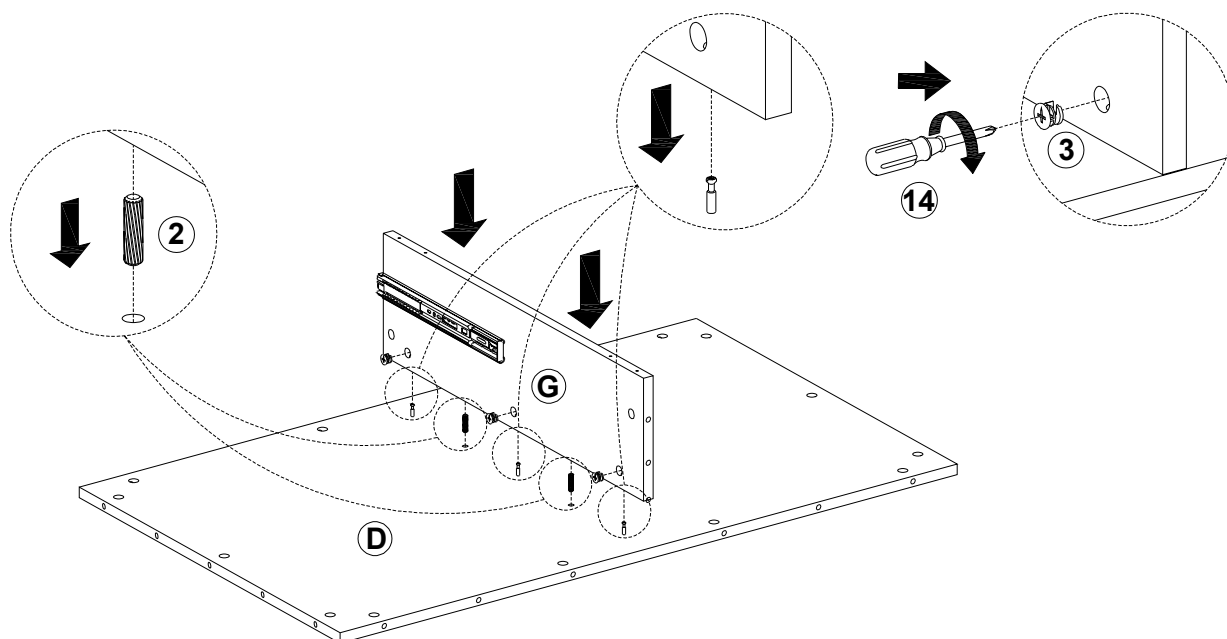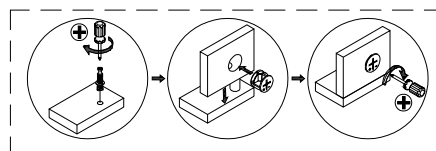  

Insert the wooden dowel (2) into the hole of the fixed bracket (D), use the cam lock (3) to connect the middle fixed panel (G), and tighten it with a screwdriver (14) according to the instructions.

STEP 3


2		x 3
3		x 5

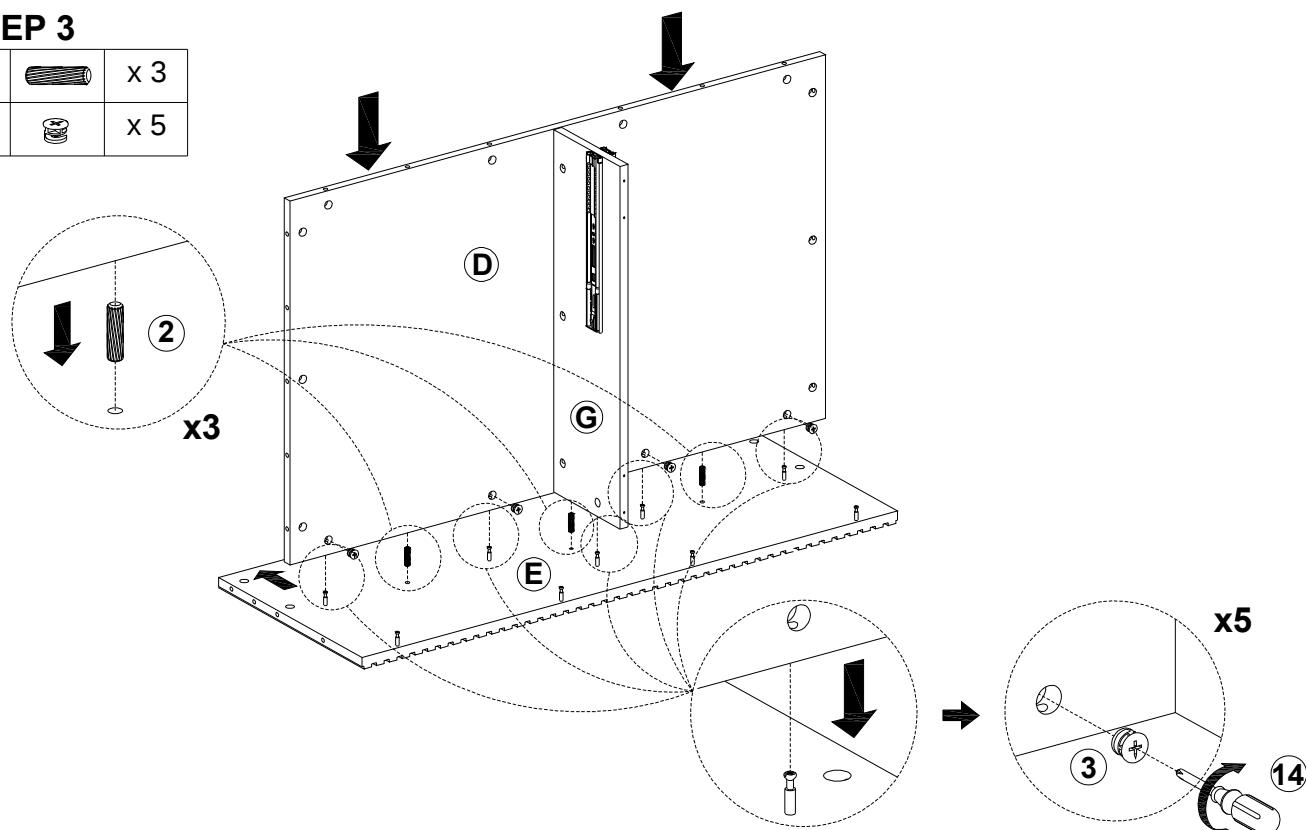 

Insert the wooden dowel (2) into the hole of the back panel (E), use the cam lock (3) to connect the fixing bracket (D), and tighten with the screwdriver (14) according to the instructions.

STEP 4



2		x 2
3		x 4

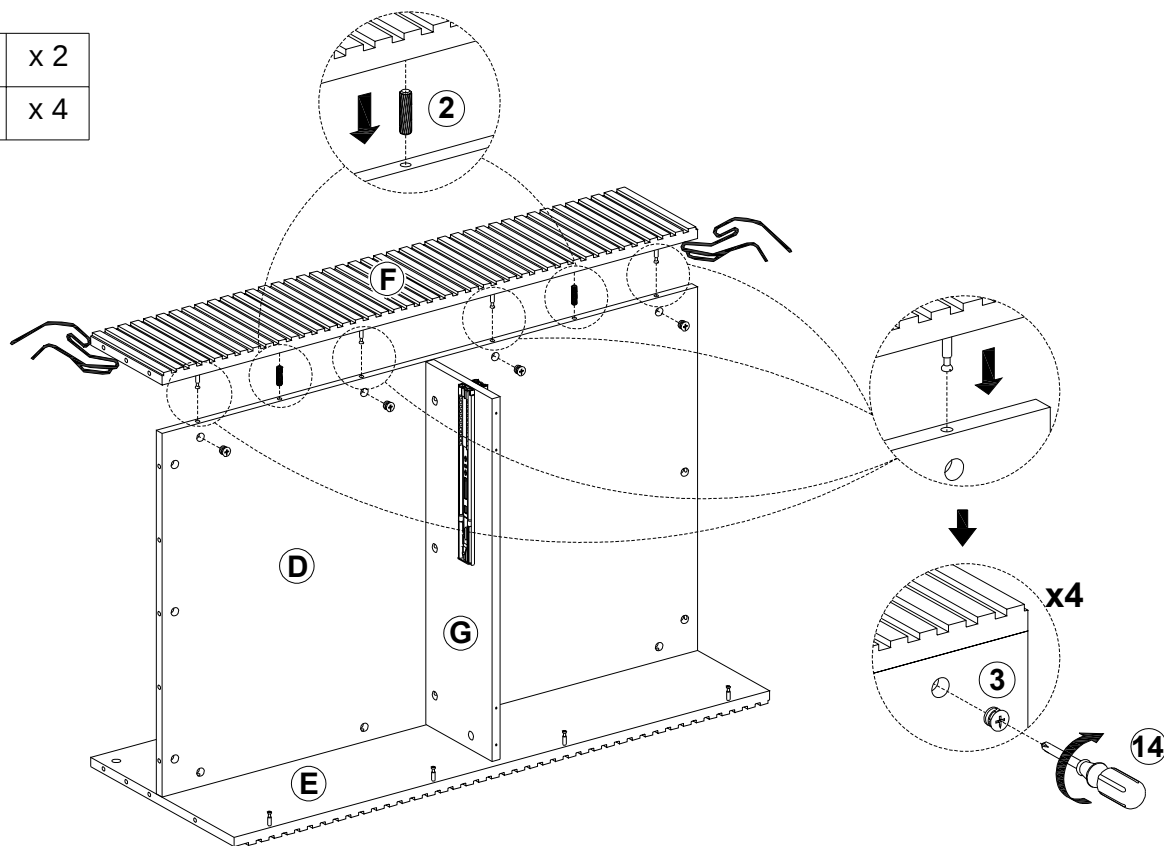 

Insert the wooden dowel (2) into the hole of the bracket (D), use the cam lock (3) to connect the front panel (F), and tighten with a screwdriver (14) according to the instructions.

STEP 5


2		x 5
3		x 3

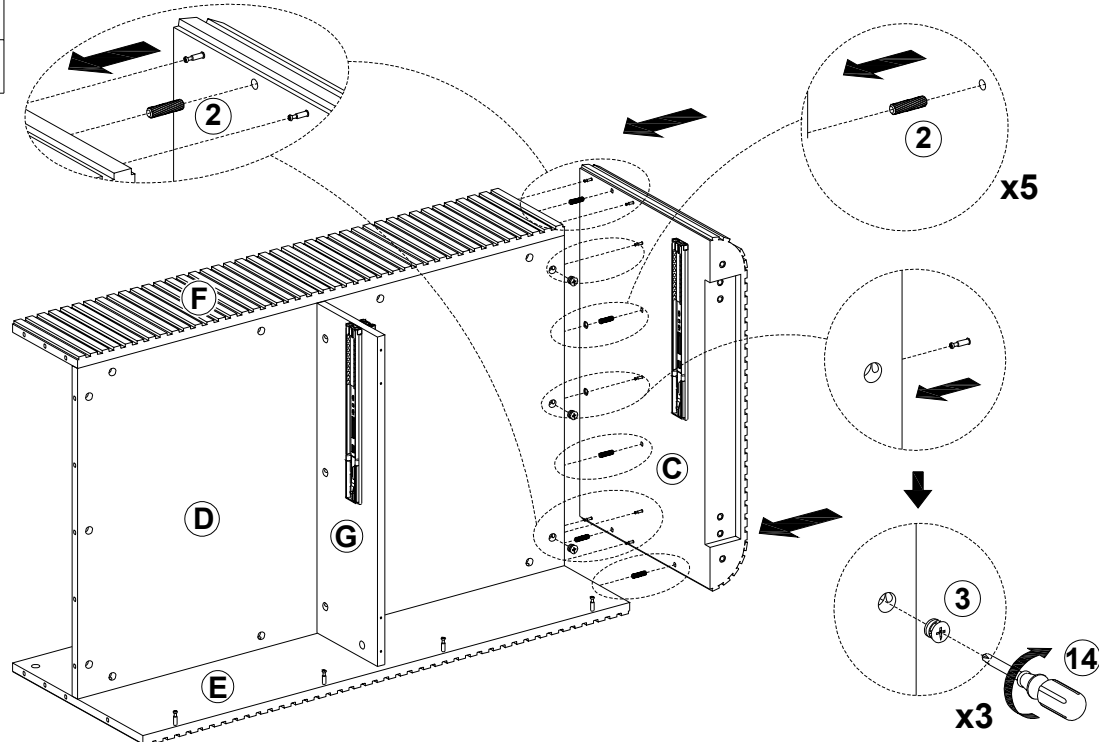  

Insert the wooden dowel (2) into the holes of the rear panel (E) and front panel (F) of the fixed frame (D), connect the right side panel (C) using the cam lock (3), and tighten with a screwdriver (14) according to the instructions.

STEP 6


2		x 5
3		x 3

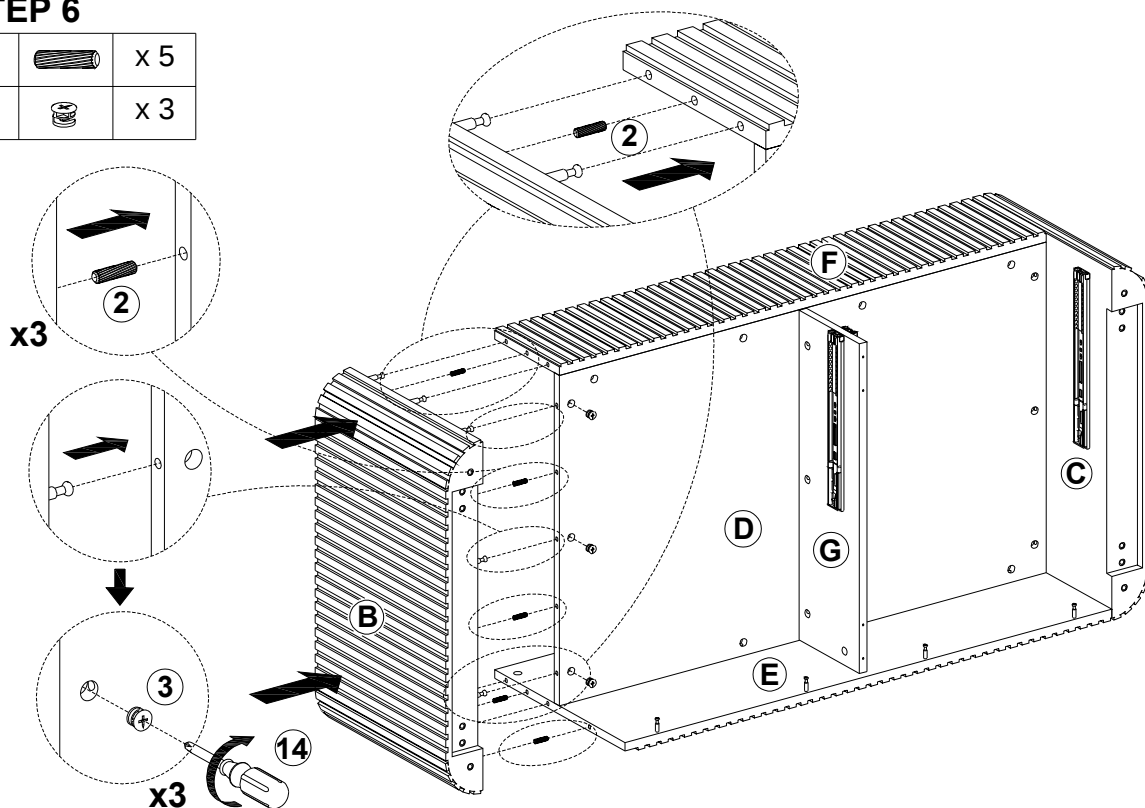 


Insert the wooden dowel (2) into the holes of the rear panel (E) and front panel (F) of the fixed frame (D), connect the Left side panel (B) using the cam lock (3), and tighten with a screwdriver (14) according to the instructions.

STEP 7

3		x 8
---	---	-----

 

 
Note:
The operation takes two adults to complete.

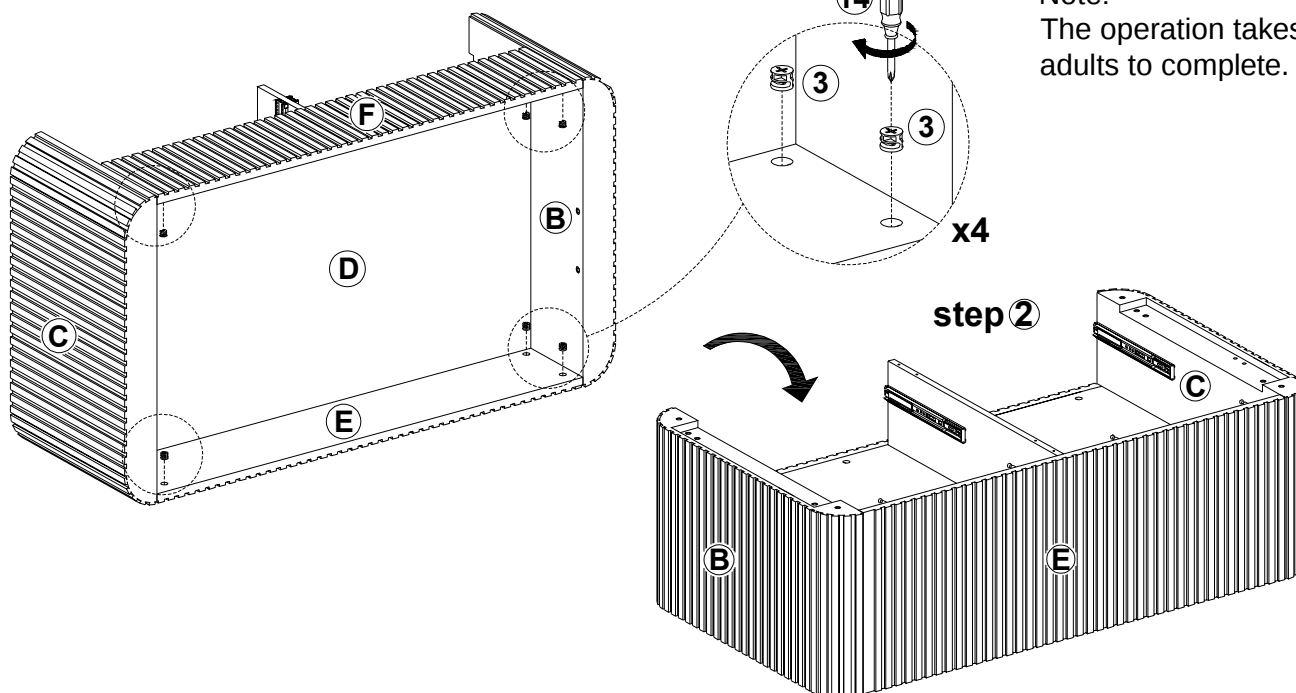

1. Use the cam lock (3) to connect the left side panel (B) and the right side panel (C), and tighten with a screwdriver (14) according to the instructions.
2. Flip the products forward in order, as shown.

STEP 8

3		x 4
---	---	-----

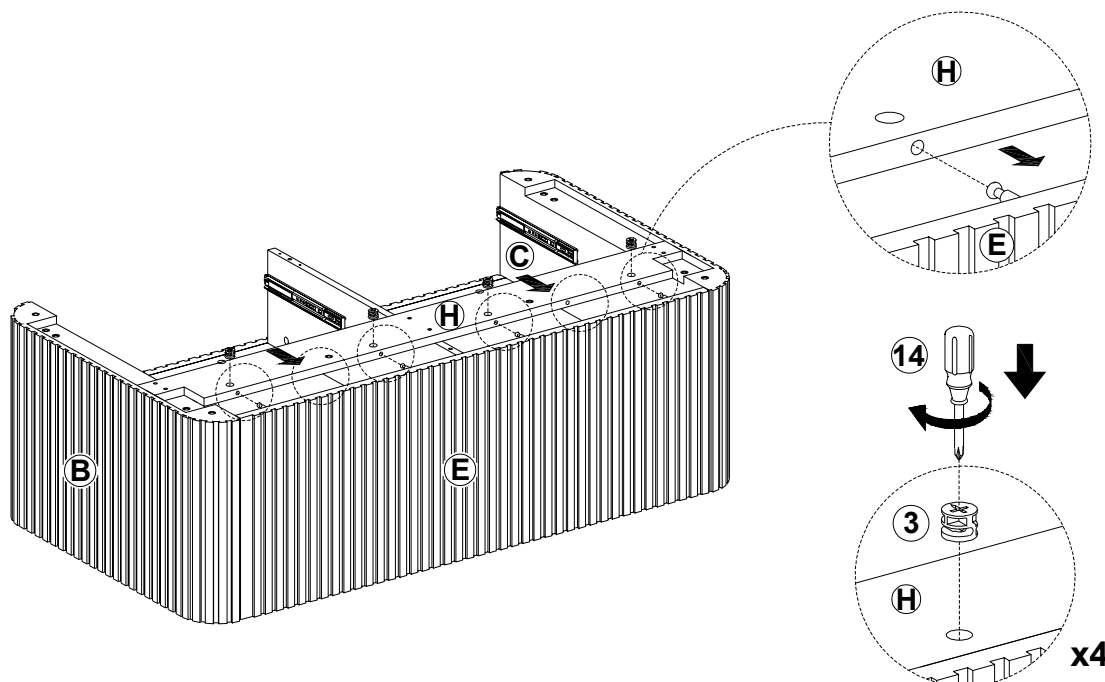 


Use the cam lock (3) to connect the bottom back panel (H), and tighten it with a screwdriver (14) according to the instructions.

STEP 9

4		x 8
5		x 1
6		x 4

 Bolt M6*35mm

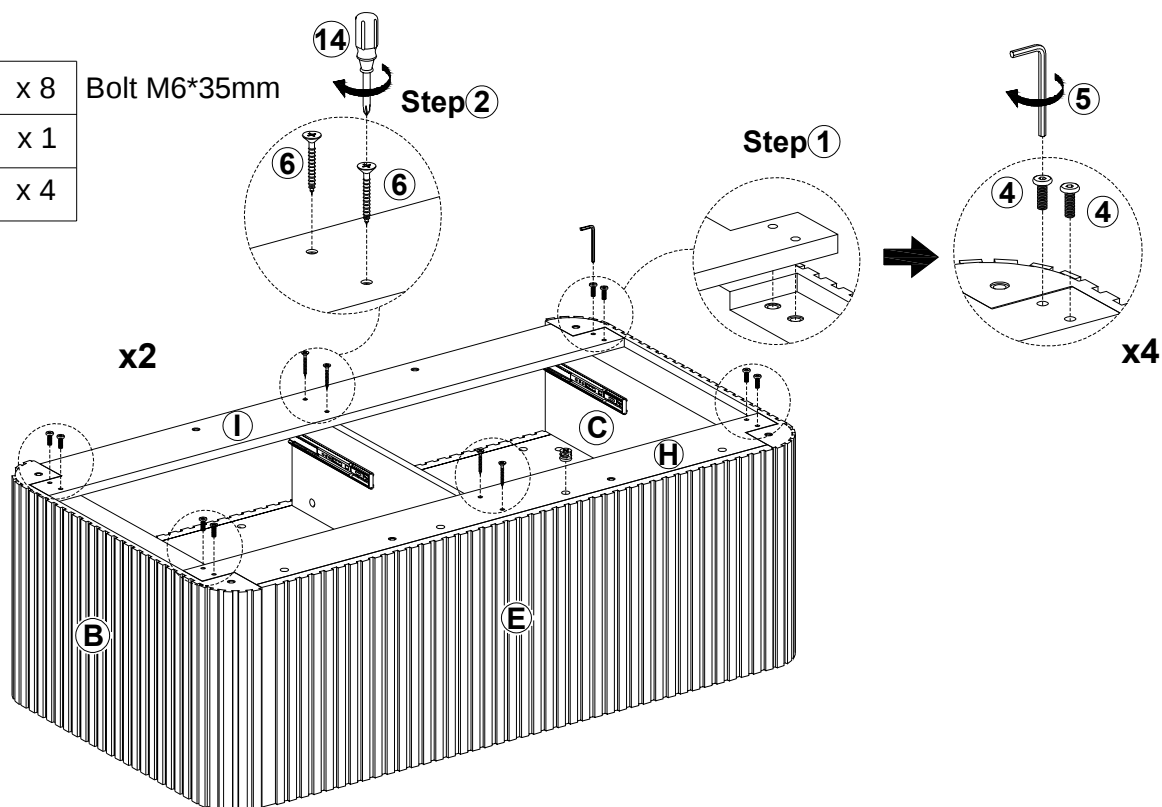


1. Use bolt (4) to pass through the hole on the front guide rail (I) at the bottom of the rear bottom rail (H) and connect with the left side panel (B) and the right side panel (C), then tighten with the hex key (5).
2. Use flat-head screws (6) to pass through the holes on the front lower rail (I) of the bottom rear rail (H) and connect with the middle fixed panel (G), and tighten with a screwdriver (14) according to the instructions.

STEP 10


7		x 8
---	---	-----

 Bolt M6*12mm

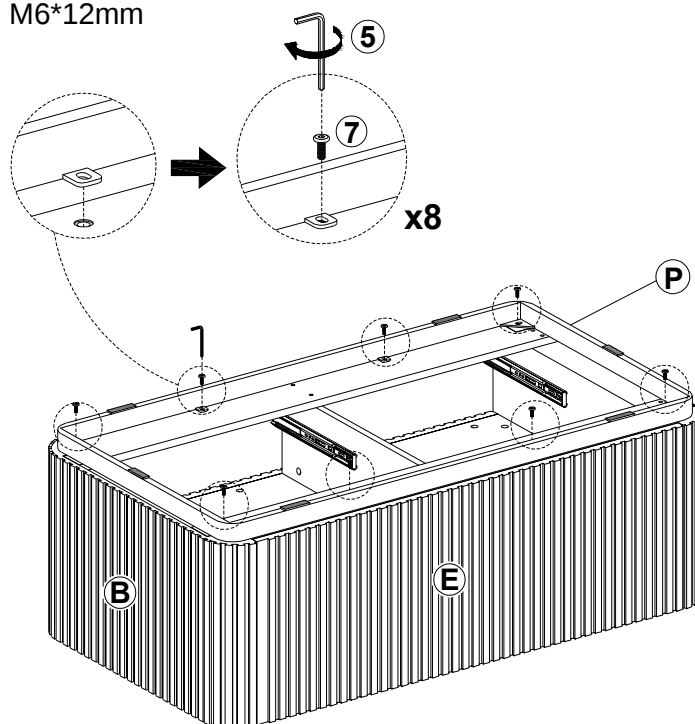


Use bolt (7) to pass through the hole on the bottom frame (P) and connect it with the bottom rear rail (H) and bottom front guide rail (I) of the left side panel (B) and right side panel (C), then tighten with the hex key (5).

 STEP 11




 Note:
The operation requires two adults to complete.

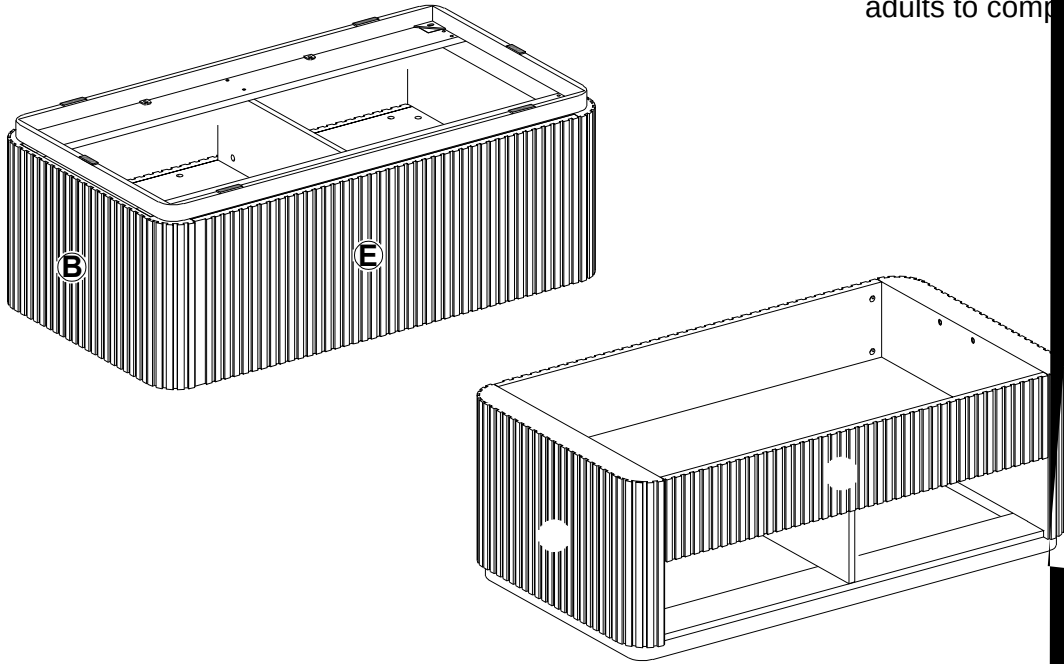


STEP 12

6		x 8
---	---	-----

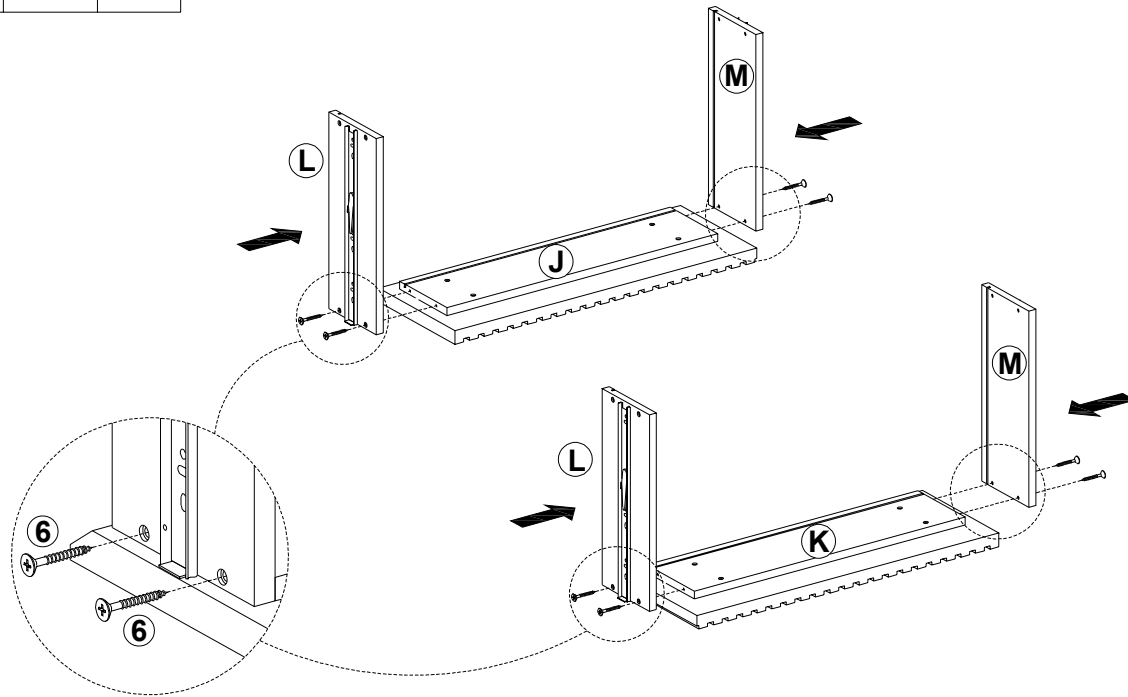 

 
STEP 13

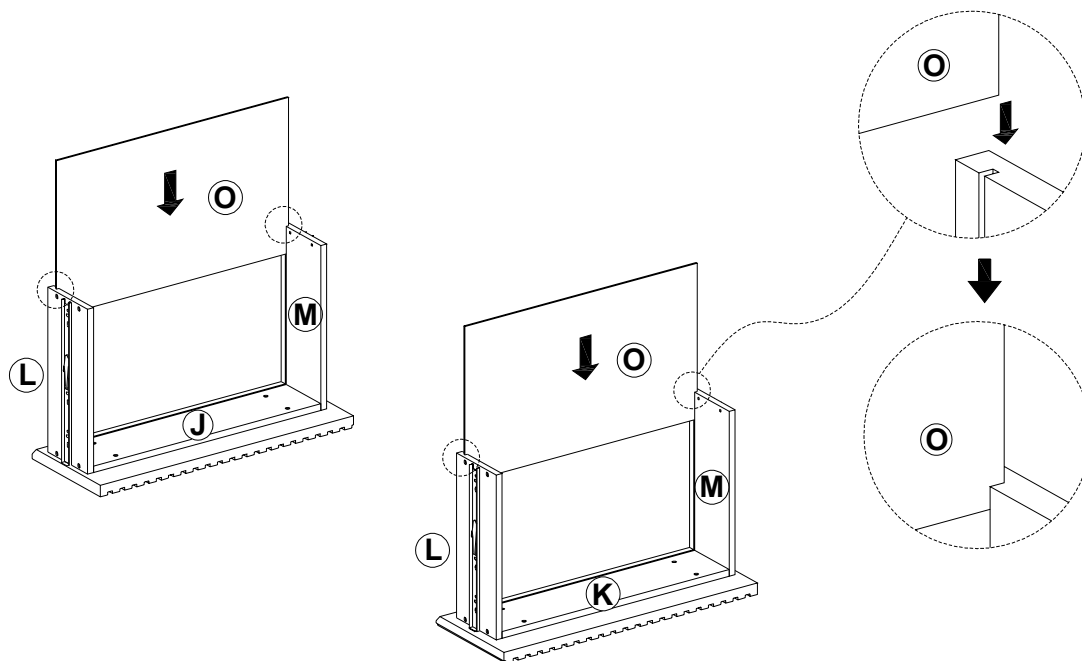

Insert the drawer bottom (O) into the groove of the pre-assembled drawer frame, as shown in the figure.


STEP 14

6		x 8
---	---	-----

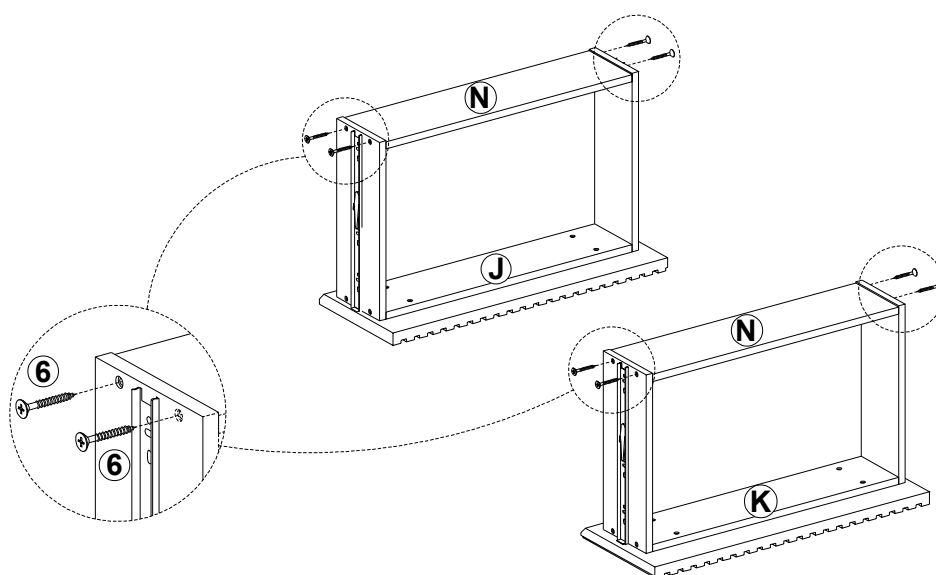 

Insert the flat-head screws (6) into the holes of the pre-assembled drawer frame as shown in the figure, and tighten the screws (6) using a screwdriver (14) as shown.

 STEP 15

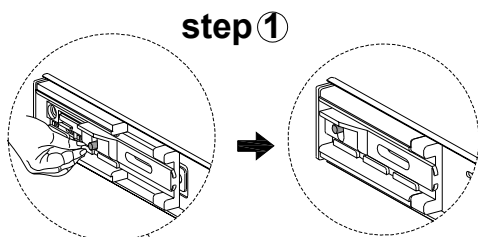



NOTE:
Reinspection if the slide rail limit switch has returned to its home position.

File Drawer Installation

1 CORRECT

2 INCORRECT

  Before inserting the Drawer, make sure to slide the ball turntable plates located on the Side Frames to the FRONT of the unit as illustrated.

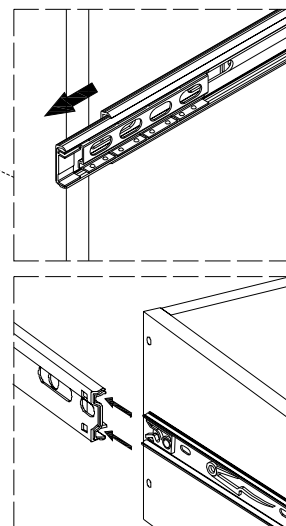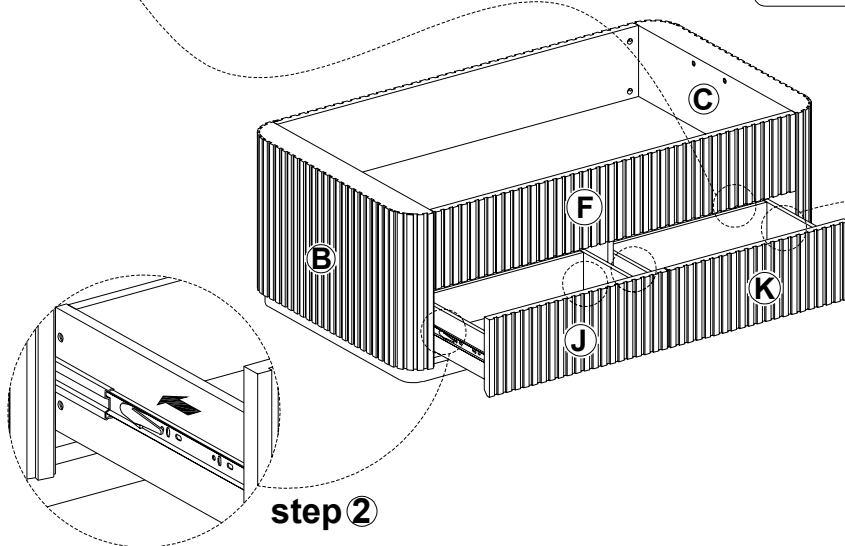


Install drawer to body as shown.

STEP 16

4		x 4
13		x 2

 Bolt M6*35mm

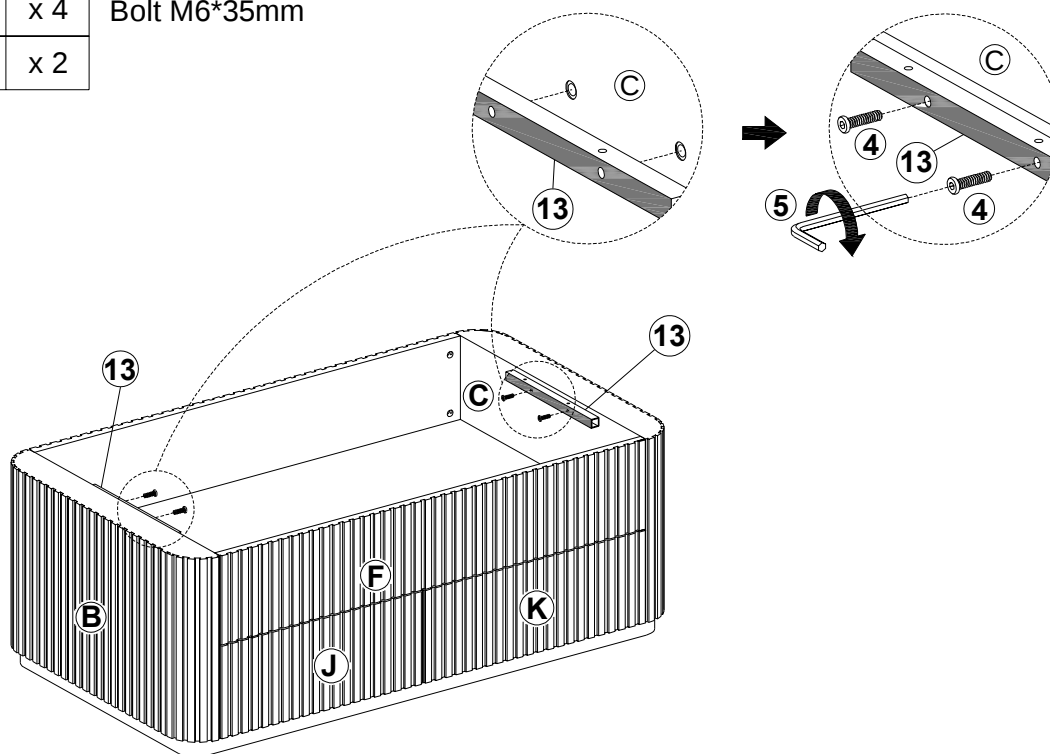

Use bolt (4) to pass through the holes on the metal fixing tubes (13) and connect to the left side panel (B) and right side panel (C), then tighten with the hex key (5).



STEP 17

7		x 4
10		x 1
11		x 1

Bolt M6*12mm



  CAUTION: Mechanism spring under tension.
Use caution when removing.

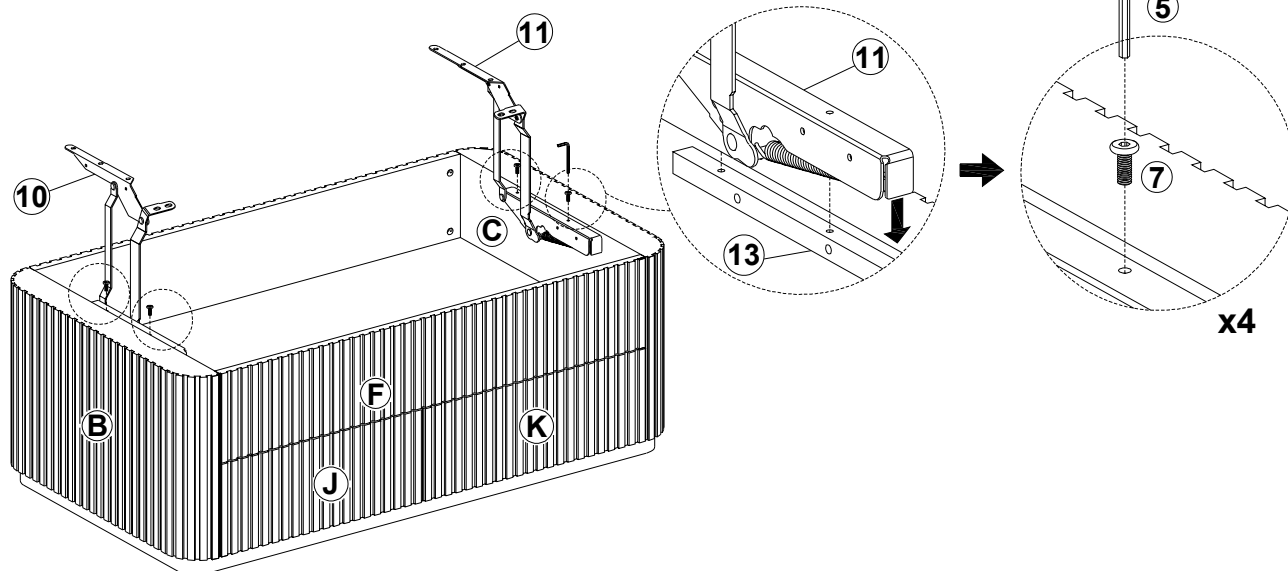


Use bolts (7) to pass through the holes on the lifting mechanisms (10 & 11) and connect the metal fixing tubes (13), then tighten with an Allen key (5).

STEP 18

4		x 4
8		x 4
9		x 1
12		x 1

 
Bolt M6*35mm

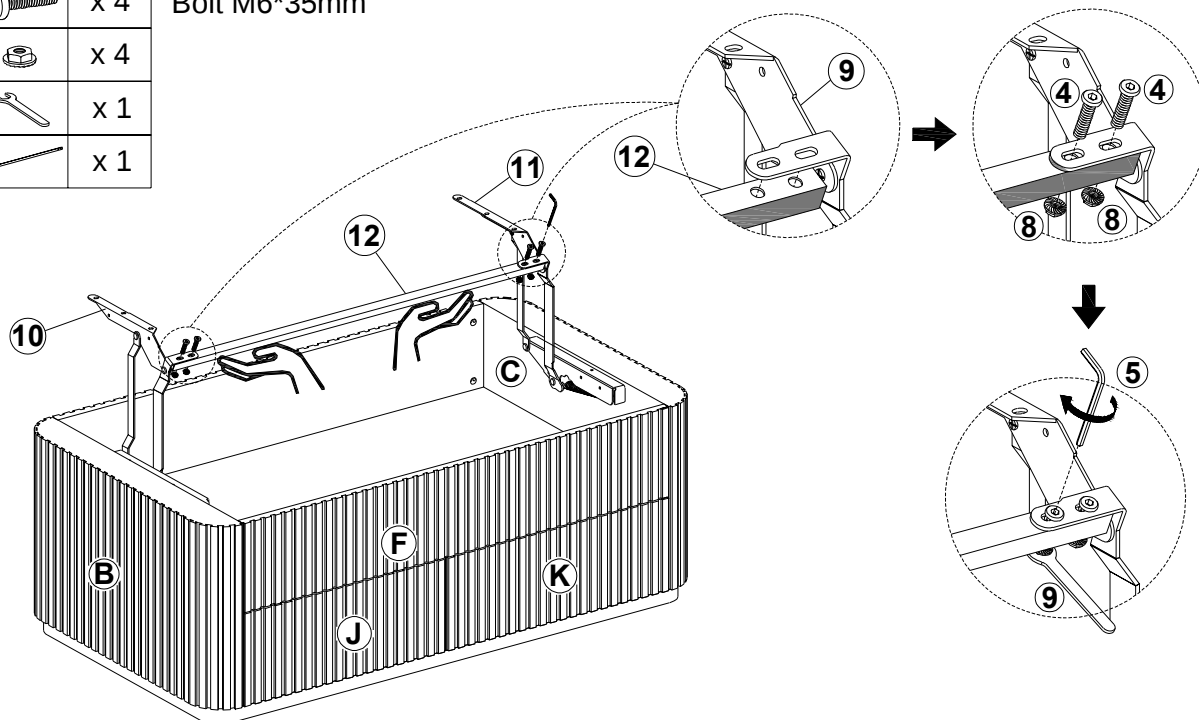


Use bolts (4) to pass through the holes on the lifting mechanism (10 & 11) and the metal crossbar (12), hold the nuts (8) with a wrench (9), and then tighten with a hex key (5).

STEP 19

 
7  x 6 Bolt M6*12mm

 
Note:
The operation takes two adults to complete.

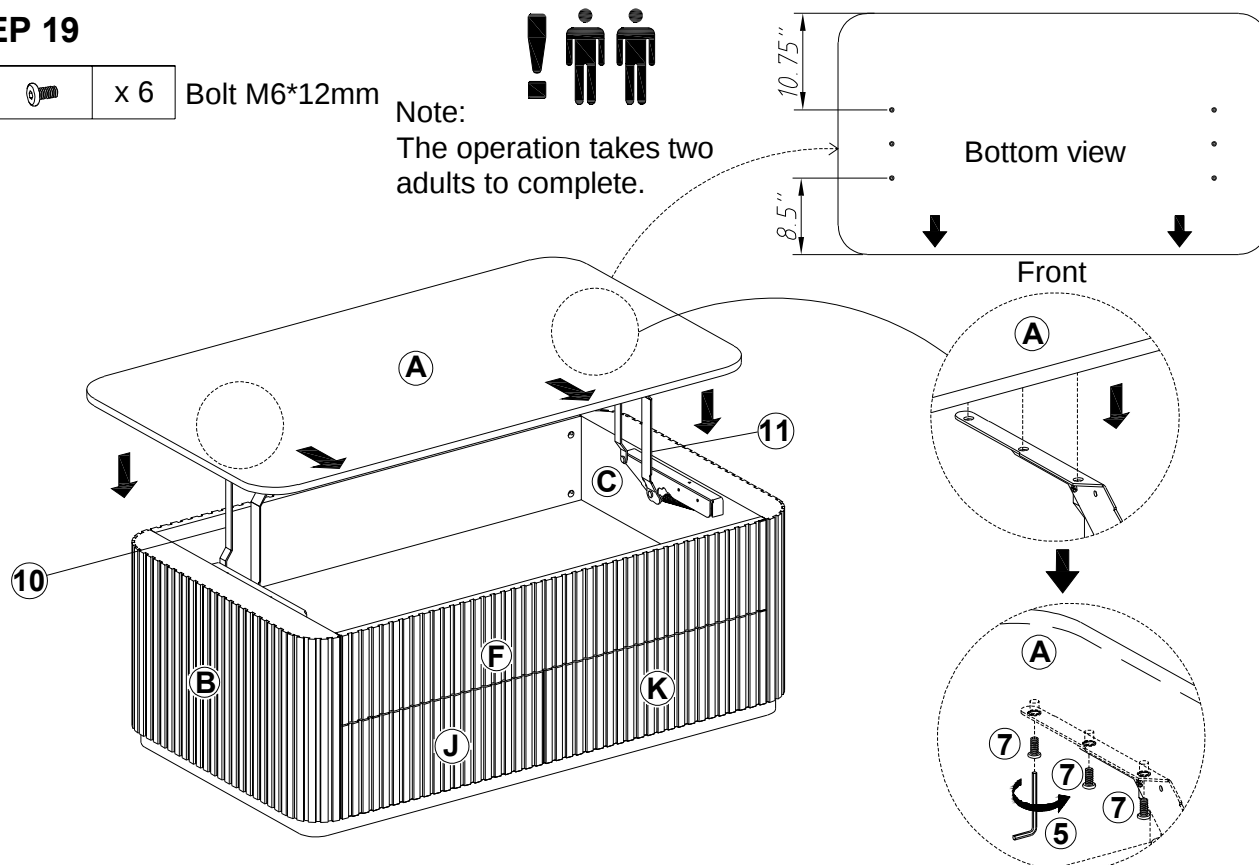

Use bolt (7) to pass through the holes on the lifting mechanism (10&11) and connect to the top plate (A), then tighten with the hex key (5).

 STEP 20

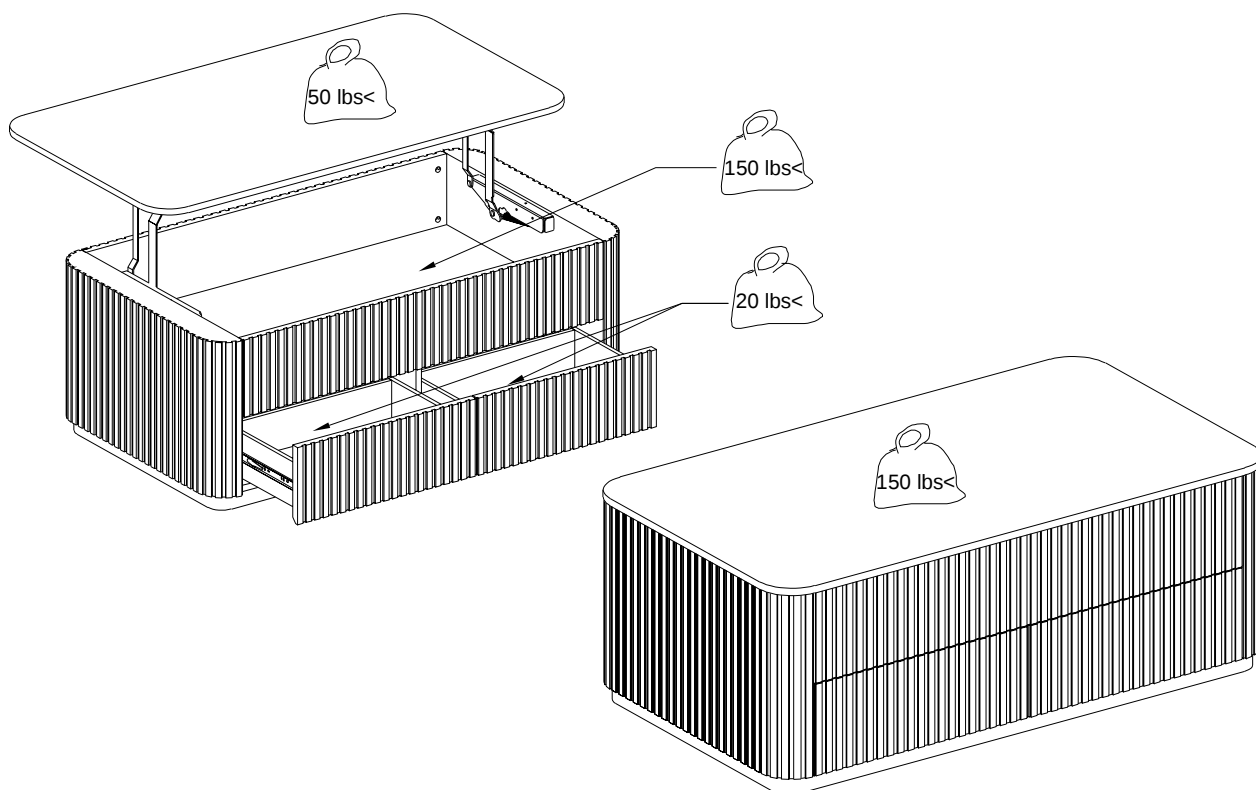

MAINTENANCE AND WARNING



- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 200 LBS.

WARRANTY

We strive to offer high- quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!