


Ax1 	Bx2 	Cx2 	Dx1 
Ex15  6x25mm	Fx15 	Gx15 	Hx4 
Ix1 			

SPARE (Ersatzteile)

Ex1  6x25mm	Fx1 	Gx1 	Hx1 	
-------------------	---------	---------	---------	--

STEP 1

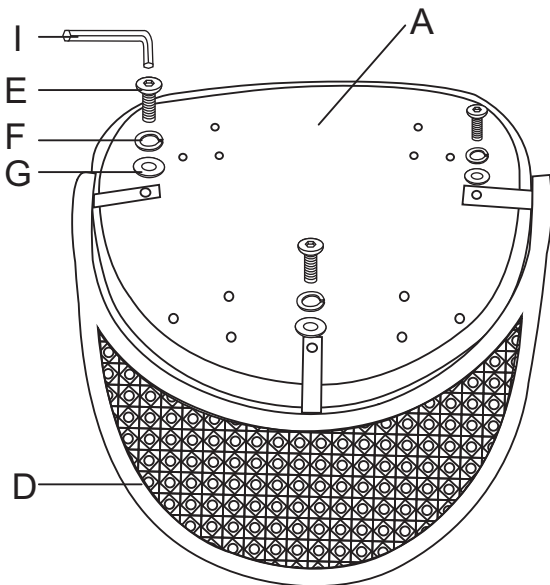

STEP 2

