 
 


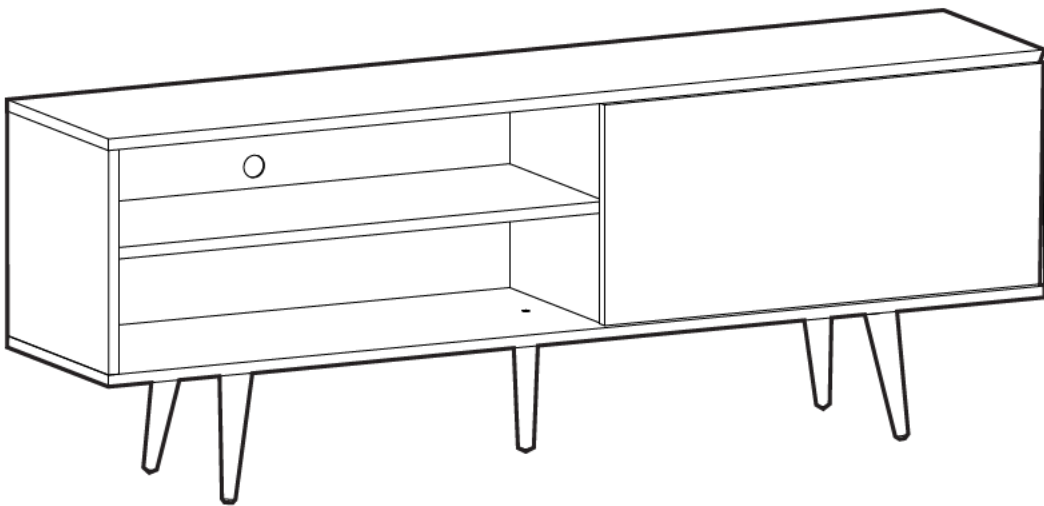

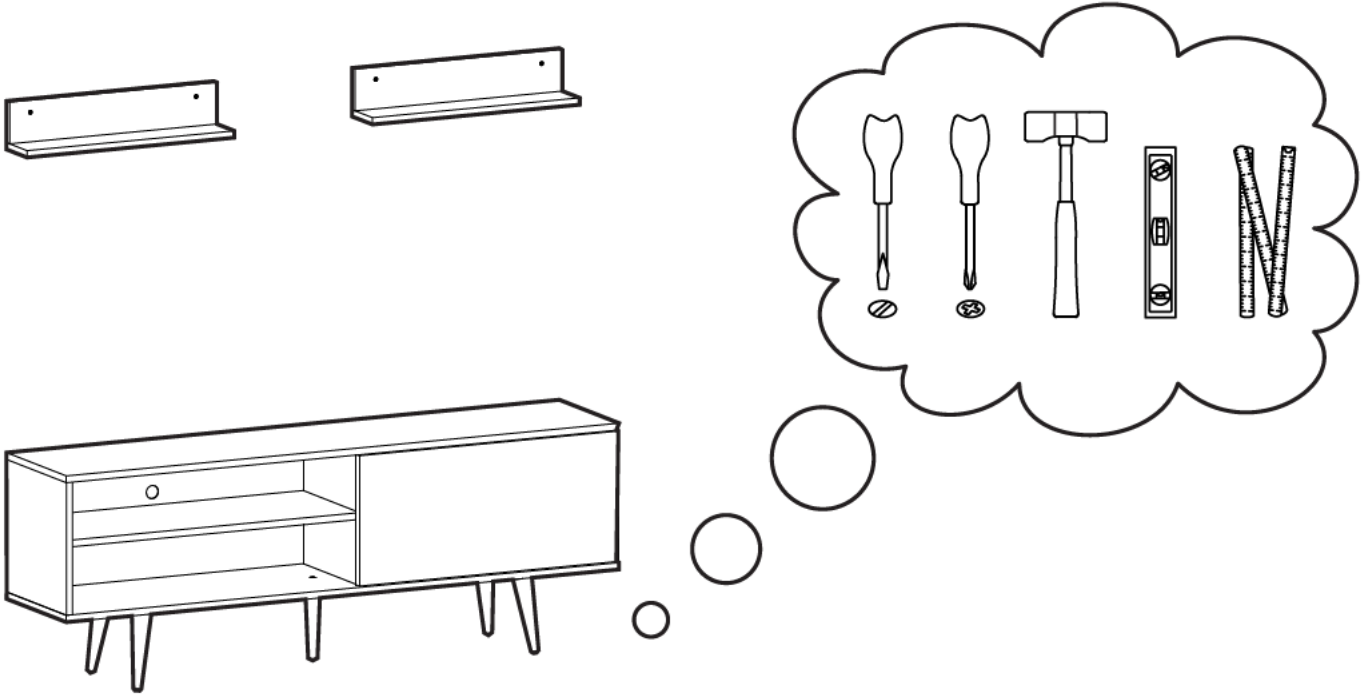 










Tv Stand Assembly Instruction







Tools & Installation Components

- | | | | | | | |
|--|---|---|---|---|---|--|
| 
A23 Q10 minifix screw | 
A02 15x14 minifix head | 
A17 6x50 screw | 
A19 3,5x18 screw | 
Q15 larger sticker | 
A20 5X70 Screw | 
K20 Dovel Q8x30 |
| 6x | 6x | 10x | 8x | 11x | 5x | 4x |
| 
C1 inset hinge | 
C4 hinge | 
A28 nail | 
D2 5x70 Raweplug | 
A21 3,5x25 Screw | 
leg socket | |
| 2x | 2x | 20x | 4x | 12x | 4x | |



  
Please be aware that C01(bracket) and C04(pivot) parts may come as attached together.

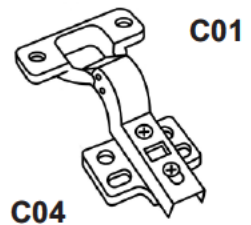

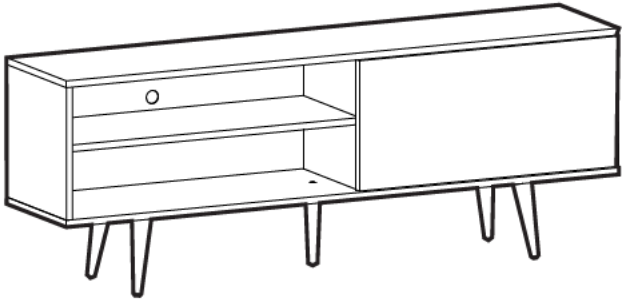



Disassembled Parts

Part#1	1x
Part#2	1x
Part#3	1x
Part#4	1x
Part#5	1x
Part#6	1x
Part#7	1x
Part#8	2x
Part#9	2x

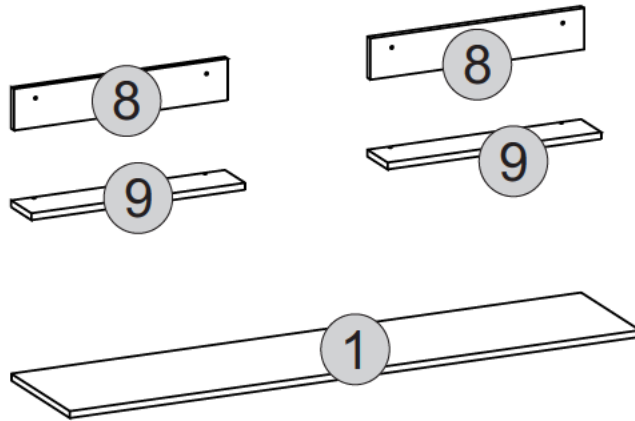 


Total 18x

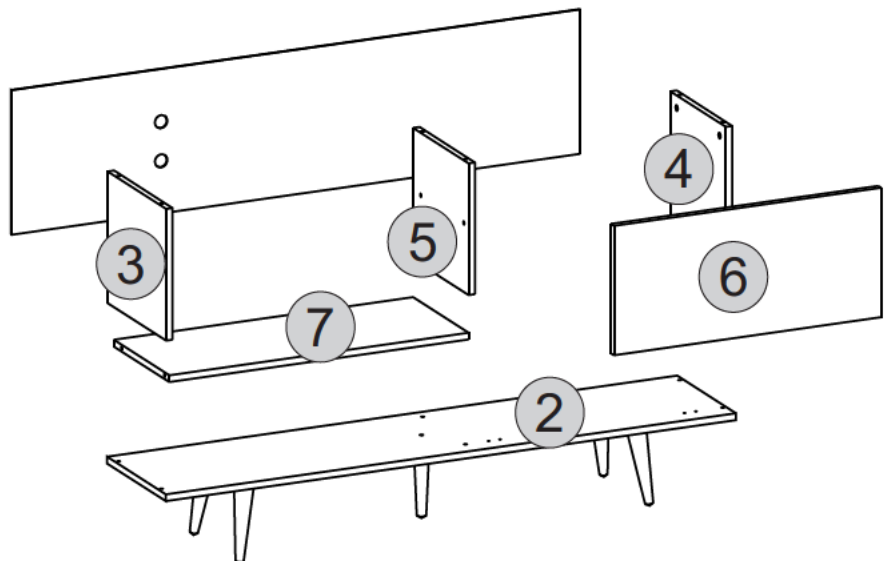 

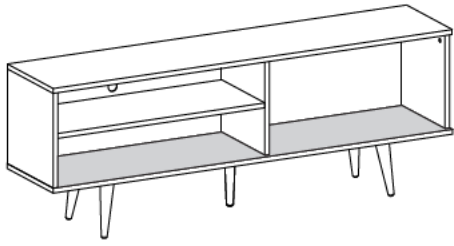 

1



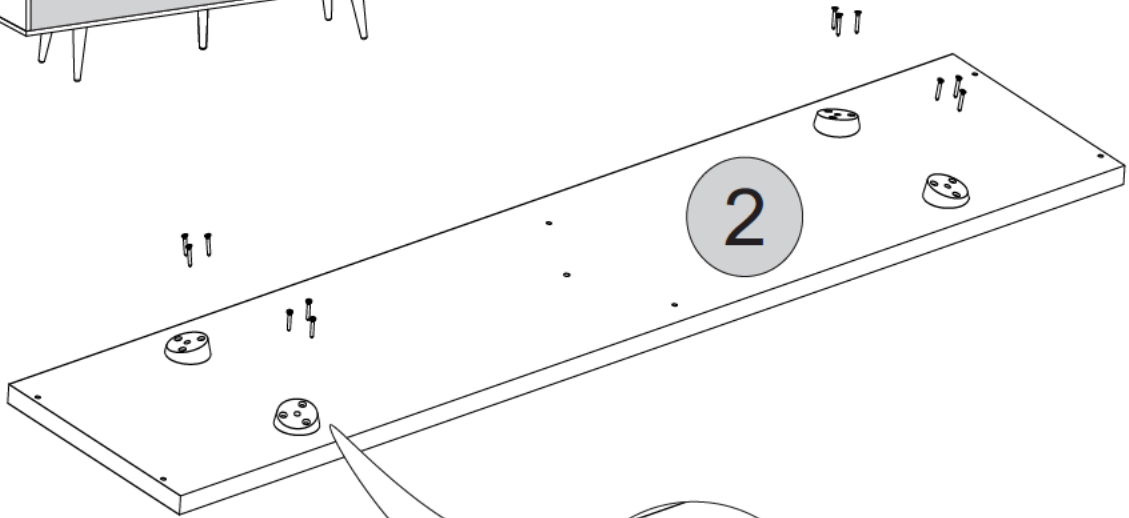 


2








A19


 
 
 
2

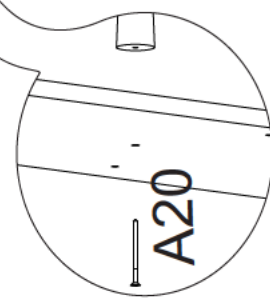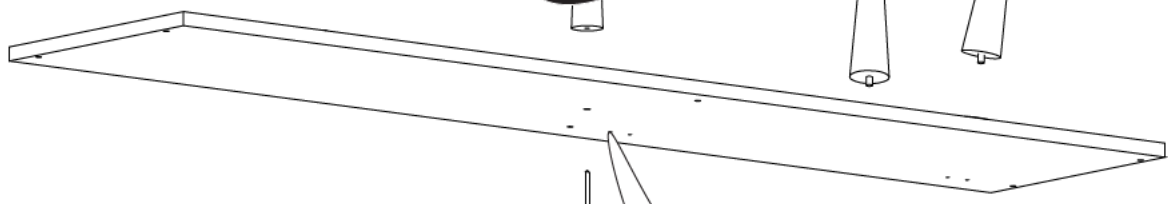
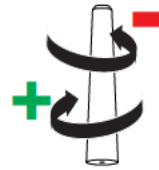


A20






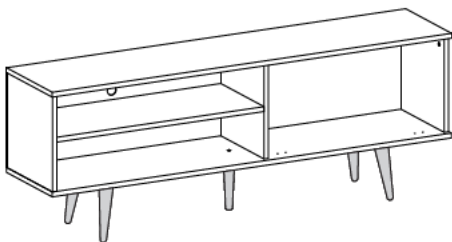 


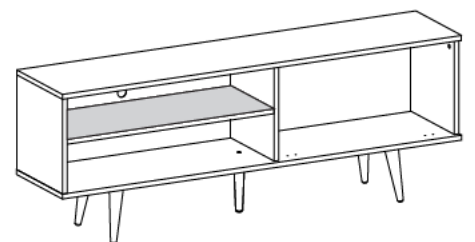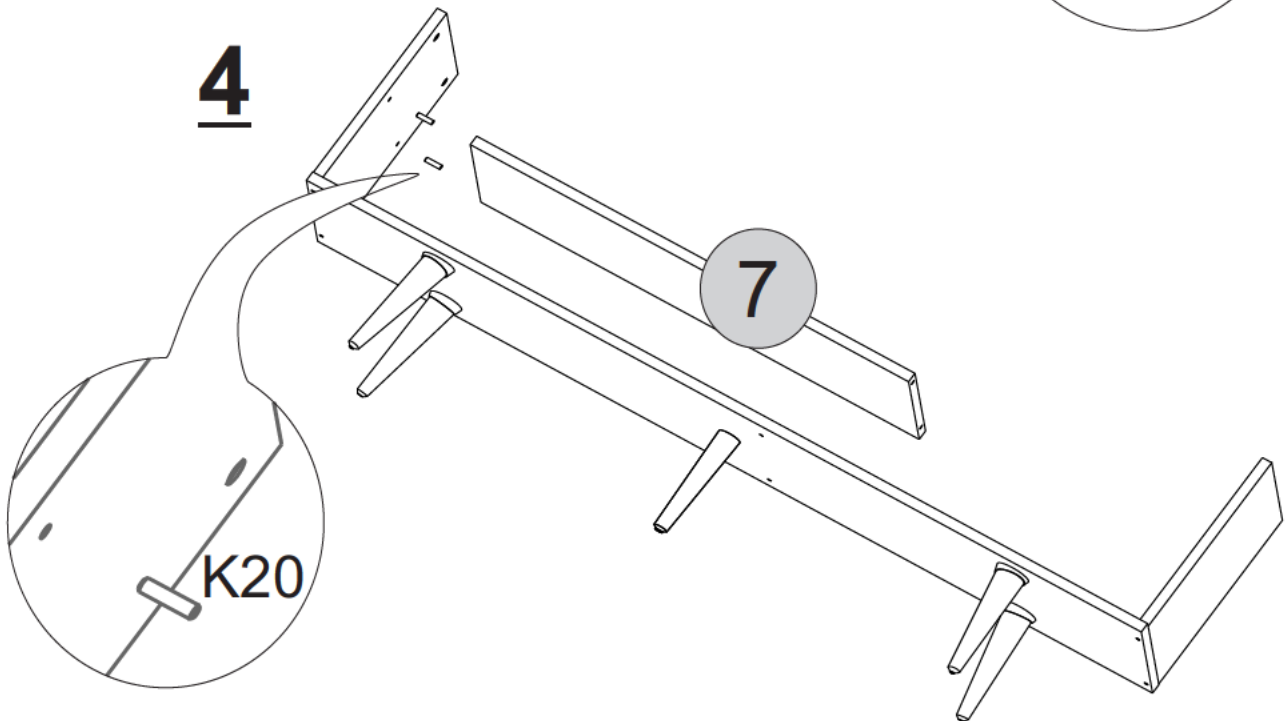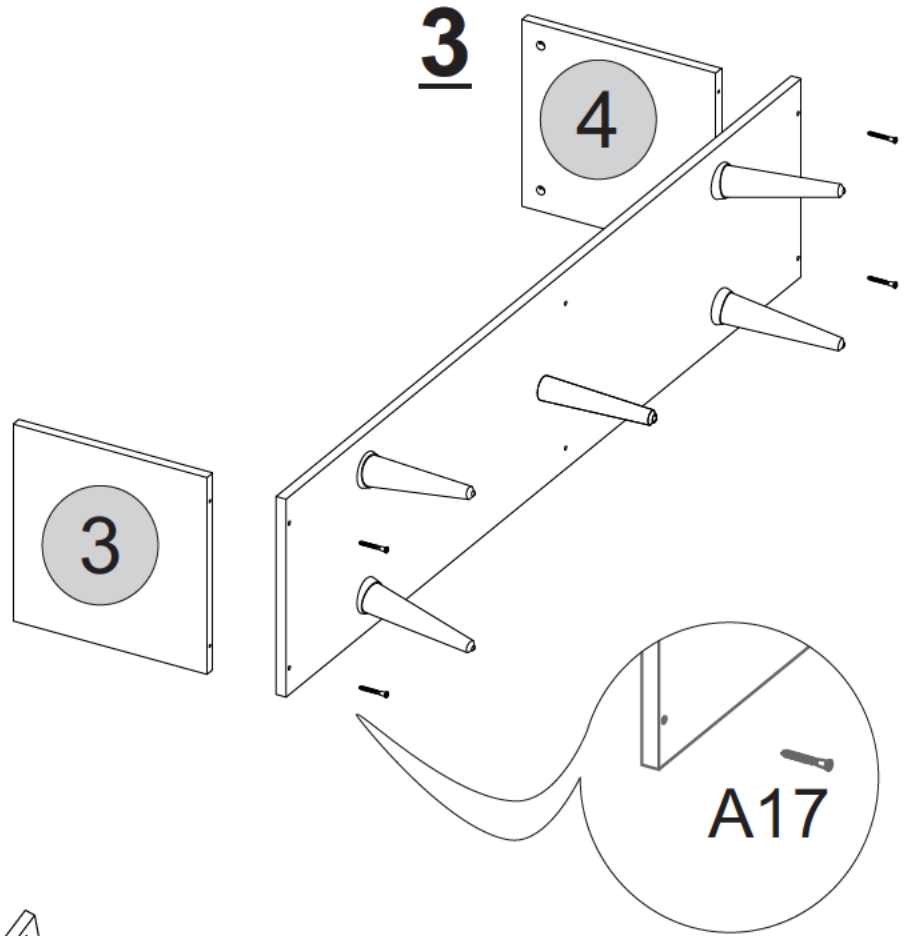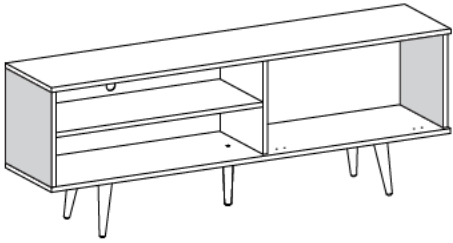    

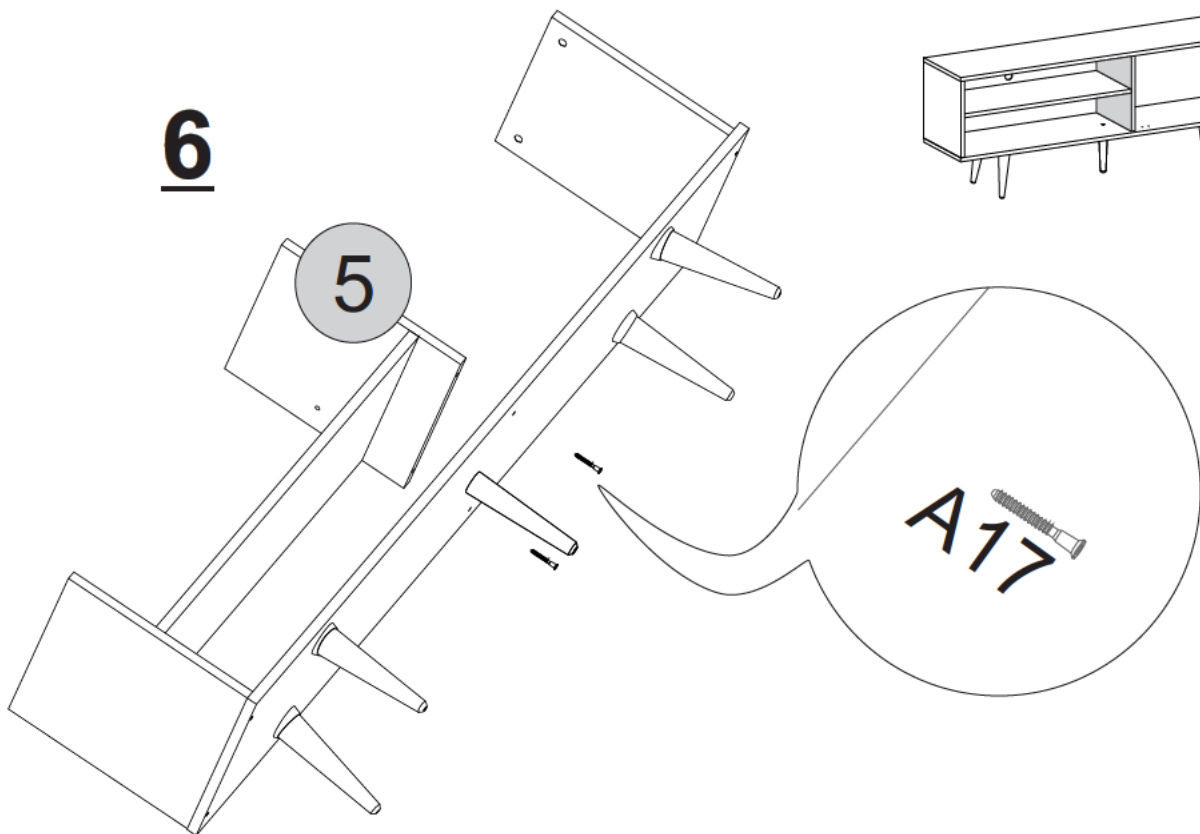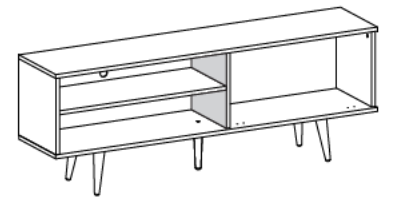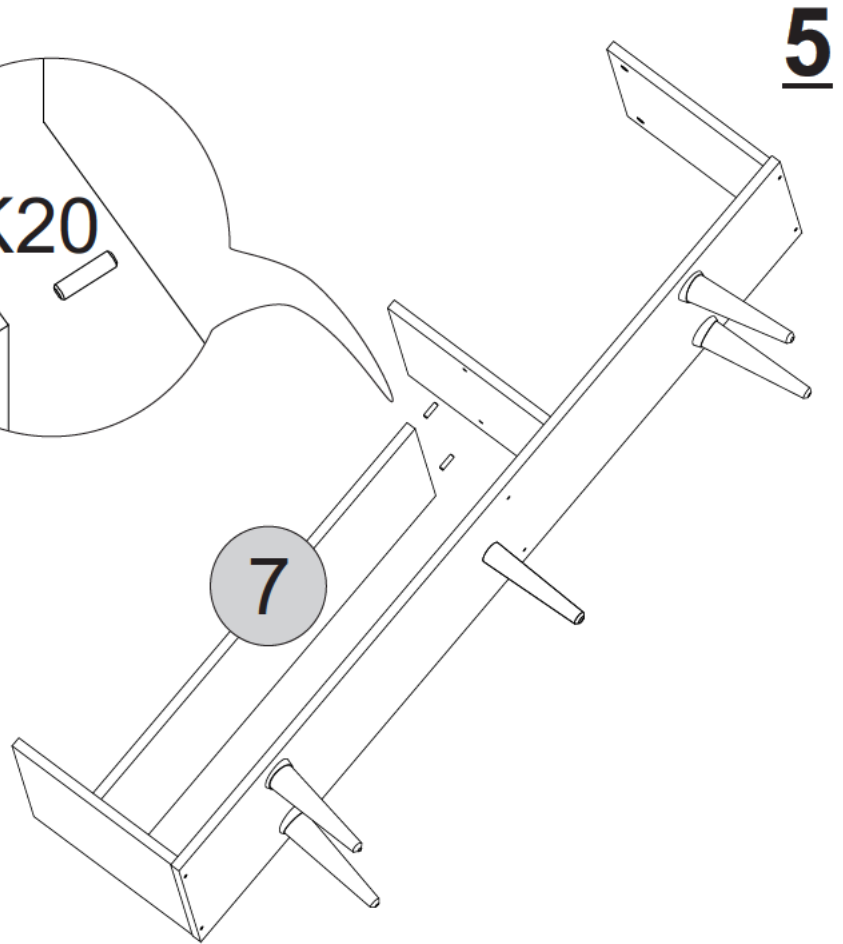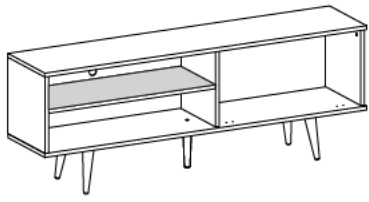    


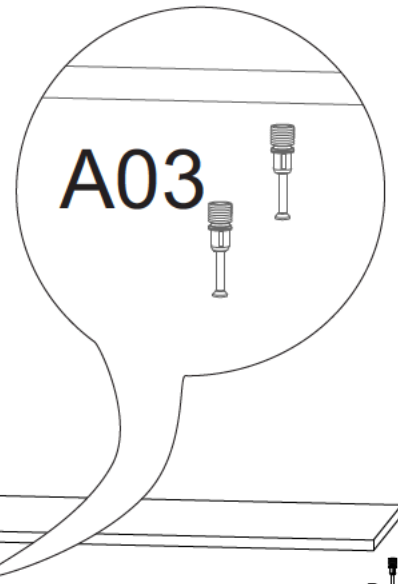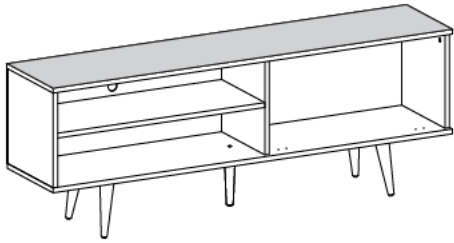  


7

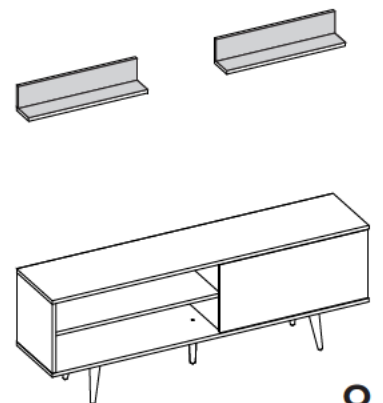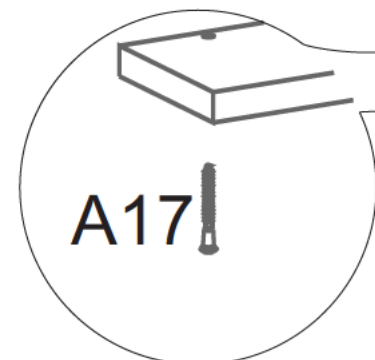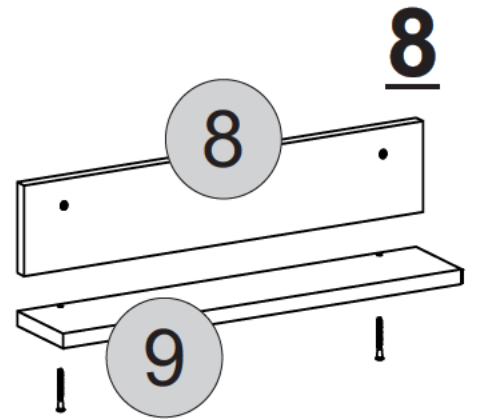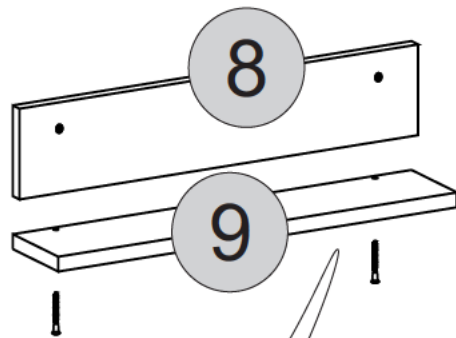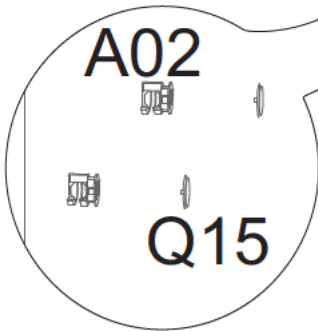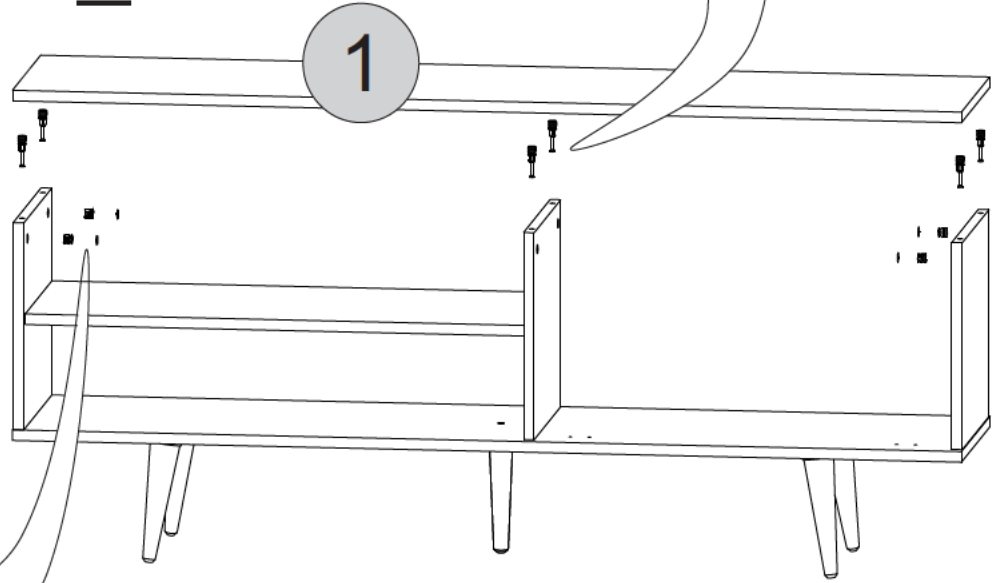      


8

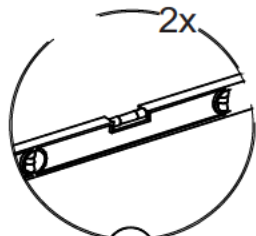 


1

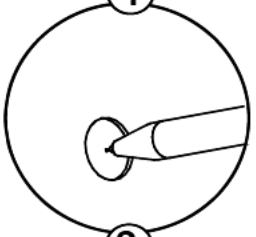 

2

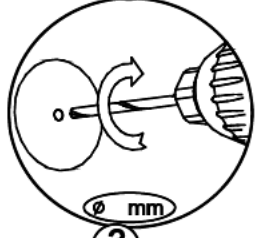 



3

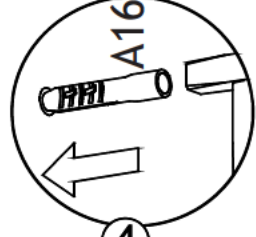 


4




   9

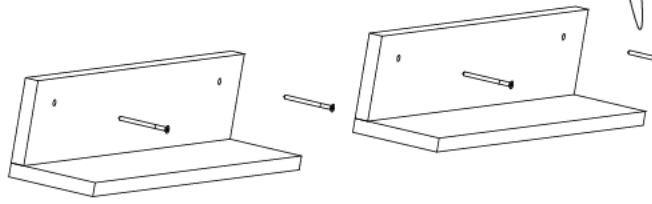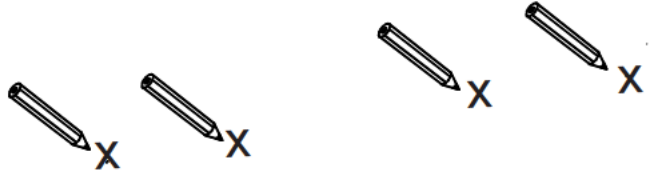


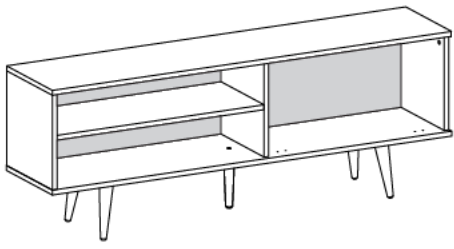

10

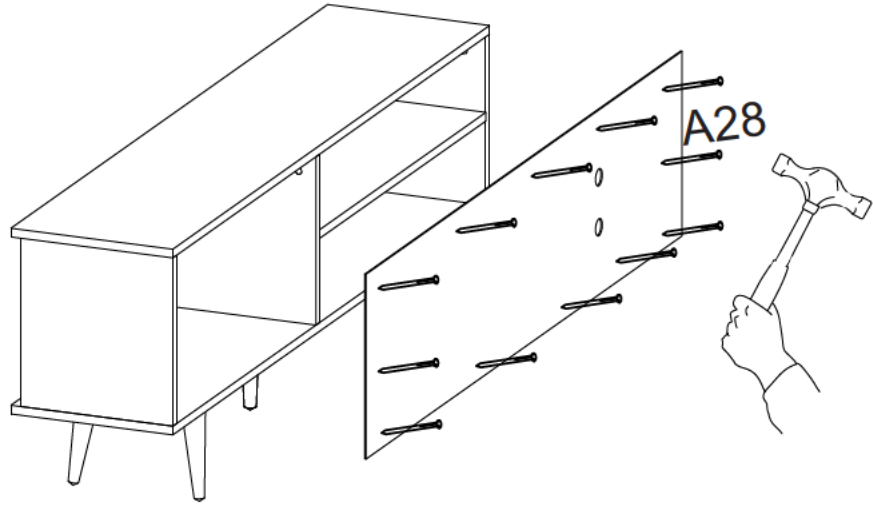 

11

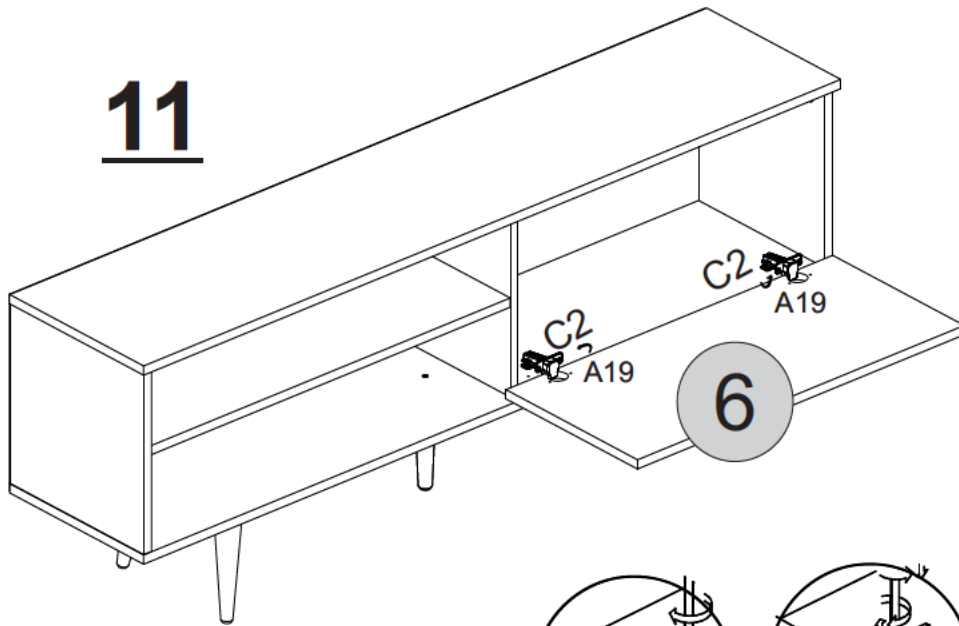 

6

