


INSTALLATION MANUAL

Ceiling Fan With Lights

Model No.: YY1210B-19.6IN

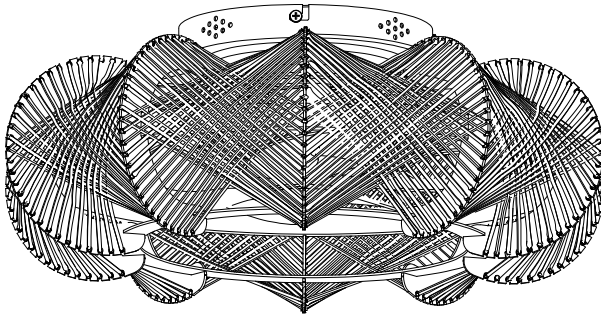

APP Control Applicable

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably /supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). Fan must be turned off and blades stopped before reversing blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan light may have different light shade and bulbs.
11. Use only our replacement parts. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:


To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock or person injury, mount fan to outlet box marked "acceptable for fan support".

To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation



Tools You Need

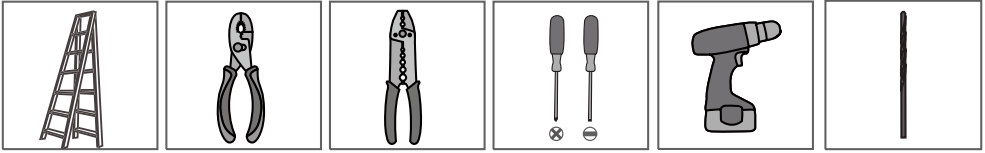

- Ladder
- Pliers
- Wire Strippers
- Screwdrivers
- Power Drill (optional)
- Drill Bit (optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

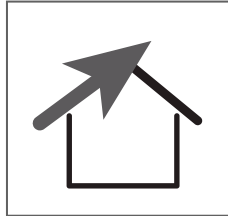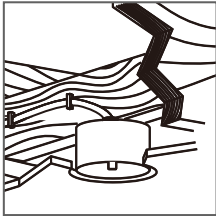

- Must be able to secure the fan to building structure or fan-rated outlet box
- Check the box to see the weight of the fan
- Not applicable for angled ceiling

Switch Selection


Note: Using a dimmer switch to control the fan may damage the fan. To reduce the risk of fire or electrical shock, do not use a dimmer switch to control the fan.

The recommended switches are as follows:

Recommended:	Single Pole Switch (Not Included)			
Not Recommended:	Dimmer Switch	Timer Switch	Fan Speed Control Switch	Motion Sensor Switch


Installation Recommended

Room Size:

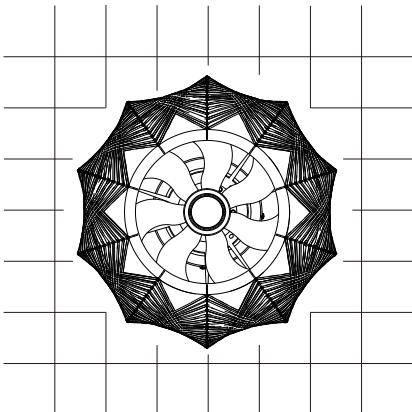


UP TO 8 ft x 10 ft

Room Height:

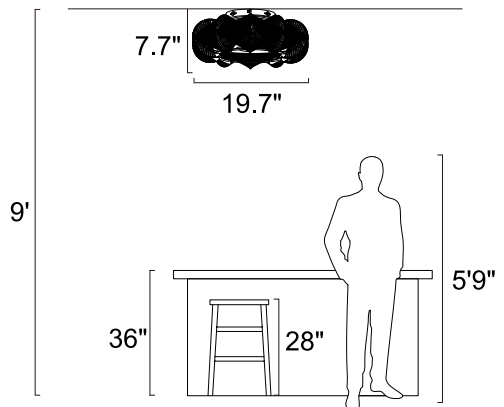
 






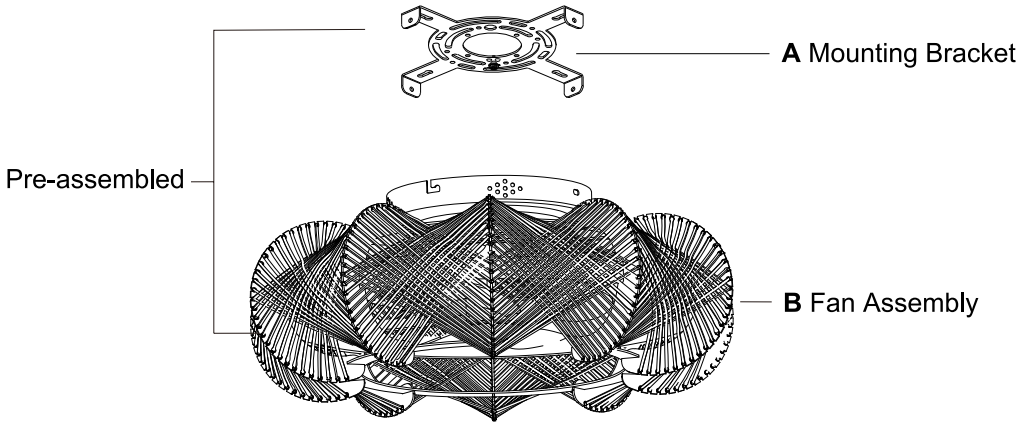


Recommended ceiling height: 8 to 12 ft.

Packing List



Installation Kits

AA	×3	BB	×2	CC	×4	DD	×4	EE	×4
									
Wire Nut		Outlet Box Screw		Washer		Wood Screw		Anchor	
FF	×1	GG	×1	HH	×2	JJ	×1		
									
"S" Hook		Remote Control & Holder		Remote Holder Anchor & Screw		Gloves			


Note:

1. The listed quantity is for installation, extra hardware may be included.
2. The mounting bracket (A) is pre-installed on the fan assembly (B).

Installation Instructions

1. Remove the Mounting Bracket


Loosen and remove the canopy screws from the round holes, and loosen the canopy screws in the 'L' holes but do not remove them, then remove the mounting bracket (A) from the fan assembly (B).

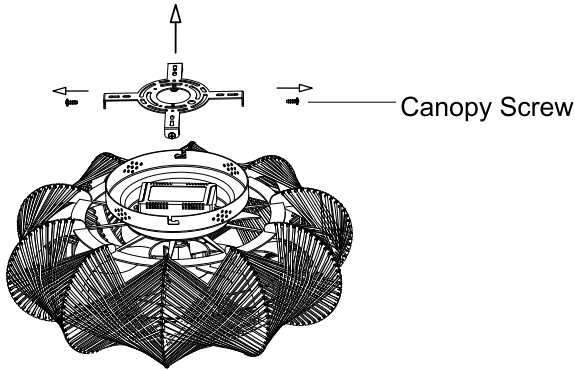

2. Mount the Bracket (3 Options)


Option1. (For Outlet Box)

Secure the mounting bracket (A) to the outlet box with screws taken off from outlet box or screws (BB) provided.

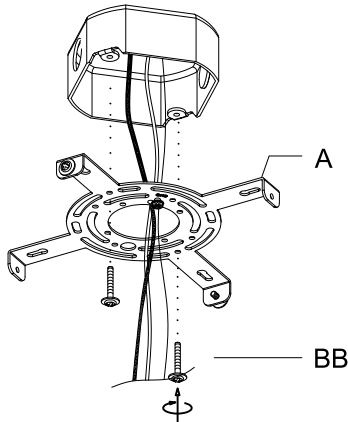


Option 2. (For Solid Wood Structure)

Mark and drill the screw holes on the solid wood structure. Mount the mounting bracket with wood screws (DD) and washers (CC).

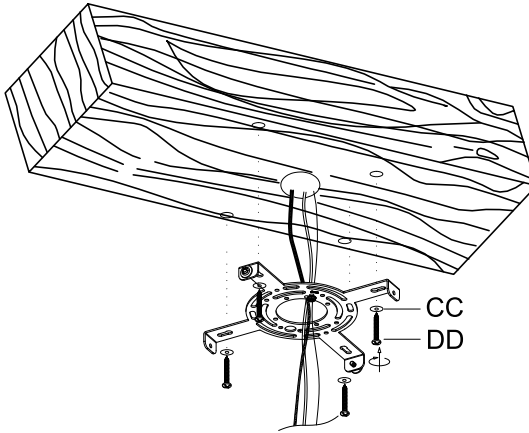


Option 3. (For Concrete Structure)

Mark and drill the anchor holes on the concrete structure, and then insert the anchors (EE). Mount the mounting bracket to the concrete structure with wood screws (DD) and washers (CC).

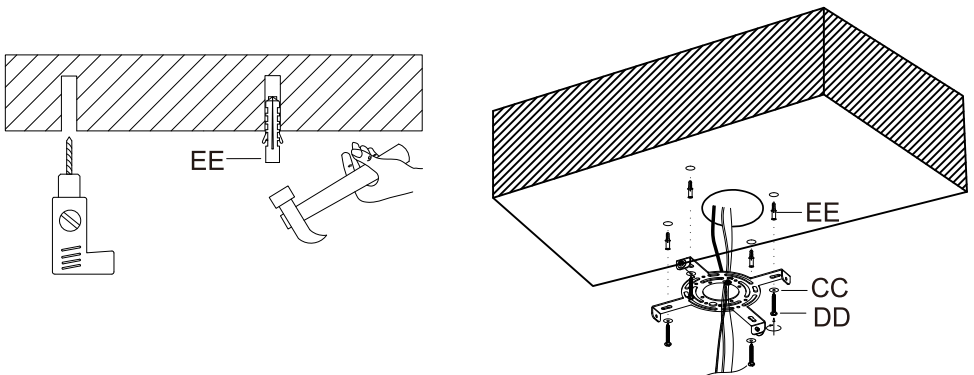


3. Hang the Fan

Hang the fan onto the mounting bracket (A) with the "S" hook (FF) provided .

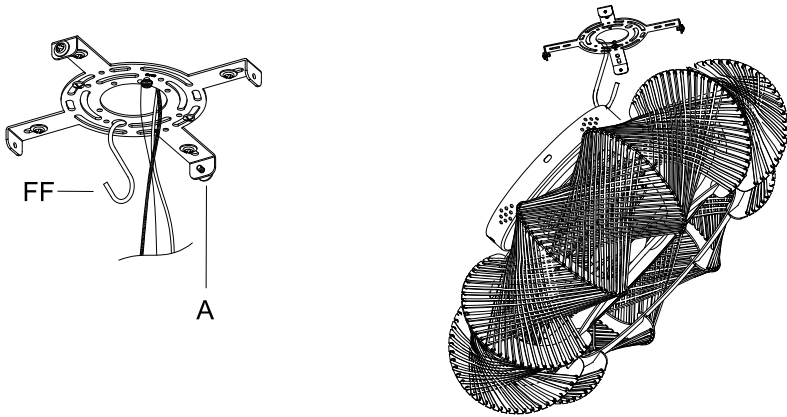

4. Connect the Wires


Connect the wires from the fan assembly to the house supply wires with wire nuts (AA), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

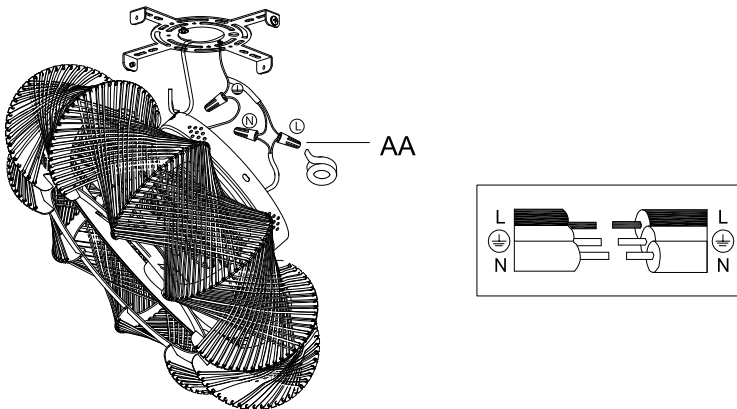


5. Attach the Canopy

Step 1: Remove the "S" hook (FF).


Step 2: Align the "L" slots from the canopy to the canopy screws on the mounting bracket (A), rotate the canopy to lock it onto the mounting bracket (A).

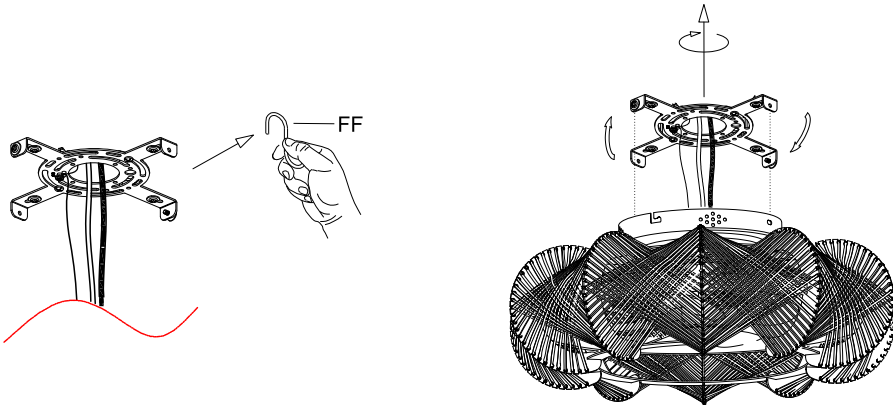

Step 3: Tighten the canopy screws.

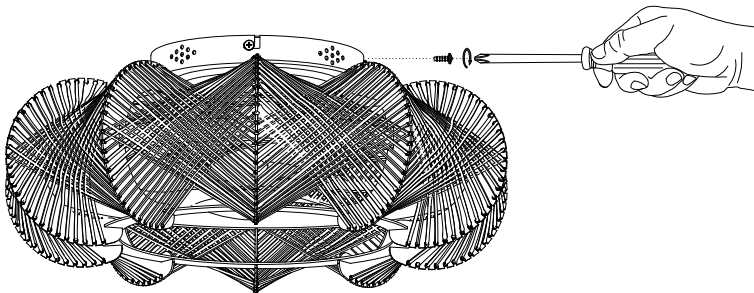

6. Install the Remote Holder

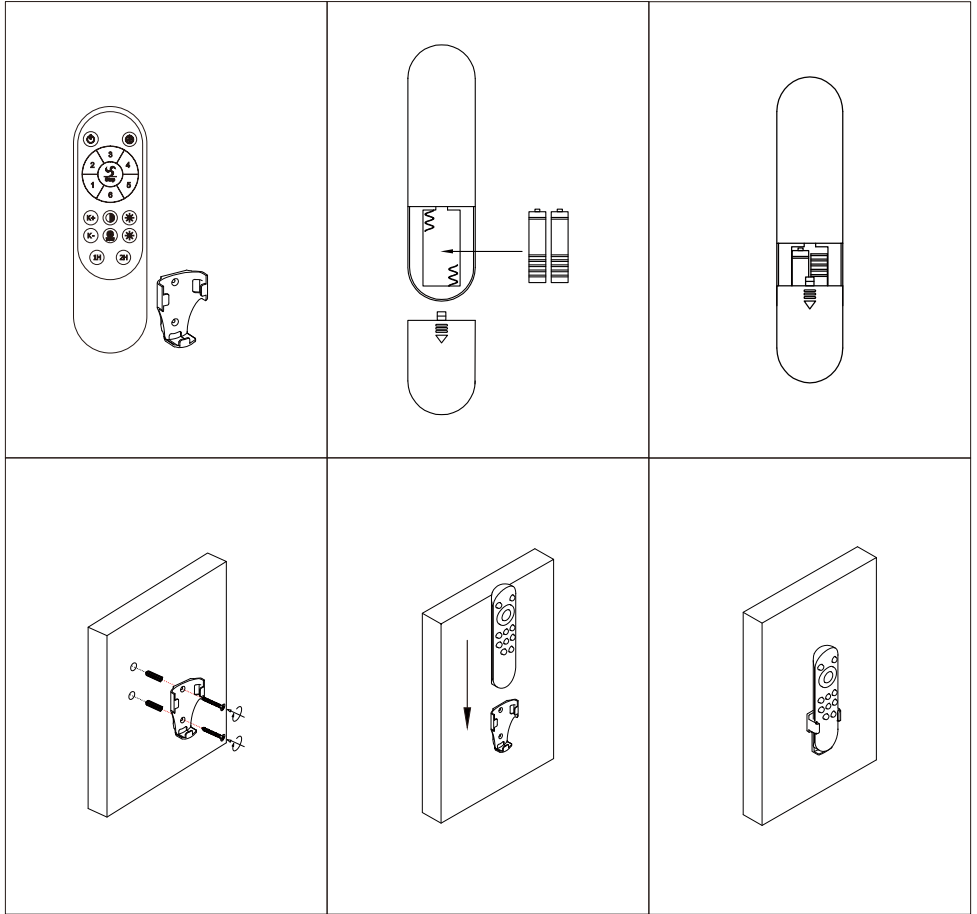











Step 1: Insert 2 batteries before using : AAA 1.5V battery x 2pcs (not included).


Step 2: Mark and drill screw holes in the wall, then insert the remote plastic anchors.

Step 3: Use remote wood screws to fix the remote holder onto the wall.

Remote Control Instructions

		Turn off fan and light.
		Fan moves forwards or reversely.
		Turn on the fan on Speed 1/2/3/4/5/6.
		Turn off the fan.
		Adjust the light color temperature.
		Quick switch of the light color: Yellow Light→White Light→Natural Light.
		Turn on/off the light.
		Adjust the brightness of the light.
		1H/2H for timing the fan.

REMOTE SIGNAL PAIRING:



If the remote control loses the signal of the fan, turn off the power from wall switch, then turn it on, press  immediately for around 3 seconds, after the fixture beeps or flashes, then it's down.

Note:

Insert 2 batteries before using : AAA 1.5V battery x 2pcs (not included).

APP Control Instructions

Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

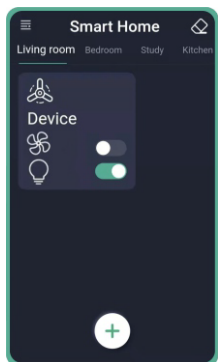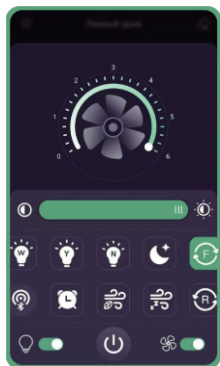

	Pairing: Click the Pair button within 5 seconds after turning on the fan from the wall switch. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
	Turn on/off the light.
	Quick switch for "White" light color.
	Quick switch for "Yellow" light color.
	Quick switch for "Natural" light color.
	Night mode: Dim the lights.
	Slide the slider to change the brightness of the light.
	Slide the slider to change the fan speed.
	Fan moves forward.
	Fan moves reversely.
	Change the direction of the wind. (Not supported)
	Timing the fan.
	Natural wind: The fan speed will change automatically when you use this function
	Sleeping wind. (Not supported)
	Turn on/off the fan.
	Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.

Trouble Shooting

1. Fan doesn't work

- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Check the connection of the power cord.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Check the circuit breaker to ensure the power is on.
- Check the connection of the power cord.
- Check the connection of the LED light source.

3. Noisy Operation

- Re-tighten all screws on the bracket, and fan blades (do not over tighten)
- Check to see if the blade is cracked. If so, contact us to replace it

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again. (See "Remote Control Instructions")
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.