




USE AND CARE GUIDE

GA-107-BW

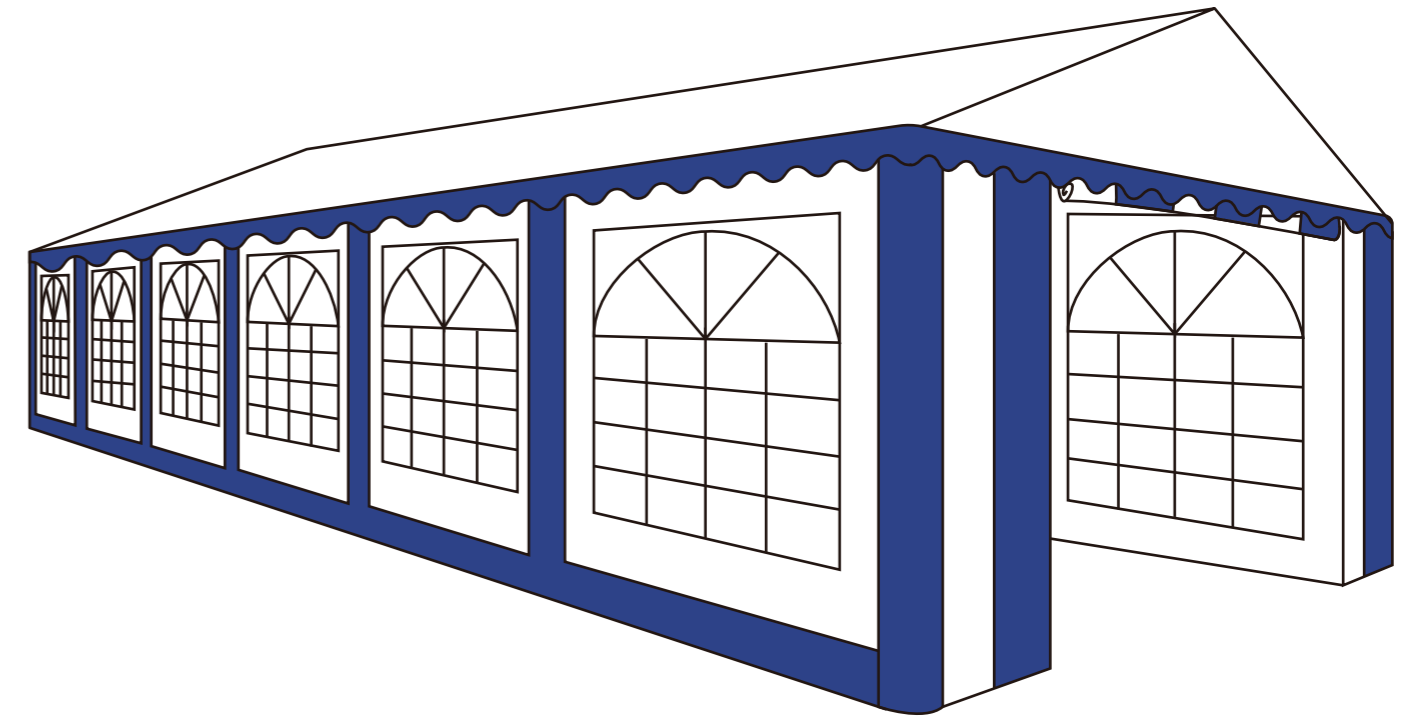

Questions, problems, missing parts? Before returning to the store please contact our Customer Service

- service@alphamarts.com •

1-877-606-2818

Questions, problems, missing parts? Before returning to the store please contact our Customer Service

- service@alphamarts.com •

THANK YOU


 
We appreciate the trust and confidence you have placed in us through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

Table of Contents

Table of Contents	2	Pre-assembly	3-4
Safety Information	2	Assembly	5-7
Warranty	2	Warning	8
What is Covered	2		
What is Not Covered	2		

Safety Information

 - **Do not completely tighten screws until all screws are started.** Tighten each bolt firmly and properly.
- Some parts may contain sharp edges. Wear protective gloves as necessary.
- Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product. Children under the age of 10 should be supervised by a competent adult while using this furniture.
- Please keep children out of the assembly area during assembly.
- This set is heavy, and may require two adults for safe assembly.
- Never use this product as a support. Do not shake, lean, or climb on the product at any time.



Warranty

LIMITED WARRANTY

This warranty is a limited warranty, and applies to the original purchase is required. This is a residential warranty and does not apply to commercial use. This collection carries a (1) year limited warranty and is valid from original date of purchase to the original owner (proof of purchase required).

WHAT IS COVERED

We warrant the frame to be free of Manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team.

Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.



NOTE: Identify all parts packed in the carton against the parts list. Remove all the protective material carefully and DO NOT use a knife to prevent scratching the furniture.

PACKAGE CONTENTS




NOTE: Hardware not shown to actual size.

1 Frame pole X14		2 Frame pole X14	
3 Frame pole X30		4 Support pole X14	
5 connector X14		6 strength pole X4	
7 top strength pole X7		8 connector 140 degree X2	
9 connector 140 degree X5		10 connector 110 degree X4	
11 connector 110 degree X10		12 Middle foot X10	
13 corner foot X4		Steel wires X12	
Long Bungee ball X184		Short Bungee ball X26	


Pre-assembly (continued)

Guy line X4		6x300mm Peg SPIRAL X4	
8x300mm peg MIDDLE X14		4x180mm peg SHROT X54	
Hook X14		bracket X8	
M6X30MM screw+nut X8		M6X80MM screw+nut X14	
Allan Key X1		Roof X1	
Sidewall X12		End wall X2	

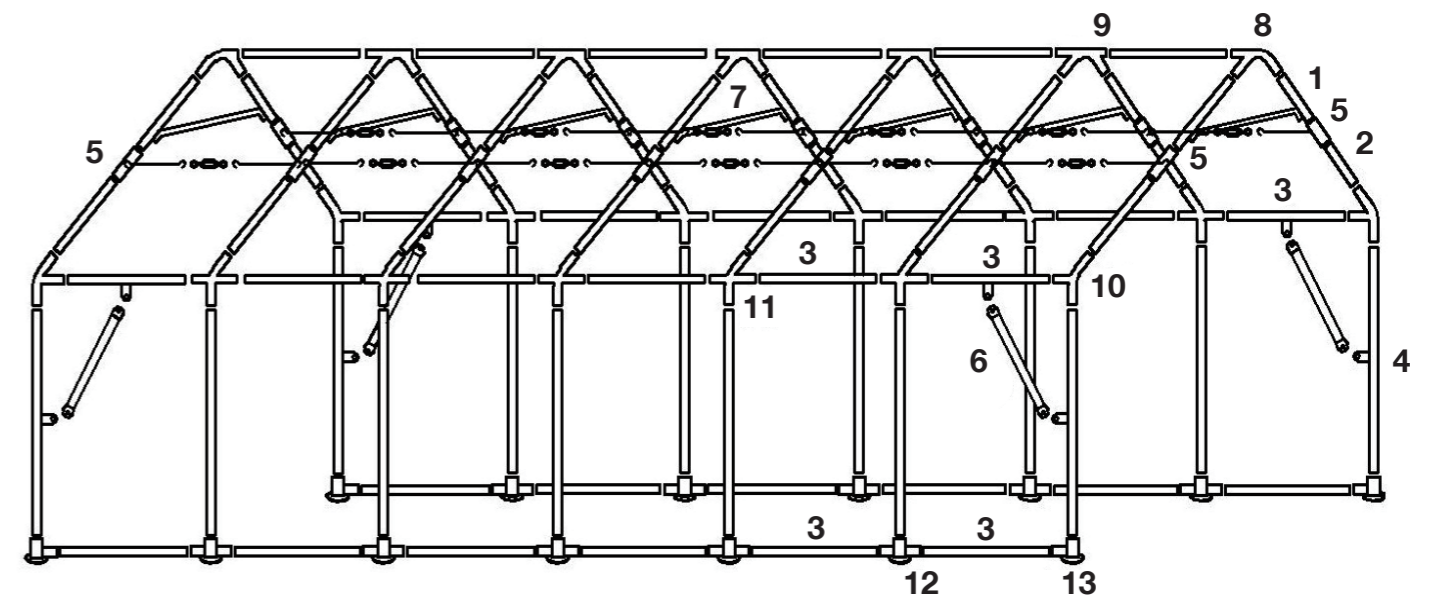


Assembly

5

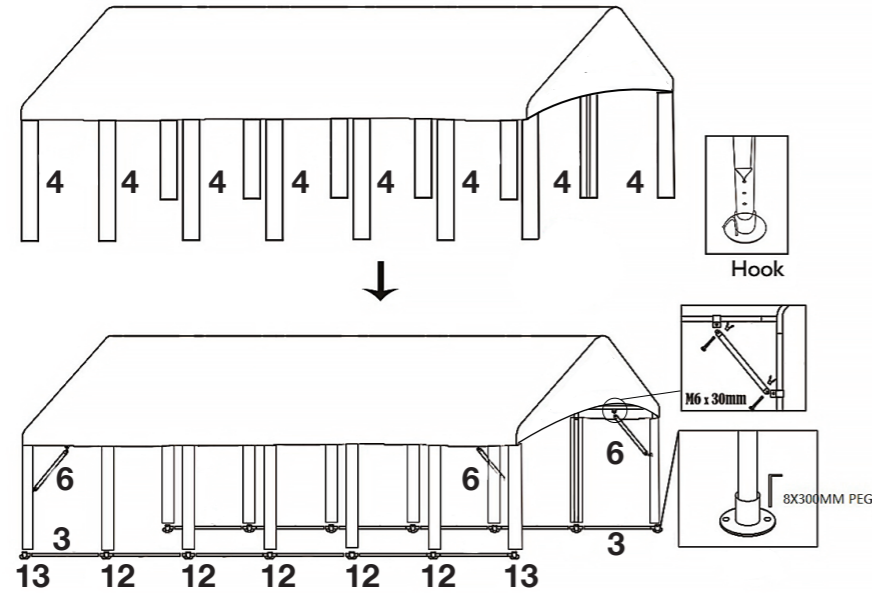

Hook the metal hooks into the tube holes near the feet to make the leg cover tightly, you can adjust the tightness of the leg cover by moving the hooks. Then connect all leg poles on the ground with Pole (3) and Base plates (12,13). Next reinforce the whole body frame using Pole (6), connect pole (6) and bracket with Screw M6x30mm. Finally push the Peg through the hole at the base plate and insert it into the ground to secure the pole.

6

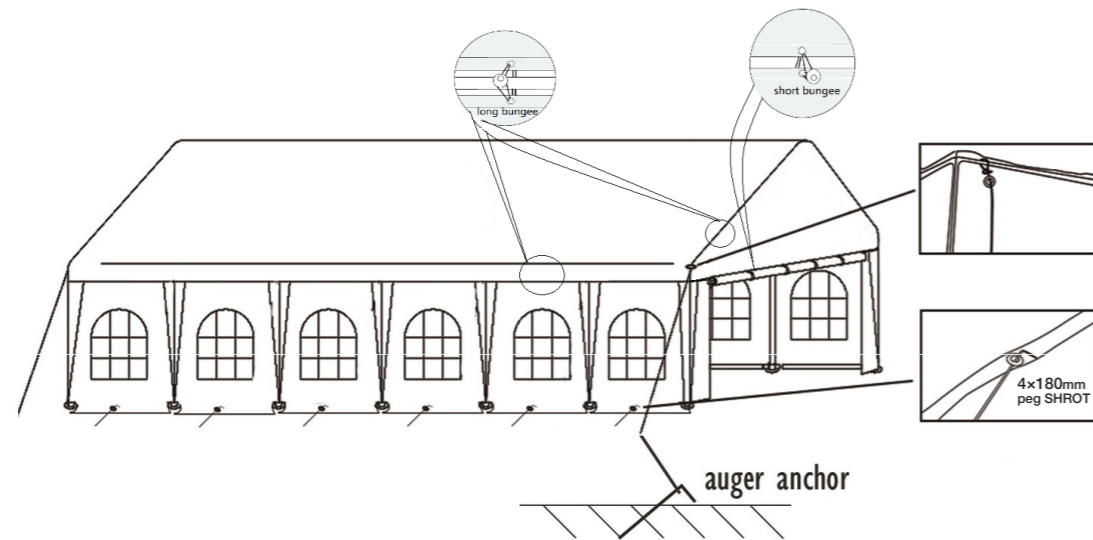

Firstly, attach the Side panels & Zipper doors with Elasti balls, Velcros and Buckles. Secondly, Push the peg through the hole at the bottom of the cover and insert it into the ground to tight the cover. Finally, pass one end of the rope through the hole in the top cover and tie it to the pole inside, then tie the other end of the rope to the Auger Anchor and insert it into the ground to secure the tent.

NOTE: Securing the tent with ropes, pegs, auger anchors is very important, for the safety of the tent, please follow the installation instructions.

Warning

- Take note that the tent needs to be handled carefully to avoid damage.
- Do not force the frame, as there may be damage in the process.
- Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.
- Please select a suitable site for the tent to avoid damage to underground sprinkler systems, water, gas or electrical lines.
- Keep away from naked flame and other heat sources.
- Take preventative measures to avoid wind when wind speed reaches 25 mph or higher.