 
 


LARGE REFRIGERATOR

User Manual

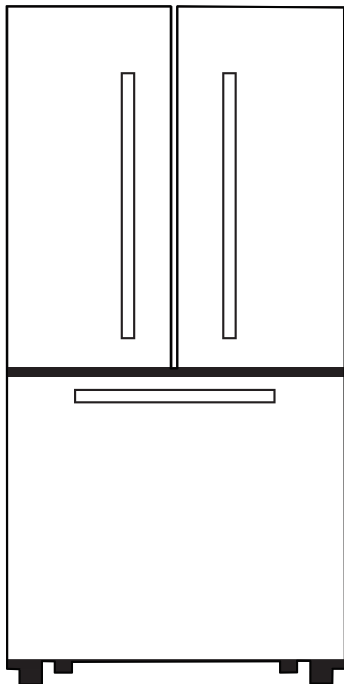

ITEM NO:
45013RLR0-STEEL

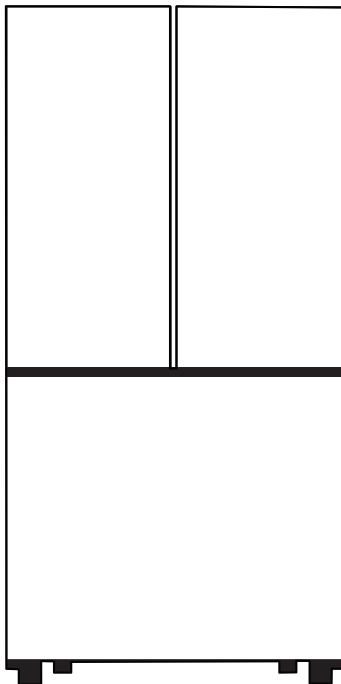

ITEM NO:
45013RLR0-GREY

Model No.: BCD-513WIY

Read this booklet thoroughly before using and save it for future reference



Scan the QR code to
watch the product videos



Web: www.electacticshop.com



Email: service@electacticshop.com

CONTENTS

Important Safeguards	1
Product Overview	9
Installation Instructions	11
Operation Instructions	14
Cleaning and Maintenance	20
Troubleshooting	21

IMPORTANT SAFEGUARDS



CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.

The refrigerant isobutene(R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, with which is nevertheless flammable.

During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.



Symbol ISO 7010 W021 Warning;
Risk of fire/flammable materials!

IMPORTANT SAFEGUARDS

1. **WARNING:** The appliance must be positioned so that the plug is accessible.
2. **WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
4. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
5. **WARNING:** Do not damage the refrigerant circuit.
6. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
7. **WARNING:** This unit uses R600a as the refrigerant and cyclopentane as the foaming agent, both of these materials are easily burnt, when discarding the unit it should be kept away from sources of extreme heat.
8. **WARNING:** Danger of electrical shock, the unit uses yellow-green grounding wire, so it must be grounded before operation.
9. **WARNING:** When the refrigerator is discarded after use please follow all local laws and regulations.
10. **WARNING:** The refrigerant and insulation blowing gas are flammable. Disposing of the refrigerant can only be done at authorized waste disposal centers. Do not expose the refrigerant or insulation to extreme heat or an open flame.

 
IMPORTANT SAFEGUARDS

11. **WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
12. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
13. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
14. **WARNING:** To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and are accessible to drainage systems.
 - Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
 - One-, two- and three-star compartments are not suitable for the freezing of fresh food.
 - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mold developing within the appliance.

IMPORTANT SAFEGUARDS

15. **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:
- Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
16. **WARNING:** Before performing any type of installation or cleaning, disconnect the refrigerator from the power source.
- When you are finished, reconnect the refrigerator to the electrical source and reset the temperature controls to the desired setting.
17. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
18. **WARNING:** The new hose-sets supplied with the appliance are to be used. Any old hose-sets should not be re-used.
19. **WARNING:** Connect to potable water supply only.
- Connect the refrigerator with the cold water pipe: Min. pressure: 140000 pascals;
Max. pressure: 690000 pascals.

IMPORTANT SAFEGUARDS

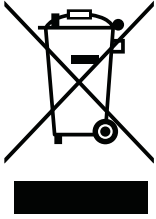

This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

IMPORTANT SAFEGUARDS

Basic safety symbol



This guide contains many important safety messages. Always read and obey all safety messages.

This is the safety alert symbol. It alerts you to warnings that will inform you of any potential hazards that could hurt or kill you. These messages will also help protect your unit from damage. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION.



You could be killed or seriously injured if you don't follow the instructions.



You may be killed or seriously injured if you don't follow the instructions.



Indicates an imminently hazardous situation which if not avoided, may result in minor or moderate injury or product damage only.

 
Appliance connection



This product is applicable to 115V/60Hz only, and the allowable voltage fluctuation range is 98V-132V. It can not be used if the voltage frequency is not 50Hz.

In order to ensure safety, the socket and its cable must be able to withstand the current of above 15A.

LED light

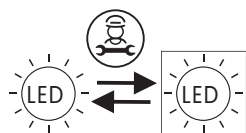

Replaceable (LED only) light source by a professional. This product contains two light sources of energy efficiency class F.

Safety and warning information

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

IMPORTANT SAFEGUARDS



If you believe there is refrigerant leaking, do not touch the unit or the power outlet, ventilate the room and if possible turn your unit off using the circuit breaker. Call the manufacturer immediately.

 


Refrigerant will cause serious injury when coming into contact with the skin or eyes. If this happens please immediately seek out medical treatment.

Make sure to use a grounded power outlet. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Wait for 5 minutes or longer before reconnecting the power cord. Failure to do so may cause the freezer to fail.

The incorrect grounding may cause breakdown and/or electric shock.

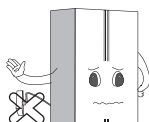

A dedicated outlet should be used. Using several devices at one outlet may cause fire.

Do not allow the power plug to face upward or to be squeezed at the back of the fridge. Water may be flown into or the plug may be damaged, which can cause fire or injury.



 
Do not allow the power cord bent or pressed by the heavy object to be damaged.

Unplug the power cord when cleaning, handling the interior lamp of the fridge. Failure to do so may result in a electric shock or other injury.



Remove water or dust from the power plug with a dry clean cloth, do not use wet hands touch it and insert it with the ends of the pins securely connected.

Do not use the fridge for non-domestic purposes (storing medicine or testing material, blood, using on a ship, etc.) It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

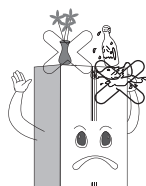

Do not use or store inflammable materials (such as ether, benzene, alcohol, medicine, liquid propane gas, spray or cosmetics etc.) in the fridge. It may cause explosion or cause a fire.

Do not put any glassware that is not designed for use in a fridge or freezer. The glass may crack or break which can lead to injury.

Do not place the heavy object or the dangerous objects such as: cup, flower vase, cosmetics, medicine or any containers with water in the fridge. It may be dropped and cause injury, fire or electric shock when opening or closing the door.

 
IMPORTANT SAFEGUARDS



Do not touch food or containers in the freezer with wet hands. It may cause frostbite.

Do not spray water at the outside or the inside of the fridge. Do not clean it with benzene or thinner.

Do not clean the unit with any acidic cleaners, abrasive brushes, sharp tools, and/or any cleaner that contains benzene.

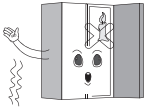

Do not use a drier to dry the inside of the unit, nor light a candle to remove odour. It may cause an explosion or fire.

Do not cling to the door or the trays of the door. It may make the fridge fall down and cause serious injuries or even death. Especially, do not allow children to do the above.

Do not put ice in a thin crystal cup or ceramic ware. It may break up or ceramic ware to cause injury.



Do not allow anyone except a qualified service person to disassemble, repair, or alter the fridge. Unless directed by the manufacturer. It may cause injury, electric shock or fire.

Do not install the fridge in a wet or high humidity environment. Failure to do so will cause premature deterioration, cause the unit to run more frequently and can cause an electrical shock. Install the appliance in a dry, well-ventilated room.

The appliance should be placed close to the wall outlet . It will be easy to cut off the power supply at the time of the accident.

Do not expose the unit to extreme heat or any open flame.

Keep your unit in a well ventilated area, make sure that there is adequate air flow around the unit.

Do not cover or obstruct the exhaust area on the back of your unit, failure to do so may cause electrically shock or injury.

PRODUCT OVERVIEW

Product features

Frost-free eco-friendly refrigerator

The refrigerant R600a and the blowing agent are hydrocarbons that do not destroy the ozone layer and do not contribute to the greenhouse effect.
The freezer is automatically defrosted, saving the trouble of manual defrosting.

Energy saving and noise reduction

Integrating quick-freezing, energy-saving, noise reduction and other technologies, the refrigeration system is optimized to achieve energy saving and minimize noise.

Precise temperature control

The temperature of the refrigerator and freezer room is set, controlled and displayed separately, and the microcomputer control system makes the temperature control more accurate.

LED display and touch buttons

The LED display shows the set temperature and functional status of the refrigerator and freezer compartment respectively. The touch buttons are easy to operate and have a long life span.

Door opening alarm system

When the user opens the door for too long, the system will automatically alarm and remind the user to close the door.

Tempered glass, safe and reliable

The tempered glass shelves are safe and beautiful, have strong bearing capacity, are easy to clean, and are durable.

Detachable door seal

 
Special detachable door seal, long life, strong adsorption, easy to clean.

Automatic Ice Maker

The refrigerator has an automatic ice making function.

PRODUCT OVERVIEW

Product components

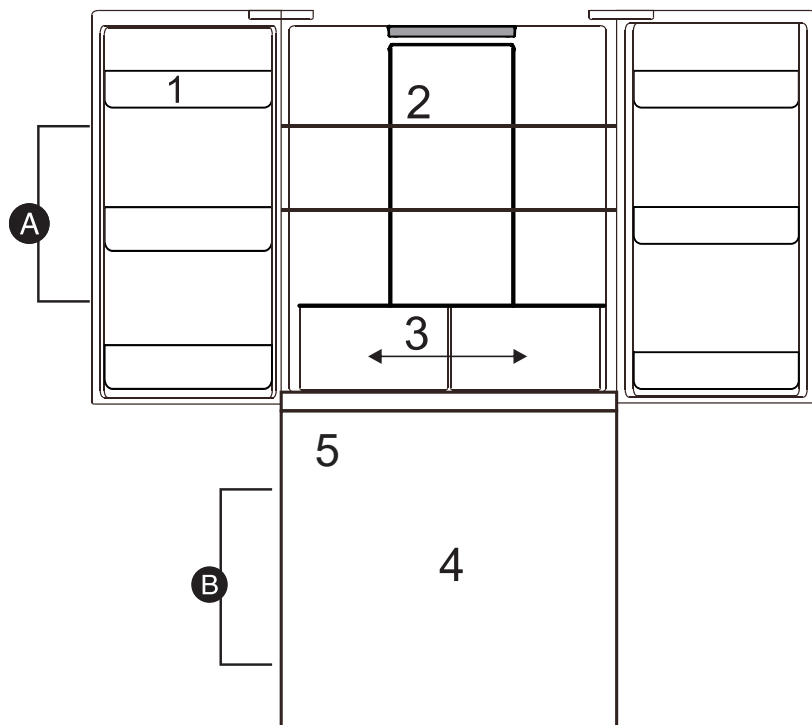

A Refrigerator compartment

B Freezer compartment

1 Refrigerator door bins

4 Freezer drawer

2 Refrigerator glass shelves

5 Ice Maker (inside)

3 Crisper drawers

Important Notes:

1. Model 45013RLR0-GREY features a recessed handle and does not require handle installation. Model 45013RLR0-STEEL is equipped with an external handle that requires installation.
2. All product illustrations in this manual are for reference only and may vary depending on the actual model.
3. To achieve the best energy efficiency, please place all shelves, drawers and bins in their original position as illustrated above.

 
INSTALLATION INSTRUCTIONS

Handle installation



Note:

For model 45013RLR0-STEEL, install the handle as described below.
Model 45013RLR0-GREY does not require this step.



1. Place the bolt into the hole on the refrigerator door. Use a screwdriver (not included) to tighten the bolt clockwise.

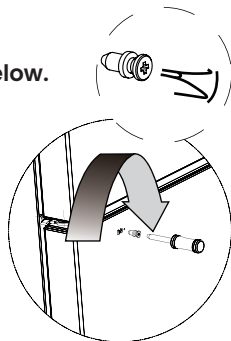

  2. Align the two holes on the handle with the bolts on the fridge door, push the handle to the door until it fits the fridge door closely.

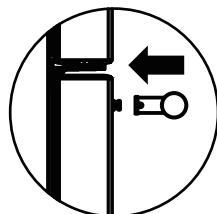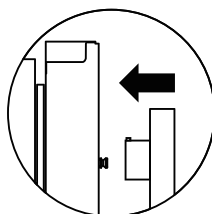

  3. Use Allen wrench to tighten the screws on two ends of handle.

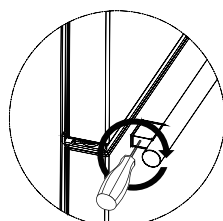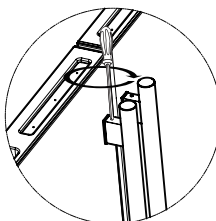

Transportation



 
Do not carry the refrigerator horizontally or by laying it down.

Do not carry the refrigerator by holding the door or handle; the refrigerator shall be carried by lifting the bottom.

This unit should never be moved alone, two people are required to safely lift or move your unit.

INSTALLATION INSTRUCTIONS

Where to install your unit

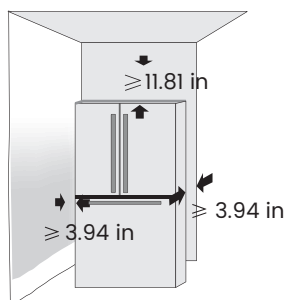

The refrigerator must be placed on hard, flat ground; if cushioning is needed, stable, hard, nonflammable cushion blocks shall be used.

 
 
DO NOT USE THE FOAM PACKAGING AS CUSHIONING BLOCKS!

The unit shall be kept away from damp locations where water is present. Water or dirt should be removed from any surface of the unit as soon as possible using a soft cloth. This will help prevent rust and will help your unit run at peak efficiency.

Place the refrigerator in a well-ventilated place, reserve a certain space around and behind the refrigerator, and do not cover or block the air grille on the rear cover plate of compressor at the back of refrigerator. Keep the refrigerator away from heat source or direct sunlight.


Installation dimension

To ensure that your unit works at peak efficiency, please maintain sufficient space around your unit.

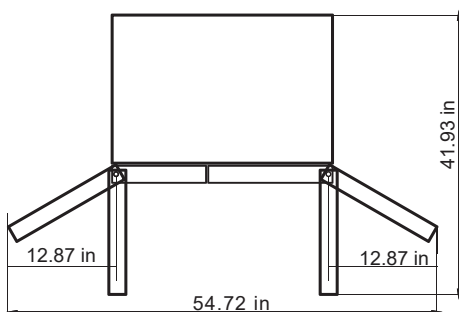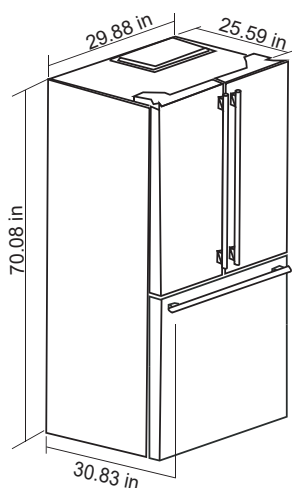

INSTALLATION INSTRUCTIONS

 Adjustable plastic feet

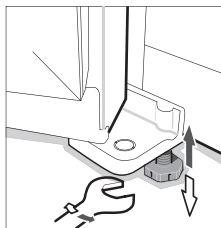


When the refrigerator stays in the packing box, plastic feet are in tightened state. After carrying it out from the packing box for placement, please make sure to adjust two front plastic feet until the height is suitable; just adjust two plastic feet with a wrench or directly by hand.

Plastic feet and rear rollers must touch the ground to prevent the refrigerator from movement, vibration or noise.

When moving the refrigerator, adjust plastic feet counter-clockwise to keep them off the ground, and then push the refrigerator gently to move it.

 Installation and disassembly of door bins

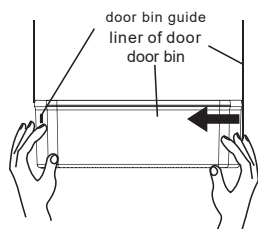


Installation: Hold both sides of the door bin with both hands. First, install the buckle on the guide side. Then push the other side inward slightly; the guide will click into place and the door bin will be installed. Ensure it is properly installed before use.

Disassembly: Hold both sides of the door bin with both hands. Push it from the side without the guide and push inward as shown in the diagram. Continue pushing until the edge of the door bin is separated from the groove of the door liner.

Removal and reinstallation of glass shelves

 To remove the glass shelf, slightly lift the back and then pull it forward.
To reinstall it, slide the shelf into the desired height and lower it into place.

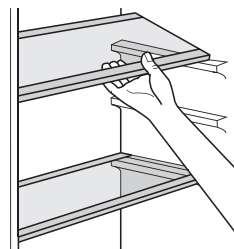

OPERATION INSTRUCTIONS

Before Use

This refrigerating appliance is not intended to be used as a built-in appliance.

Remove all of the packaging, including the foam backing at the bottom of the unit and the tape that fixes the shelves and door bins inside.

Place the refrigerator to a proper position, and adjust the feet to level. It is recommended to wipe your unit with a warm soapy cloth and dry it thoroughly before use.

Let the refrigerator stand for above 4-6 hours, and then power the unit on. This helps make sure that the oil from the compressor has settled properly, and will help your unit run normally.

Starting

Connect the power cord, and turn on the power switch.

Upon startup for the first time, the screen will display respective set temperature values (the temperature of the fridge section is set to 38°F (3°C), the temperature of the freezer is set to -02°F (-19°C)).

The default mode is energy saving upon startup: The screen displays for 20s and then goes off. This mode to save energy and prolong the service life of LED lights.

Water supply connection

WARNING: Connect to potable water supply only.

When using the function of ice maker, please make sure that the tap water pipe is connected normally and the water valve is opened. Enough space shall be reserved for the faucet connecting water source.

Automatic ice maker

 
The ice maker and ice storage box are arranged at the upper part of freezing chamber. When using the ice maker, please make sure that the ice maker switch is turned on and the water system is connected, and the ice maker will make ice automatically; when the ice storage box is full of ice, the ice making process will stop automatically.

The ice maker can make about 3.97 lb (1800g) of ice every 24 hours.

When the freezing chamber reaches the set temperature, the ice maker can make the first batch of ice just for several hours.

OPERATION INSTRUCTIONS

Control panel

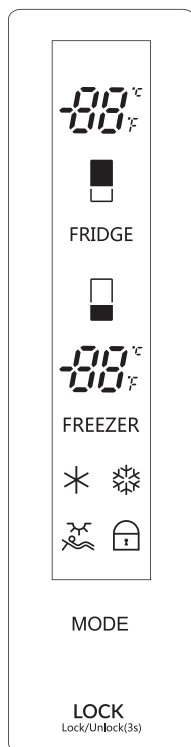

Default is Fahrenheit when power is on.

Press "MODE" button 5 seconds, to switch between °C and °F.

Set temperature range: Celsius degree mode

1.Fridge temperature range: 0~6°C (Default value 3°C)

2.Freezer temperature range: -23~-15°C (Default value -19°C)

Set temperature range: Fahrenheit degree mode

1.Fridge temperature range: 32~43°F (Default value 38°F)

2.Freezer temperature range: -10~5°F (Default value -2°F)

CHILD LOCK

This function prevents unintended changes to the refrigerator settings.

To enable the Child Lock, press the LOCK button. The Child Lock icon will turn on, and the control panel will remain locked until it is unlocked or the power is lost.

To disable the Child Lock, press and hold the LOCK button for about 3 seconds until the icon turns off and the control panel returns to normal operation.

Setting the Temperature Control

- The first time you turn the unit on, adjust the temperature in the refrigerator compartment to 34°F(1°C) and run for at least 4 hours before placing food inside. This will ensure that the freezer compartment is thoroughly chilled and the refrigerator compartment is stabilized before food is placed inside. Then adjust the temperature setting to your desired setting.
- To adjust the temperature in each zone, press the appropriate zone button, and the selected zone will flash on and off. The temperature will change according to the pre-set temperatures.

OPERATION INSTRUCTIONS



FAST FREEZE MODE

This mode will set the freezer temperature to -10°F (-23°C) for a quick drop in temperature when storing large amounts of warm or room-temperature foods in the freezer.

The unit will remain in FAST FREEZE mode for 24 hours.

To enable the FAST FREEZE mode, press the MODE button until the FAST FREEZE icon is illuminated. The icon will remain illuminated when activated.

To disable the FAST FREEZE mode, press the MODE button until the FAST FREEZE icon is turned off.



FAST COOL MODE

This mode will set the refrigerator temperature to 32°F (0°C) for quick drop in temperature when storing large amounts of warm or room temperature foods in the refrigerator. The unit will remain in FAST COOL mode for 2 hours and 30 minutes.

NOTE: FAST COOL and FAST FREEZE can be run together at the same time.

To enable the FAST COOL mode, press the MODE button until the FAST COOL icon is illuminated. The icon will remain illuminated when activated. To disable the FAST COOL mode, press the MODE button until the FAST COOL icon is turned off.



VACATION MODE

Use this mode when leaving for long periods of time, where you will remove the large majority of the refrigerator contents but leave contents in the freezer. Vacation mode will automatically set the refrigerator section to 43°F (6°C) and the freezer section to 5°F (-15°C). The unit will remain in VACATION MODE until the function is deactivated at the control panel.

To enable VACATION mode, press the MODE button until the VACATION icon is illuminated. The icon will remain illuminated when activated.

To disable VACATION mode, press the MODE button until the VACATION icon is turned off.

Open door alarm

When the refrigerator door is open for above 1 min, the buzzer will alarm to remind users to close the door. After the door is closed, the alarm sound will stop automatically.

Fridge compartment switch off/on

Long-press the FRIDGE button for 5–10 seconds to turn the fridge compartment on or off.

When the fridge compartment is off, the fridge temperature display will turn off.

To restore fridge operation, long-press the FRIDGE button again for 5–10 seconds.

OPERATION INSTRUCTIONS

Refrigerator compartment

The fridge compartment should mainly be used to store food that will be consumed in a short time.

Freezer compartment

The freezer compartment is used to freeze foods, store deeply frozen foods and make ice cubes. It can preserve foods for a long time.

Storage of food

1. The freezing chamber is suitable for retaining the freshness of foods for a long time. When storing meat, it is suggested to cut the meat into pieces which are easy to take out, and mark the freezing date to prevent foods from exceeding the time limit.
2. When the ice maker is making ice cubes, you may hear the beep from water valve, flowing sound of water into ice maker, and falling sound of ice cubes. The ice maker will make ice automatically; when the ice storage box is full of ice, the ice making process will stop automatically.
3. Avoid letting oily foods come into direct contact with the refrigerator liner. If the interior is stained by oil or oily liquids, clean it immediately. Prolonged contact may cause the liner to corrode or crack.
4. Two-star(**) frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
One star(*), two star(**) and three star(***) compartments are not suitable for the freezing of fresh food.
5. If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
6. Do not place bottled or canned items in the freezer to prevent bursting due to frost expansion.
7. Allow hot foods to cool to room temperature before placing them in the refrigerator to avoid excessive power consumption.
8. Mark the freezing date on each package based on the recommended storage time to prevent over-storage.
9. Divide foods into appropriate portions and package them separately so they freeze quickly and do not stick together.
10. Use packaging materials that are odorless, airtight, watertight, and food-safe to prevent odor transfer and maintain food quality.

OPERATION INSTRUCTIONS

11. Do not overload the freezer. Avoid placing more fresh food at once than the refrigerator's rated freezing capacity.
12. Do not refreeze thawed food unless it has been cooked; otherwise, food quality and safety may be compromised.
13. Do not place glass bottles or glass containers in the freezer or near the air outlet of the refrigerator compartment, as they may explode.
14. Keep the air outlet clear of food items to ensure proper air circulation and avoid abnormal cooling performance.
15. Do not place food in direct contact with the interior surfaces of the appliance. Wrap food in aluminum foil, cellophane, or store it in airtight plastic containers before placing it inside.

Storing frozen food.

Store at 0°F (-18 °C) or colder. Avoid opening the freezer compartment door unnecessarily.

Freezing fresh food

To freeze fresh and undamaged food only. To retain the best possible nutritional value, flavour and colour, vegetables should be blanched before freezing. Aubergines, peppers, zucchini and asparagus do not require blanching.

- The following foods are suitable for freezing:
Cakes and pastries, fish and seafood, meat, game, poultry, vegetables, fruit, herbs, eggs without shells, dairy products such as cheese and butter, ready meals and leftovers such as soups, stews, cooked meat and fish, potato dishes.
- The following foods are not suitable for freezing:
Types of vegetables, which are usually consumed raw, such as a lettuce or radishes, eggs in shells, grapes, whole apples, pears and peaches, hard-boiled eggs, yogurt, soured milk, sour cream, and mayonnaise.

OPERATION INSTRUCTIONS

Recommended storage times of frozen food in the freezer compartment

Food	Storage time
Bacon, casseroles, milk	1 month
Bread, ice cream, sausages, pies, prepared shellfish, oily fish	2months
Non-oily fish, shellfish, pizza, scones and muffins	3months
Ham, cakes, biscuits, beef and lamb chops, poultry pieces	4months
Butter, vegetables (blanched), eggs whole and yolks, cooked crayfish, minced meat (raw), pork (raw)	6months
Fruit (dry or in syrup), egg whites, beef (raw), whole chicken, lamb (raw), fruit cakes	12 months

Energy saving tips

- Make sure to keep the refrigerator away from heat source and direct sunlight.
- Before storing hot foods, cool them to room temperature, and then put into the refrigerator.
- Close the door timely, reduce the opening frequency and shorten the opening time.
- When unfreezing frozen foods, you can put them into the refrigerating chamber.
- Make sure that the temperature sensor is not covered or blocked by foods.

CLEANING AND MAINTENANCE

Cleaning

Precautions for internal and external cleaning of refrigerator:

- Before cleaning, always turn off the power switch, disconnect the power plug.
- During cleaning, make sure that no water will enter the switch, control panel, and door lamp.
- Remove dirt from the outside of refrigerator with mild cleaner, then wipe with clean soft cloth, and let the refrigerator dry naturally.
- When cleaning door gasket, always use clean water, wipe with dry cloth and let it dry naturally.
- It is forbidden to flush the refrigerator directly with water, which will affect electrical insulation properties, etc.
- It is forbidden to clean the refrigerator with metal wipers, wire brushes, coarse abrasive cleaners, strong alkaline detergents, or flammable or toxic cleaning fluids.

Maintenance

On vacation

- When you want to leave for vacation, you had better to make the refrigerator operate continuously and leave foods that can be stored for a short time. If you want to stop the refrigerator, remove all foods, disconnect the power plug, clean the inside of refrigerator fully, and open the door to avoid producing abnormal odors.

At power failure

- Generally, short-term power failure will not affect the temperature of the refrigerator sharply. However, if power failure lasts for a long time, you shall reduce the opening frequency of refrigerator, and shall not put fresh foods into the refrigerator (prevent the temperature of refrigerator from speeding up).
- If you know power failure is coming, you can turn on the "Fast Cool" and "Fast Freeze" function in advance to keep the temperature of refrigerator to the lowest value.

TROUBLESHOOTING

Normal phenomena

1. Long time to start

When the ambient temperature too high, it will take long time to start the appliance.

2.Dew drops

When external air flows into the cool inner surface of the fridge, dew drops can be formed. If the humidity of the installed location is high or during the rainy season, dew drops can form on the outer side of the fridge. Wipe the water drops with a dry cloth.

3. Noise

When the refrigerator is used for the first time, the compressor will run at high speed to cool the compartment quickly, which may make the operating noise sound louder. The noise will decrease once the internal temperature reaches the set level.

You may also hear sounds when the compressor starts or stops, when components expand or contract due to temperature changes. These sounds are normal.

Troubleshooting

Fault	Possible cause	Remedial action
No display on the display panel	The mains plug of the appliance is not in the socket properly.	Plug in the unit properly.
Alarm sound	Door is slightly open or not close more than 1 minute.	Close the door completely.
The compressor does not work	It's under defrosting mode.Power is not connected well.	It's normal for defrosting;Check whether the power is connected well.

TROUBLESHOOTING

Compressor runs too long	The fridge has recently been disconnected for a period of time; Put too much fresh or hot food; Doors are opened too frequently or too long.	It takes some hours for the fridge to cool down completely; Hot food will cause the fridge to run longer until the desired temperature is reached; Warm air entering the fridge cause it to run longer. Open the door less often.
Vibrating noise	Floor is uneven or weak; Items placed on the top of the fridge are vibrating; Fridge is touching wall or cabinets.	Be sure floor is level and solid and can adequately support fridge; Remove items; Move fridge so that it does not touch the wall or cabinets;

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**