


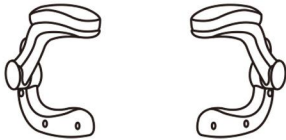











Instruction Manual

Office Chair



Thank you for choosing our chair. Before assembly, please check all parts (13 total). Contact us at anytime if anything is missing)


Accessories List

Item No.	Reference Image	Qty	Item No.	Reference Image	Qty
(1)	<p>Casters</p> 	5	(8)	<p>Armrests</p> 	2
(2)	<p>Split Base Tubes</p> 	5	(9)	<p>M6*14mm Screws</p> 	10
(3)	<p>Central Base Tube</p> 	1	(10)	<p>M6*20mm Screws</p> 	4
(4)	<p>Air Rod</p> 	1	(11)	<p>M6*25mm Screws</p> 	8
(5)	<p>Base Plate</p> 	1	(12)	<p>Plastic Caps</p> 	8
(6)	<p>Seat Cushion</p> 	1	(13)	<p>Wrench</p> 	1
(7)	<p>Back Cushion</p> 	1			

Assembly Instruction


Step 1

Insert the 5 split base tubes (2) into the central base tube (3).
Secure with 10 M6×14mm screws (9).

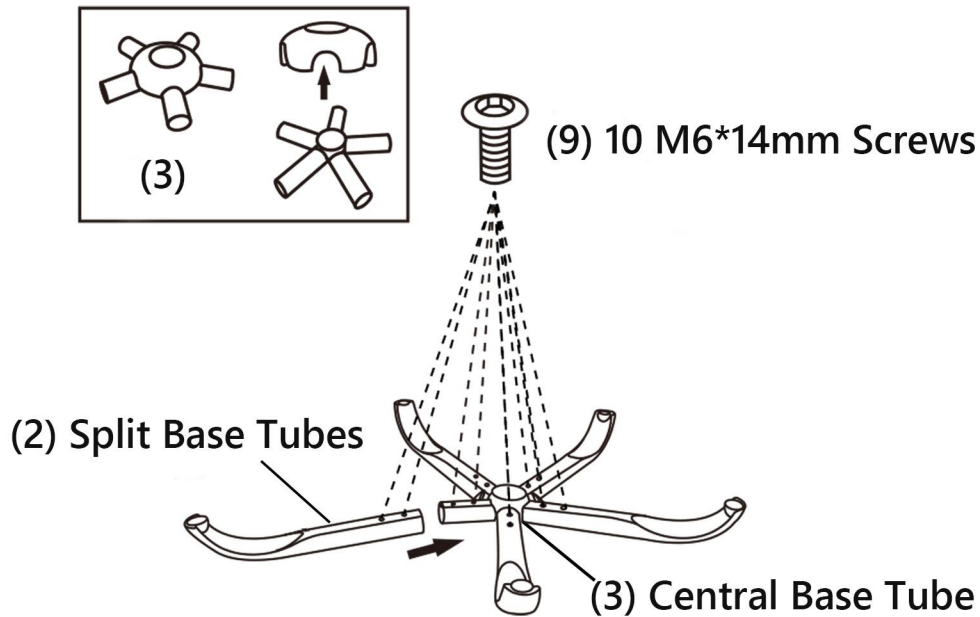

Step 2


Attach the 5 casters (1) to the split base tubes (2). Insert the air rod (4) into the central base tube (3).

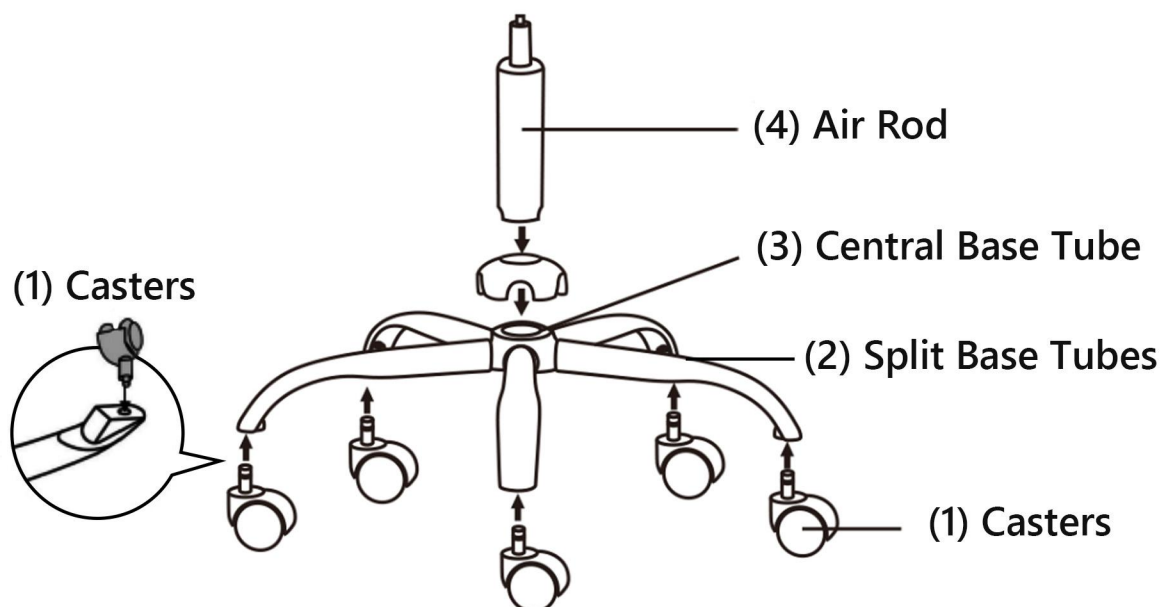

Step 3

Attach the base plate (5) to the seat cushion (6) with 4 M6*20mm screws (10).


NOTE: Ensure the "FRONT" labels on the seat and base plate are aligned.

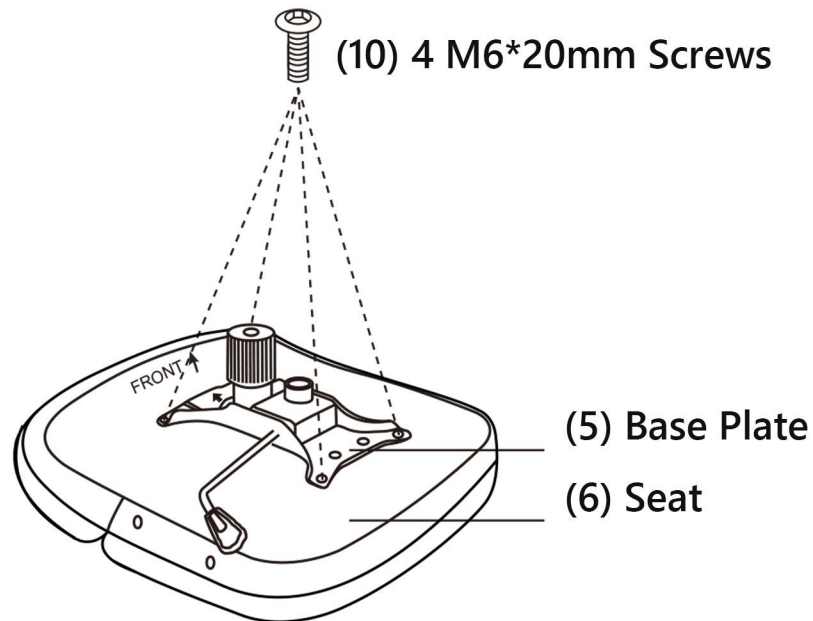

Step 4

Attach 1 armrest (8) to the back cushion (7) and seat cushion (6) using 4 M6*25mm screws (11).


NOTE: Please do not fully tighten the screws yet!

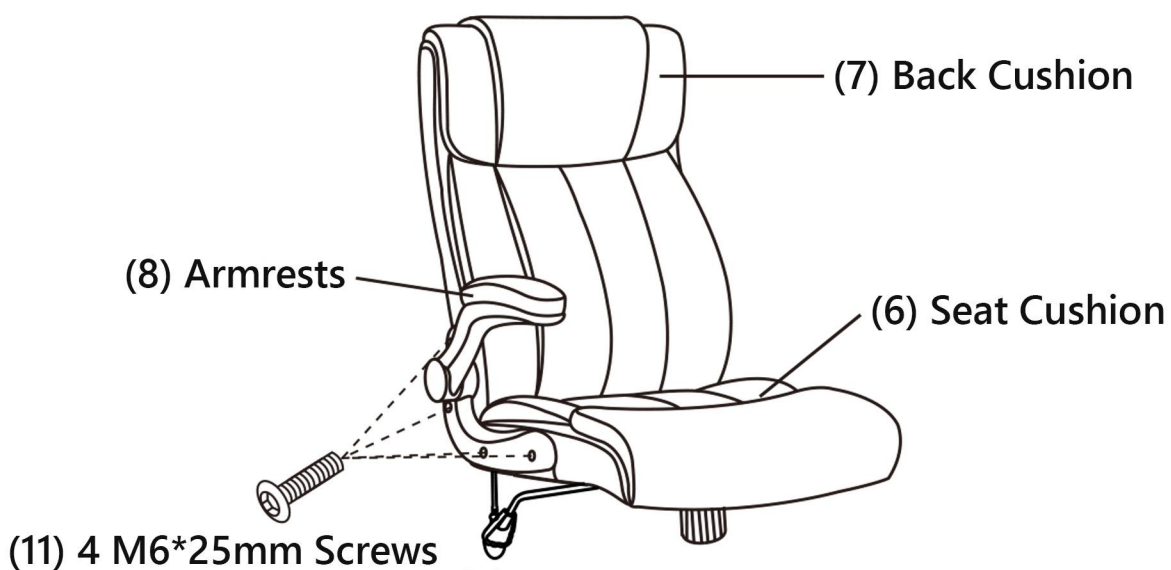

Step 5


Attach the another armrest (8) to the back cushion (7) and seat cushion (6) using 4 M6*25mm screws (11).

NOTE: Please do not fully tighten the screws yet!

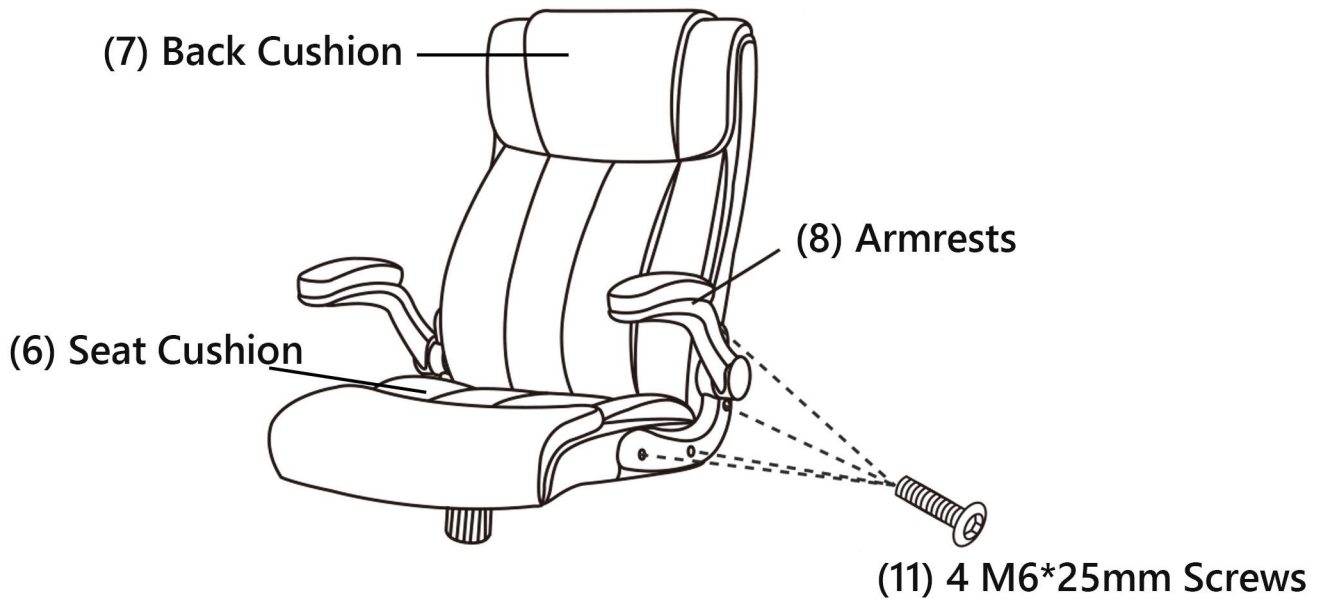


Step 6

Adjust the balance first, then fully tighten all the arm rests crews on each side.

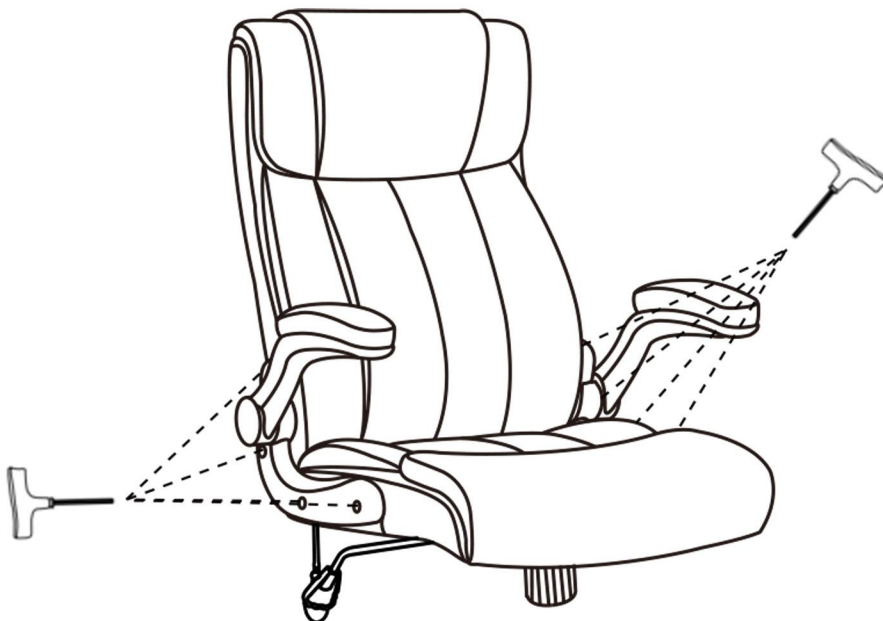


Step 7

Press the 8 plastic caps (12) to cover the screws.

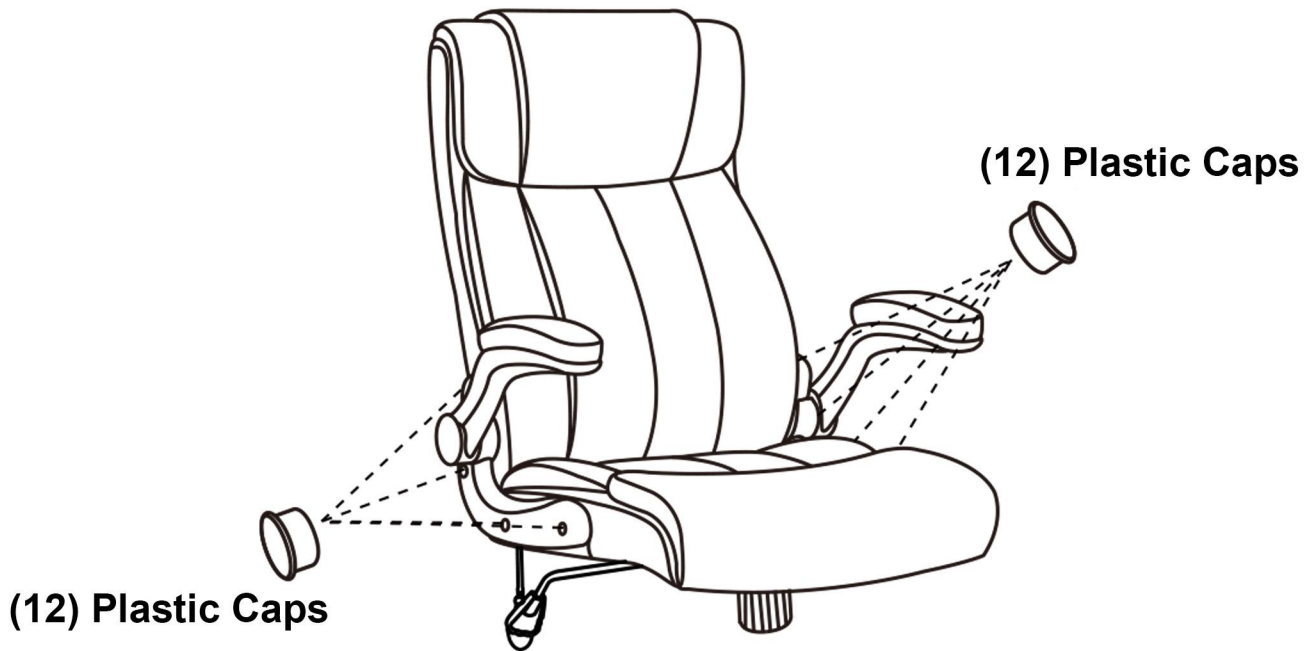

Step 8

Align the hole on the base plate (5) with the air rod (4), then press the seat cushion (6) firmly until it locks into position.

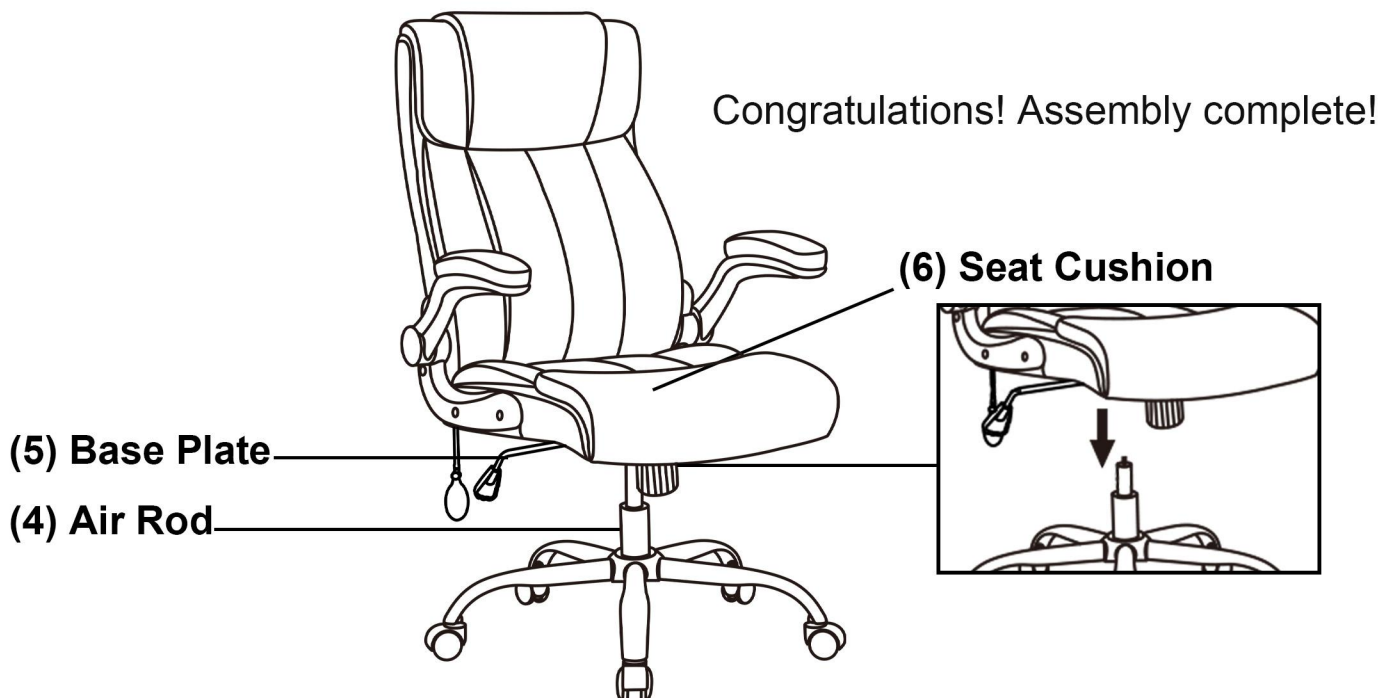

INSTRUCTIONS FOR USE

(I) Inflatable Back Cushion

Location: Inflation handle on the right side (while seated).



To Inflate:


1. Lean back against the back cushion.
2. Press and hold the inflation handle repeatedly until you reach your preferred degree of firmness.

To Deflate:

1. Lean back against the cushion.
2. Pinch the valve plug to release air.
3. Release to stop deflation.

Important Note: Avoid over-inflation to ensure product longevity.

(II) To Adjust The Seat Height

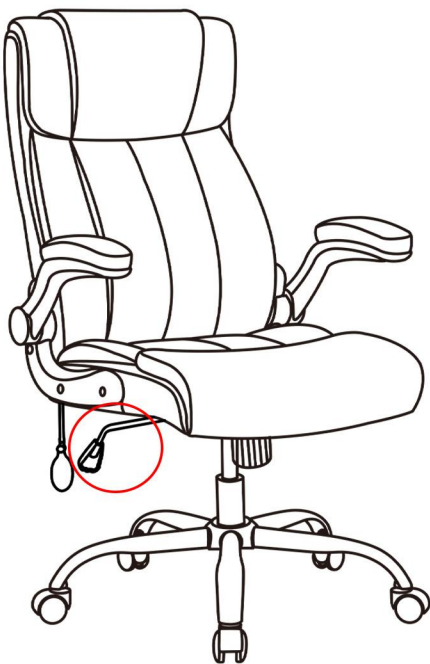

To raise the seat:

1. While seated, slightly lift your body up.
2. Pull the side lever upward and hold.
3. Release the lever when your desired height is reached.


To lower the seat:

1. While seated, pull the side lever upward.
2. The seat will descend gradually.
3. Release the lever to lock the position.

Note: If the seat height changes unexpectedly or cannot be adjusted properly, please contact us for assistance.

INSTRUCTIONS FOR USE

(III) To Adjust Tension On The Tilt

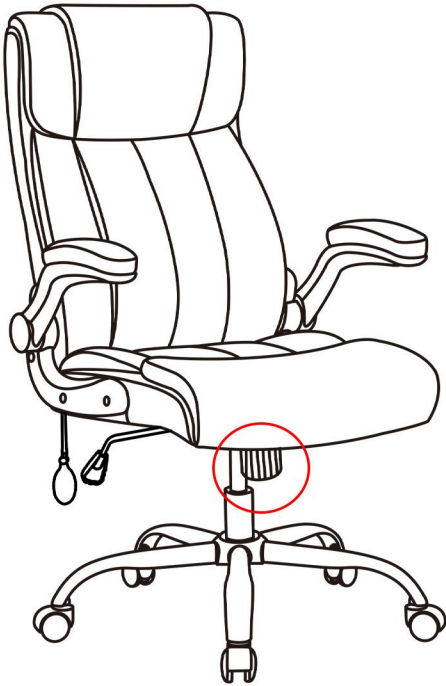

To Increase Tension (Firmer Tilt):


Turn the knob under the seat counterclockwise to stiffen the tilt mechanism (recommended for heavier users).

To Decrease Tension (Easier Tilt):

Turn the knob clockwise to loosen the tilt mechanism (recommended for lighter users).

Note: Higher tension makes tilting more resistant, while lower tension allows smoother movement.

(IV) Tilt Function Control

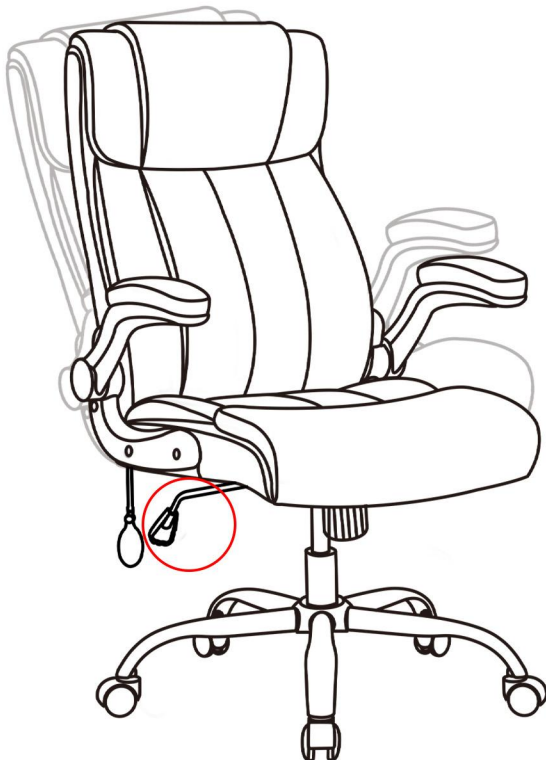

To Activate Tilt:

Pull the lever on the right side outward (→) to unlock and enable tilting.

To Lock Tilt:

1. Return to an upright sitting position.
2. Push the lever inward (←) until it clicks.