

LM-25 Instructions

1. Instructions:

- (1) Insert four 25 Cent coins to make a spin (two 25 Cent coins in each slot)
- (2) Rotate the handle 360° .
- (3) Take out the gumball from the ball port.

2. Coin Mechanism: Vending machine accepts 25 Cent coins. Insert two 25 Cent coins in each slot simultaneously and make a spin of this commercial vending machine. Vending machine requires \$1 in total to make a spin.

3. Vending machine is capable of vending capsules, bouncy balls and gumballs.

4. Machine maintenance

- (1) Regularly check the coin function of the coin dispenser to ensure normal operation.
- (2) Regularly check if the toy capsules inside the chassis is broken or if the toy is dropped, and clean it in a timely manner.
- (3) Keep the machine clean and tidy, and ensure that the coin slot is free of debris and not blocked.

5. Common Machine Faults and Troubleshooting

- (1) Unable to transfer coin: First, remove the coin dispenser for inspection
- (2) Check if the coins and currency values set on this machine have been invested.
- (3) Check if there are any other debris or coins stuck inside the front and back of the coin slot.
- (4) After eliminating the above doubts, if there are still problems, the coin dispenser needs to be returned to the factory for repair or video guided maintenance.
- (5) After the coin is thrown and rotated, sometimes the ball may not drop out, please throw a few more coins to try the spin.
- (6) If the ball drops out normally, there is no problem. It is only an occasional empty goal, which is normal;
- (7) If the ball does not drop out continuously, it may be due to debris or broken balls blocking the 6-hole movement of the machine. Remove all balls and clean the debris inside the chassis.
- (8) If the ball does not drop out occasionally, please check if the ball hole and leakage hole of the movement are aligned up and down, and use your hand to move them back to their original position.

Safety considerations

To ensure safe use and avoid harm to you or others, please strictly follow the following safety precautions:

- (1) When the machine is in standby mode or during use, please don't reach deep into the ball port to avoid pinching your hand.
- (2) Put the coin in the slot, rotate the knob 360° clockwise, and when you hear the ball drop out, open the ball port to remove the ball.
- (3) If you want to continue purchasing twisted eggs, please remove the previously purchased twisted eggs first, and then deposit coins to spin out the ball and retrieve it.