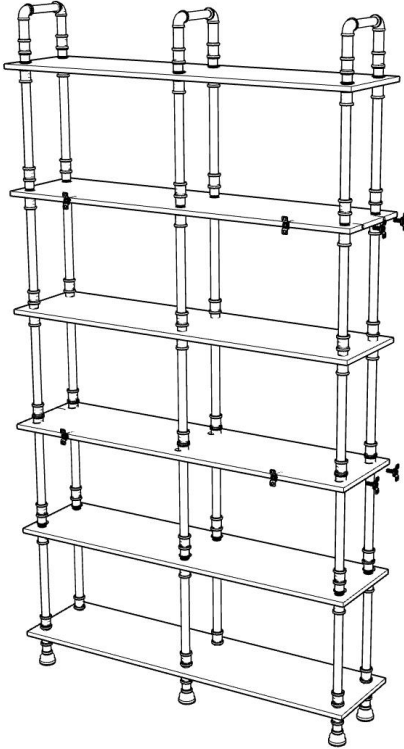 
 
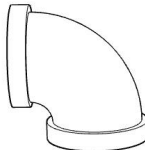 
 
 



SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

		A  2PCS		B  4PCS	
		C  6PCS		D  72PCS	
E  6PCS		F  F1: 1.5 " 42PCS F2: 2.4 " 6PCS F3: 6.3 " 3PCS F4: 12 " 30PCS		G  8PCS	H  36PCS
I  6PCS		J  8PCS	K  16PCS	L  16PCS	N  1PC
				M  1PCS	

Please unscrew all spare parts before assembling.
If you find the screw thread is rusty, please don't worry,
it will not affect the installation and use.

 SKU:6090-PIPE-WT6BR ASSEMBLY INSTRUCTION

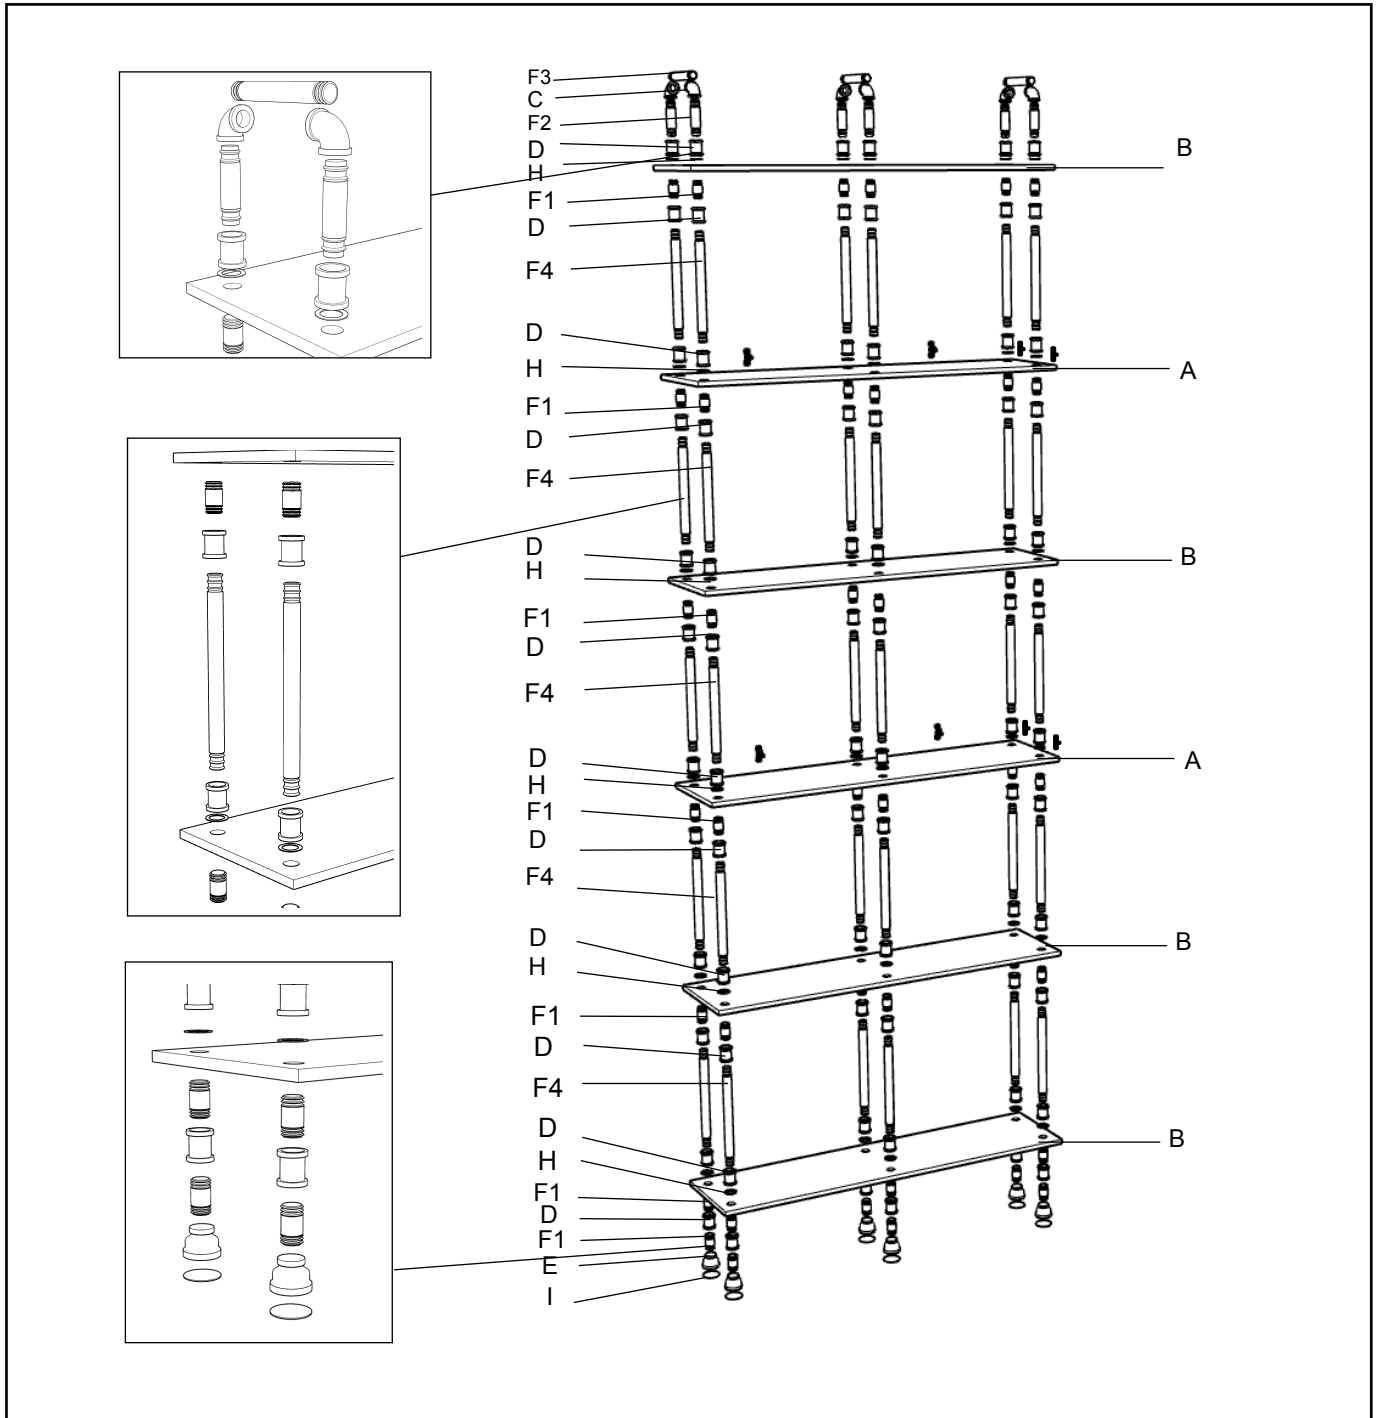


Decompostion Diagram

SKU:6090-PIPE-WT6BR


ASSEMBLY INSTRUCTION

 STEP 1

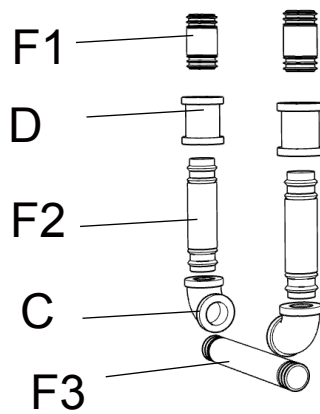

This step*3

 STEP 2

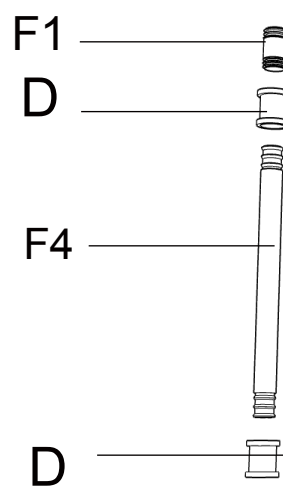


This step*30


SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

 STEP 3

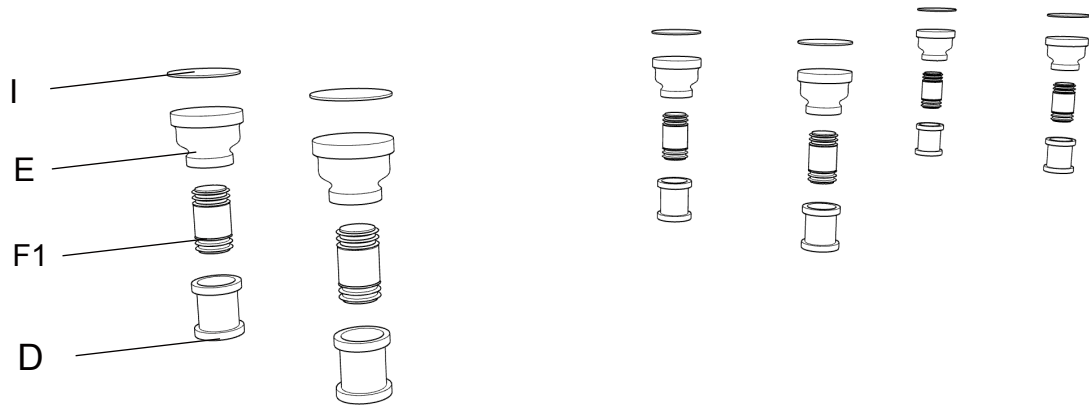

 
STEP 4

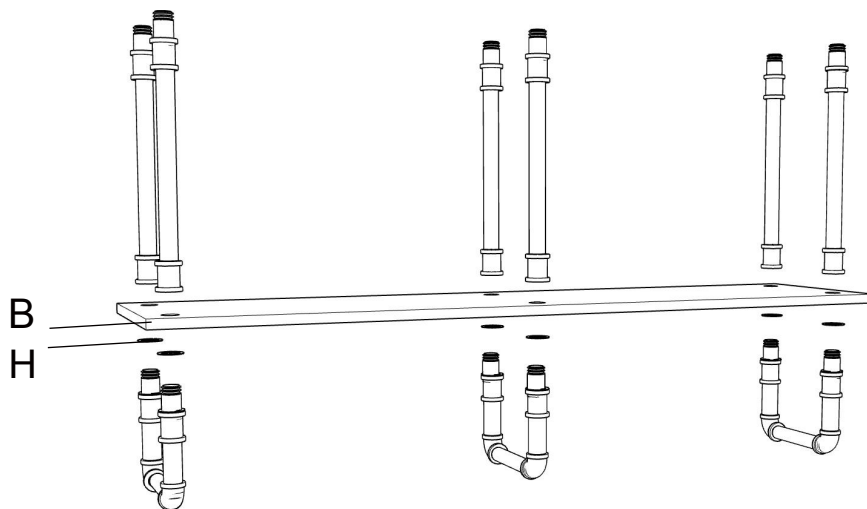


SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

 STEP 5

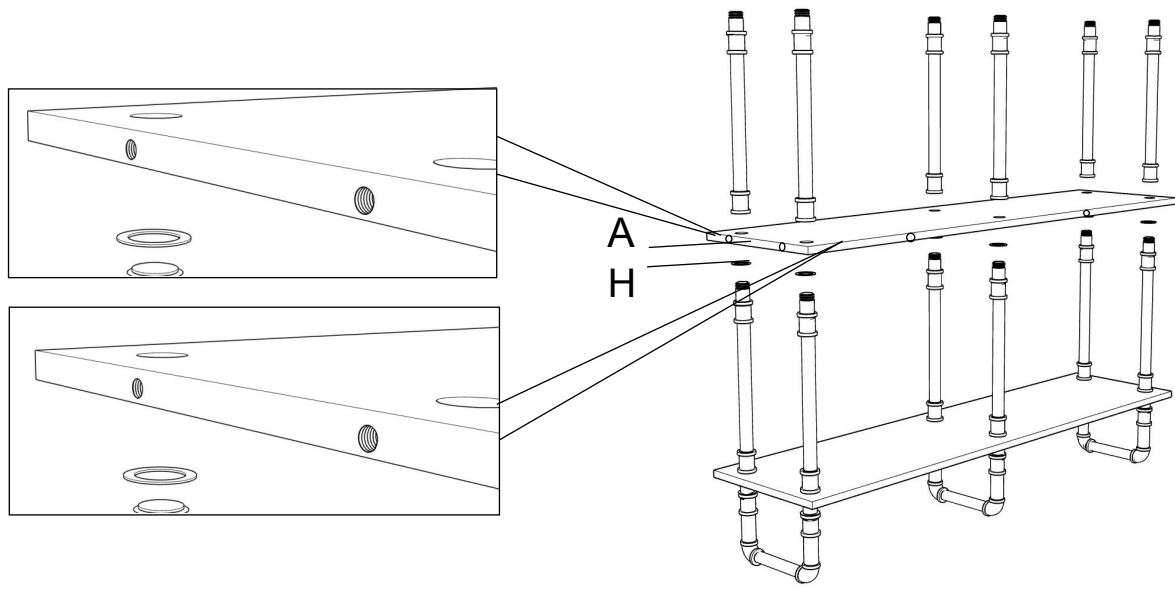

 
STEP 6

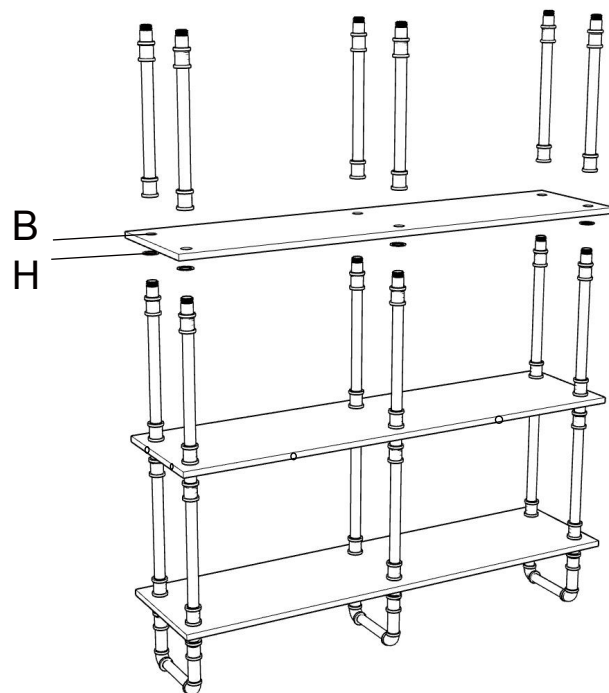


SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

 STEP 7

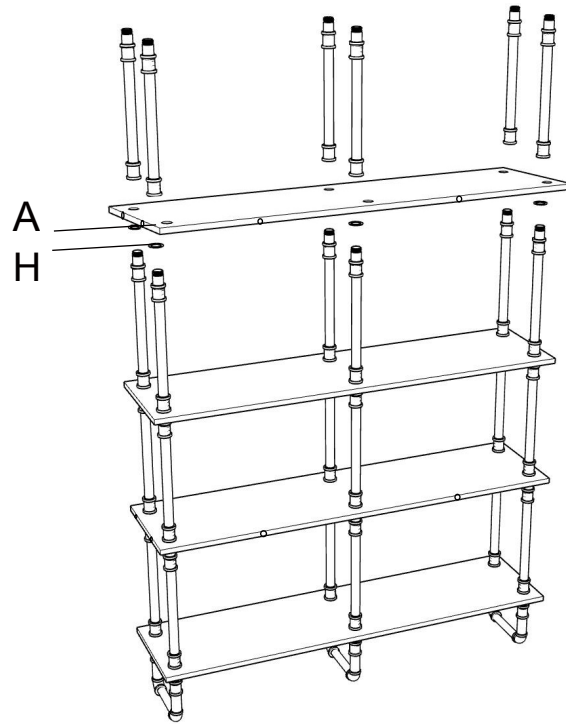

 
STEP 8

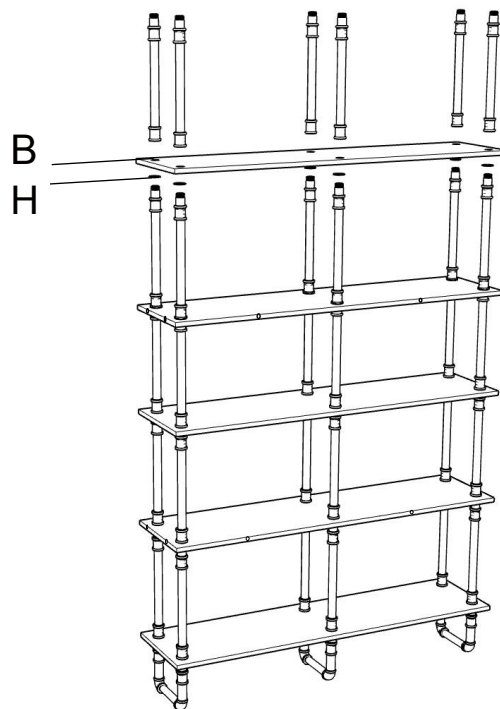

SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION



 
STEP 9

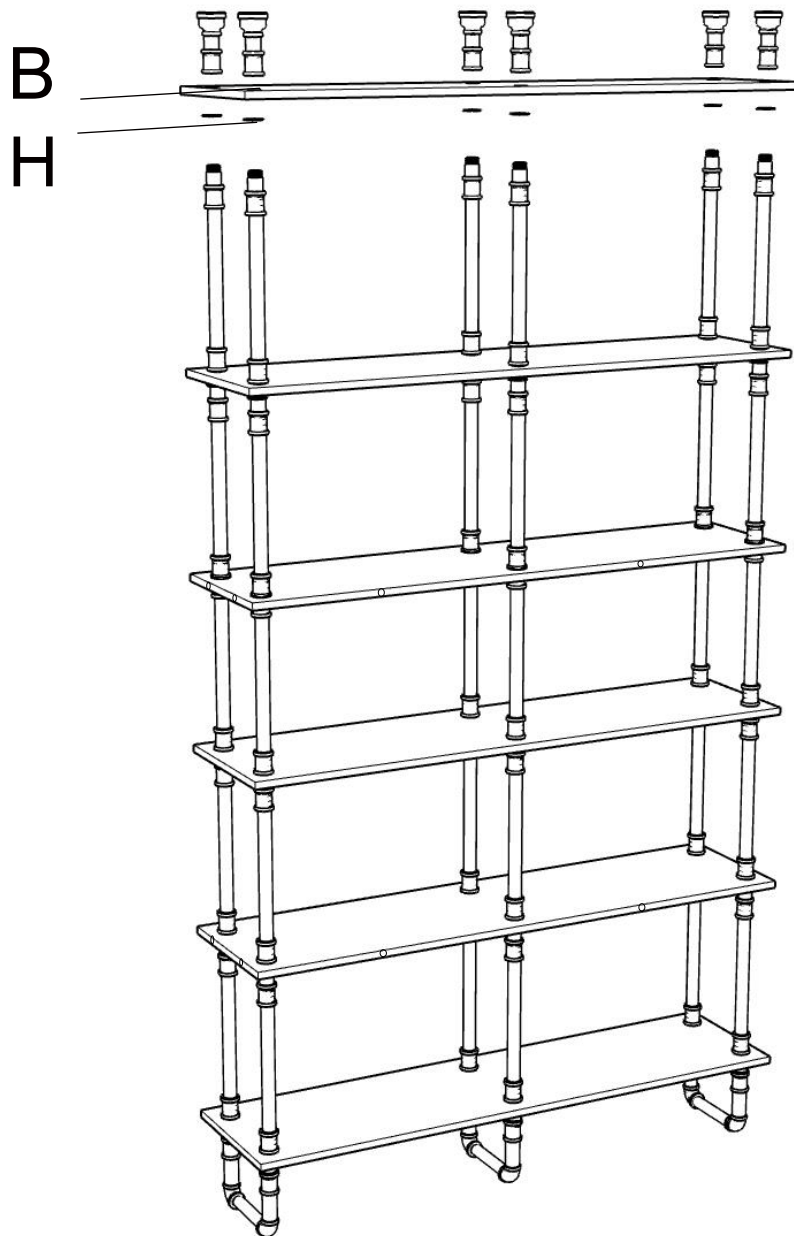

SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

   STEP 10

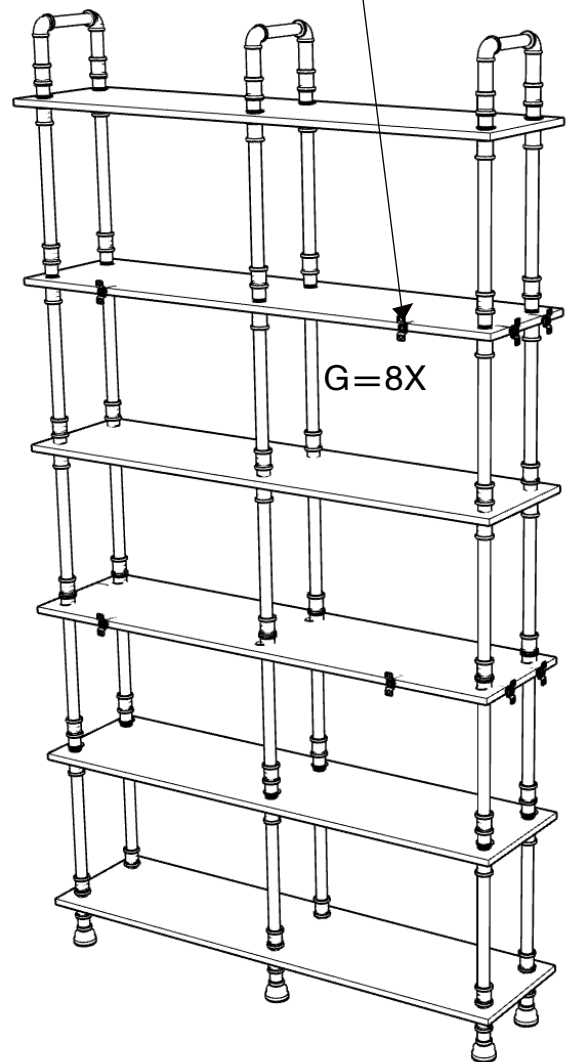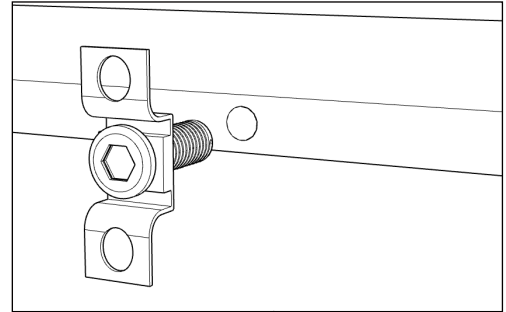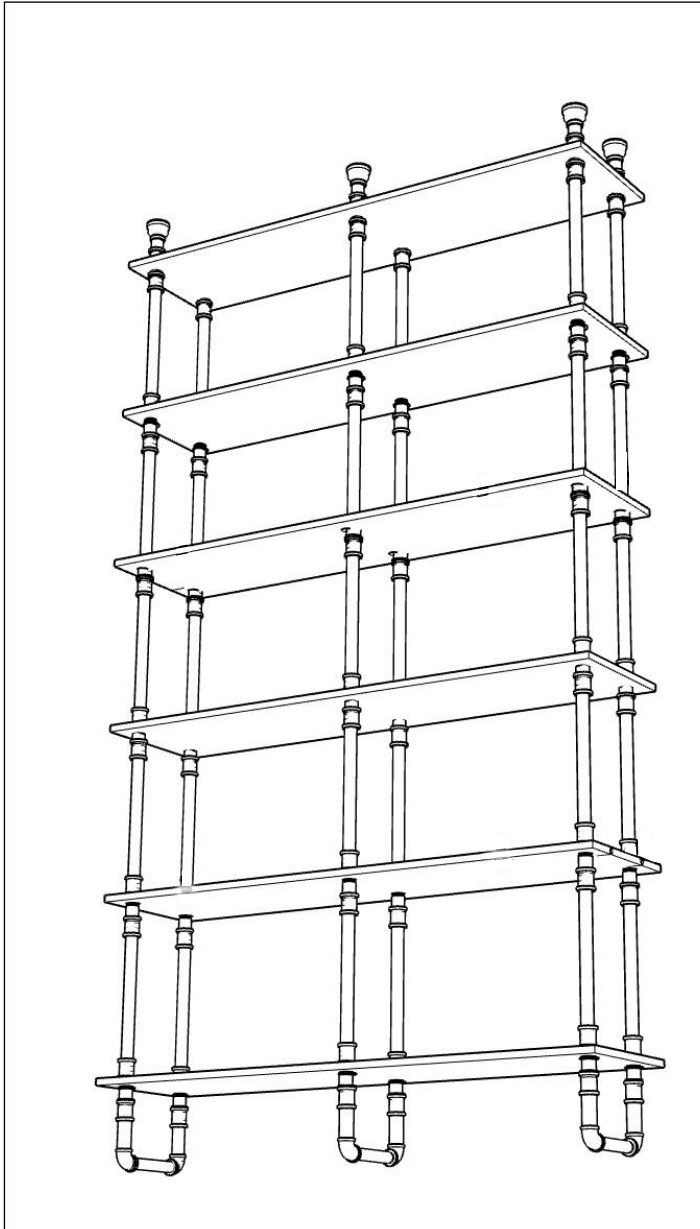

SKU:6090-PIPE-WT6BR

ASSEMBLY INSTRUCTION

STEP 10

Use expansion screws to fix it to the wall.

