
# L SHAPED DESK

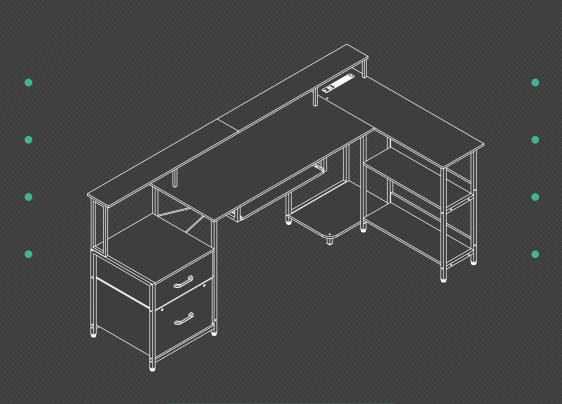

#### USER MANUAL



ΤΟΡΙΟ			PAGE
_	SAFETY INSTRUCTIONS		01-01
01	1-1 1-2	Thank You For Choosing Our Product Precautions	01 01
_	INSTALLING MODULES		02-45
02	2-1	Disassembly Diagram	02
UZ	2-2	Parts List	03-05
	2-3	Assembly Instructions	06-46
	CUSTOMER SERVICE		47
03	3-1	30-Day Return Policy	47
	3-2	1-Year Warranty	47
	3-3	Quick Response Within 24 Hours	47
	PROBLEMS YOU MAY ENCOUNTER		48
04	4-1	Problems You May Encounter	48

#### **Thank You For Choosing Our Product**

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

#### Precautions



• Avoid long-term direct sunlight exposure.



Keep away from sharp objects.



• Keep away from heat.



 Keep infants/children away from assembly parts to avoid choking and suffocation.




• Keep away from corrosive substances.




• Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

# **Disassembly Diagram**

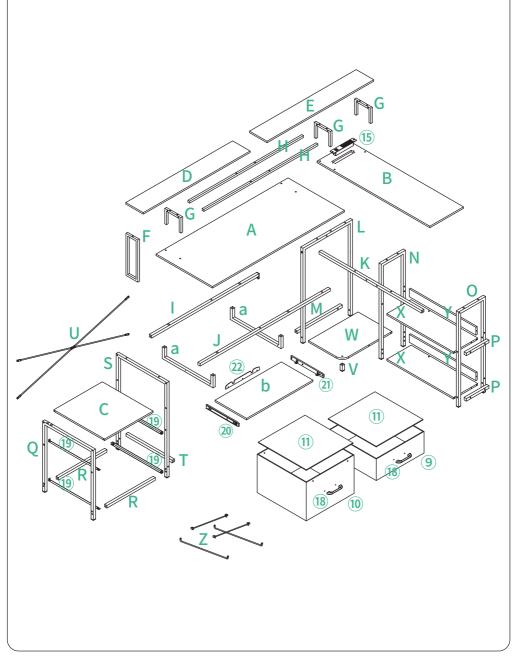


# Parts List

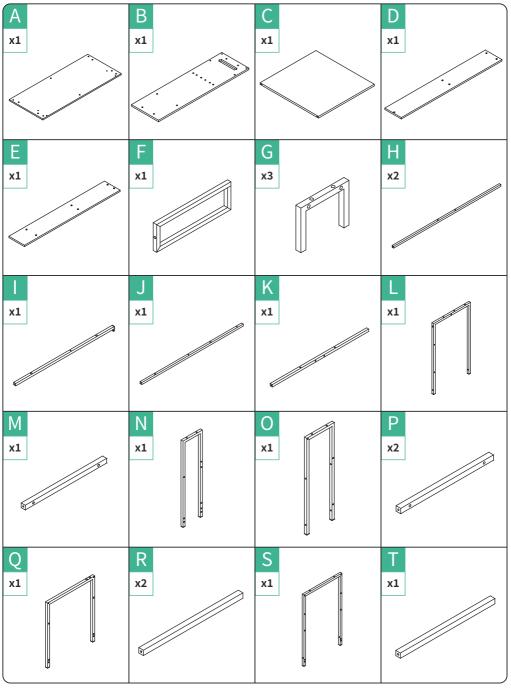


03

#### **Parts List**

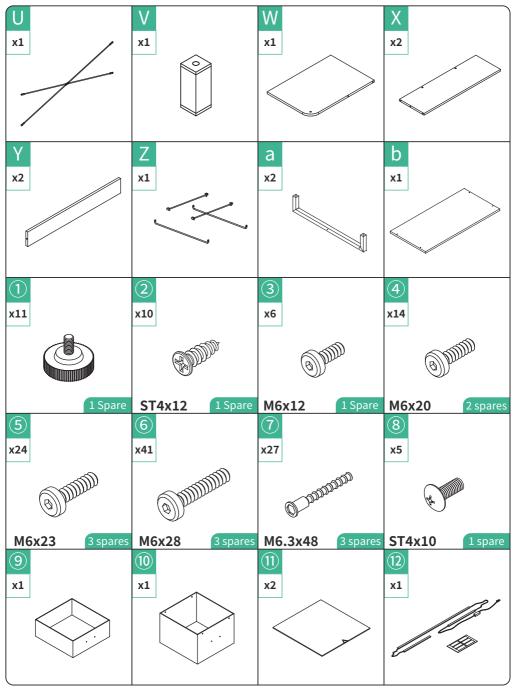


04

## Parts List

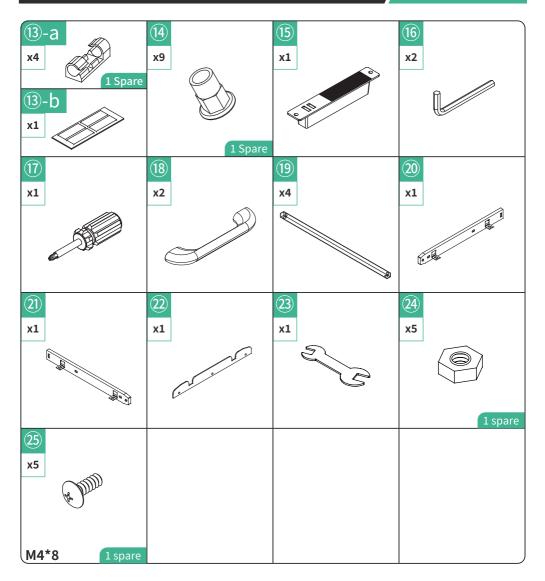



Note that the two boards of the desk can be swapped between the left and right when installed.


Please refer to the 1L-27L steps for the left corner and the 1R-27R steps for the right corner.

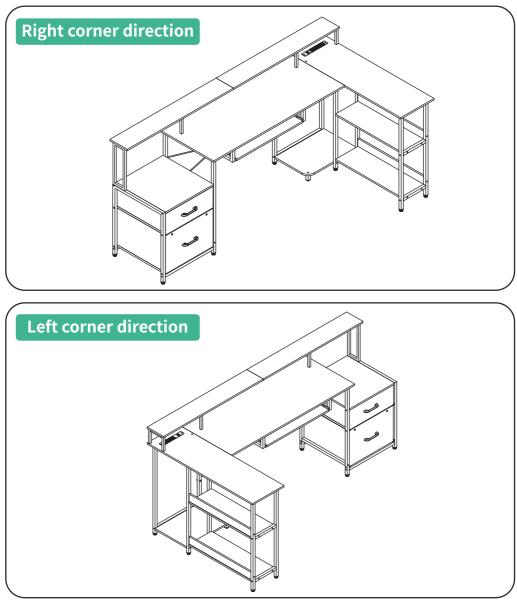





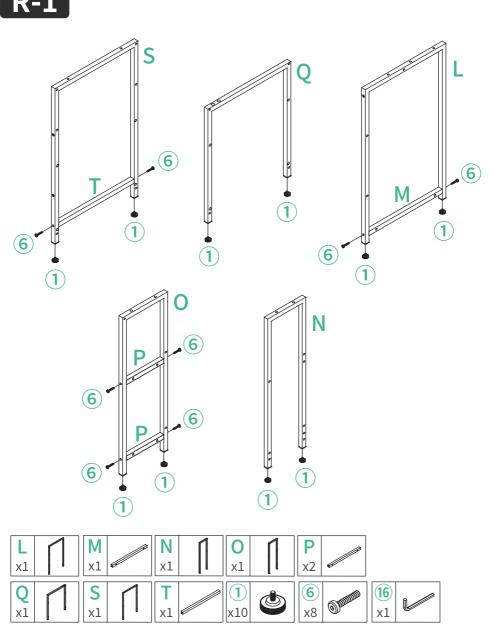


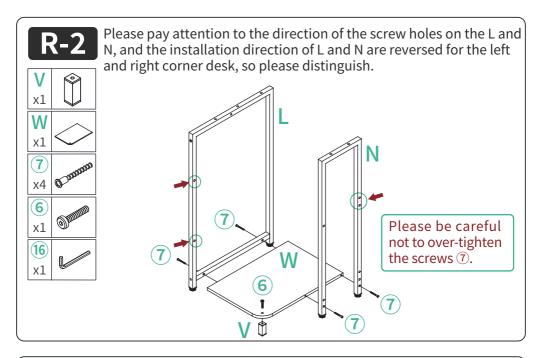


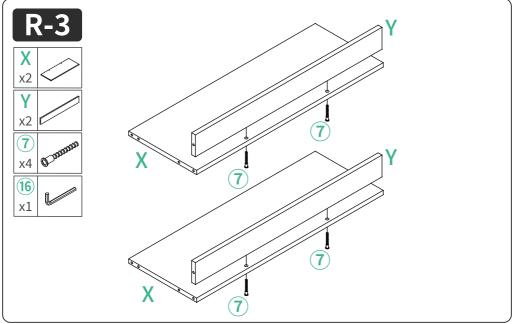


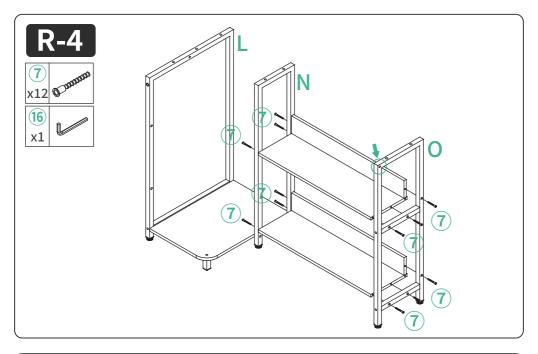


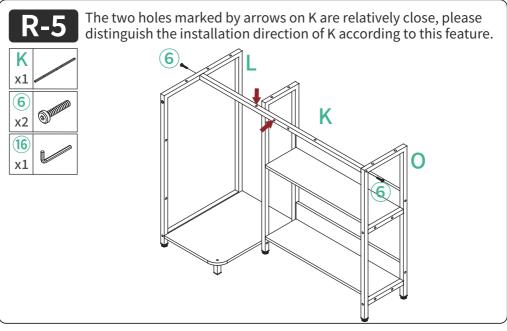


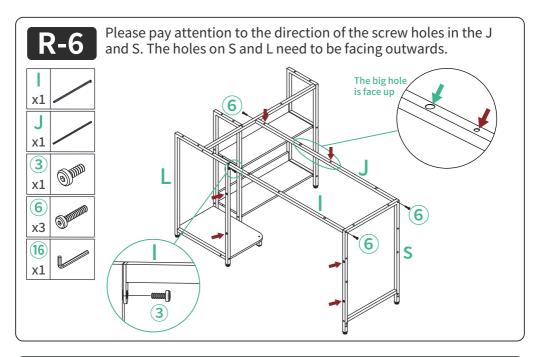


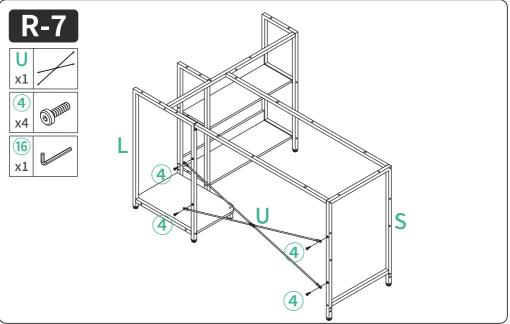


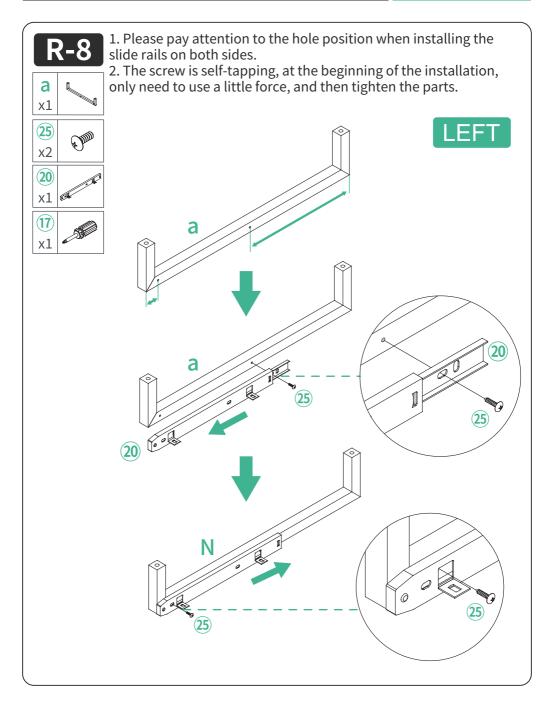


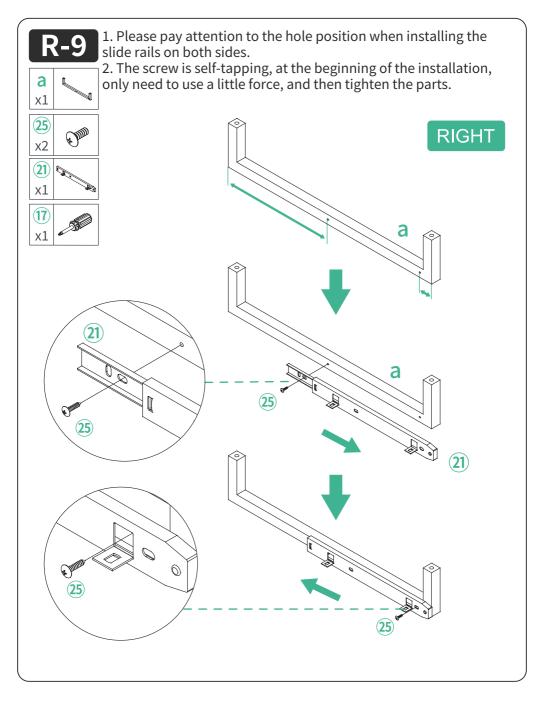

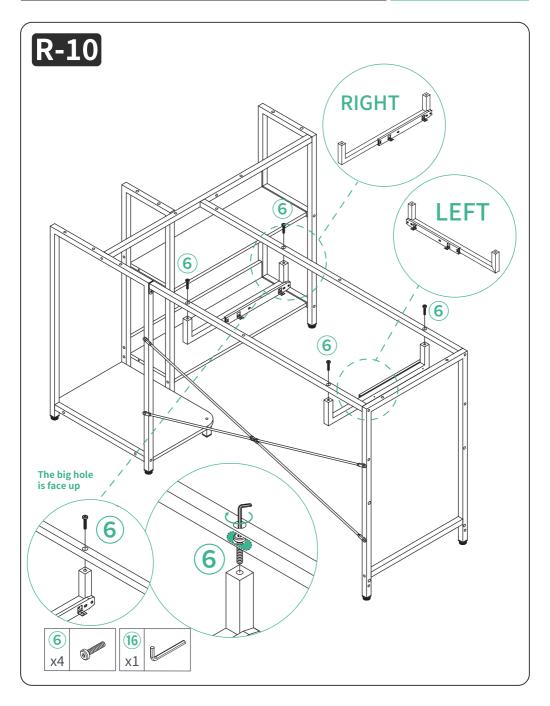

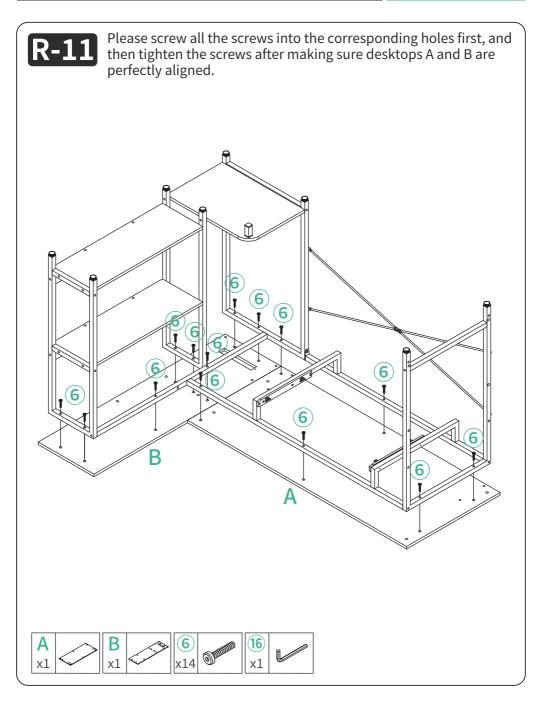


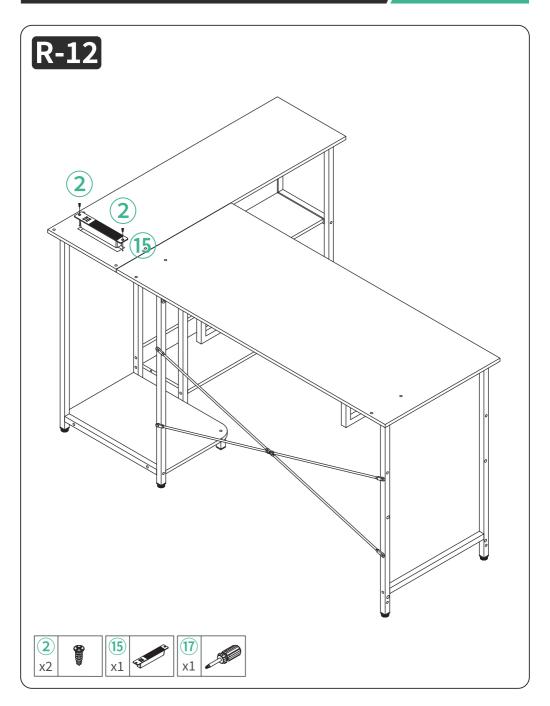


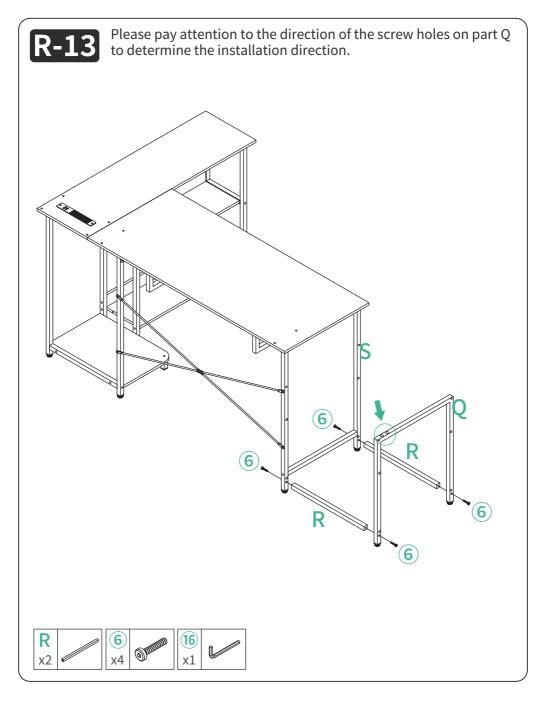



**R-14** <sup>(19)</sup> are the drawer rails, please install the rails in the direction shown, in case the wrong installation will result in the drawer not fitting in and will need to be dismantled and reinstalled.


Please insert the nut <sup>(14)</sup> into the rail and the steel frame, then screw in the nut on the other side of the steel frame with the screw <sup>(4)</sup> to fix the rail.

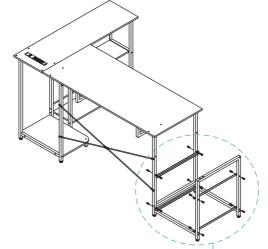


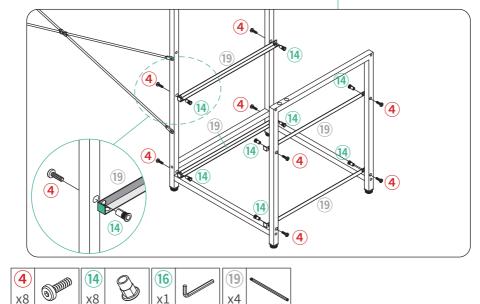


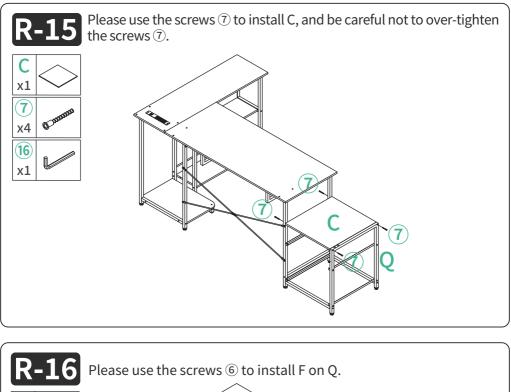


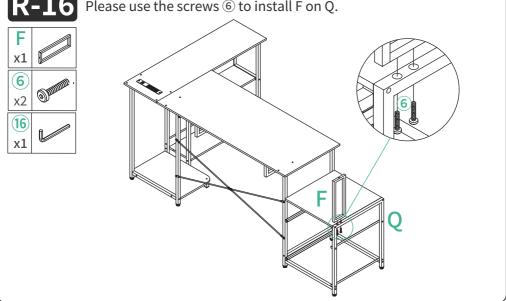

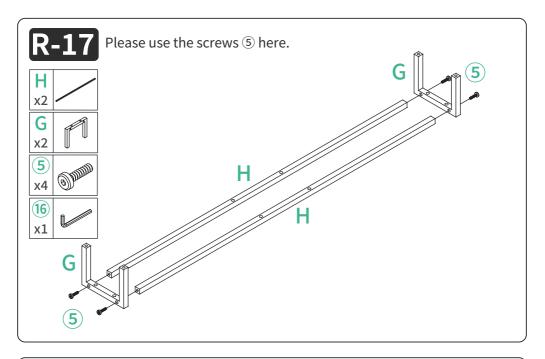

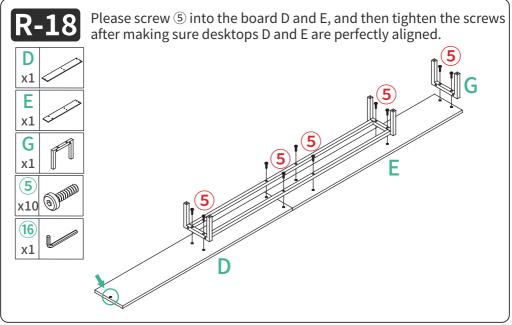


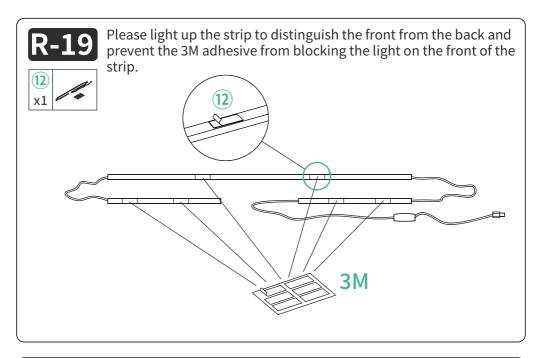


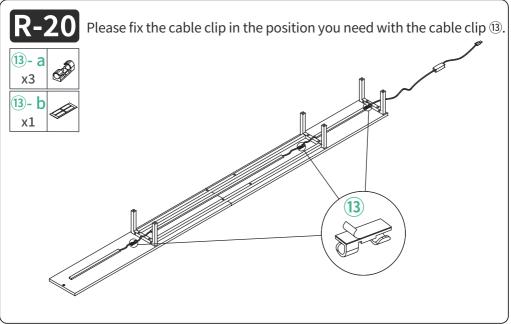






Please gently flip the entire monitor stand to prevent it from breaking, and use screws (5) to secure the monitor stand to the desk.

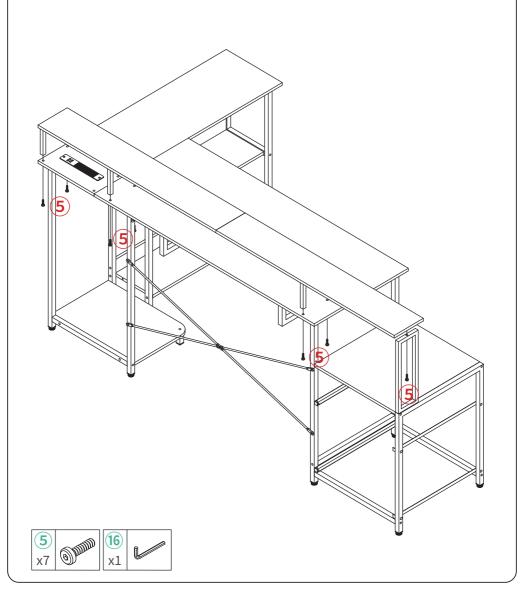


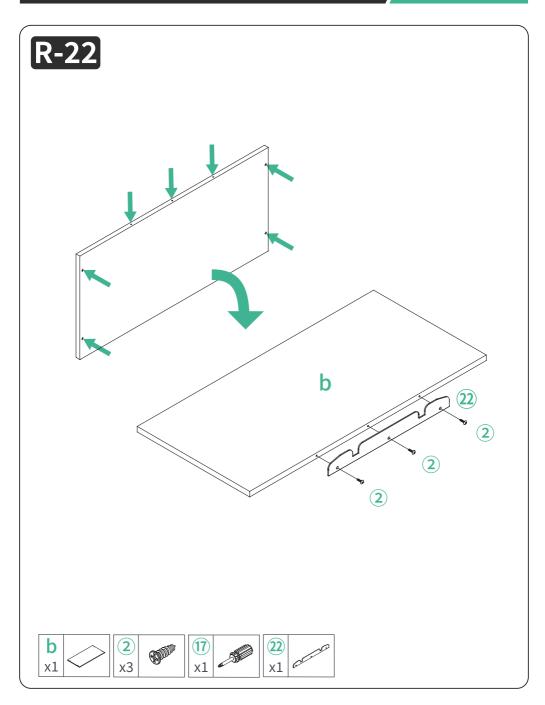


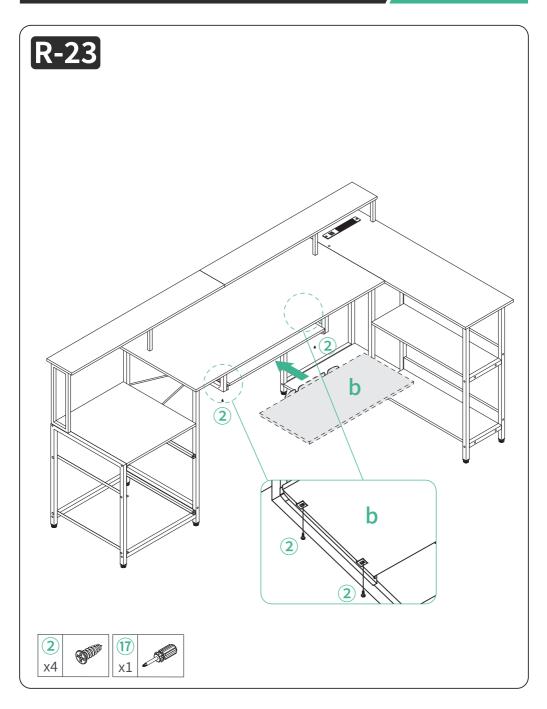

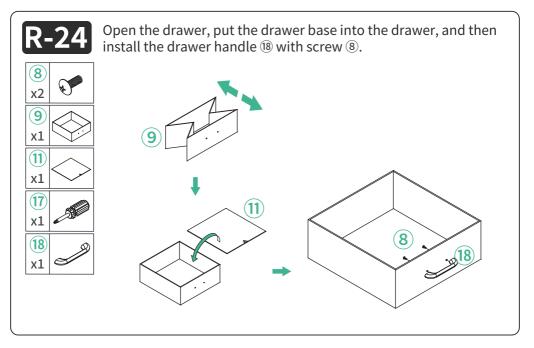

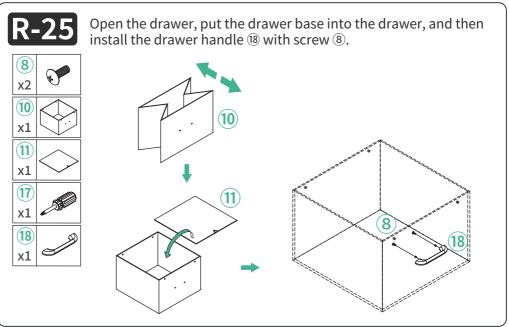


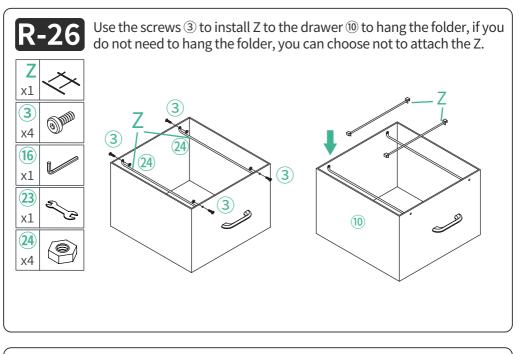

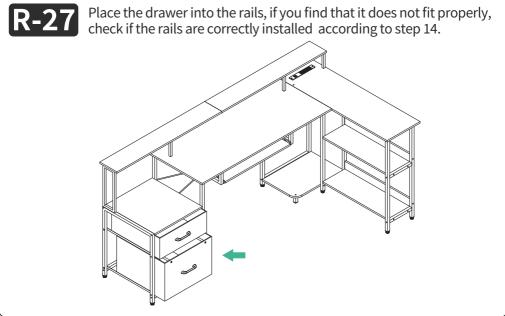



Note that the two boards of the desk can be swapped between the left and right when installed.


Please refer to the 1L-27L steps for the left corner and the 1R-27R steps for the right corner.

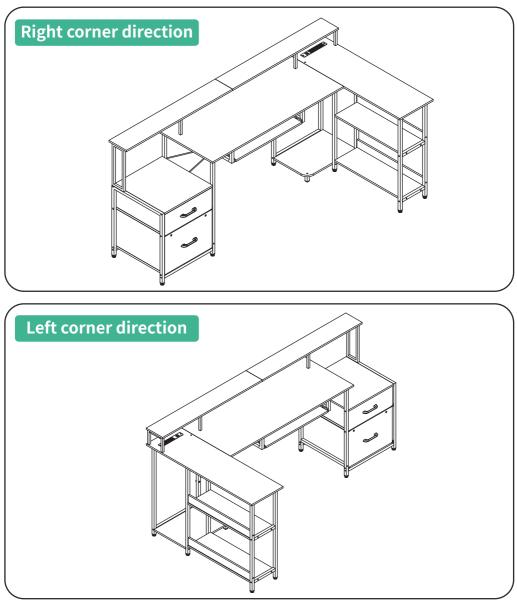



L-1

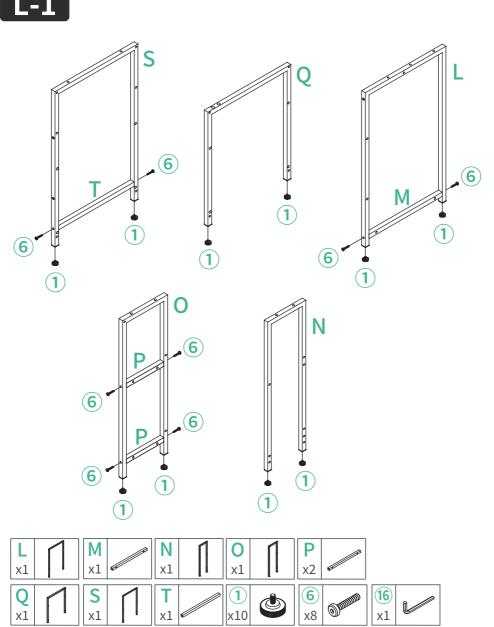


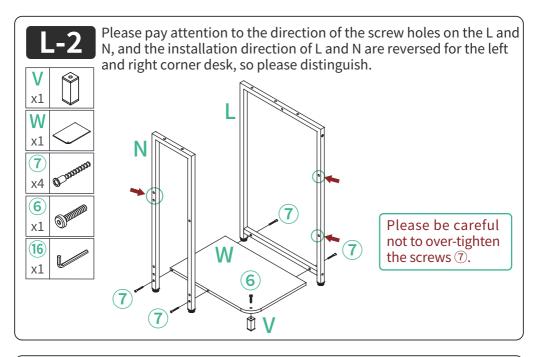


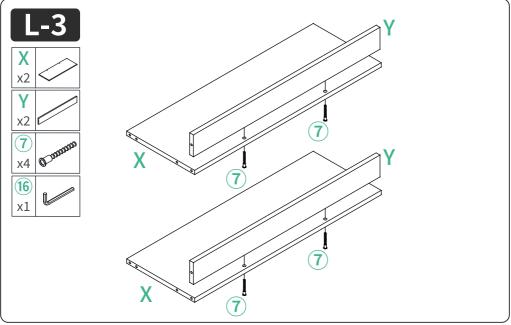


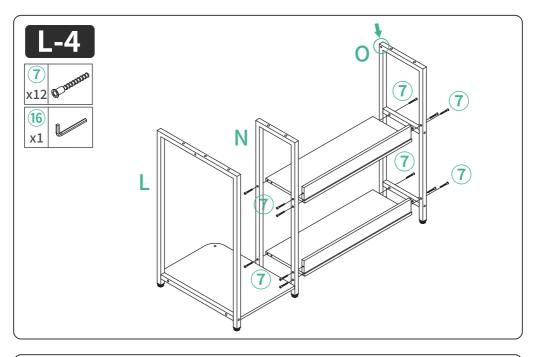


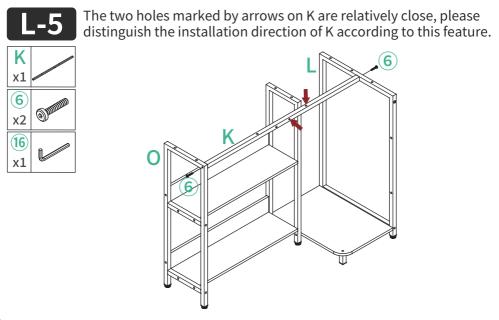


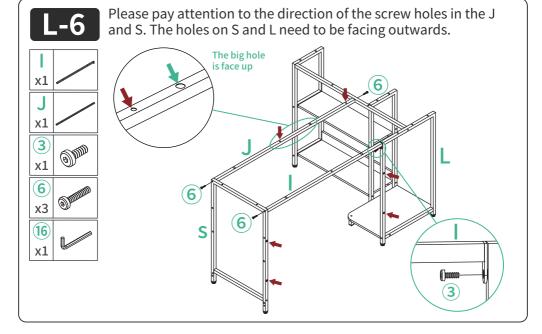

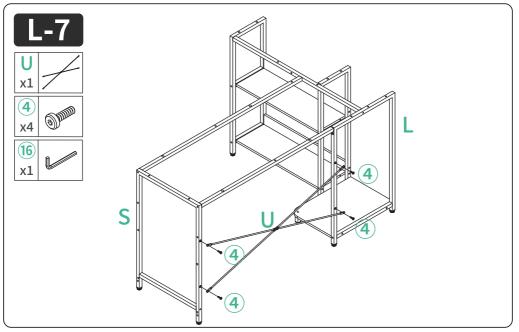

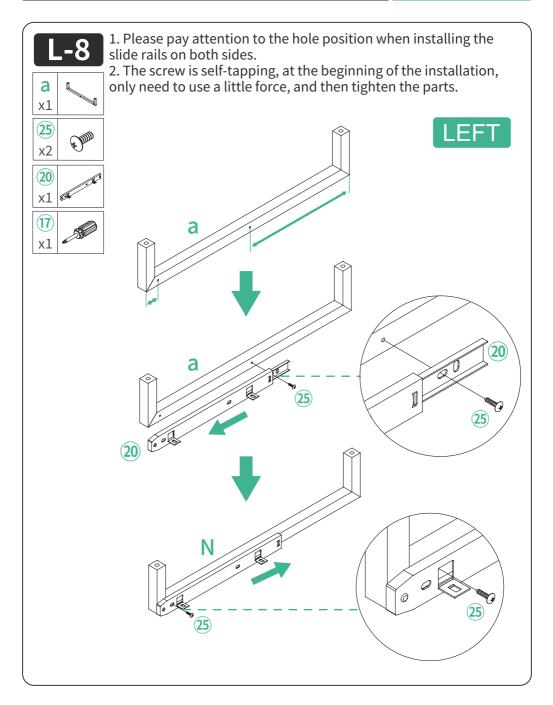


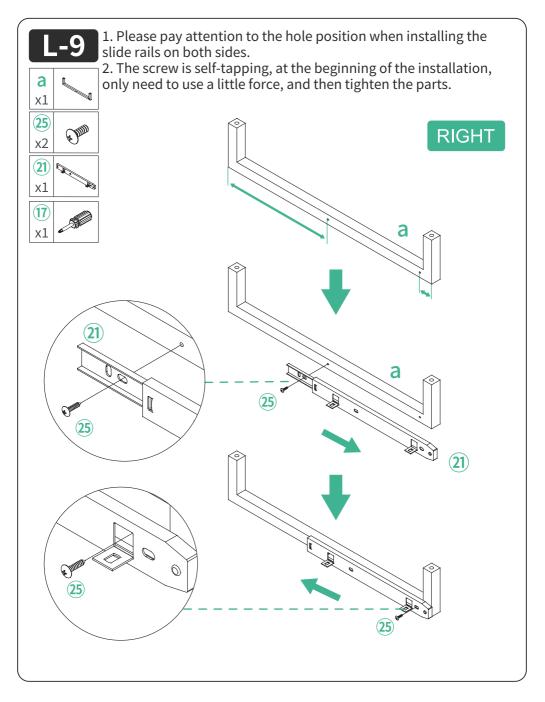


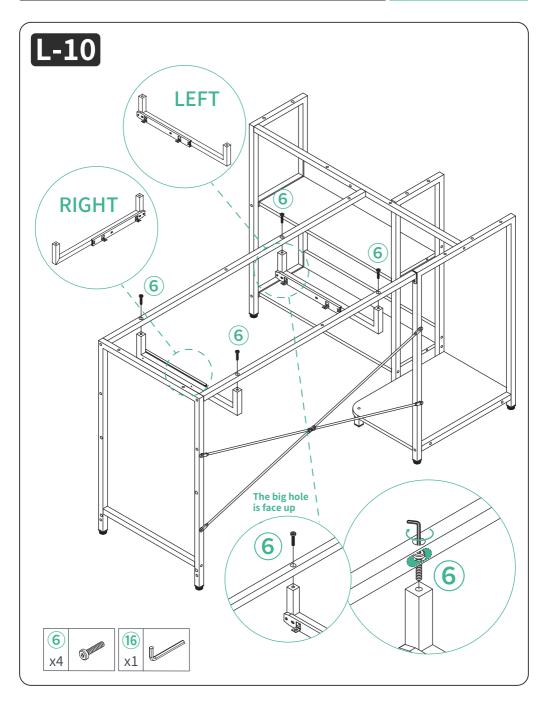




Please screw all the screws into the corresponding holes first, and then tighten the screws after making sure desktops A and B are perfectly aligned.

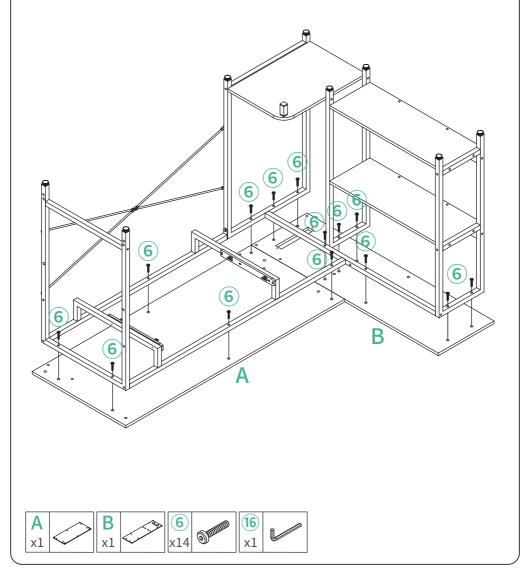

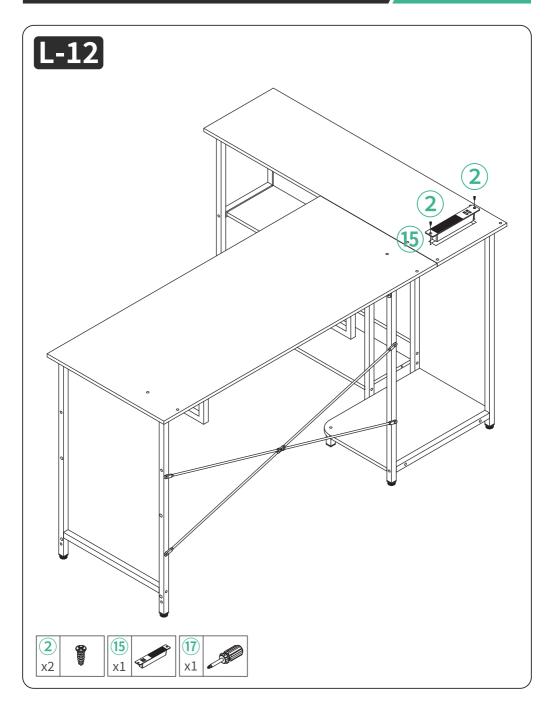



Please pay attention to the direction of the screw holes on part Q to determine the installation direction.

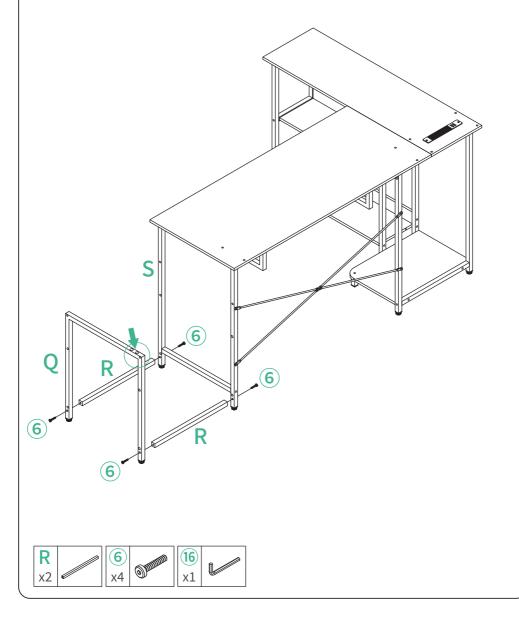


x8


x8

x1


(9) are the drawer rails, please install the rails in the direction shown, in case the wrong installation will result in the drawer not fitting in and will need to be dismantled and reinstalled.


Please insert the nut <sup>(1)</sup> into the rail and the steel frame, then screw in the nut on the other side of the steel frame with the screw (4) to fix the rail.

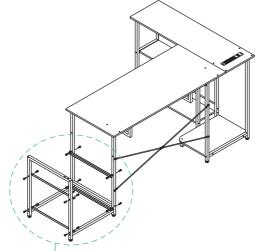


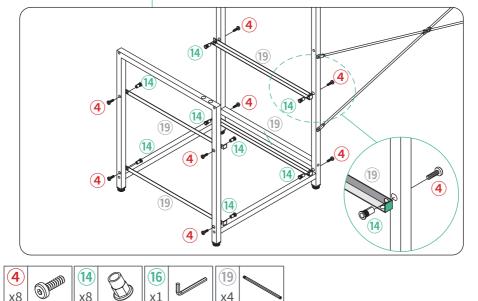



x4

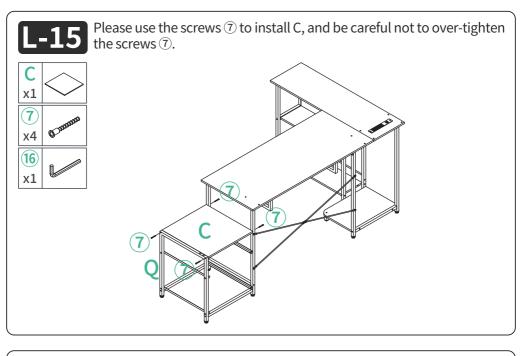


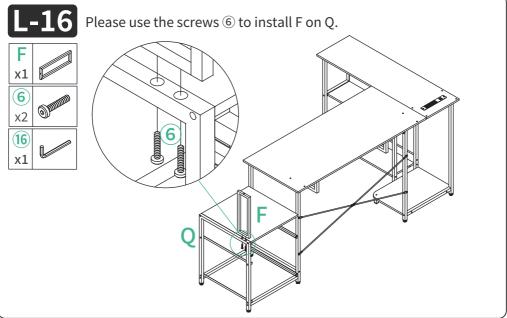


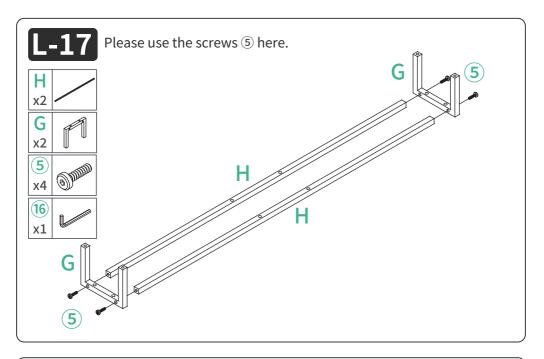


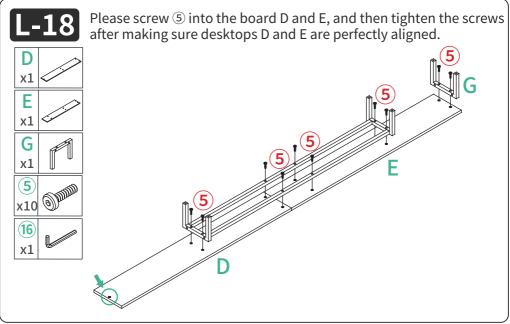


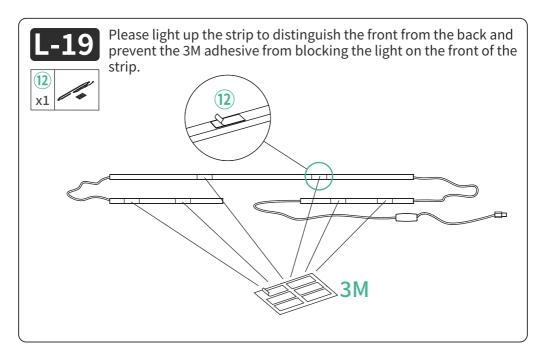


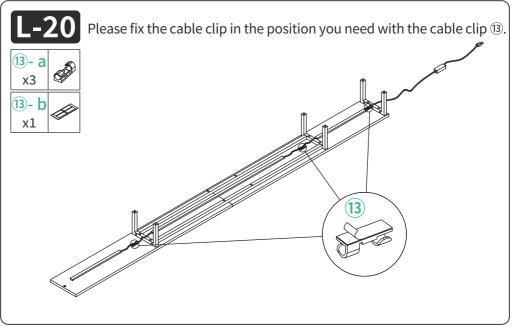


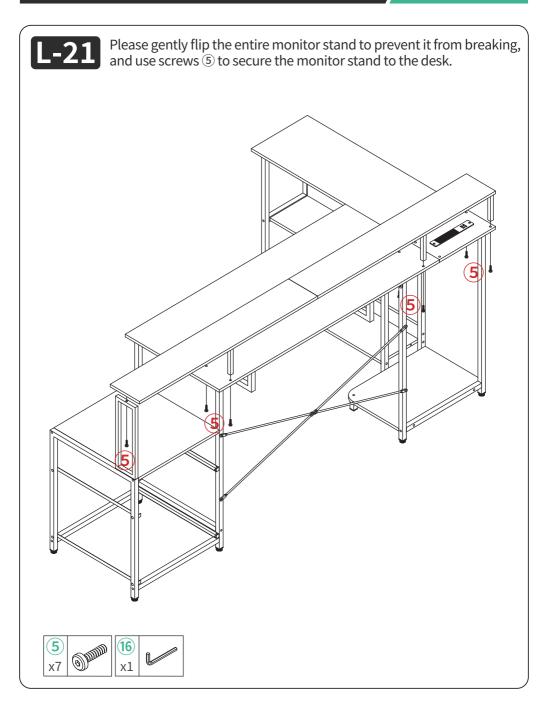


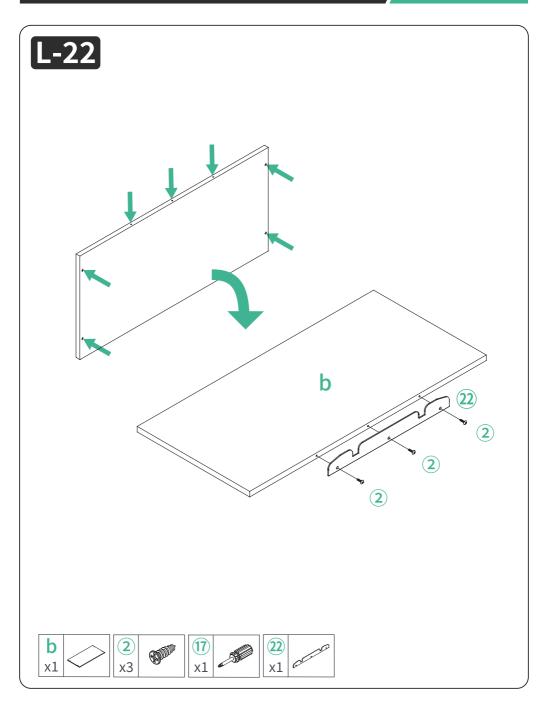


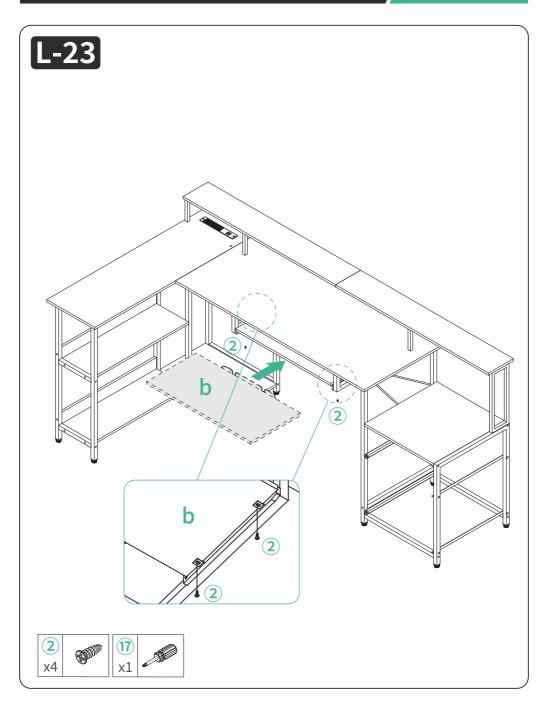

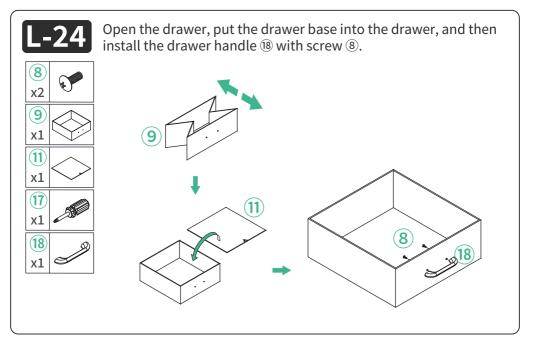

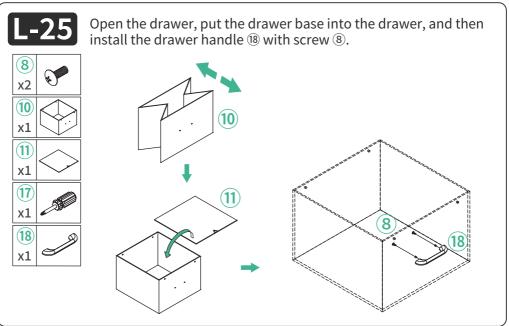

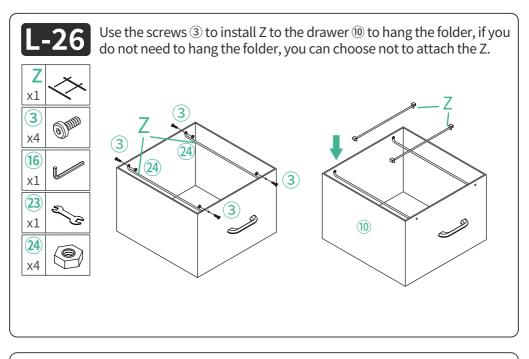

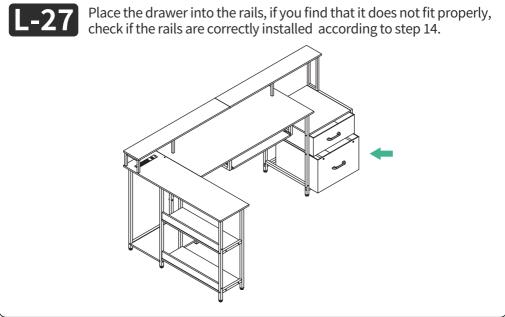





Control

S/B

# Dynamic Mode Button

#### **STATIC COLOR BUTTON**

Press this button once to switch to the static color mode, and then each pressing c an c hange the c olor.

#### **DYNAMIC MODE BUTTON**

Press this button on ce to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 2s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.

#### **SPEED & BRIGHTNESS AND POWER BUTTON**

A. In the static mode, press this button to adjust the brightness of the light bar; each press can switch to a brightness level.

B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.

C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power- off memory function; the strip can restore the color, brightness, and mode in the next power-on.

46

#### **1-Year Warranty**



We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one.

Replacement is free and all shipping costs are covered.

#### **Quick Response within 24 Hours**



If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

# Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	Having issue(s) while reading the instruction or completing the assembly.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of somescrew holes.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The screw holes that on the board and the steel frame don't line up.	<ol> <li>Please tighten the screws on the board by 70%, do not tighten completely.</li> <li>Adjusting board and steel frame until the screw holes are lined up, then tighten all the screws.</li> </ol>
	The desk board is uneven or not tight that has gaps after being assembled.	<ol> <li>Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, and then tighten the screws.</li> <li>If your problem still can't be solved, please feel free to contact us.</li> </ol>
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The table is unstable after being assembled.	<ol> <li>Check if the screws are tightened.</li> <li>Read throughout the manual, check are there any parts installed incorrectly or missing assembled.</li> <li>If your problem still can't be solved, please feel free to contact us.</li> </ol>
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium quality products and convenient customer service.