 
 


SKIP SHOE CABINET

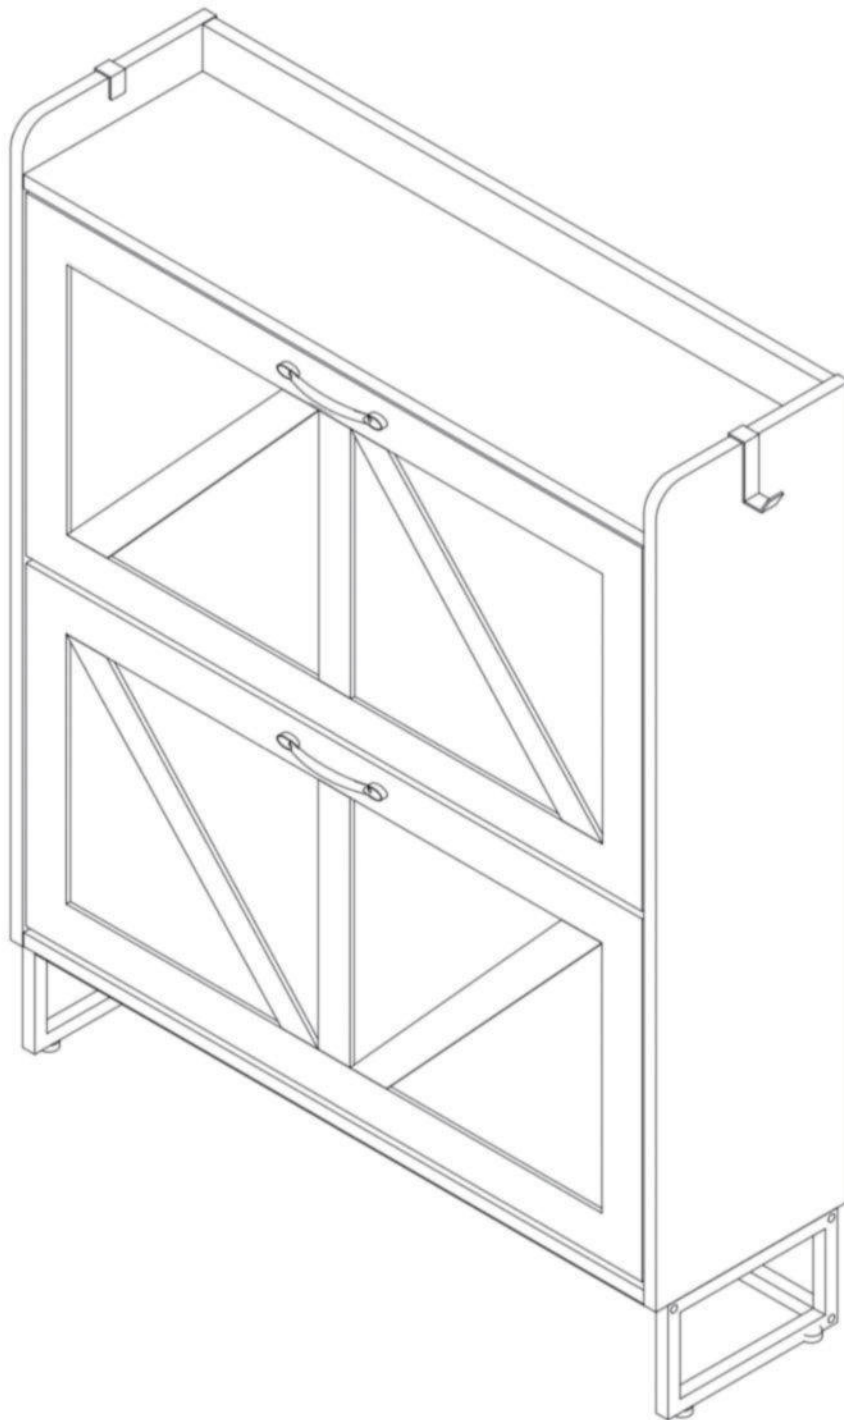

Scan the QR code on the left to watch the installation video.
Thank you for your purchase! If you have any problems please
feel free to contact using email: **furniture@supportme.email**

Before You Start

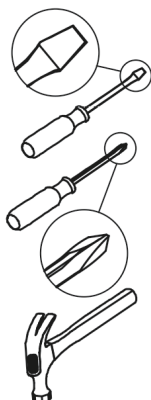

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware to ensure you have everything you need.
- Give yourself enough room for the assembly process
- Have the following tools ready: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please slow down and stop when the screw is tight to prevent stripping. (Assembly speed can be increased by using an electric screwdriver)


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2




- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R(right) and L(left) for proper placement.
- Always face the point on the top of the Cam Lock towards the outer edge for correct installation.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel to enhance product stability. If tightening is difficult, use a hammer to gently set the screw before tightening.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




EXPLODED DRAWING:

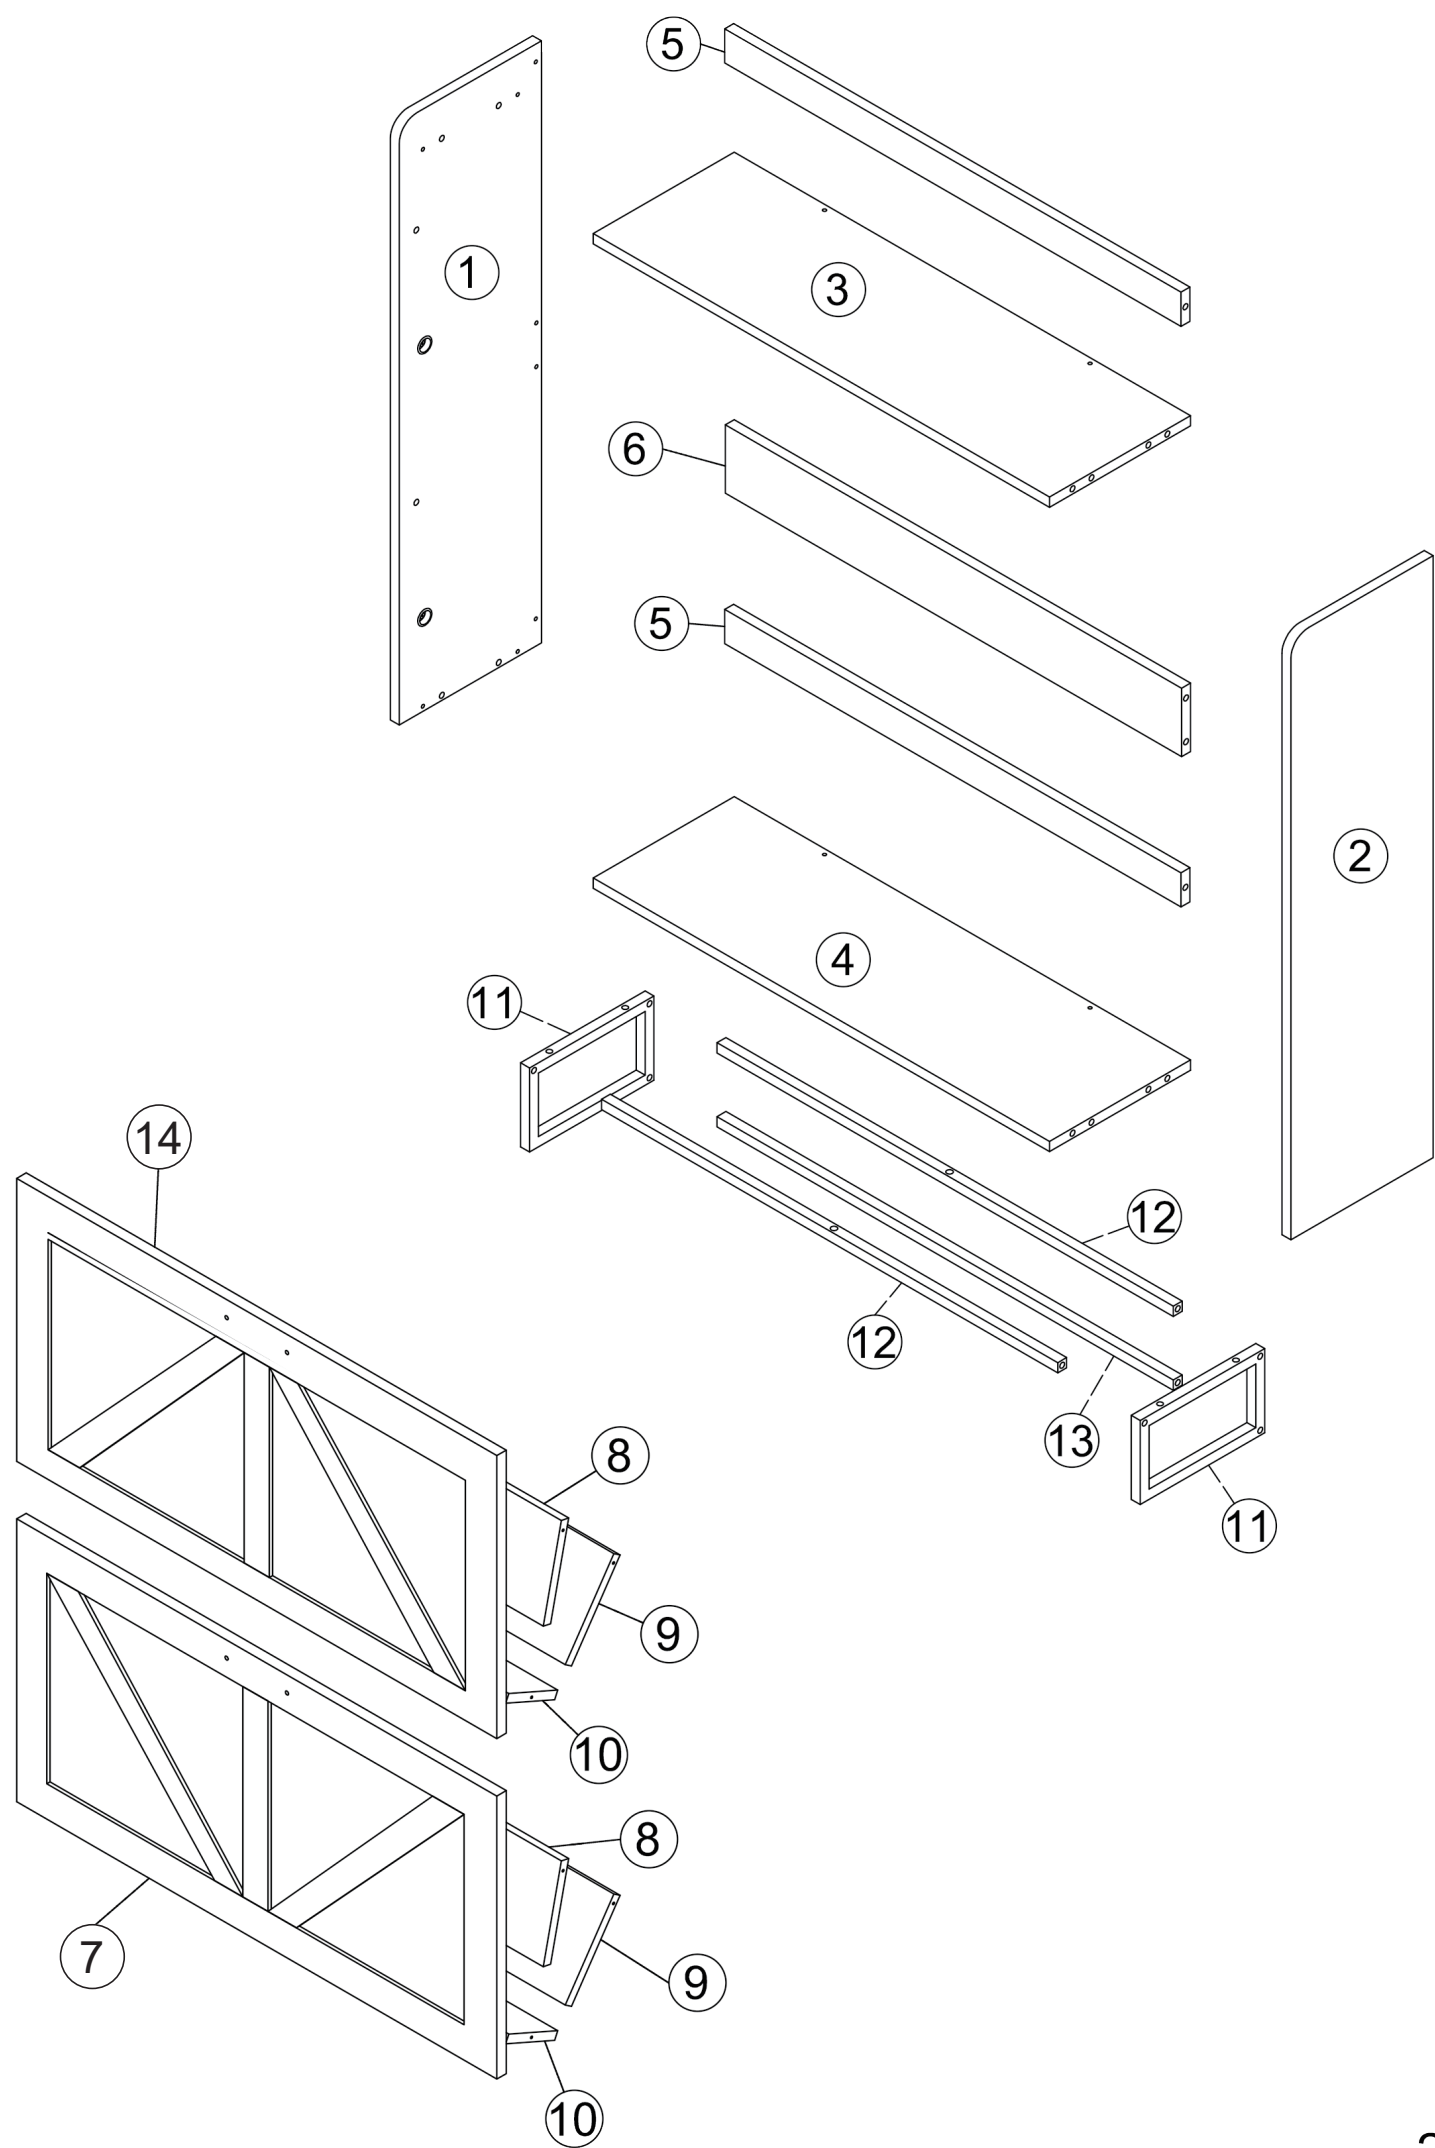


PARTS:

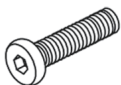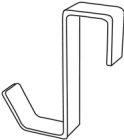 
 A X20 ₊₂	 B X20 ₊₂	 C X8 ₊₂
 D1 D2 D3 D4	 E X28 ₊₄ M4x14	 F1 F2 ₊₁
 G X4 M6.3x40	 H X2 M6x23	 I X4
 J X1	 K X1	 L1 L2 L3 L4
 M X6 M6x28	 N x2	

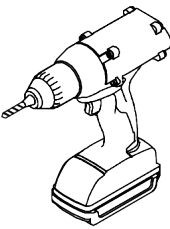 

REMARK:

  MINIFIX POSITION

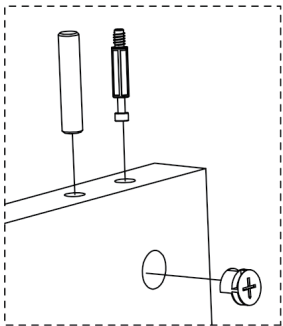


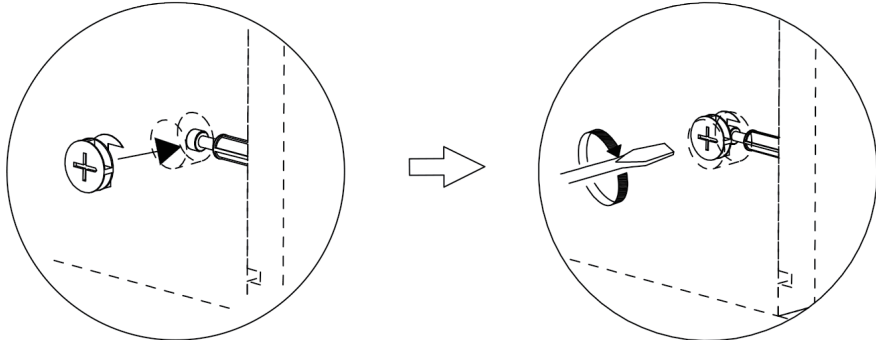

1.

REMARK:



 
Please do not screw **A** too deep or too shallow.

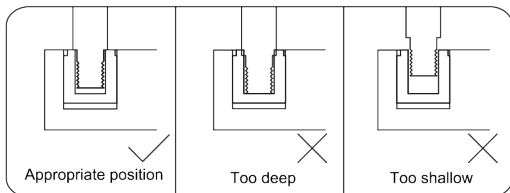


REMARK :

Put a blanket under the board to avoid scratch or damage.

   
Fix accessory A on the wooden board.
Boards 1 and 2 each fix 8 accessories A,
Boards 3 and 4 each fix 4 accessories A.

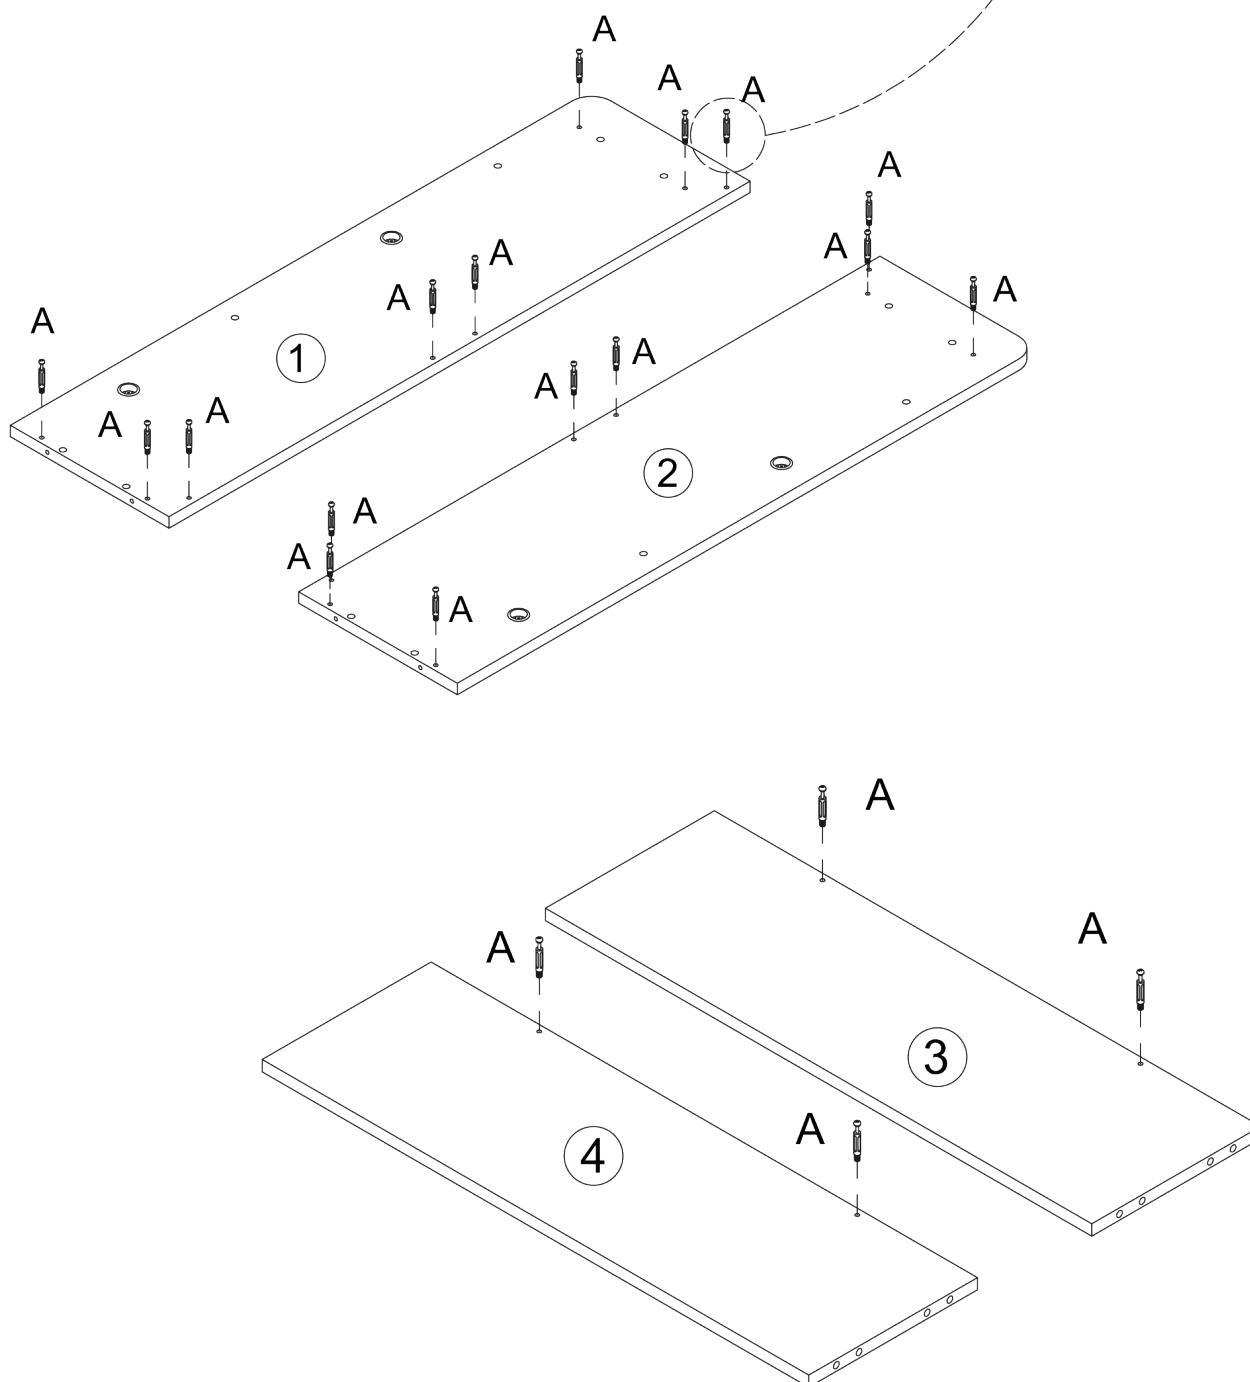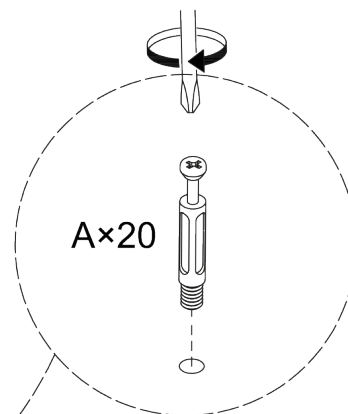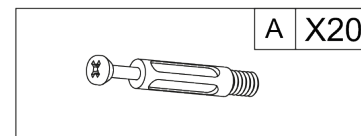


 
2. Use accessory B to secure 5 to Boards 3 and 4.

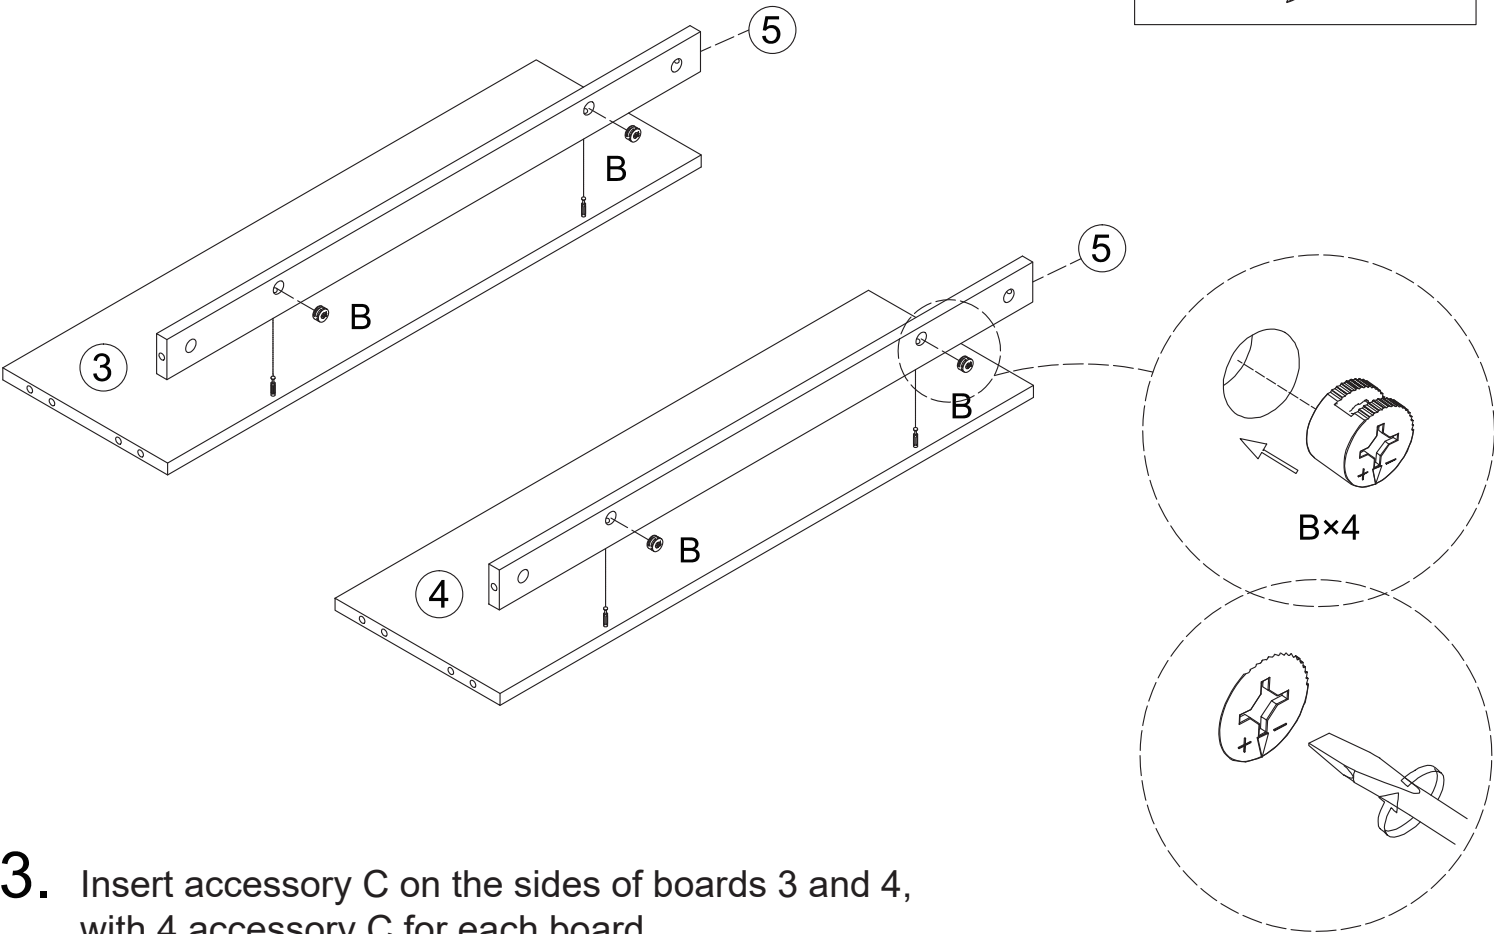


 
3. Insert accessory C on the sides of boards 3 and 4, with 4 accessory C for each board.

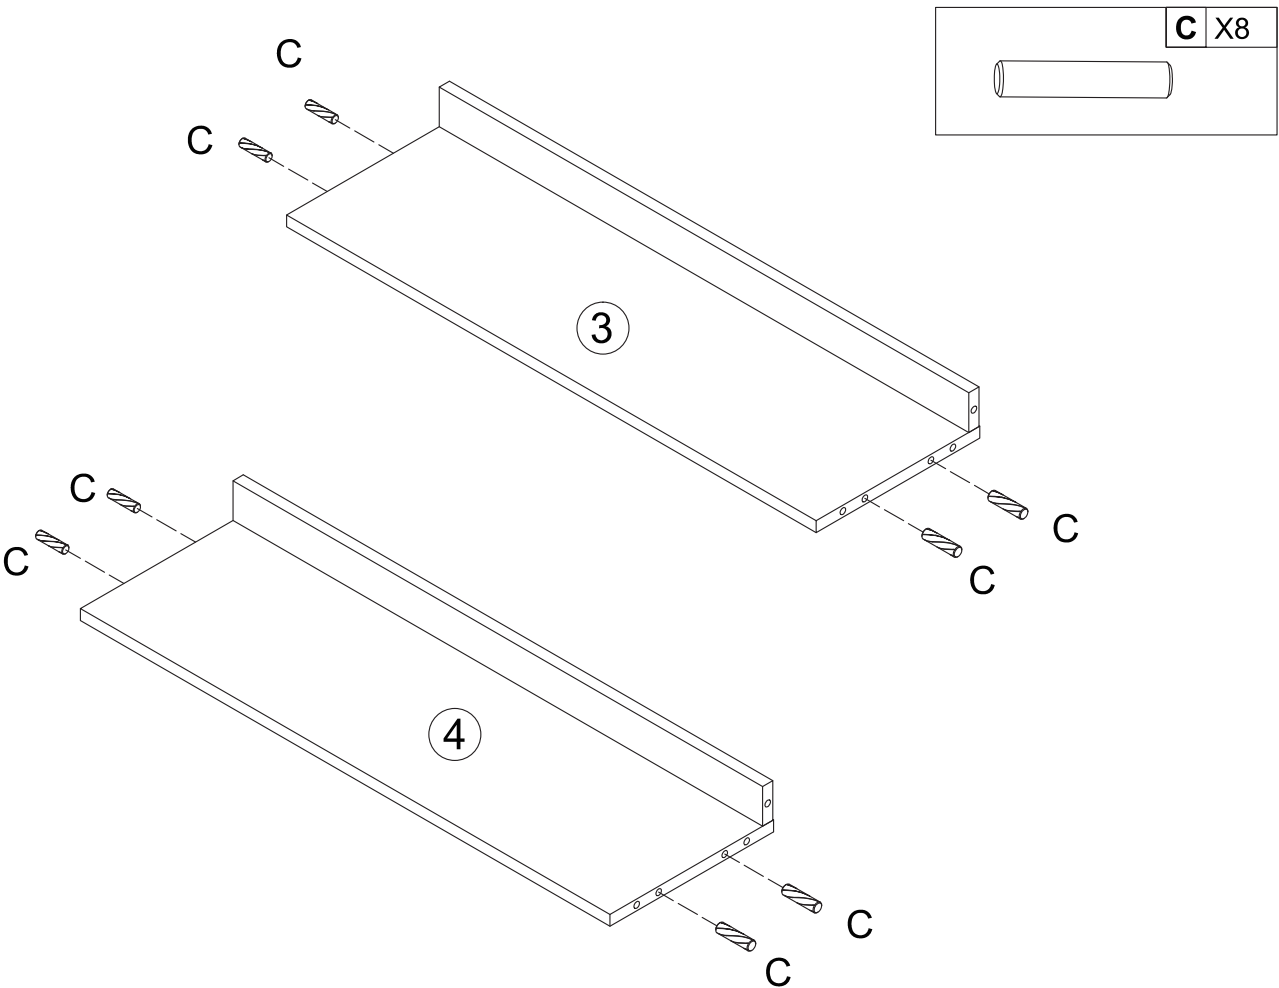

 
 
4. Use accessory B to connect and fix the left side panel 1 to the top panel 3, bottom panel 4, middle panel 6.

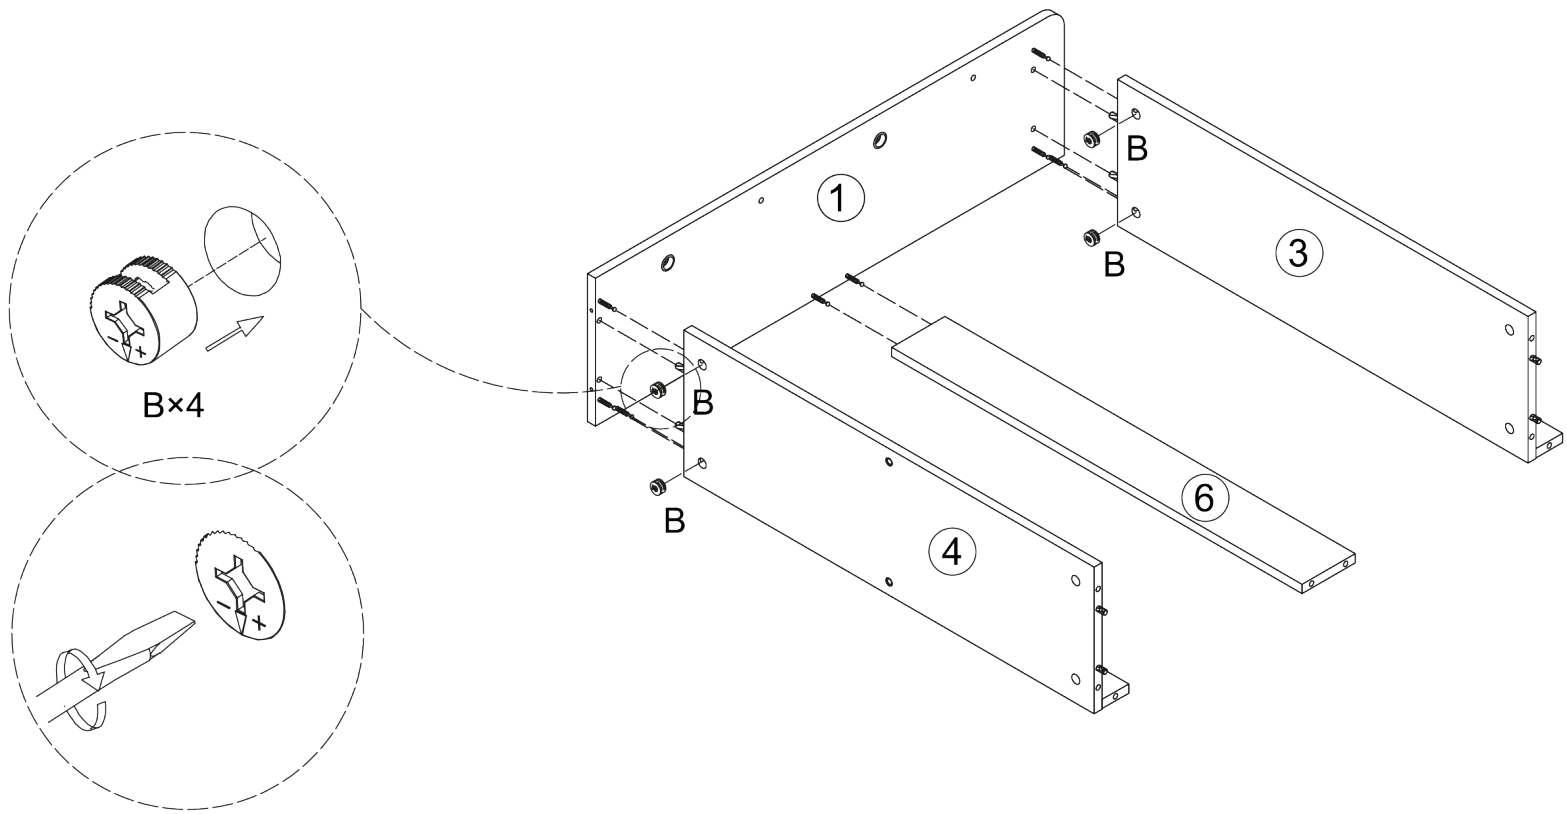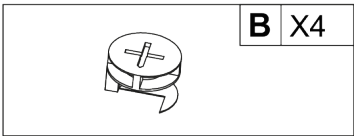

 
 
5. Use accessory B to connect and fix the right side panel 2 to the top panel 3, bottom panel 4, middle panel 6.

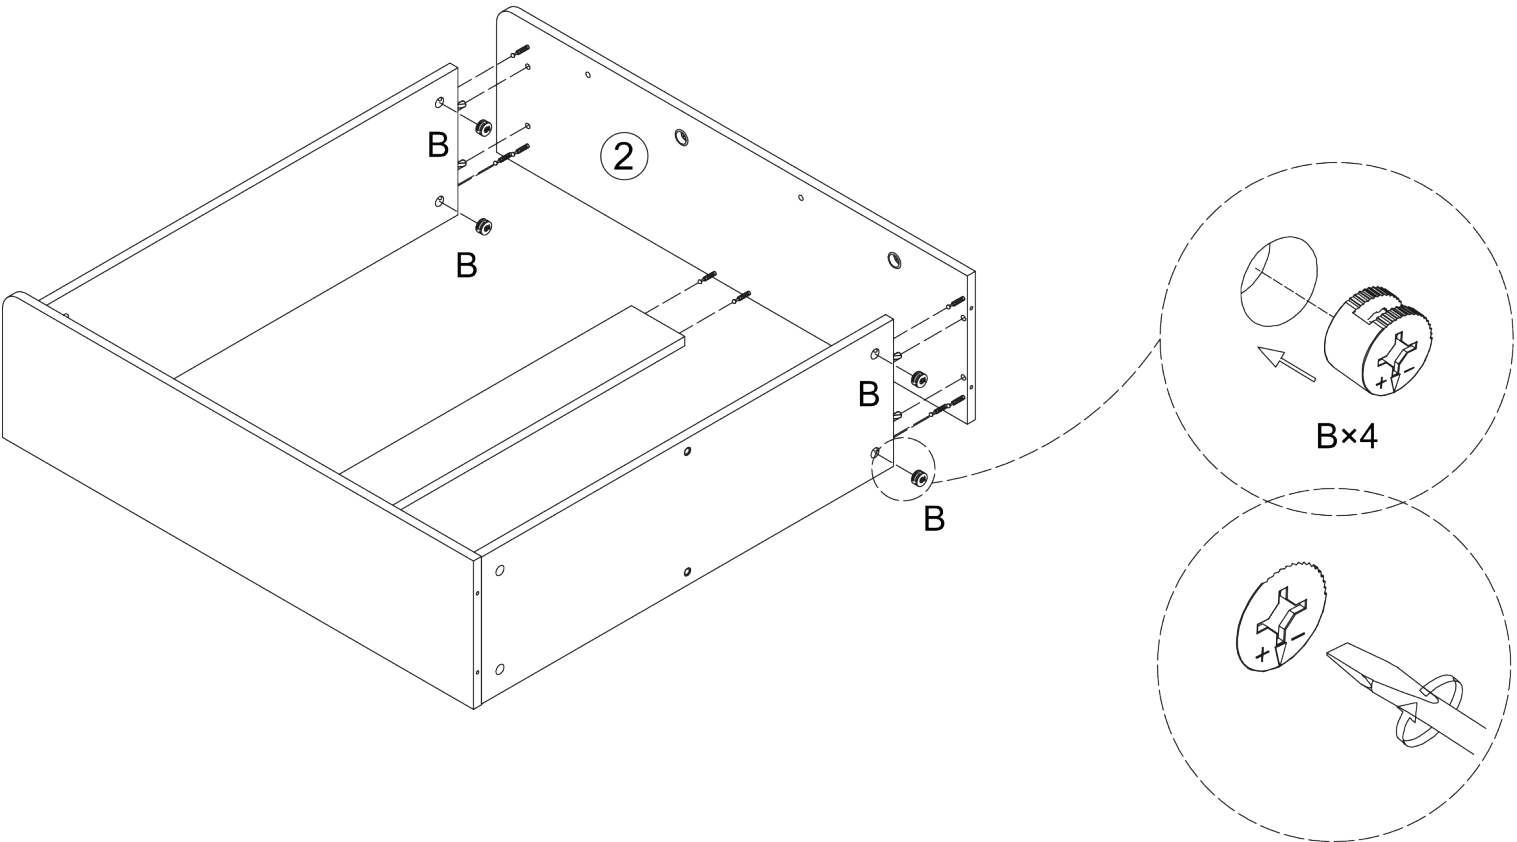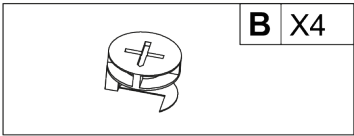

 
 
6. Use attachment B to secure the overall structure from the rear of the product.

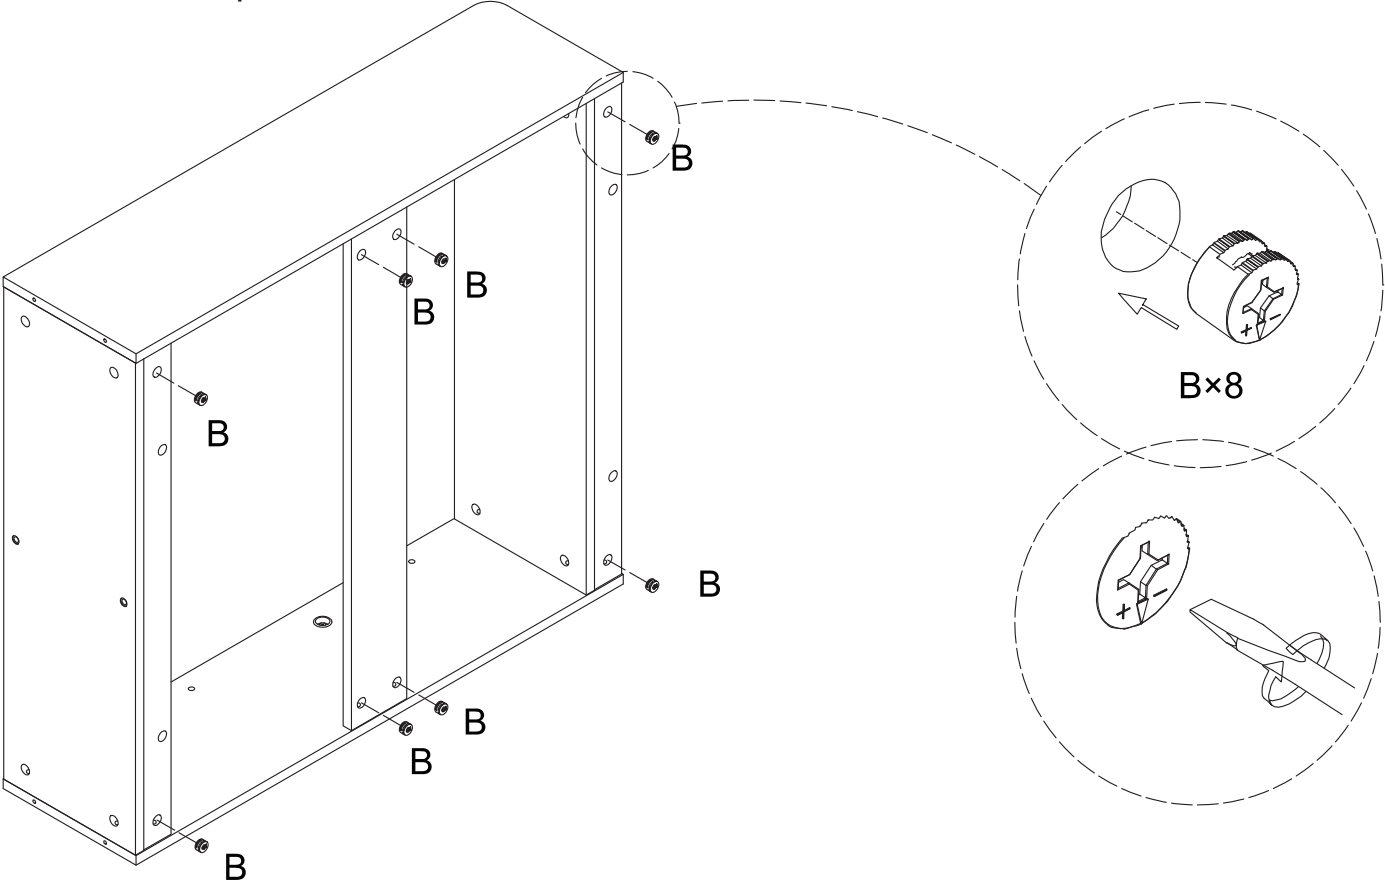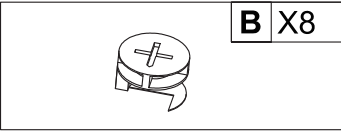

 
 
7. Use accessory M to connect the iron frames 11 and 12 together.

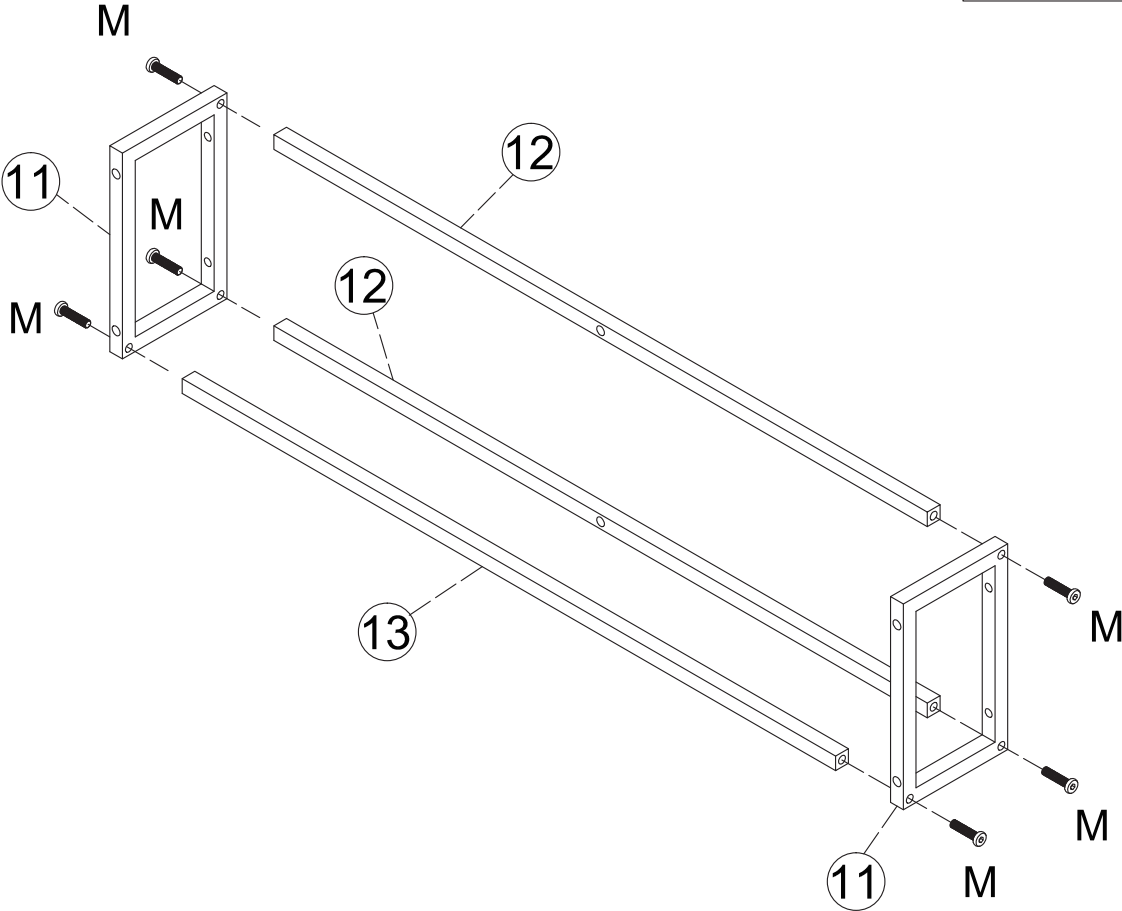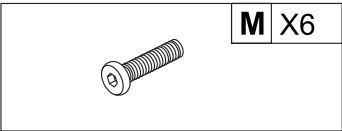

 
 
8. Use accessory H to fix the iron frame to the bottom of the product.

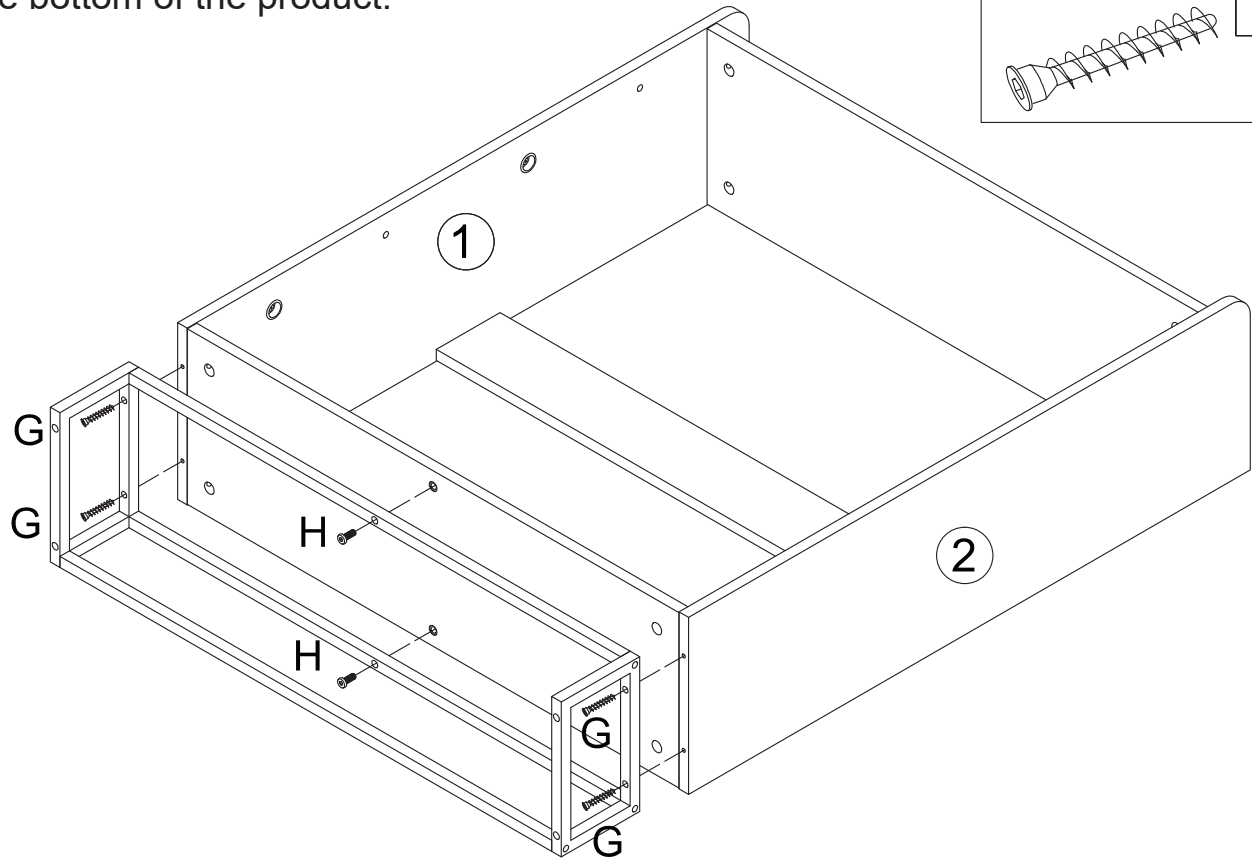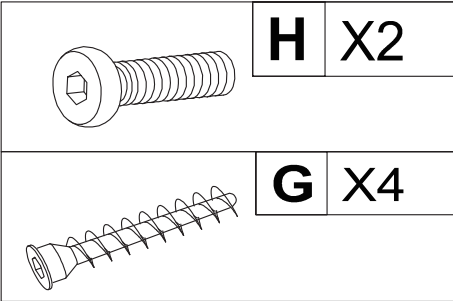

  
9. Install the adjustable feet of accessory I on the bottom of the iron frame.(Increase stability by raising the height of the forefoot.)

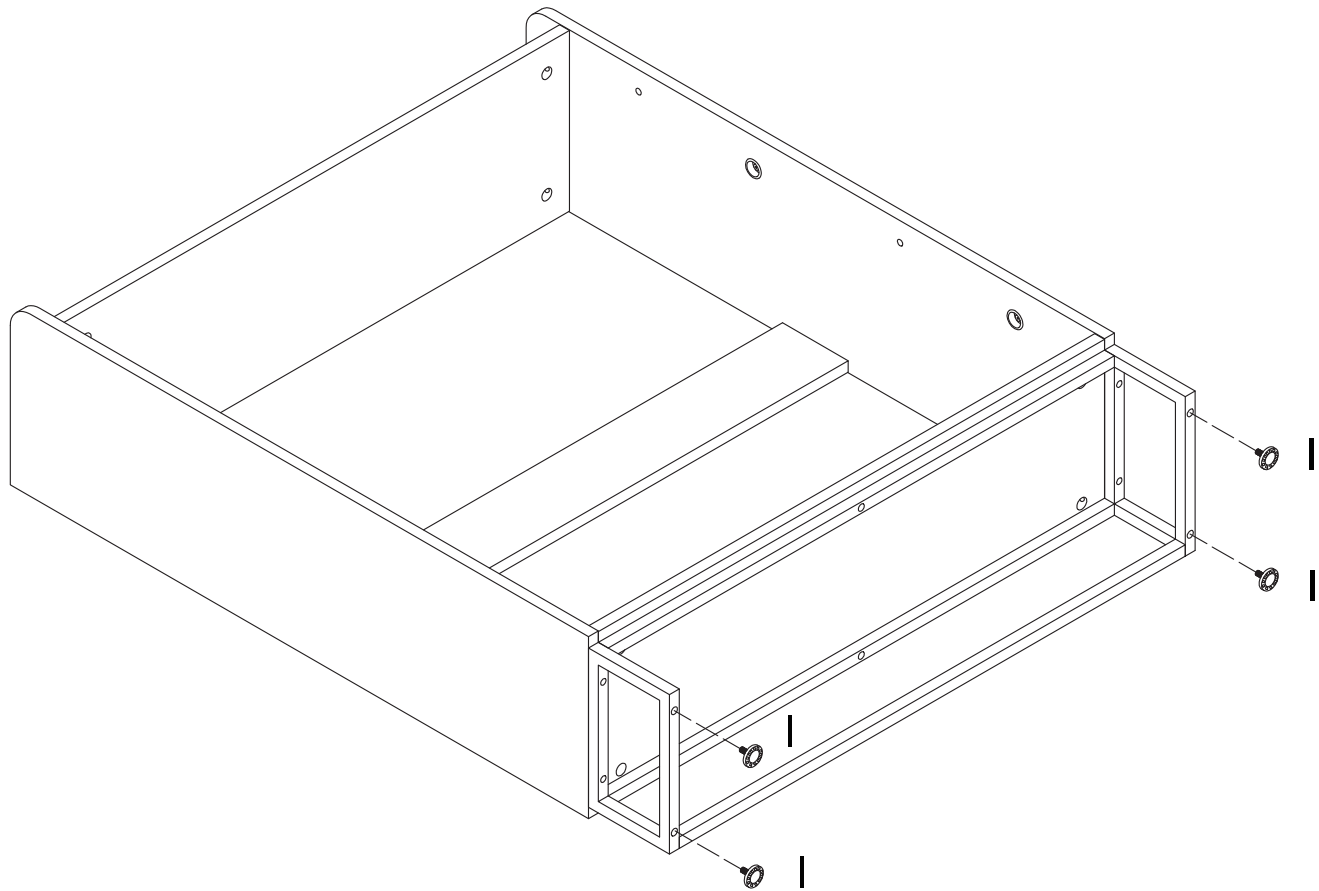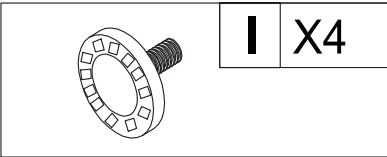

  10. Use accessories E to secure D1 D2 to plates 7 and 14.
(When installing D1 D2, please make sure the groove is facing inward.)

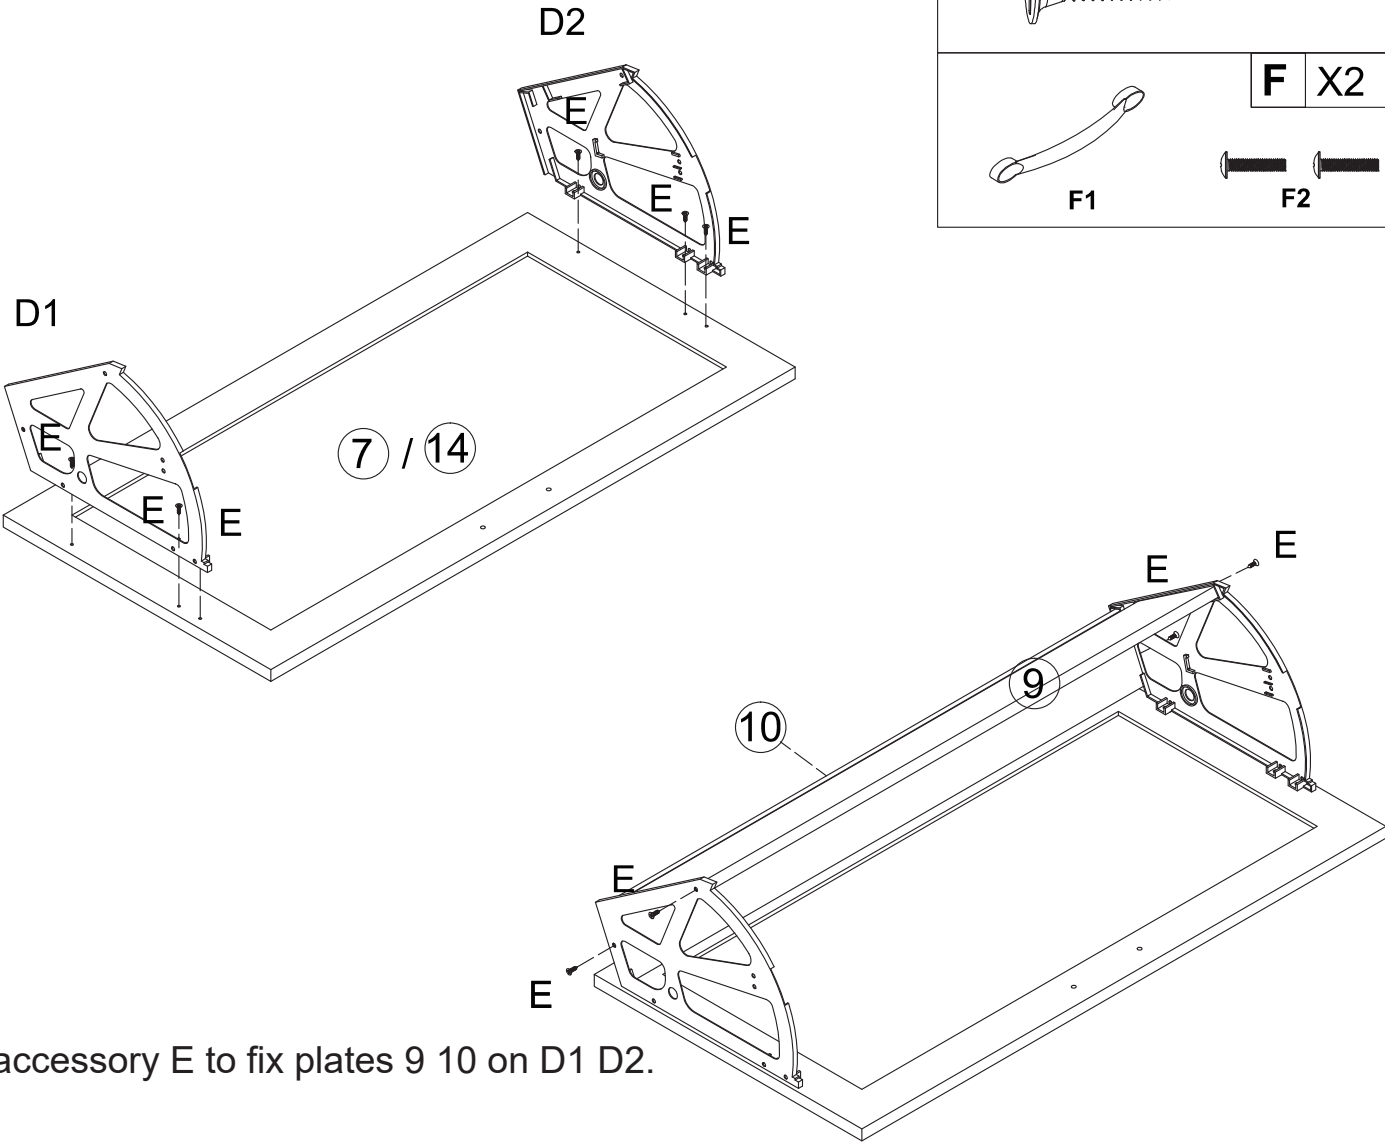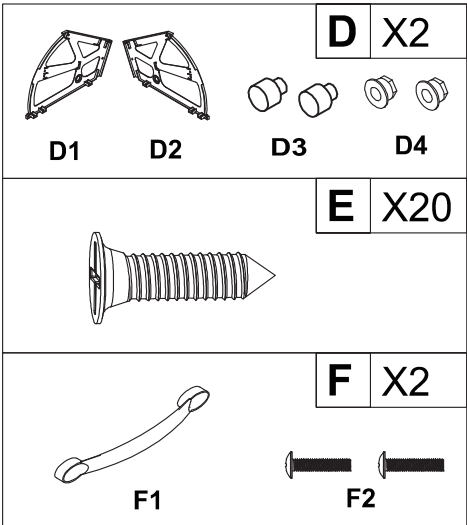

 Use accessory E to fix plates 9 10 on D1 D2.


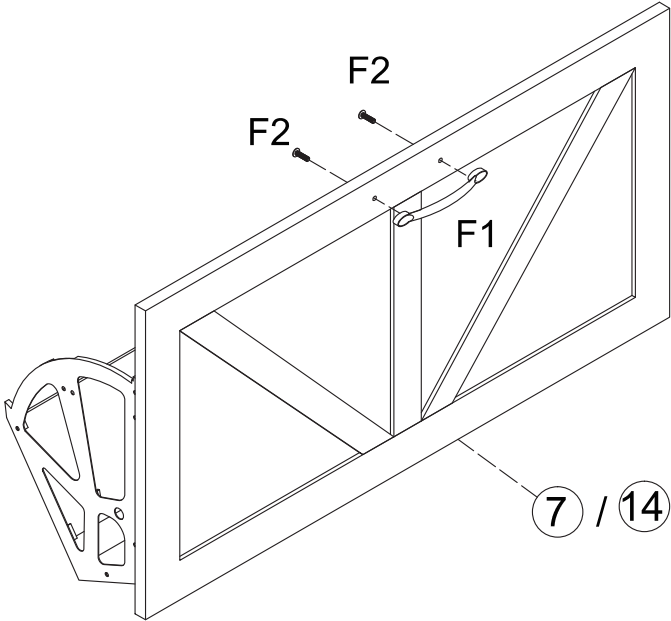



Fasten the metal handle F1 to the plate 7 14 using the accessory F2.

x2


11.

  Use accessories E and D4 to secure D1 and D2 to the side panels.
(There are reserved white accessories on the side panels)


	D X2
	D3 D4
	E X8

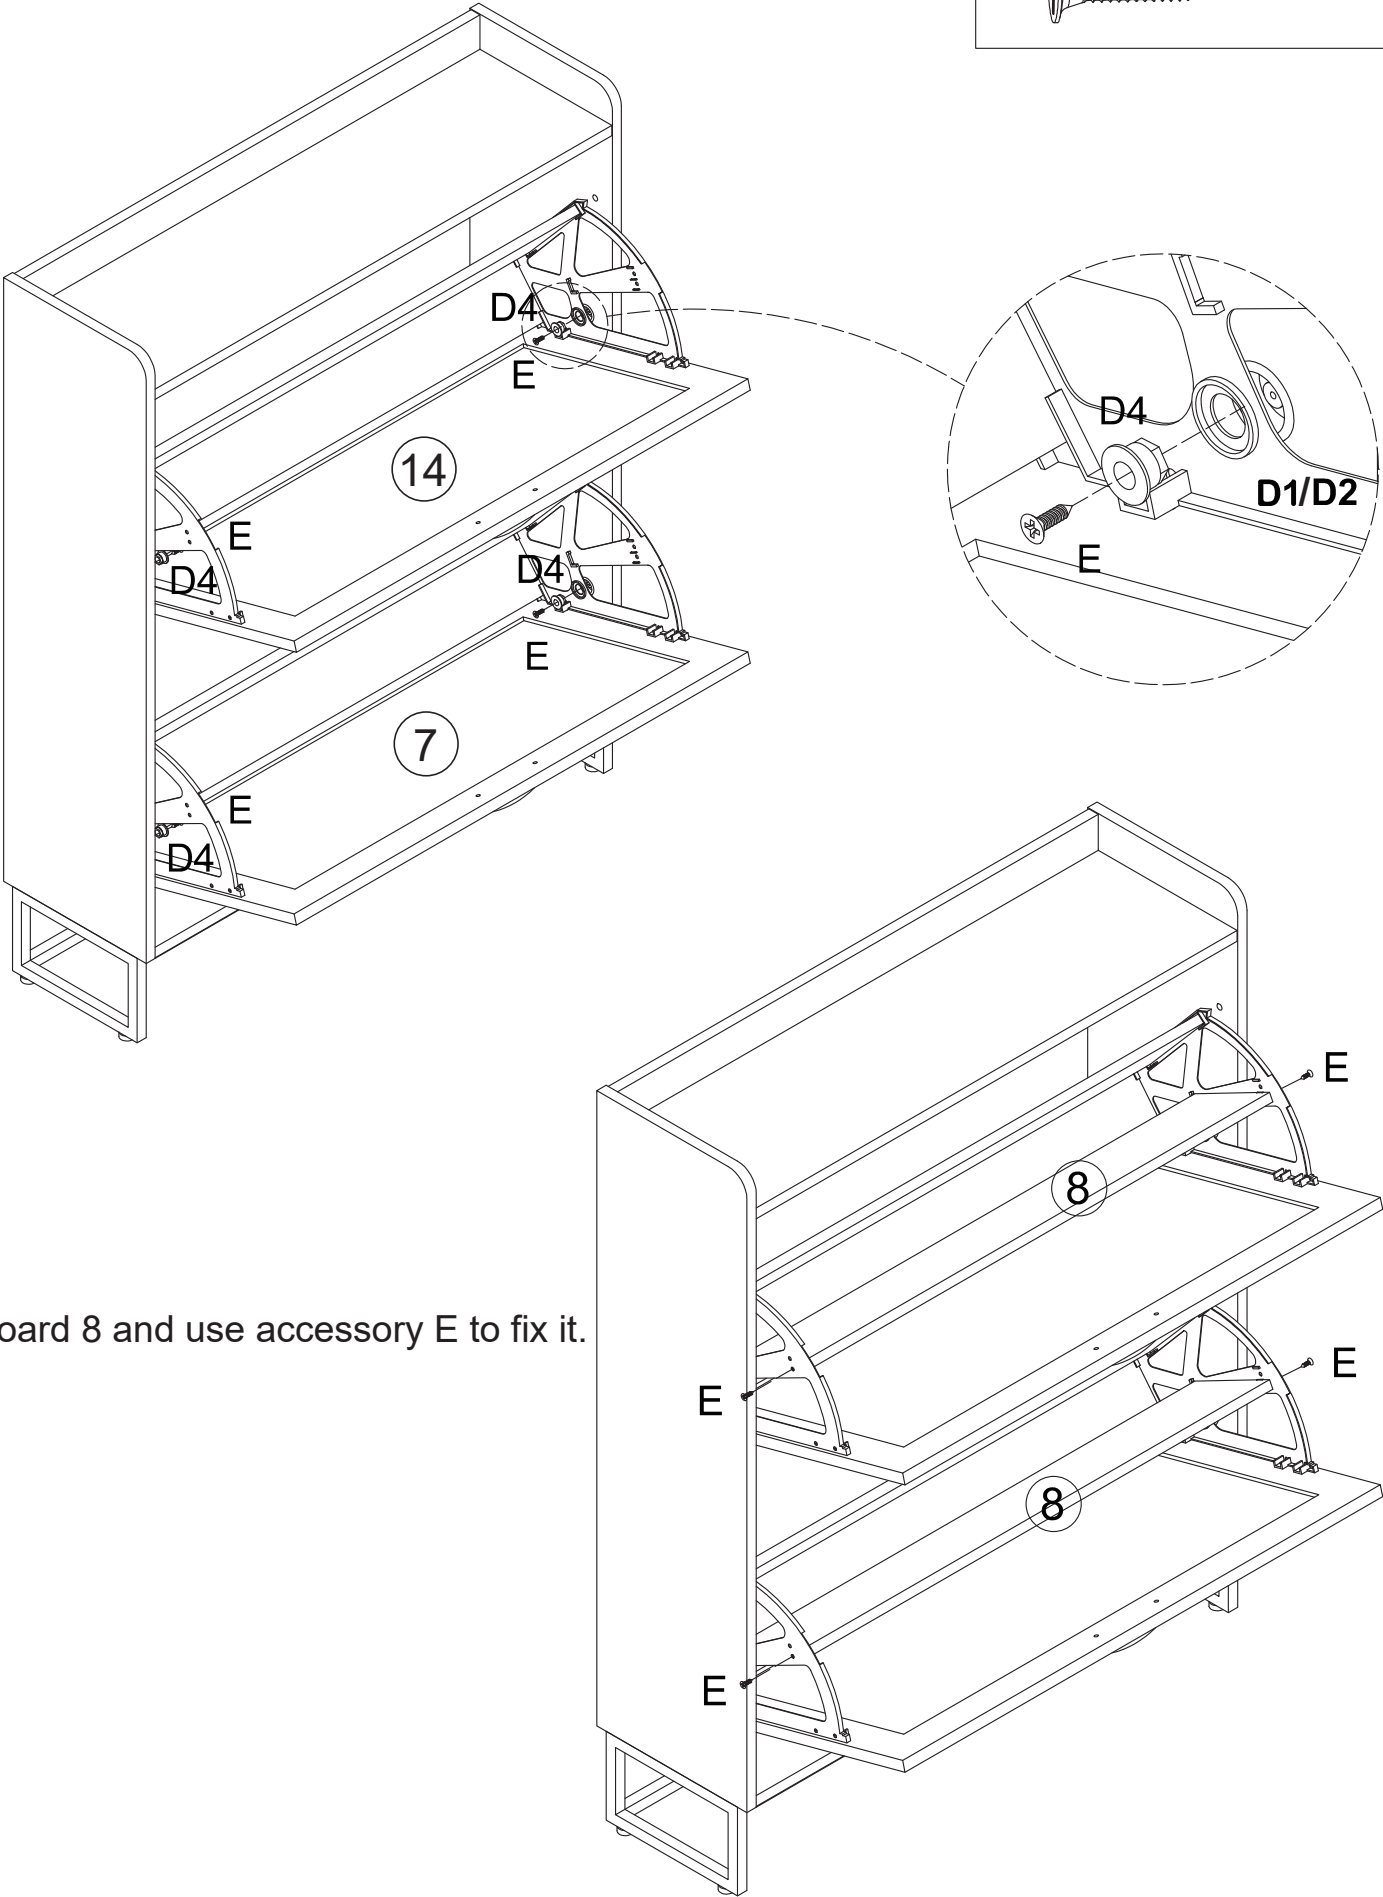 

 
Put in board 8 and use accessory E to fix it.

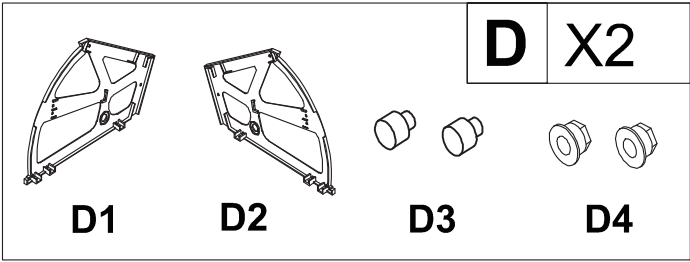


 
12. Insert D3 into the raserved hole on the side panel.

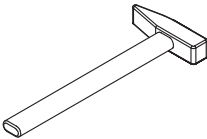

Need to bring your own hammer


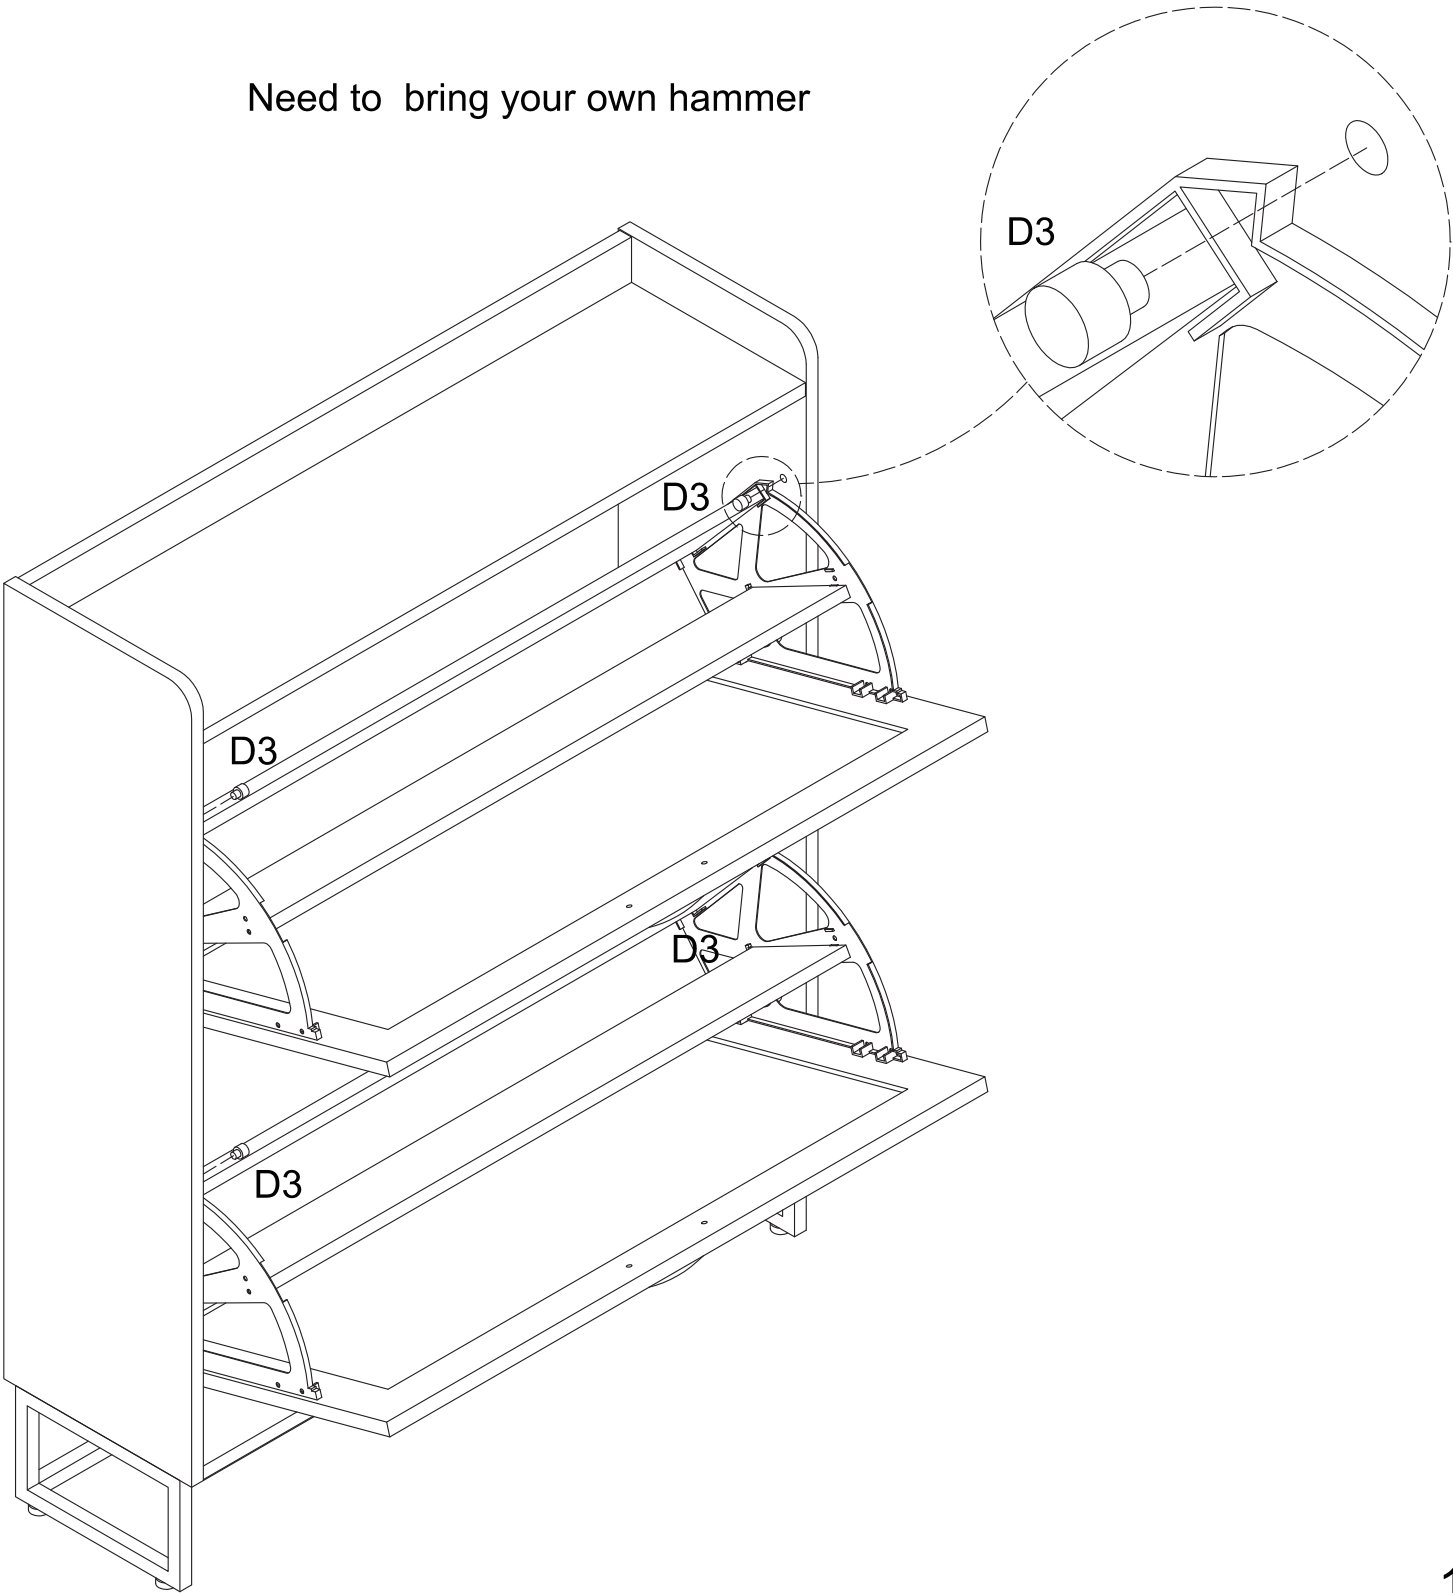 


  
13. Anti-tip device. Use accessory L2 to fix L1 between the product and the wall.

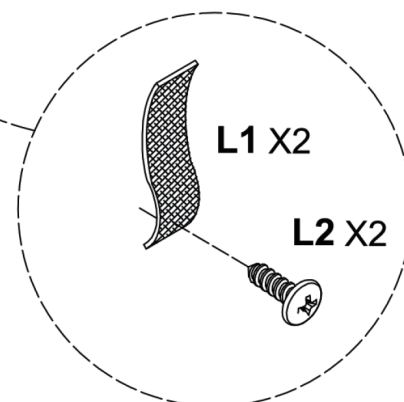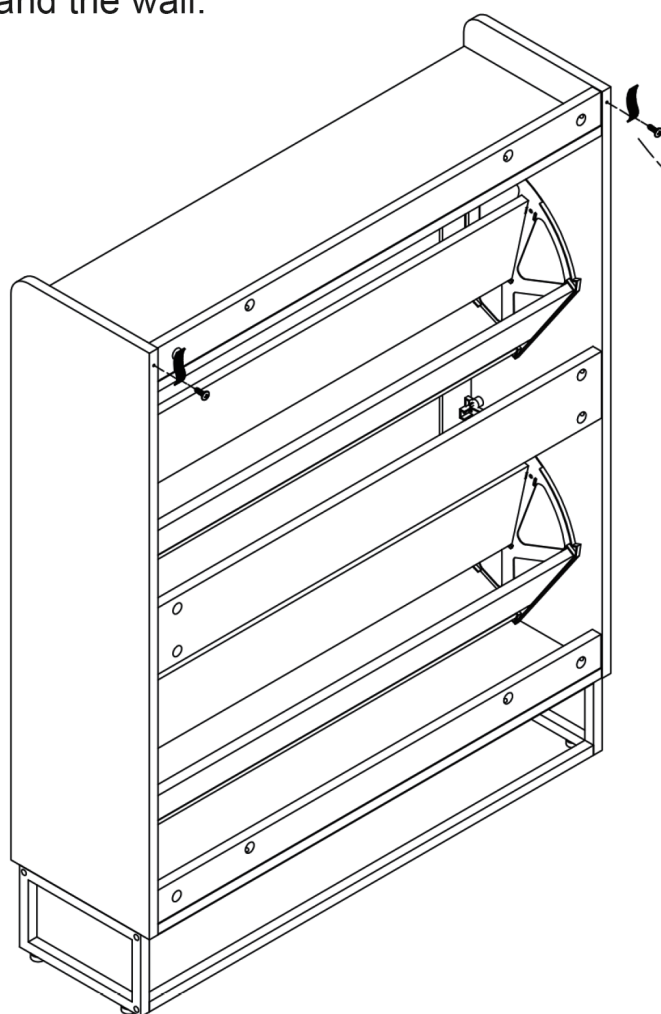

L		X2	
L1	L2	L3	L4

   14.

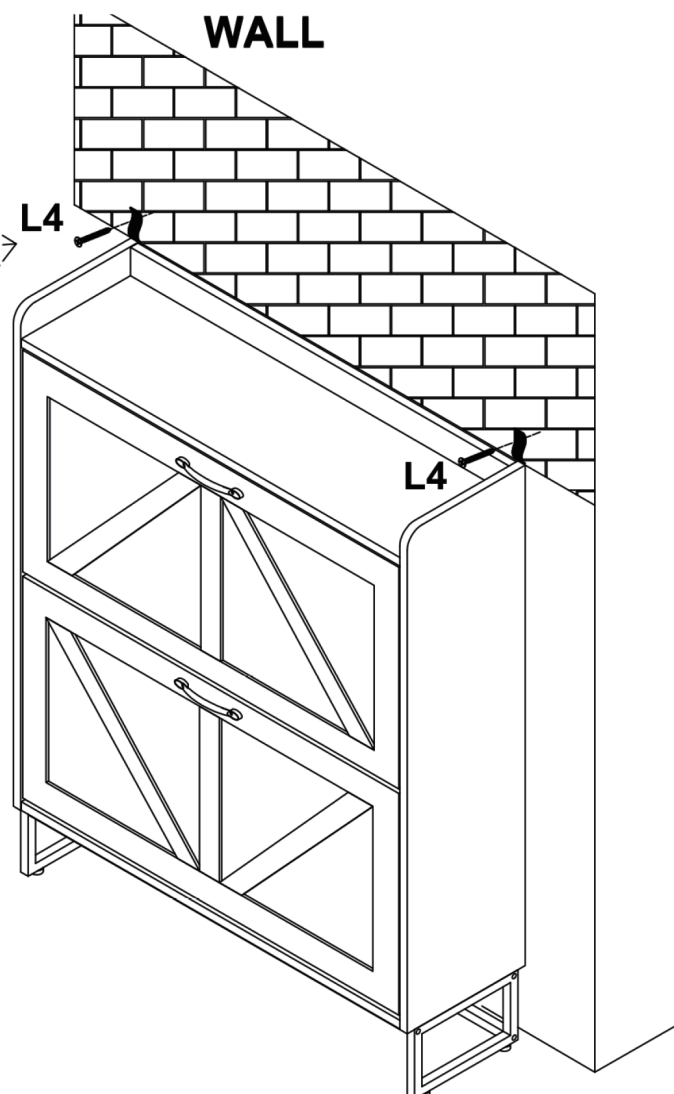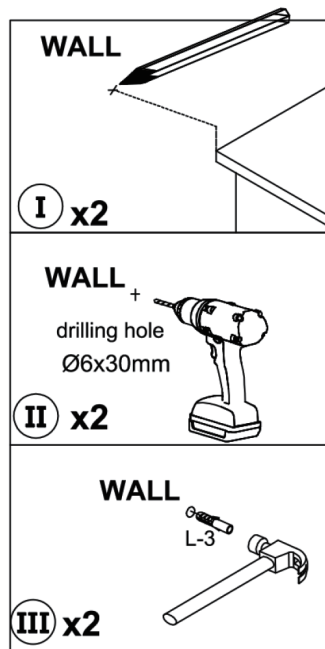

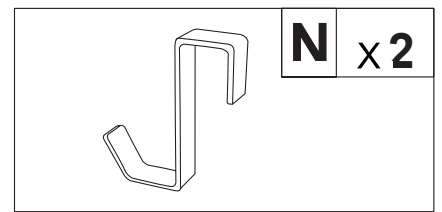

15. Contains two hooks, which can be hung anywhere on both sides of the top.
Can be used to hang umbrellas or keys.

