

Haze machine user manual

1. Description:

The appearance of this haze machine adopts an integrated hanging design.

The leak-proof barrel allows you to worry about the e-liquid overflow during transportation or when the machine is dumped.

The anti-slip design of the oil drum makes it easier and faster to take out and fix the oil drum.

The machine comes with timing quantification and DMX functions, and the English LCD operation interface makes it easy for you to operate.

The new heating system is characterized by not easy to block pipes, fast preheating, light weight, ultra-quiet, uniform smoke emission, and long smoke transmission distance.

It is the best match for bars and various performances.

2. Features:

- 1). Multiple operation modes
- 2). Stylish and simple appearance
- 3). Light weight, easy to carry

3. Technical parameter:

Voltage: AC110-130V/60Hz

Power: 1500W

Control way: DMX512、Remote control、Display button

Re-heating time: 100s

Smoke output: 10000cuft/min

Capacity of oil tank: 1 L

Machine Size: 330x280x230mm

Package Size: 380x330x270mm

N.W: 6kg

G.W: 7.5kg

4. Operating instruction:

- 1). Check whether the accessories are complete.
- 2). Pour fog liquid into the fuel tank of the machine and tighten the lid.
- 3). Plug in the power socket and press the switch (POWER ON/OFF) to ON. The power is turned on and the display lights up, so it indicates that the machine is already under heating. To use the machine normally, it should be preheated for 75 seconds in advance, when the preheating is complete, then according to the controller you choose, to control the normal operation.

5. Menudescription



- | | |
|-------------------------------|-----------------|
| 1. Ready | 等待 |
| 2. DMX.addr 1-512 | DMX 地址编码 1-512 |
| 3. Pump.vol 1-100 | 抽油量 1-100 |
| 4. Fan vol 1-100 | 风扇量 1-100 |
| 5. Tim work 1-120 minutes | 定时工作关机 1-120 分钟 |
| 6. Interval work 1-300 second | 间隔时间 1-300 秒钟 |
| 7. Duration work 1-300 second | 持续工作 1-300 秒钟 |

- *Time stop: 1-120 minutes can be set.
- *Timer: according to the set time, continuous and interval cycle work.
- *DMX: Two channels:
 - Channel 1: smoke on; Channel 2: Fanspeedadjustment
- *Remote control (working according to the set parameters):
 - A button: smoke on; B button: timed shutdown
- *Save: Set the parameters and press the “exit”, the system will automatically save in 10 seconds.

Note: Before using the remote control, please make sure that there is no signal interference of the same frequency (433MHz) in the controlled area, otherwise, please use other methods (such as DMX512) to control to avoid wrong commands.



Wait
Heating

加热

Work
W o i l

检查油量

Notice:

1. After opening the package, carefully check whether the accessories are complete, and confirm whether there is any damage caused by the transportation process. If the machine is found to be damaged or missing, please do not plug it in and contact the manufacturer immediately.
2. The machine is not waterproof. Please keep it away from rain and damp places. If the inside of the machine is damp or liquid enters, please do not use it immediately.
3. This machine is for adults only, please keep it away from children.
4. The machine should be installed in a well-ventilated place. The vents of the hood should not be covered to ensure proper ventilation and heat dissipation. Keep a space of at least 20cm around the machine. At the same time, no flammable substances can be stored within 300cm. (Keep away from carpets, wooden boards and flammable objects).
5. Before turning on the power, make sure that the on-site power supply voltage matches the rated voltage of the machine and that it is well grounded.
6. There will be a little noise when the machine is working, which is normal. However, when the e-liquid is exhausted, do not let the machine continue to work, otherwise it will cause some internal accessories to heat up and damage the electronic components.
7. If an abnormality occurs during the operation of the machine, please stop using it immediately. Check whether the power supply, signal, oil pipeline and other related parts are abnormal. If you can't solve it, please contact the seller.
8. Daily maintenance of the machine is required. The air vents and exhaust vents on the fuselage must not have foreign objects. If there are foreign objects, please clean them in time to avoid machine failure.
9. Non-professionals are not allowed to disassemble or modify any structure of the machine without authorization.
10. Turn off the power when not in use for a long time to prevent the machine from staying in the standby state for a long time, which will affect the service life of the machine.
11. Damage caused by improper use or human factors is not covered by the warranty.
12. Please strictly follow your "Instruction Manual" for all operations!
13. The final interpretation right belongs to our company.