




we furnish fun.

ASSEMBLY INSTRUCTIONS

HEXTON CHESS & GAME TABLE

IMPORTANT:

Do not fully tighten screws until the entire table is assembled.

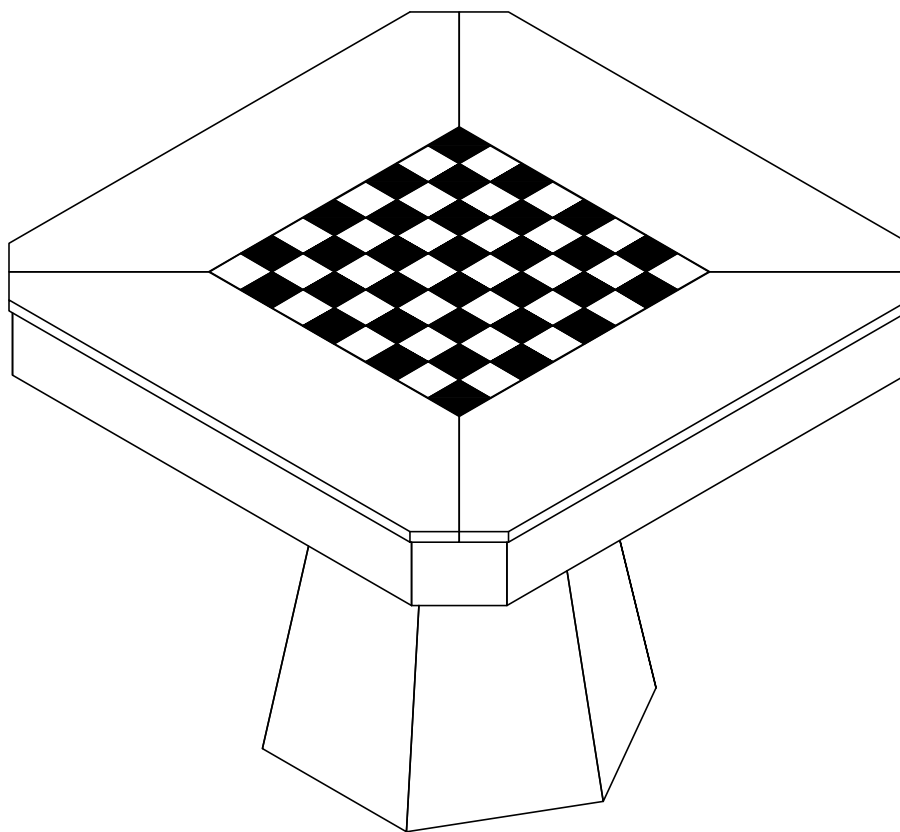




ASSEMBLY INSTRUCTIONS

HEXTON CHESS & GAME TABLE

HARDWARE LIST

ITEM#	SAMPLE	DESCRIPTION	QTY.
H1		Bolt (5/16" x 1-3/8")	4
H2		Lock Washer (5/16")	4
H3		Flat Washer (5/16")	4
H4		Allen Wrench (5/16")	1

 PARTS LIST

ITEM#	SAMPLE	DESCRIPTION	QTY.
P1		Tabletop	1
P2		Chessboard Insert	1
P3		Leg Plate	1
P4		Base	1
P5		Chess Pieces	1 Set




ASSEMBLY INSTRUCTIONS

HEXTON CHESS & GAME TABLE


STEP 1

Remove the **chessboard insert (P2)** and any accessories stored inside the **tabletop (P1)**.

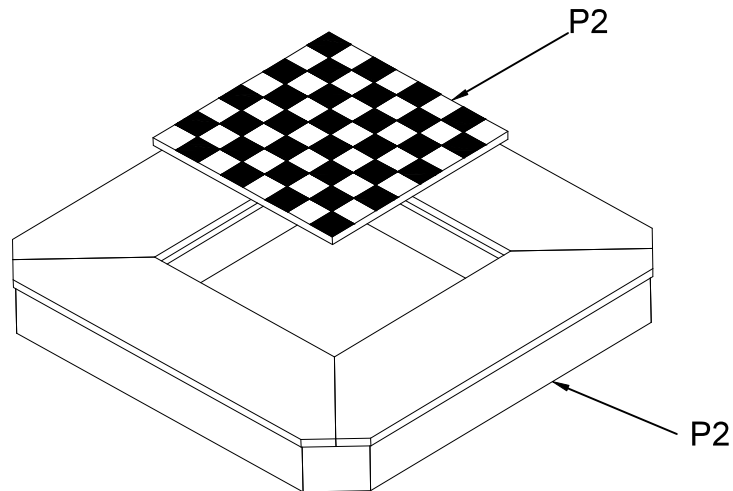

place the tabletop (P1) upside down on a clean, flat and soft **surface to prevent damage**.

Detach the leg plate (P3) under the top (P1).

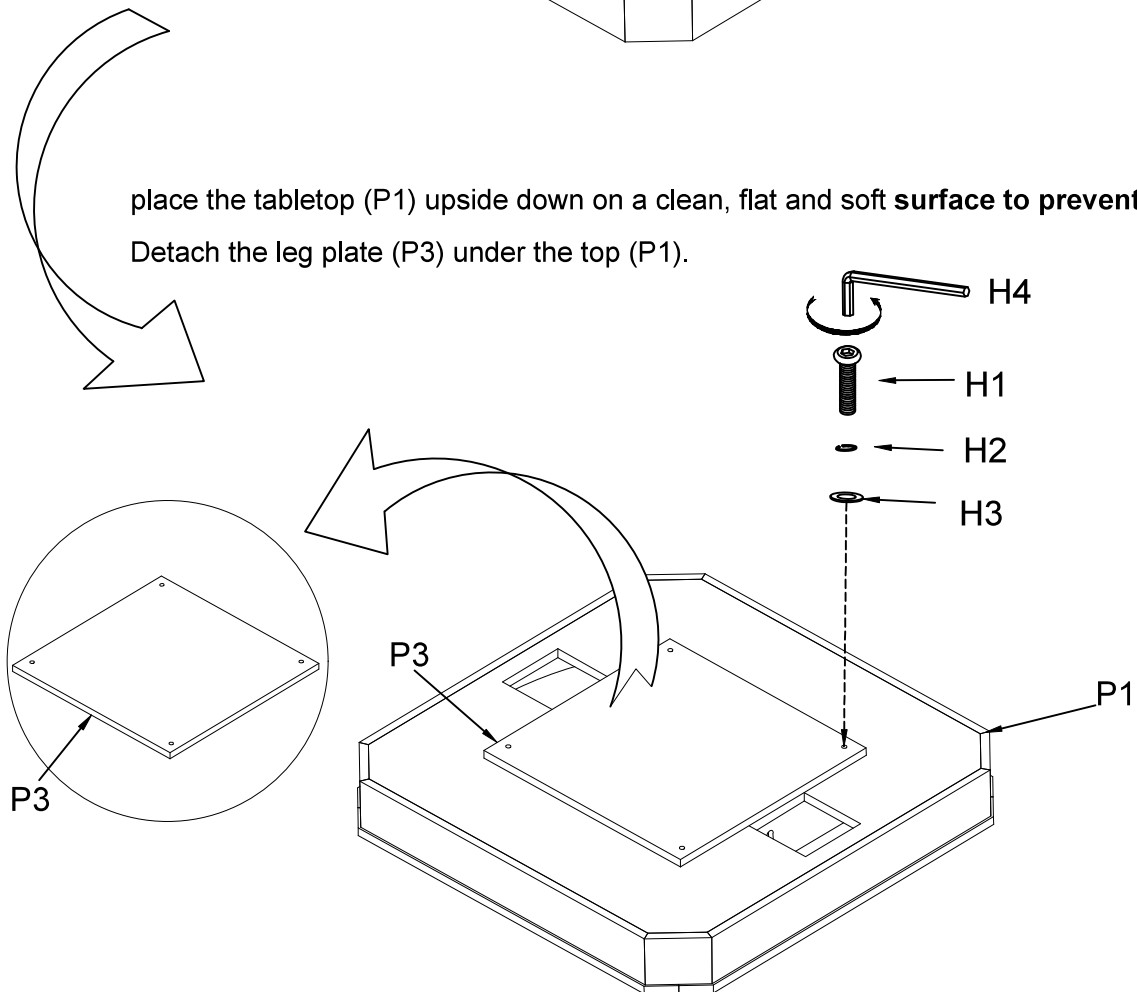



ASSEMBLY INSTRUCTIONS
HEXTON CHESS & GAME TABLE


STEP 2

Attach the **leg plate (P3)** to the **base (P4)** as shown.

Secure using:

- (H1) Bolts
- (H2) Lock Washers
- (H3) Flat Washers
- (H4) Allen Wrench

Do not fully tighten.

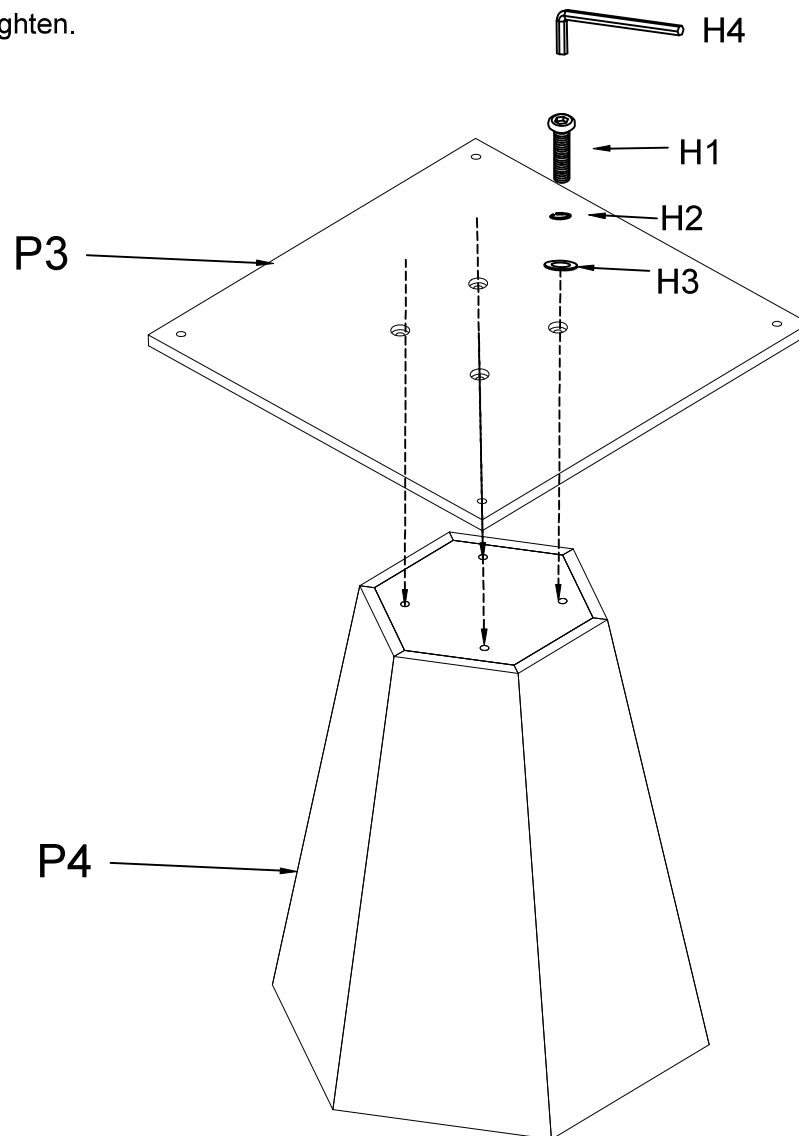



ASSEMBLY INSTRUCTIONS

HEXTON CHESS & GAME TABLE


STEP 3

Attach the assembled base (P4) and leg plate (P3) to the tabletop (P1).

Secure using:

- (H1) Bolts
- (H2) Lock Washers
- (H3) Flat Washers
- (H4) Allen Wrench

Fully tighten all hardware.

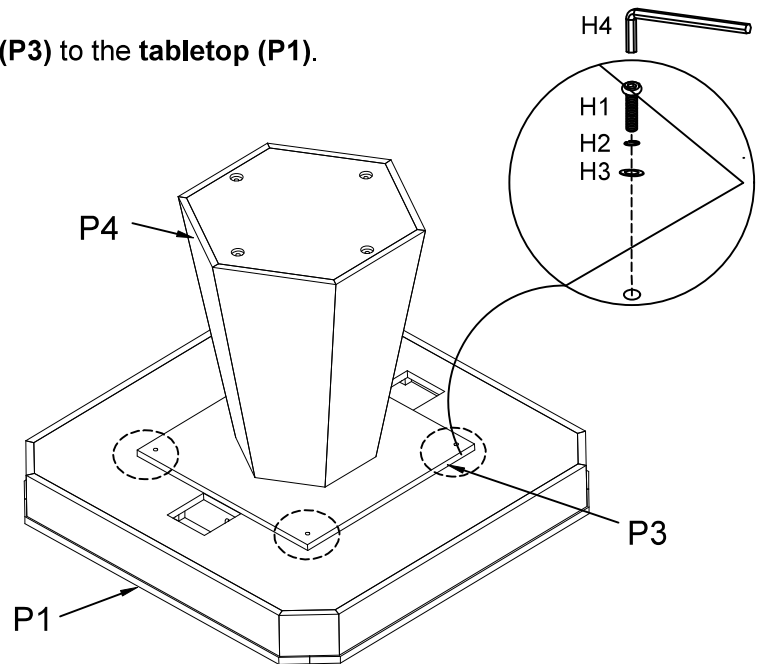


STEP 4

Place the table in the upright position.

Reach underneath the tabletop to locate the metal lifting rod hardware installed beneath the table frame.

Use your finger to push the metal lifting rod hardware upward.

Once the metal lifting rod hardware is pushed up, the Chessboard Insert (P2) will pop up slightly from the tabletop, allowing the user to easily remove, flip, or reposition it.

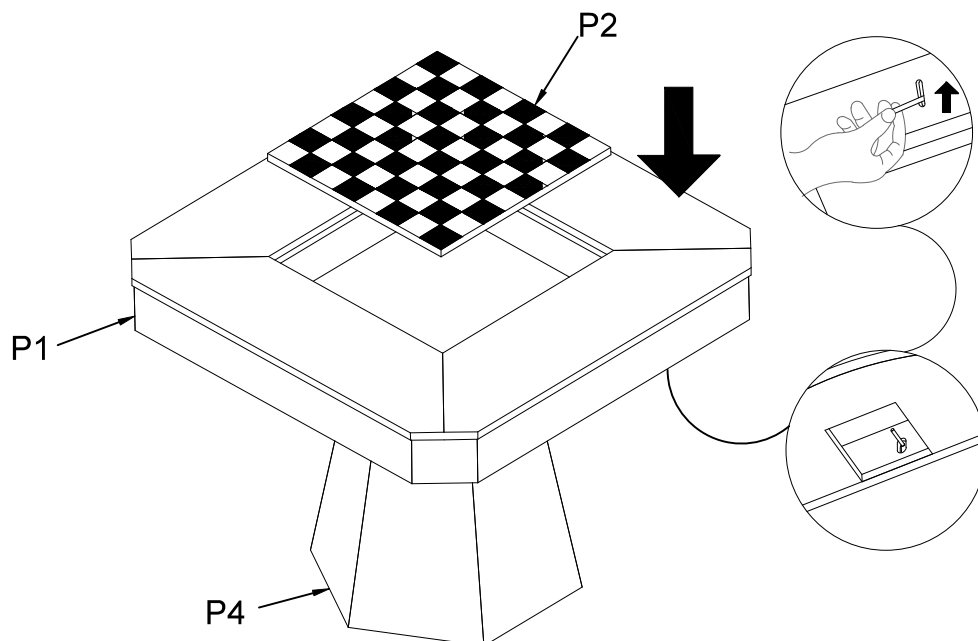




we furnish fun.

ASSEMBLY INSTRUCTIONS

HEXTON CHESS & GAME TABLE

FINAL STEP

Adjust the levelers on the bottom of the base as needed to ensure the table is level.

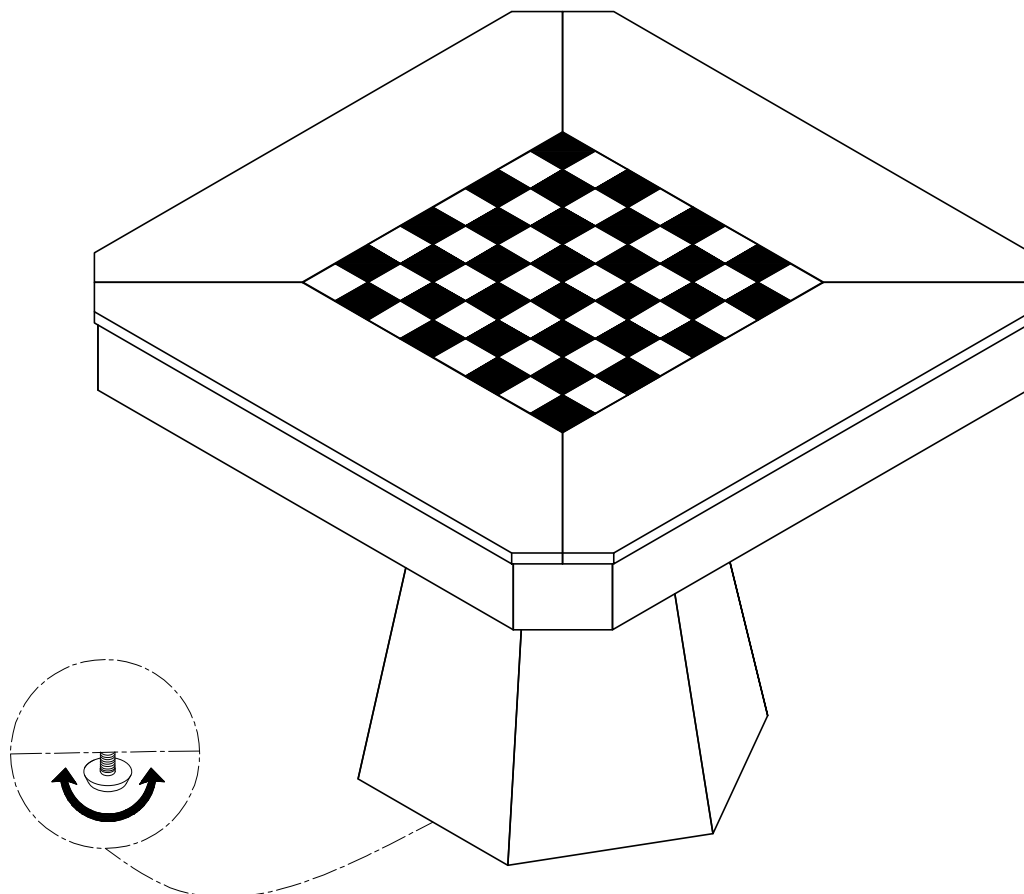

Adjustable levelers

ASSEMBLY IS COMPLETE