 


INSTALLATION

 
 
Product Manual

Version: 750011US-01-26A-HSA

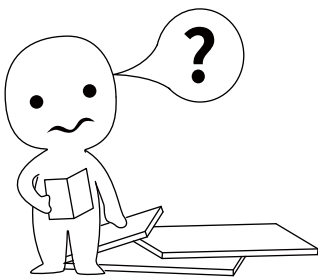



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

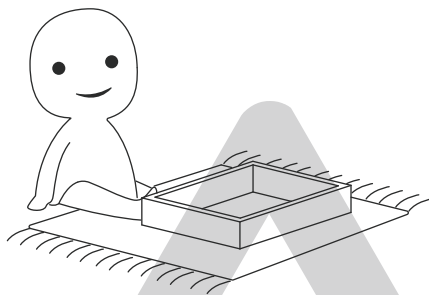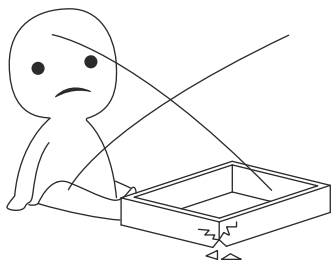





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

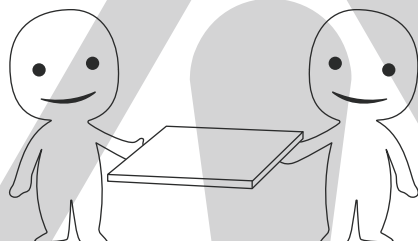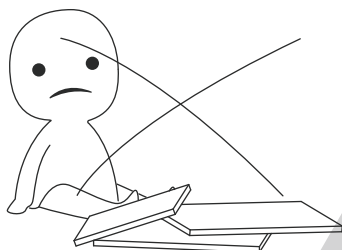

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

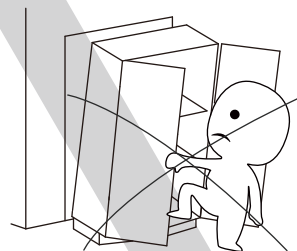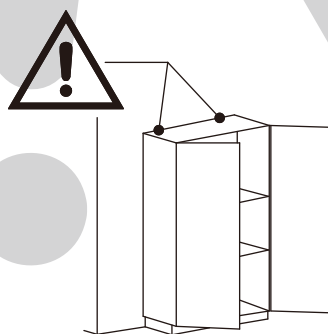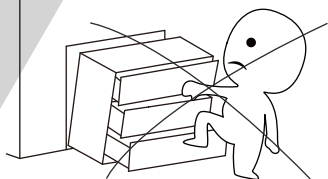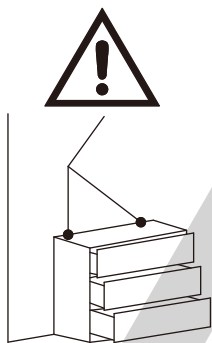

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.








Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

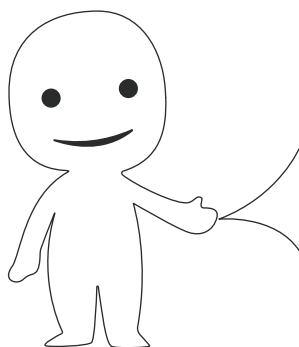


Please prepare the following tools

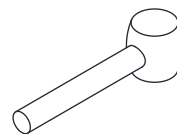   

       When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

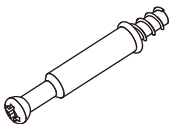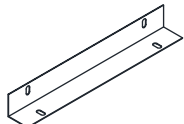A x 59  Ø 6 x 35 mm	B x 67  Ø 15 x 9.6 mm	C x 51  Ø 7.8 x 30 mm	D x 4  Ø 6.5 x 57 mm	E x 4  Ø 5 x 50 mm
F x 10  Ø 4 x 35 mm	G x 8  Ø 4 x 8 mm	H x 4  Ø 32 x 31 mm	I x 4  Ø 4 x 20 mm	J x 20  Ø 5 x 25 mm
K x 1  100 x 29 mm	L x 1  200 x 25 mm	M x 2  26 x 17 mm	N x 4  Ø 26 mm	O x 6  Ø 35 mm
P x 36  Ø 4 x 14 mm	Q x 2  66 x 15 mm	R x 2  Ø 6 x 30 mm	S x 10  Ø 4 x 12 mm	T x 52  Ø 4 x 24 mm
U x 2  40 x 28 mm	V x 1  M4			

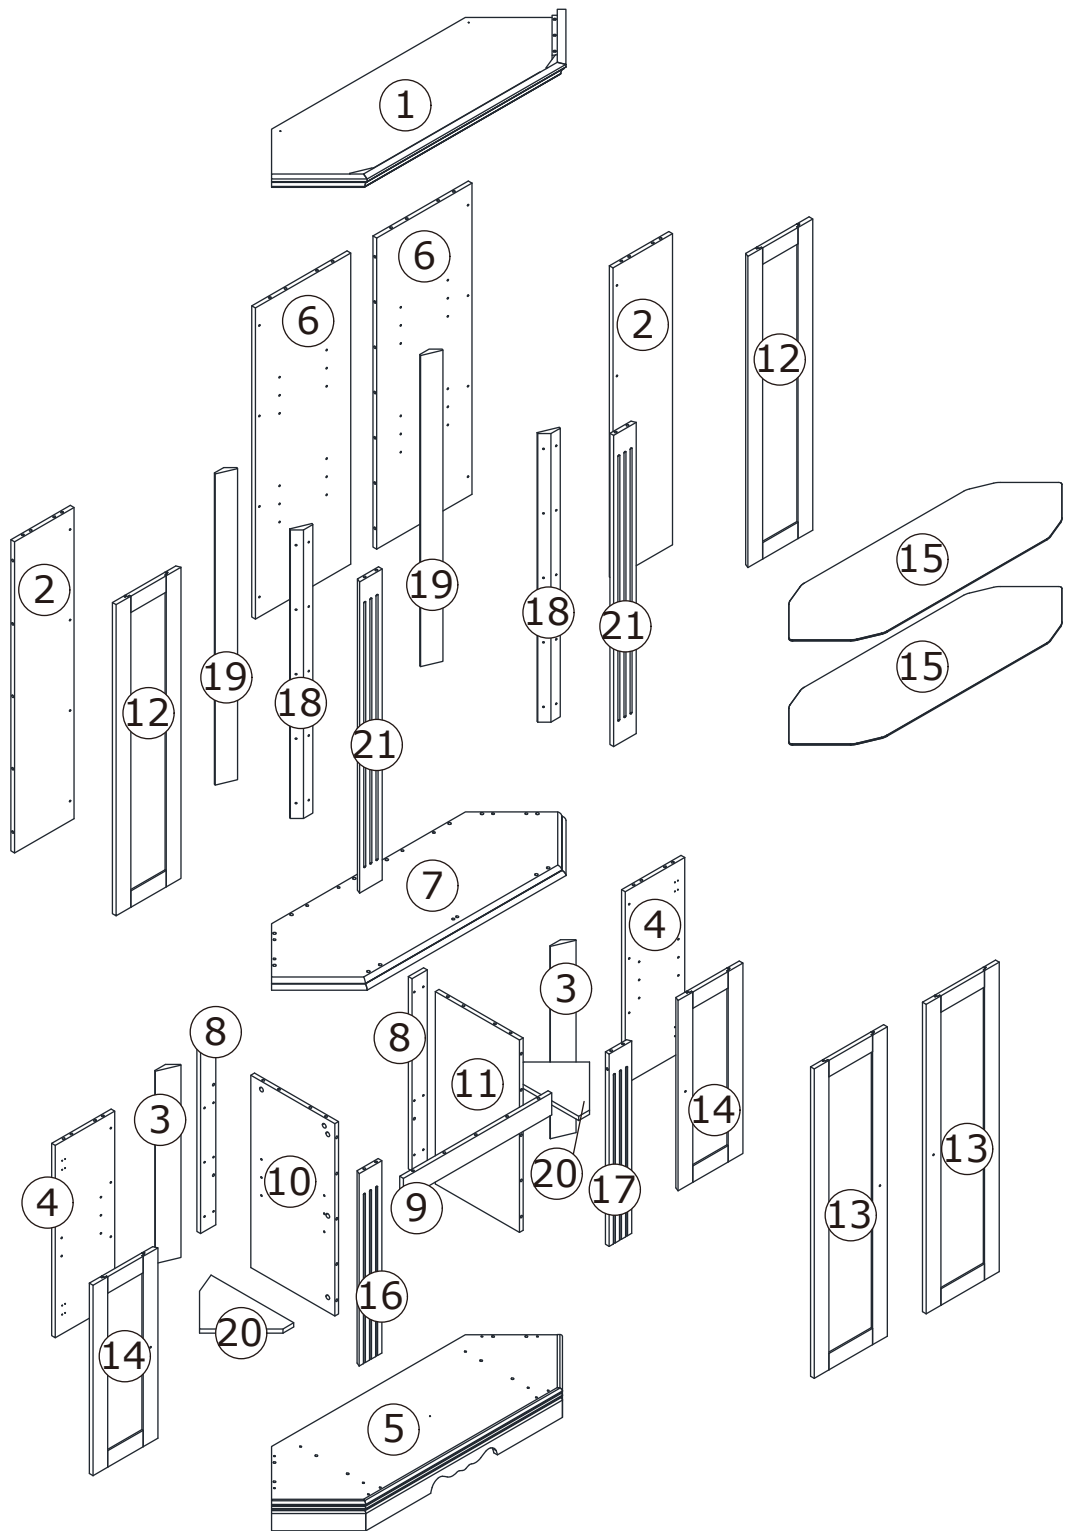 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




 
*This is a permanent label.
Do not remove!*

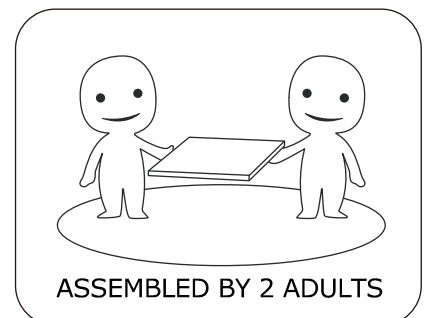

1



A x 6

    Ø 6 x 35 mm

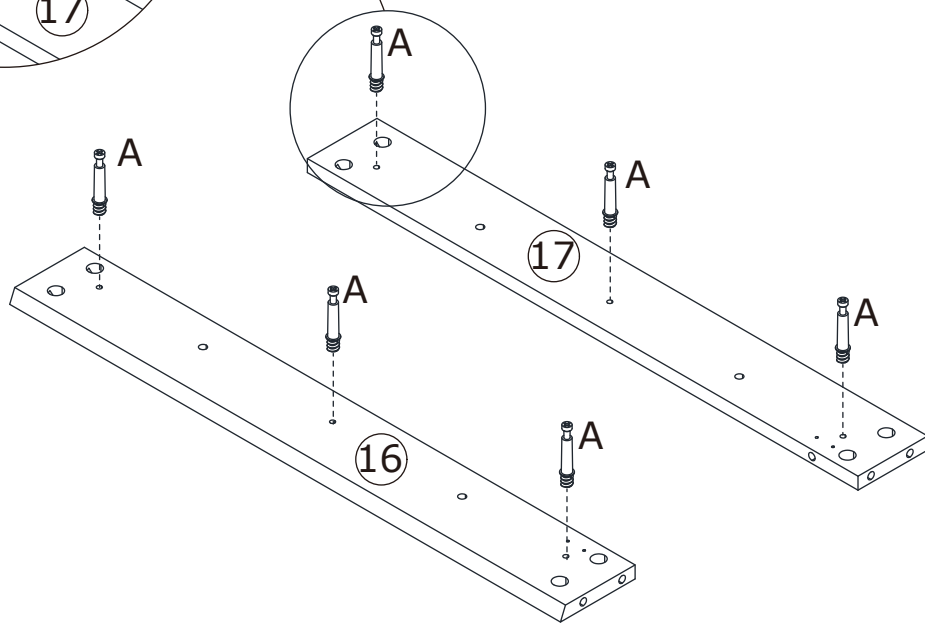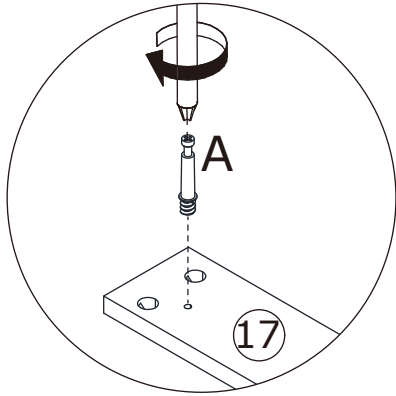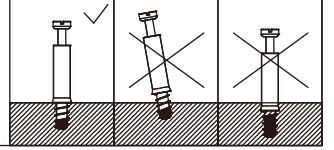


Screw eccentric rod (A) onto plates 16 and 17.

  
2

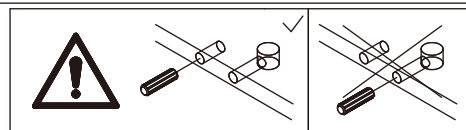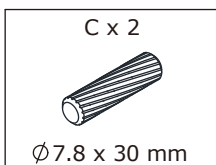

 
Connect plates 16 and 17 to plate 9 using wooden dowel (C).

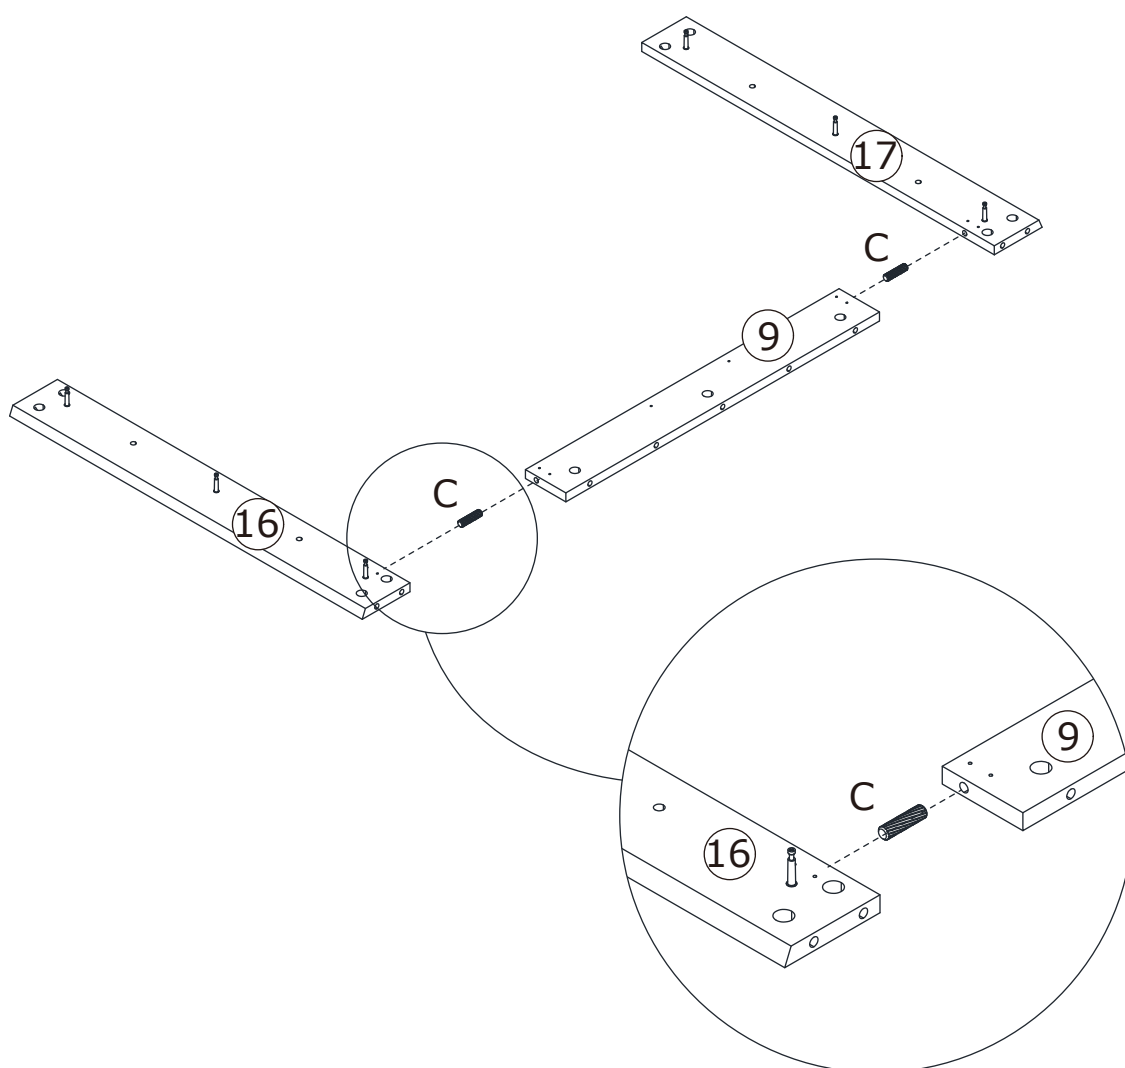

3

 
S x 8  Ø4 x 12 mm	U x 2  40 x 28 mm	
--	--	---

 Secure iron sheet (U) to plates 9, 16, and 17 using screw (S).

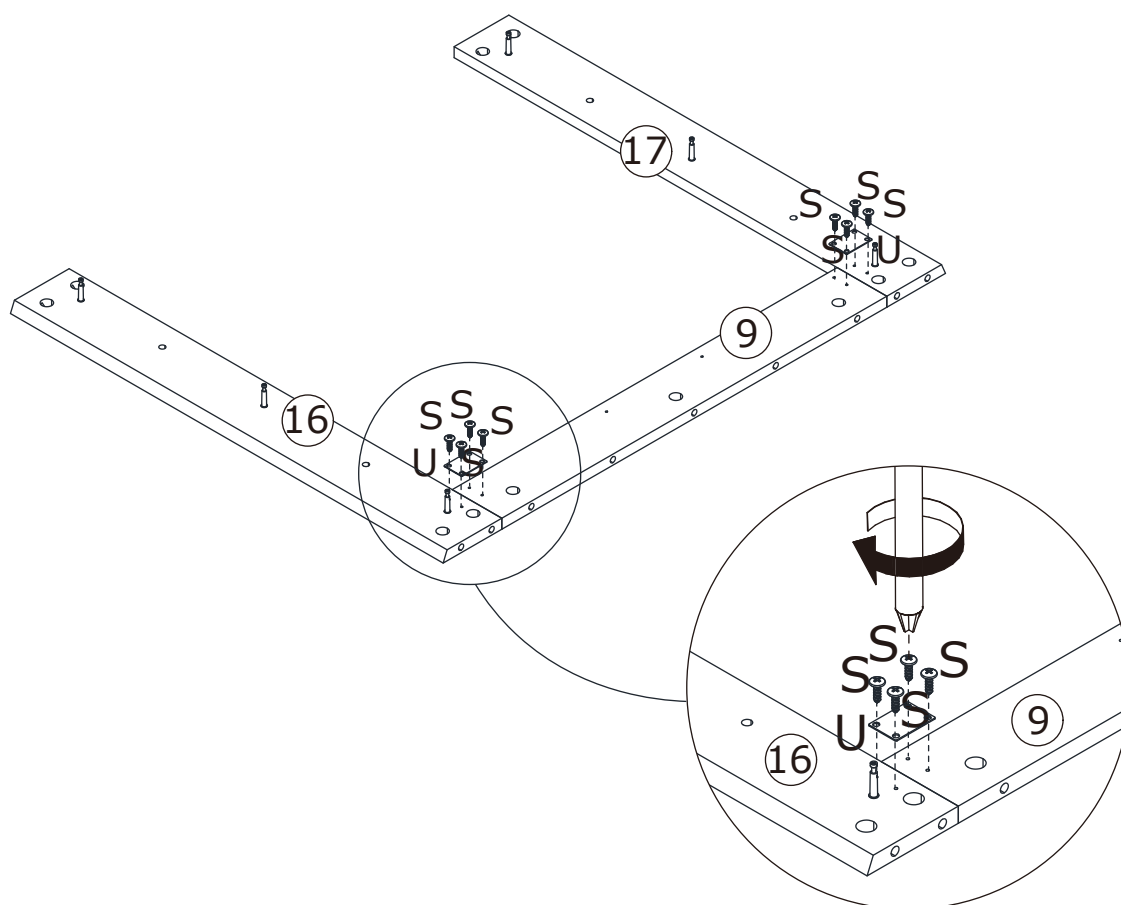

4

 C x 4






Ø7.8 x 30 mm


F x 8



   
Ø4 x 35 mm



 
Connect plate 8 to plates 10 and 11 respectively using wooden dowel (C), and secure them with screw (F).

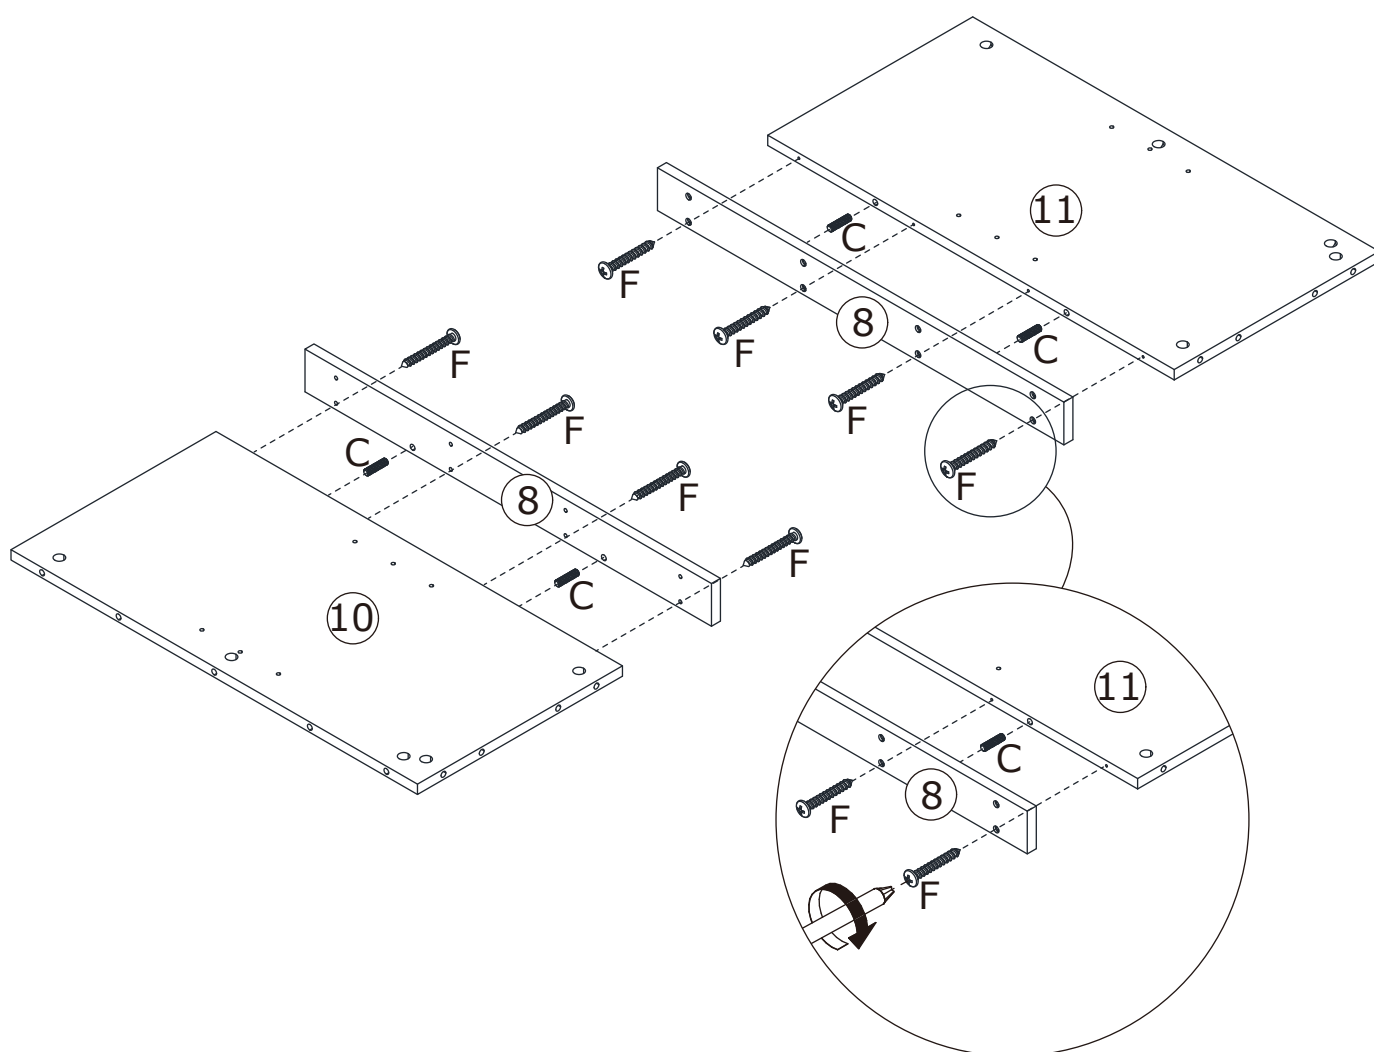





5

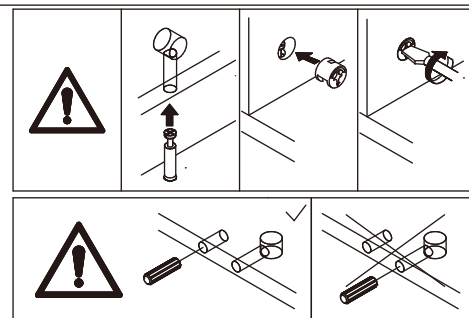 

 Connect plates 10 and 11 to plates 16 and 17 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.



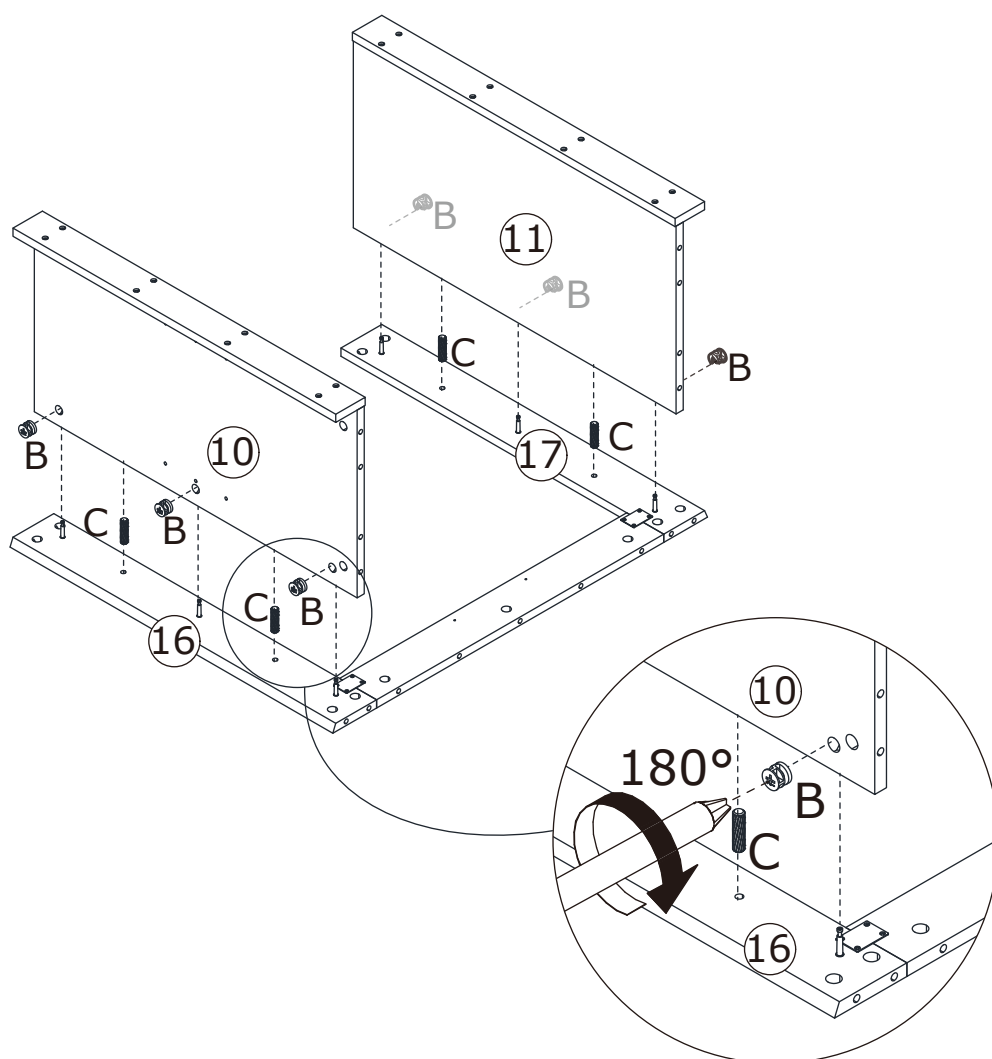




6

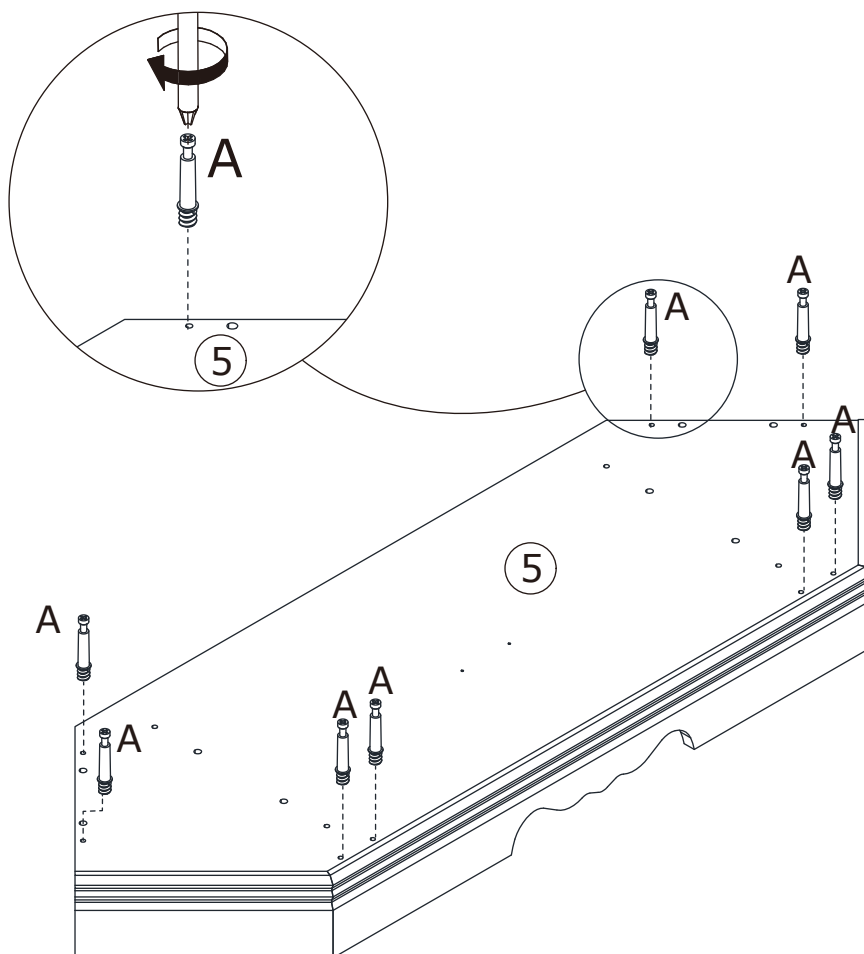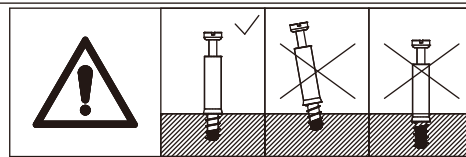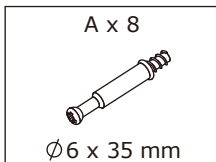    

Screw eccentric rod (A) onto plate 5.

   
7

B x 4  Ø 15 x 9.6 mm	C x 4  Ø 7.8 x 30 mm	E x 4  Ø 5 x 50 mm	
---	---	---	---

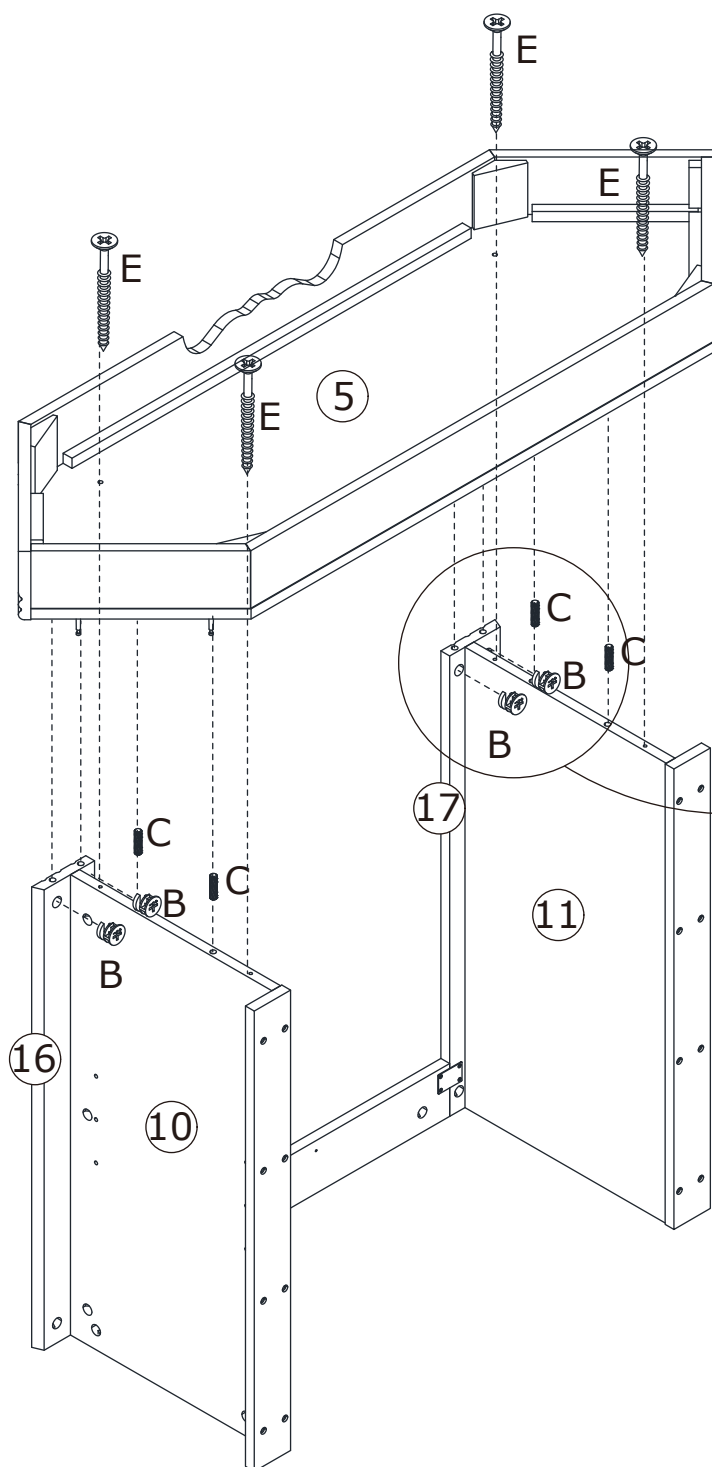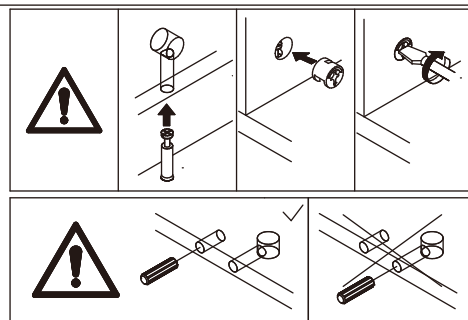  


Connect plate 5 to plates 10 and 11 using wooden dowel (C), and secure them with screw (E).
Connect plate 5 to plates 16 and 17, then tighten by turning eccentric wheel (B) clockwise.

 8

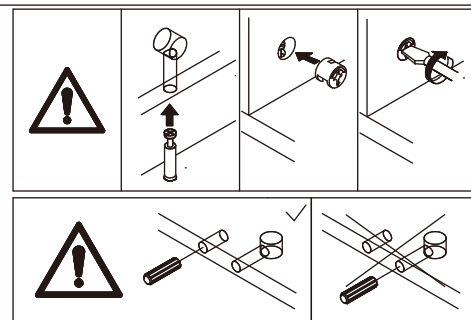

 Connect plate 4 to plate 5 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.


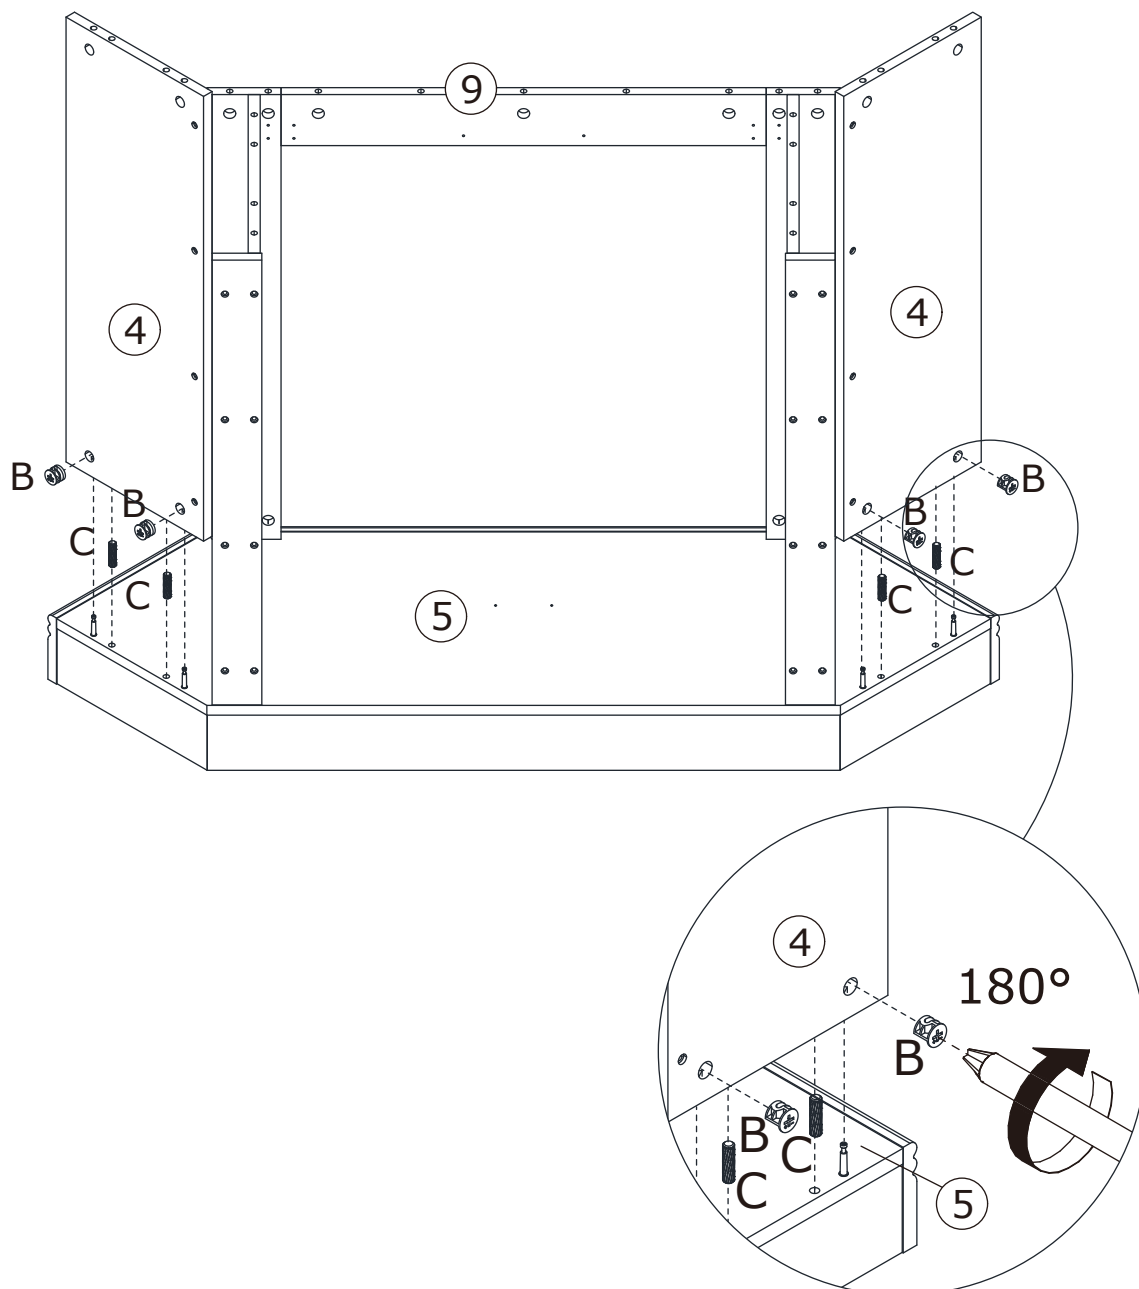


9



T x 16



  Ø4 x 24 mm

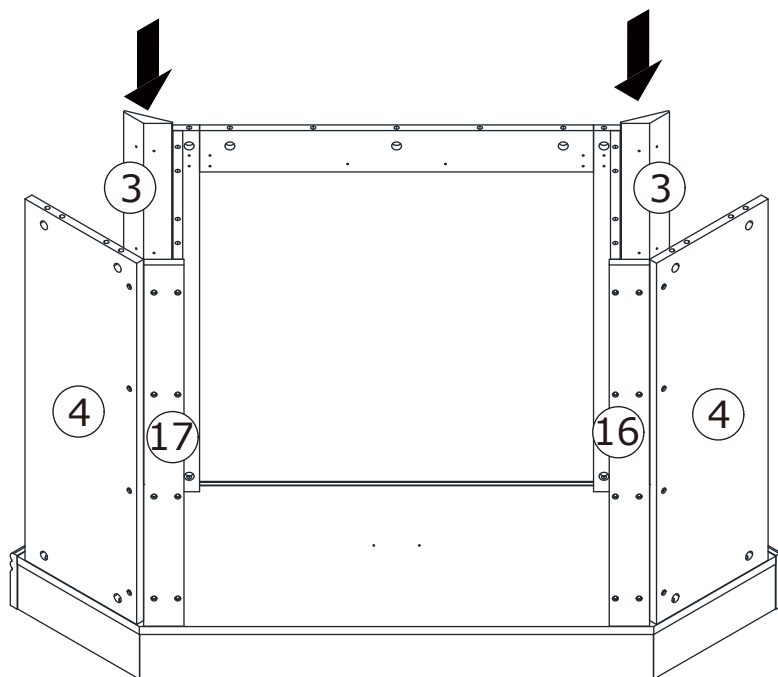

  Secure plate 3 to plate 4, 16, and 17 with screw (T).

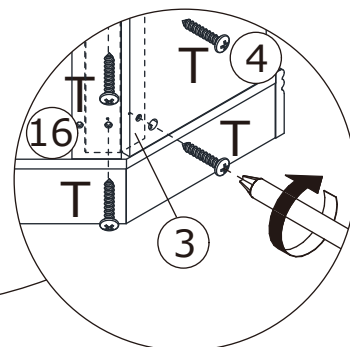
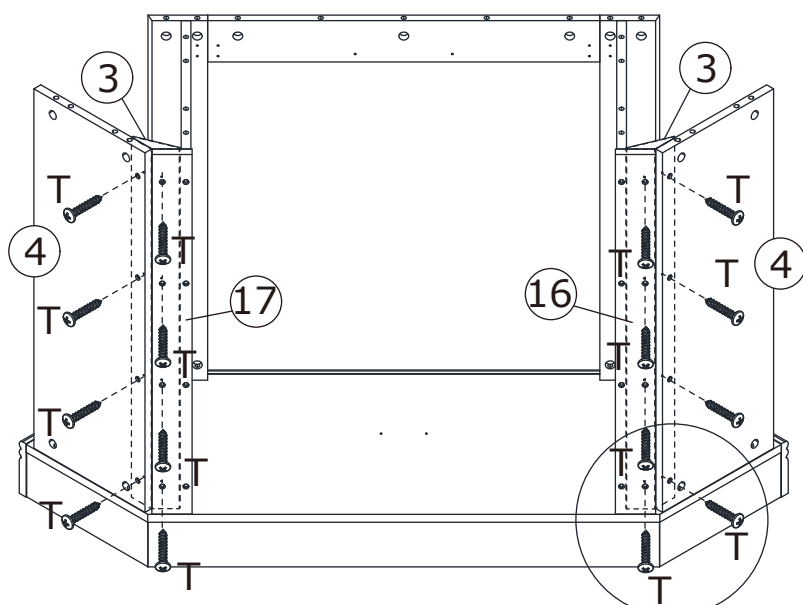


10

T x 10





 
 
Ø4 x 24 mm

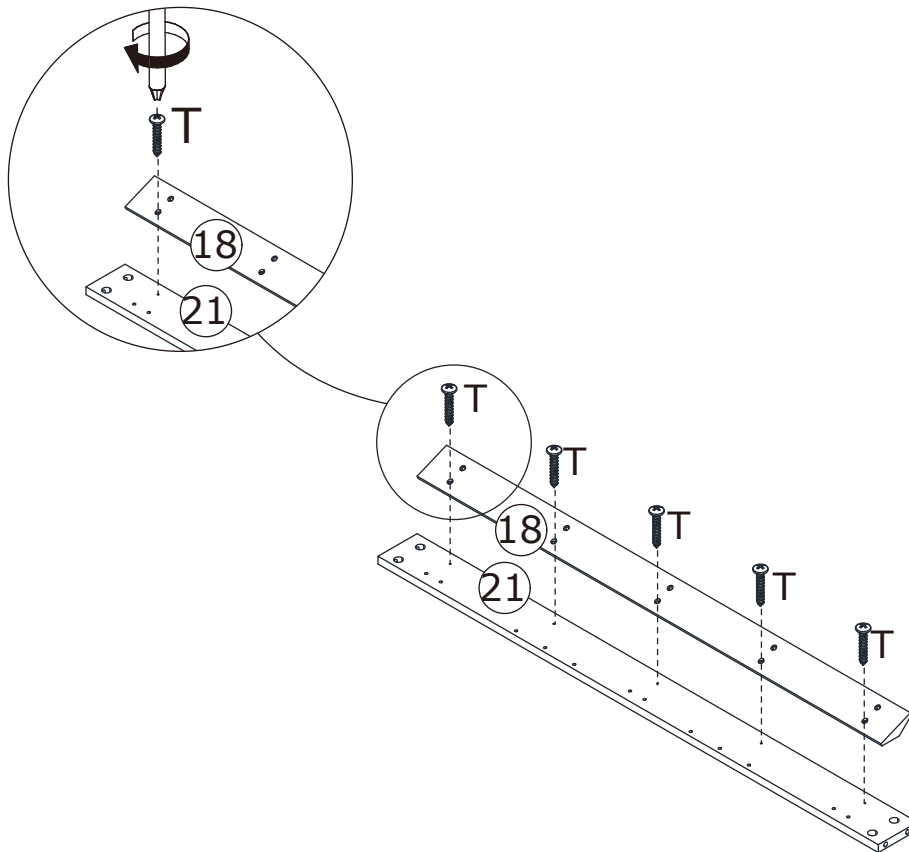

x2

Secure plate 18 to plate 21 using screw (T).

    11

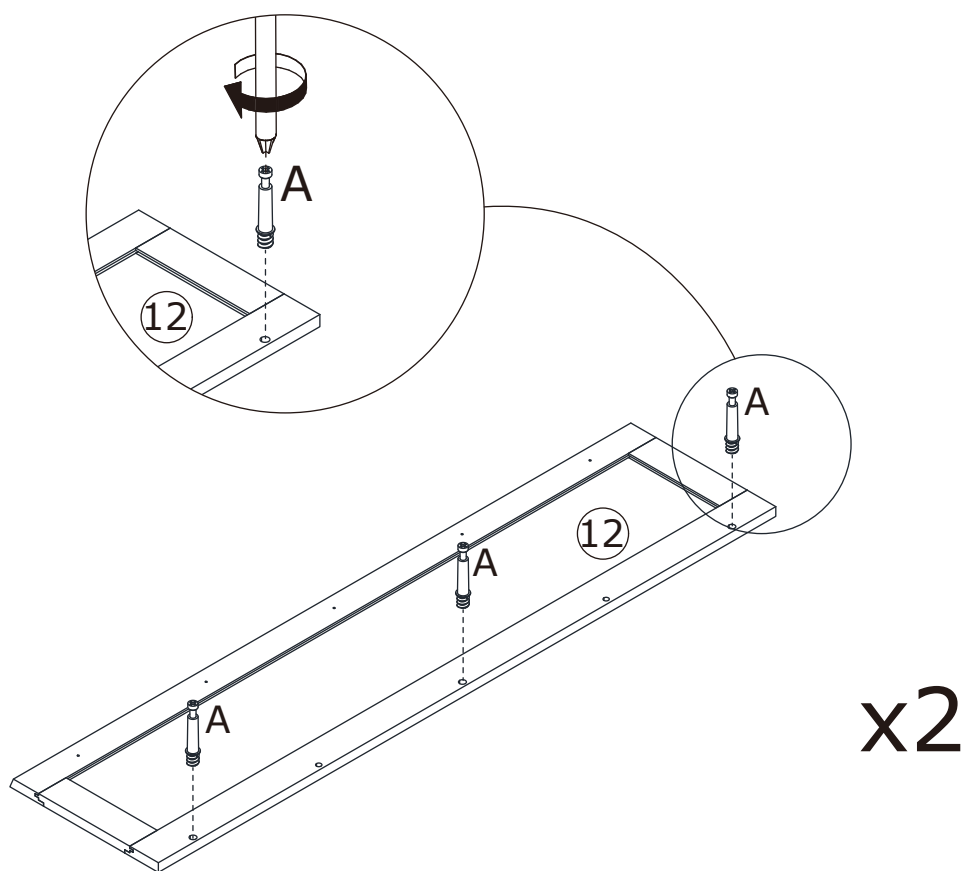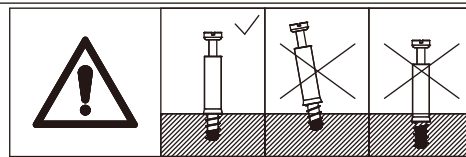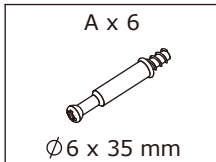



Screw eccentric rod (A) onto plate 12.

12

T x 10



  Ø4 x 24 mm

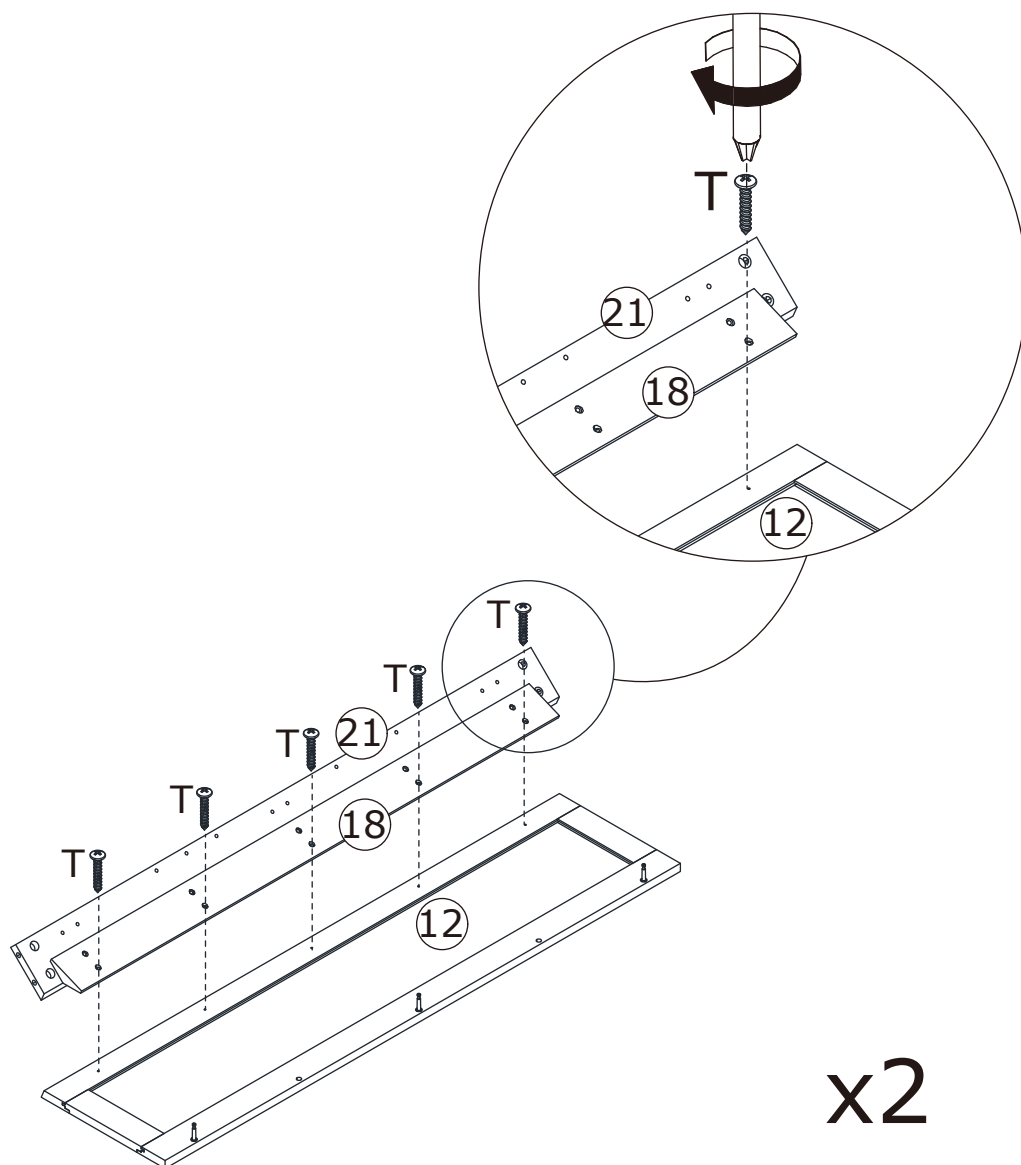

Secure plate 18 to plate 12 using screw (T).

13

B x 8



Ø 15 x 9.6 mm

C x 3

 
 


Ø 7.8 x 30 mm


D x 4



Ø 6.5 x 57 mm

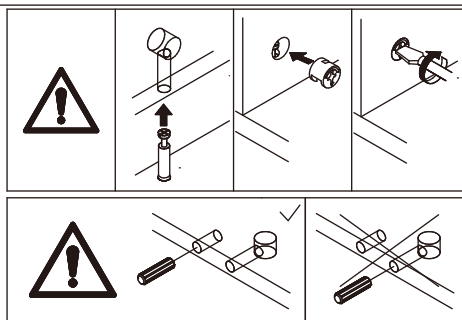

 Connect two plate 6 using wooden dowel (C) and double-ended screw (D), then tighten by turning eccentric wheel (B) clockwise.

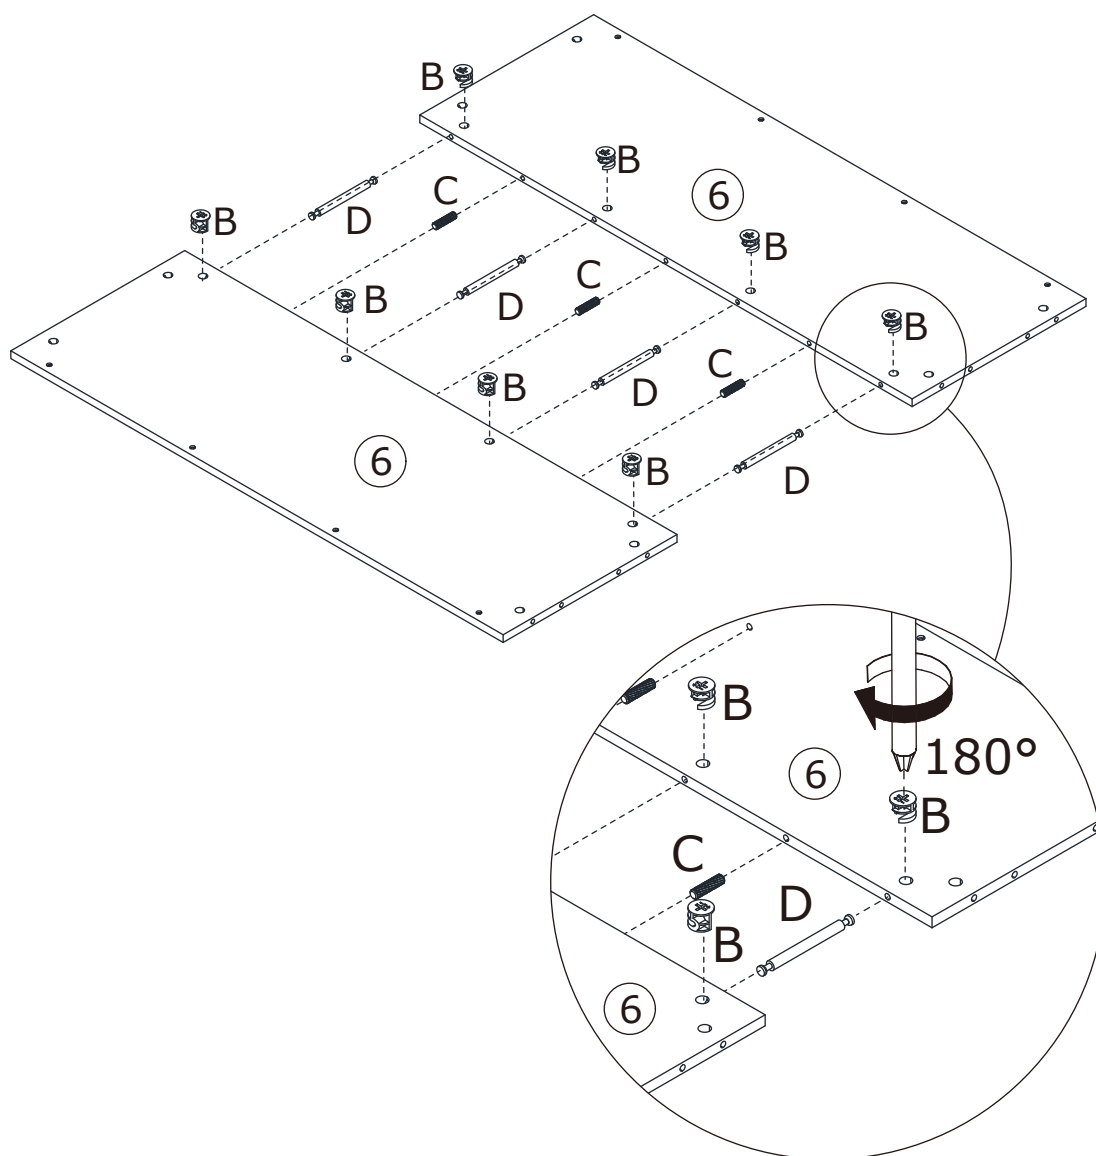


14


T x 8



 Ø4 x 24 mm



 Secure plate 2 to plate 19 using screw (T).

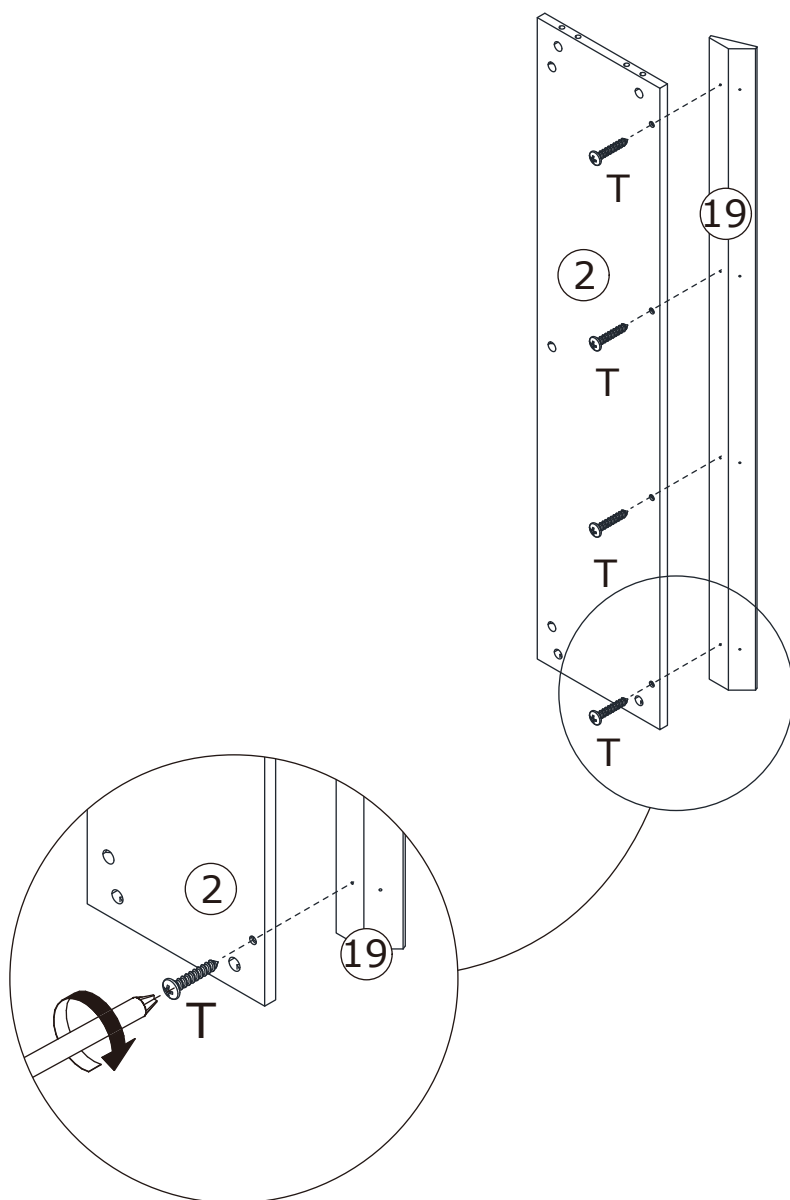


x2

15


T x 8



 Ø4 x 24 mm



 Secure plate 6 to plate 19 using screw (T).

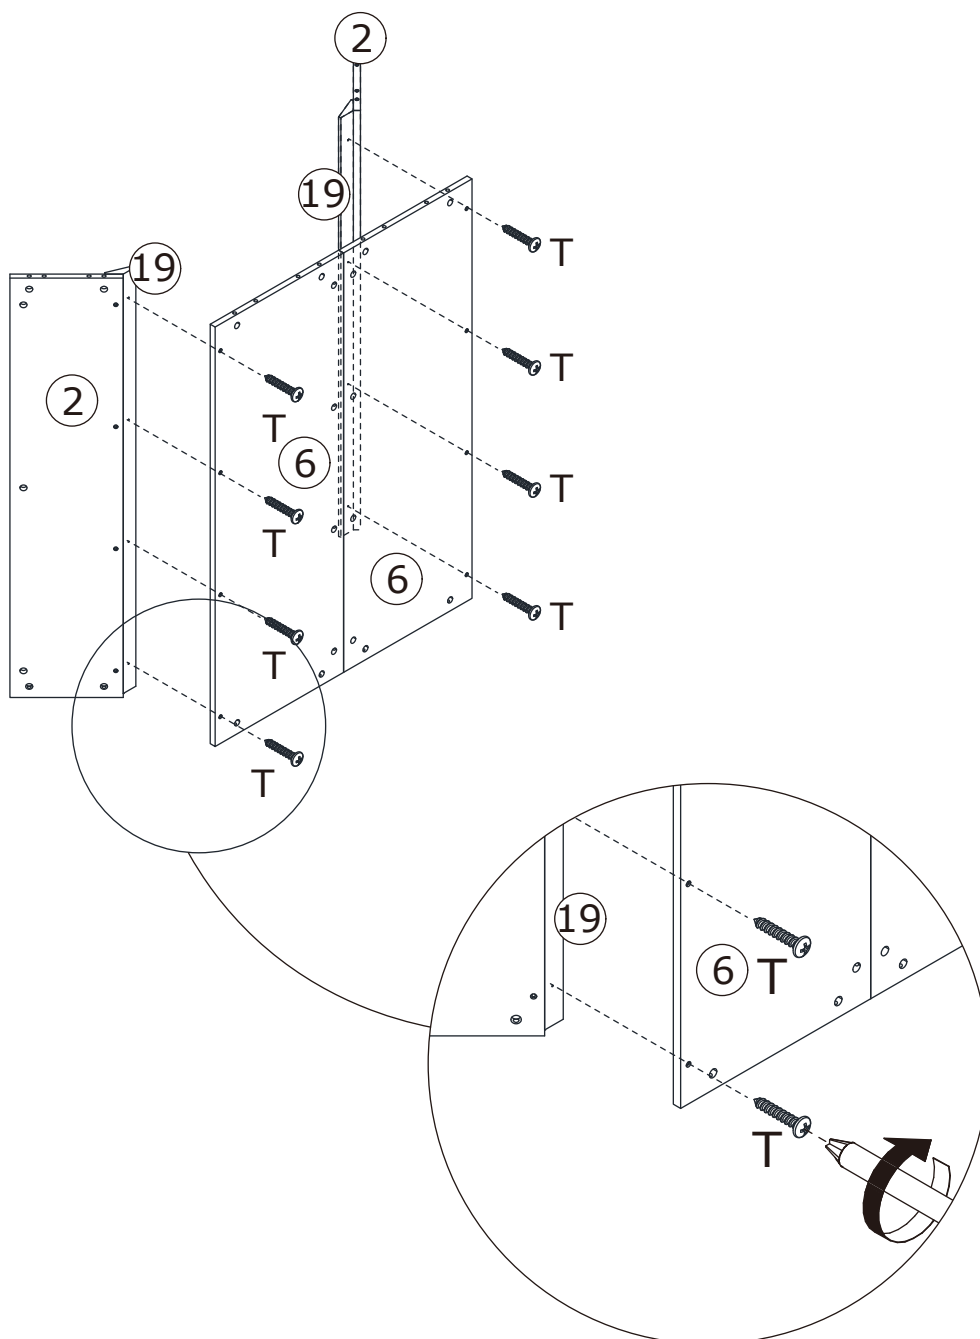

16

B x 6

 
 


Ø15 x 9.6 mm



C x 4



Ø7.8 x 30 mm

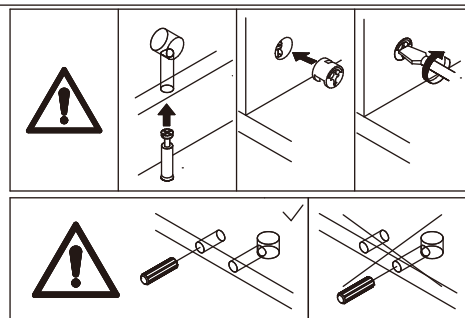

  Connect plate 2 to plate 12 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

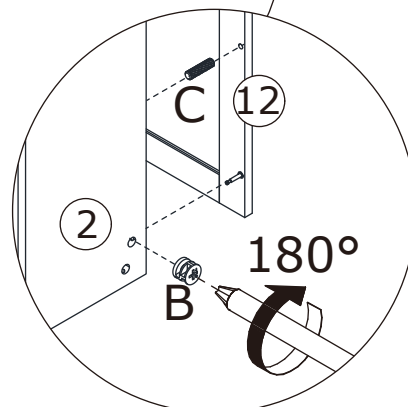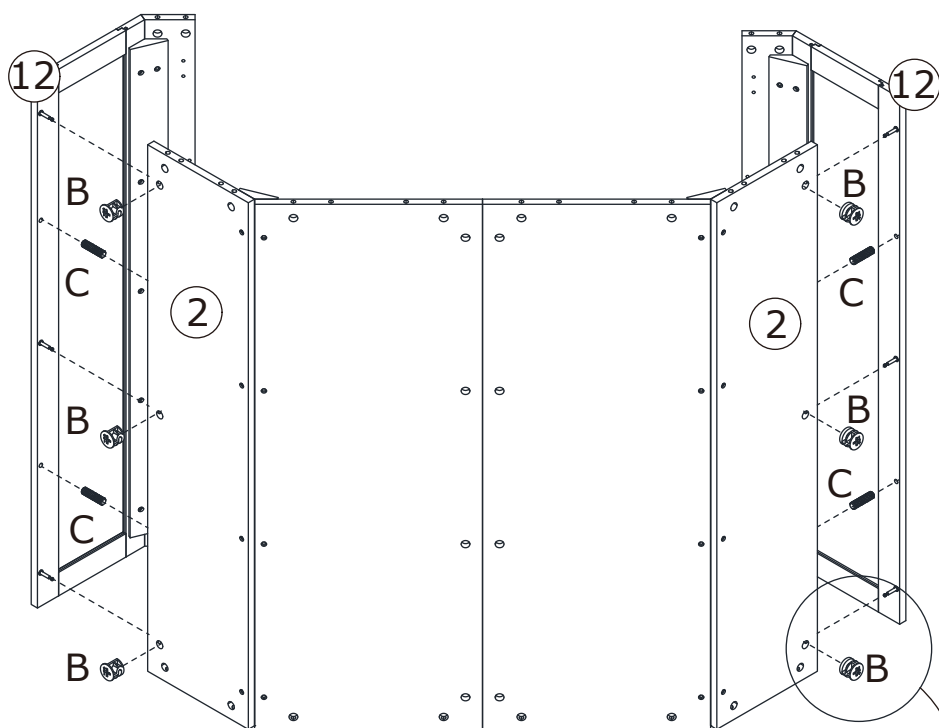

17

 
 
 
 
 
A x 12



M x 1



26 x 17 mm

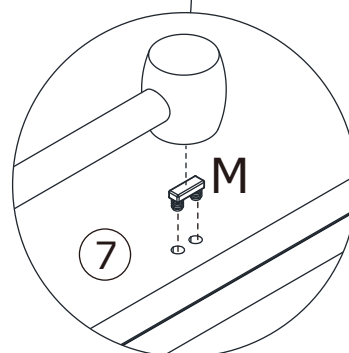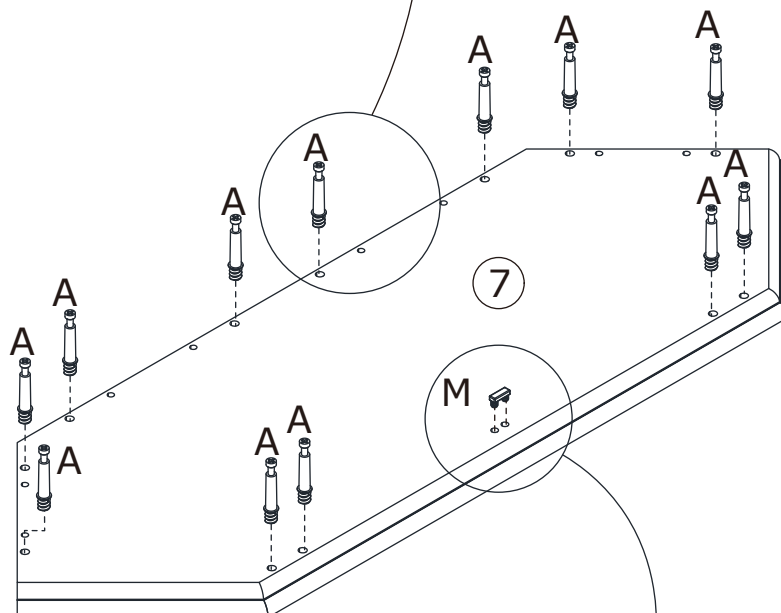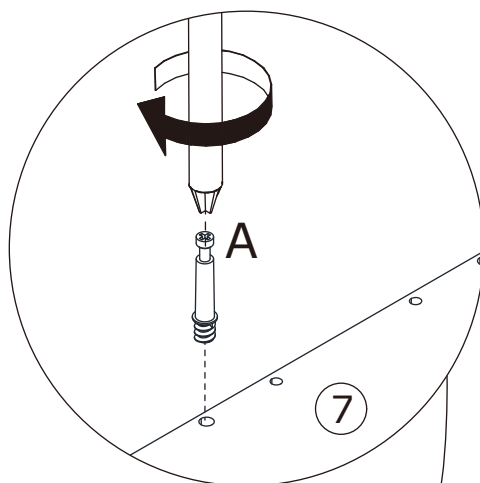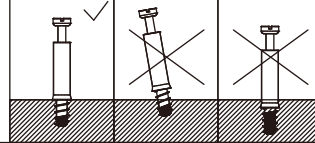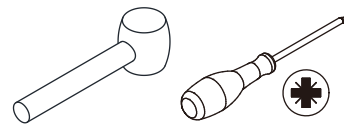

Screw eccentric rod (A) onto plate 7.
Hammer plug (M) into plate 7.

18

B x 12

 


Ø15 x 9.6 mm




C x 8



Ø7.8 x 30 mm



   Connect plate 7 to the assembly using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

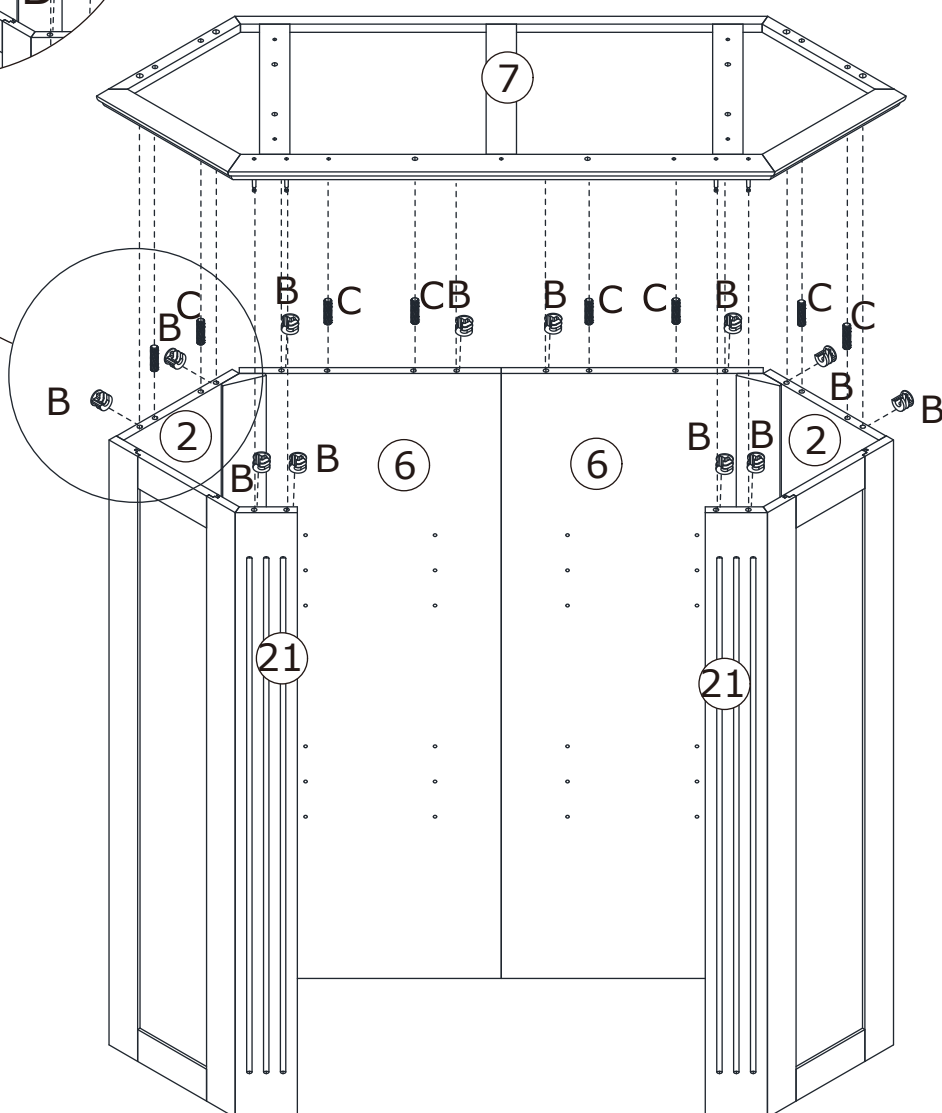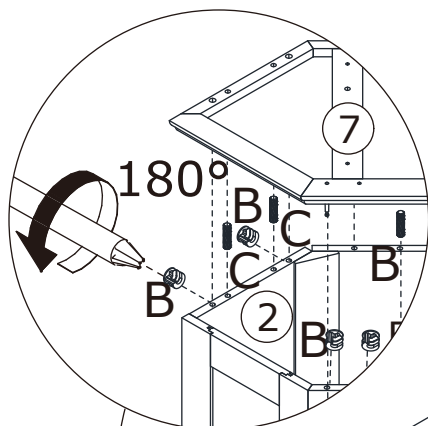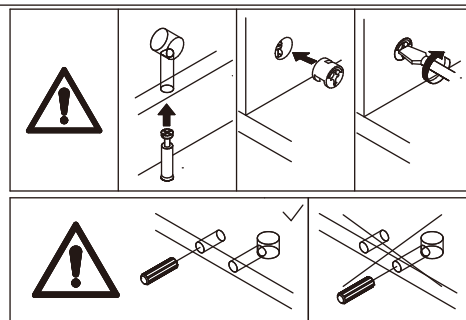

19

 
 
 
 
 
A x 12



M x 1



26 x 17 mm

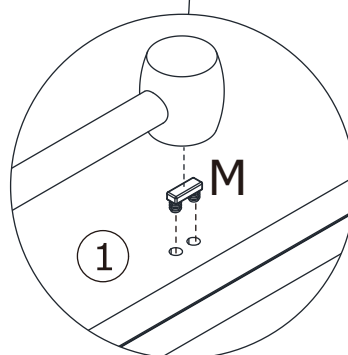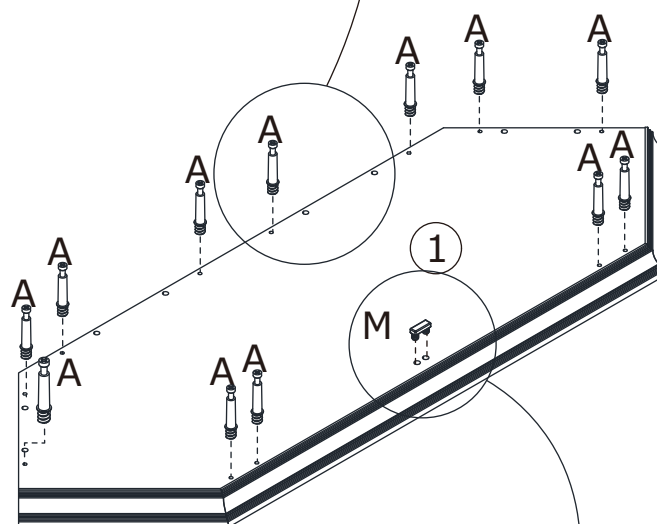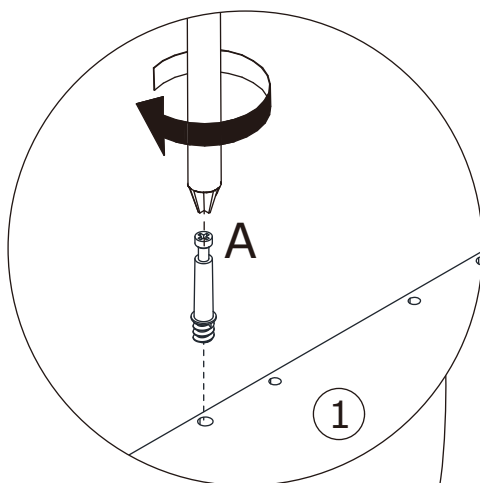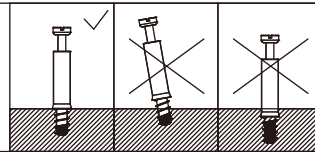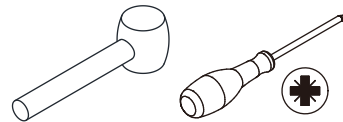

Screw eccentric rod (A) onto plate 1.
Hammer plug (M) into plate 1.

 
20

B x 12







Ø15 x 9.6 mm

C x 8






Ø7.8 x 30 mm

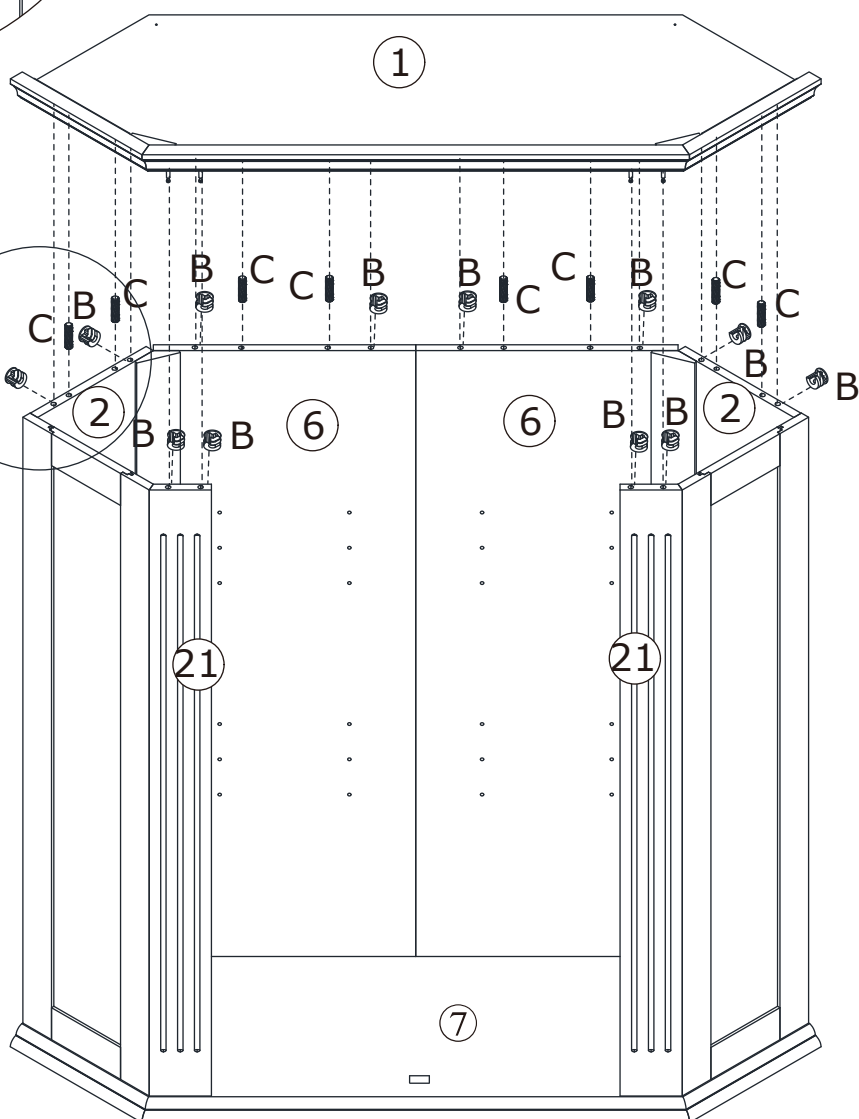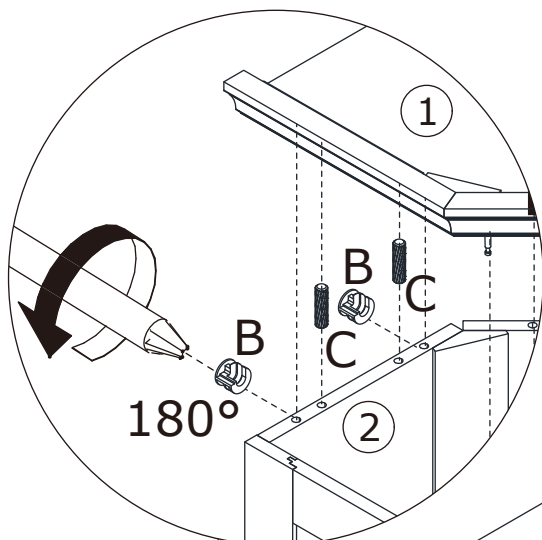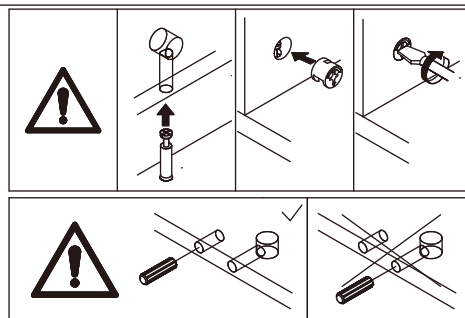    


Connect plate 1 to the assembly using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

   21

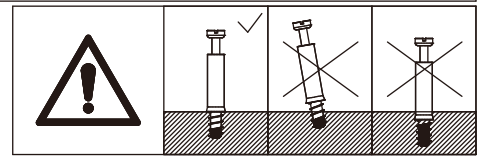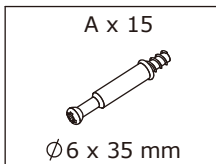

Screw eccentric rod (A) onto plate 7.

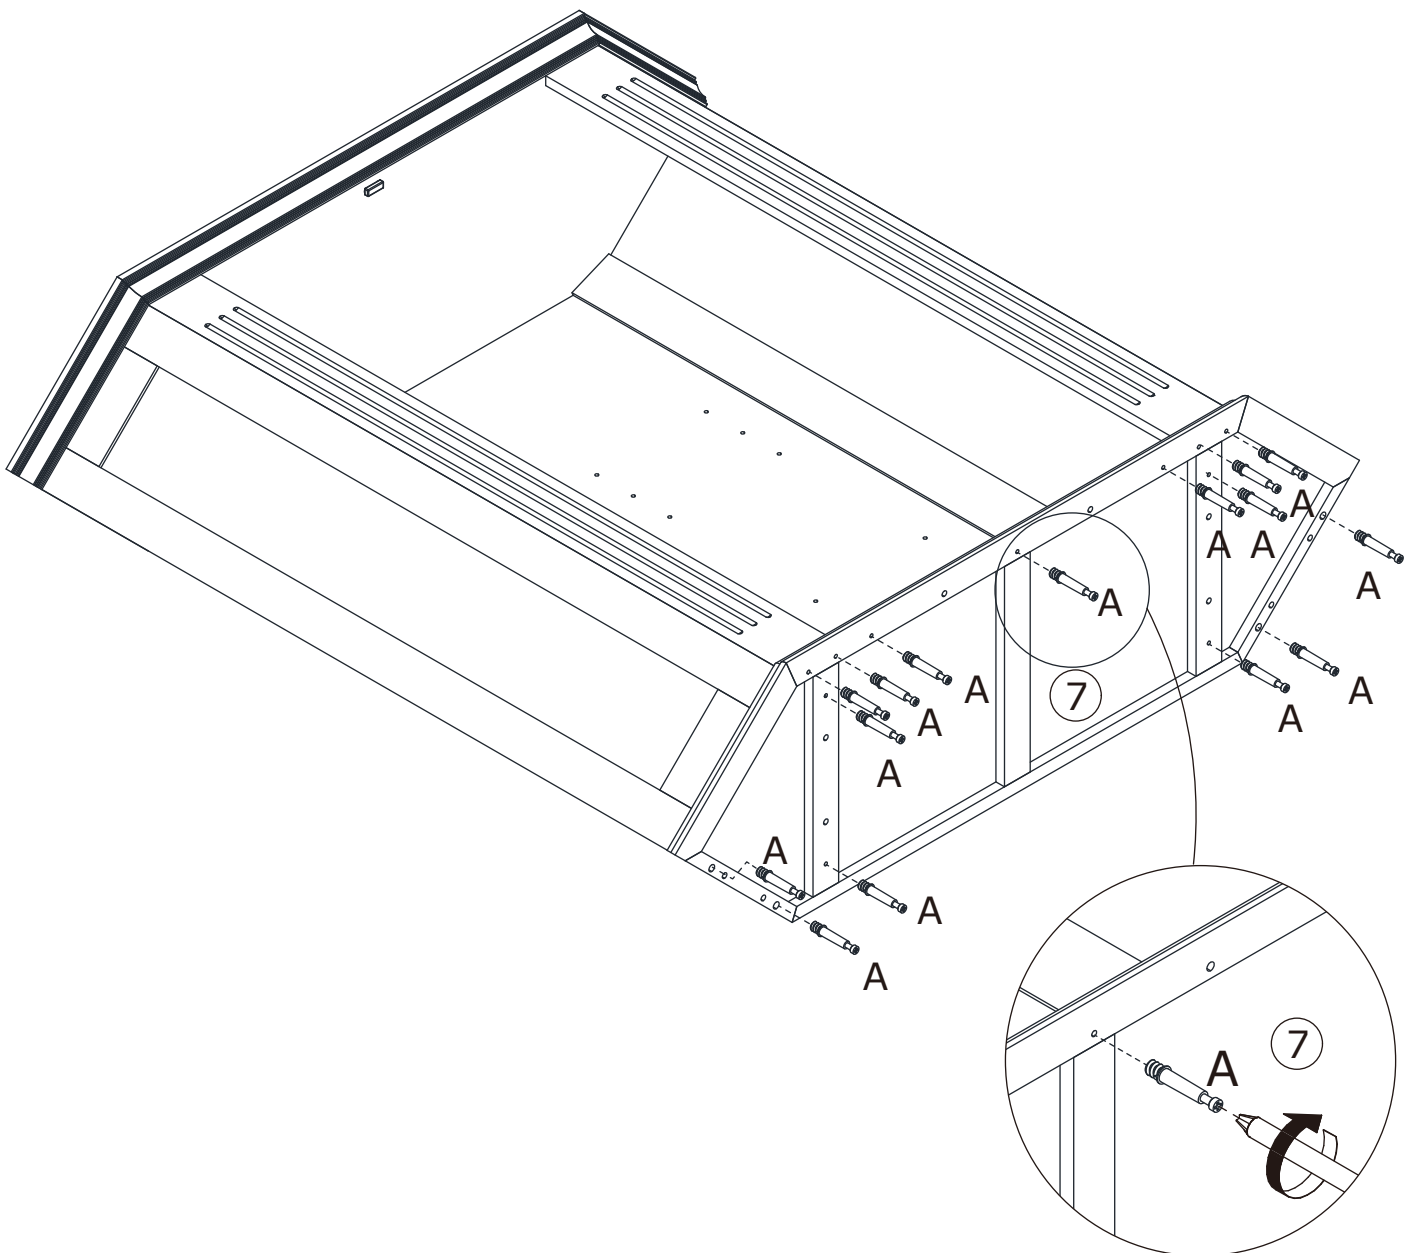 


22

B x 15




Ø15 x 9.6 mm

 C x 10





Ø7.8 x 30 mm

 V x 1




M4

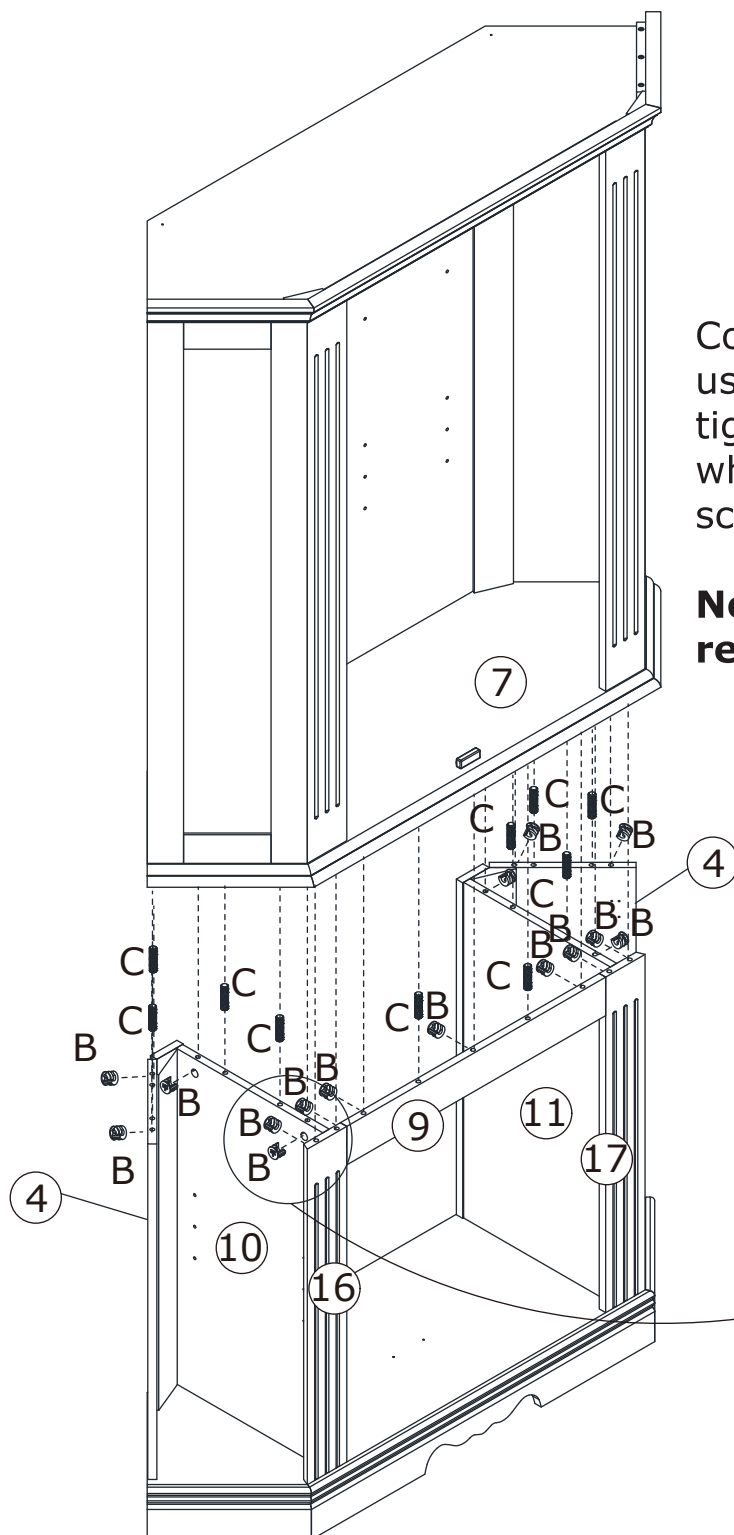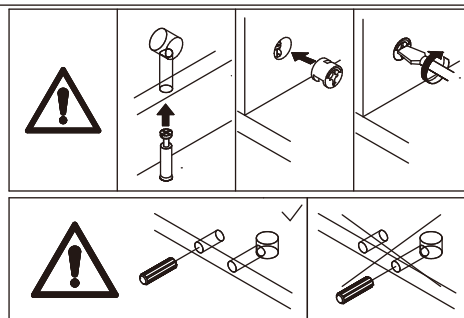  


Connect the two assembly units using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise with a screwdriver (V).

 Note: Two adults are required for installation.

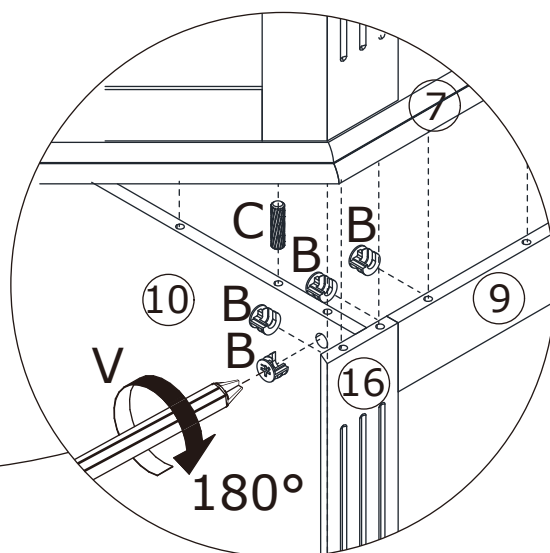


23

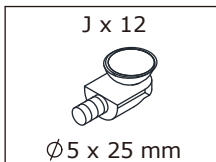 

Install part (J) onto plates 6 and 21, then place plate 15 into the cabinet at a slight angle.

Install part (J) on the other side, and finally level plate 15.

 Note: Two adults are required for installation.

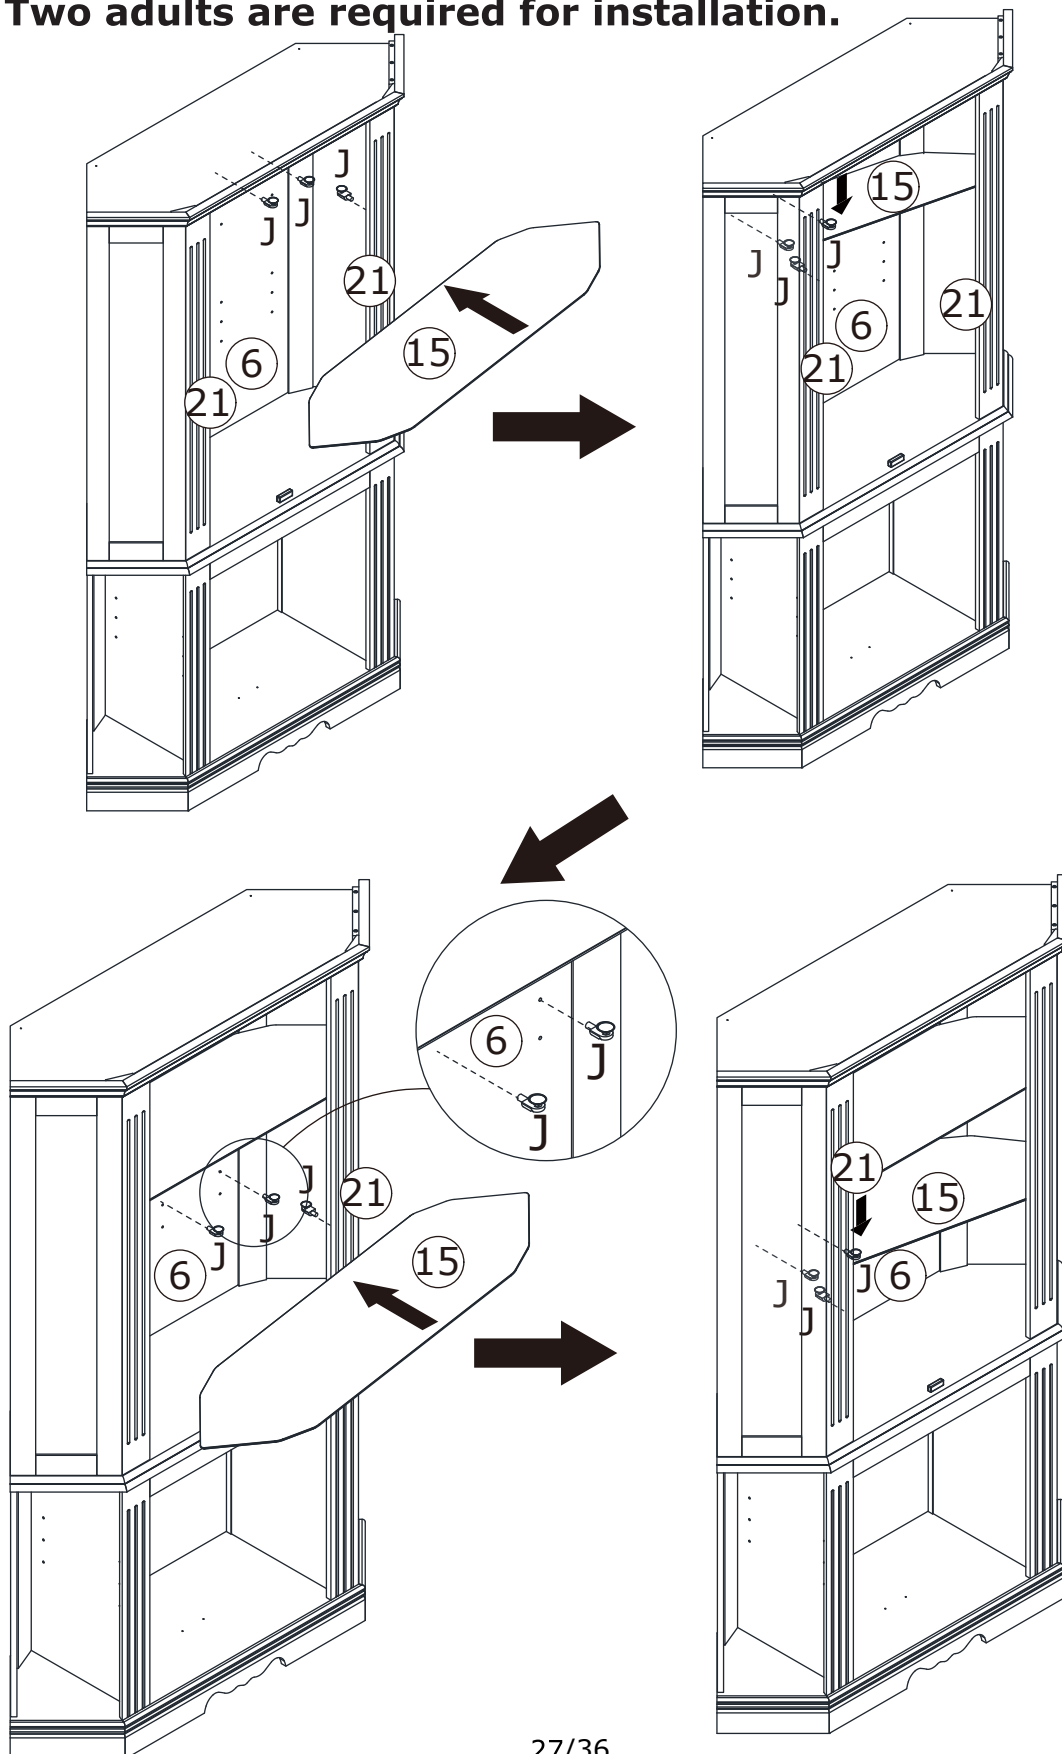

24

H x 4



Ø 32 x 31 mm

I x 4



Ø 4 x 22 mm

N x 4



Ø 26 mm

O x 6

 
 
 
 
 
 
 
 
 
 


Ø 35 mm

P x 20







Ø 4 x 14 mm

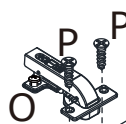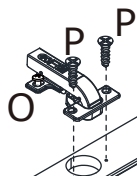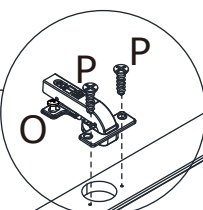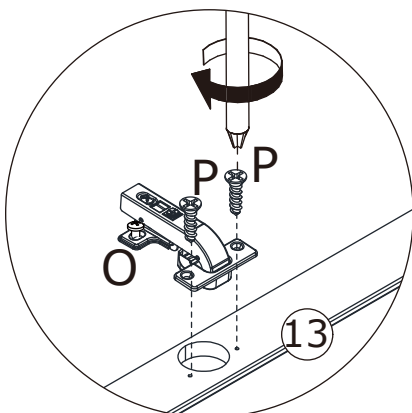

13



    x2

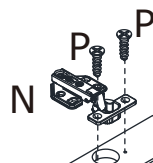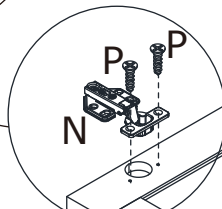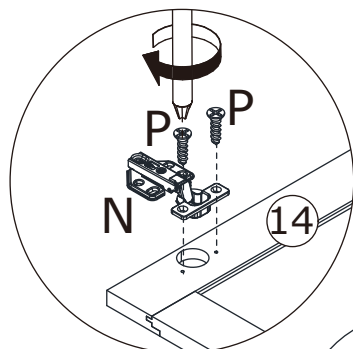
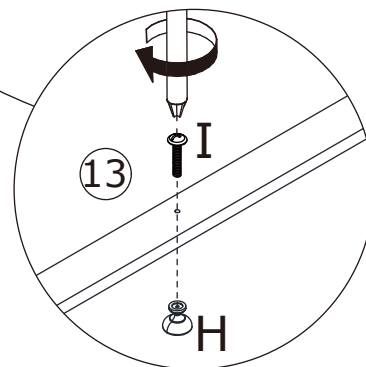


14




x2

  Secure **hinge (O)** to plate 13 using screw (P).
Secure **hinge (N)** to plate 14 using screw (P).
Secure knob (H) using screw (I).

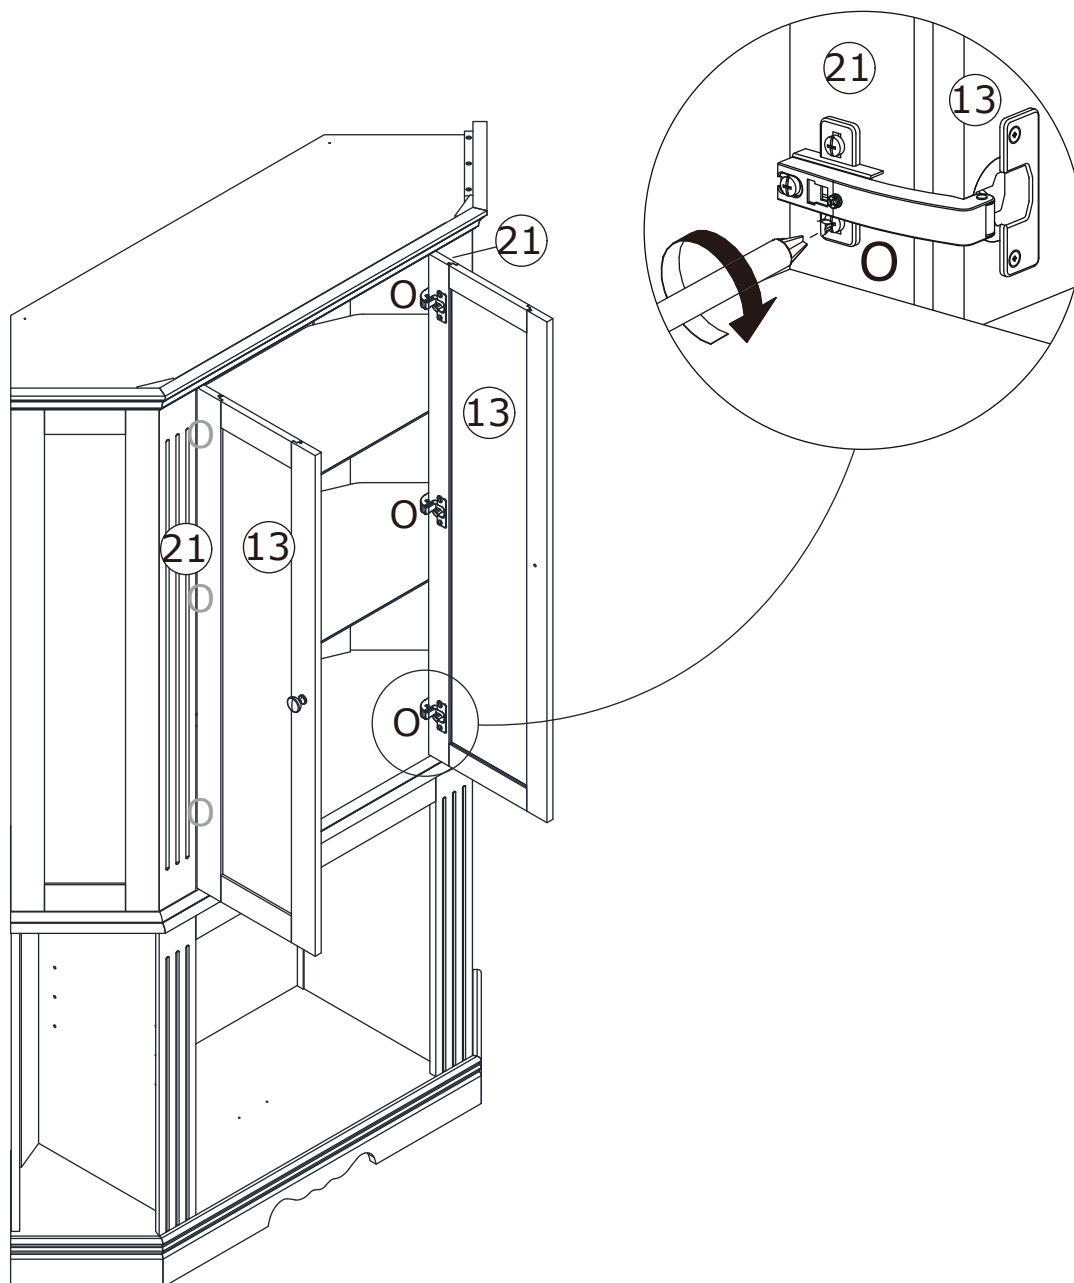


Connect plate 13 to plate 21 by securing hinges.

 26

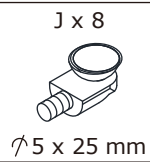

 Install part (J) onto plates 4, 10, and 11, place plate 20 on.

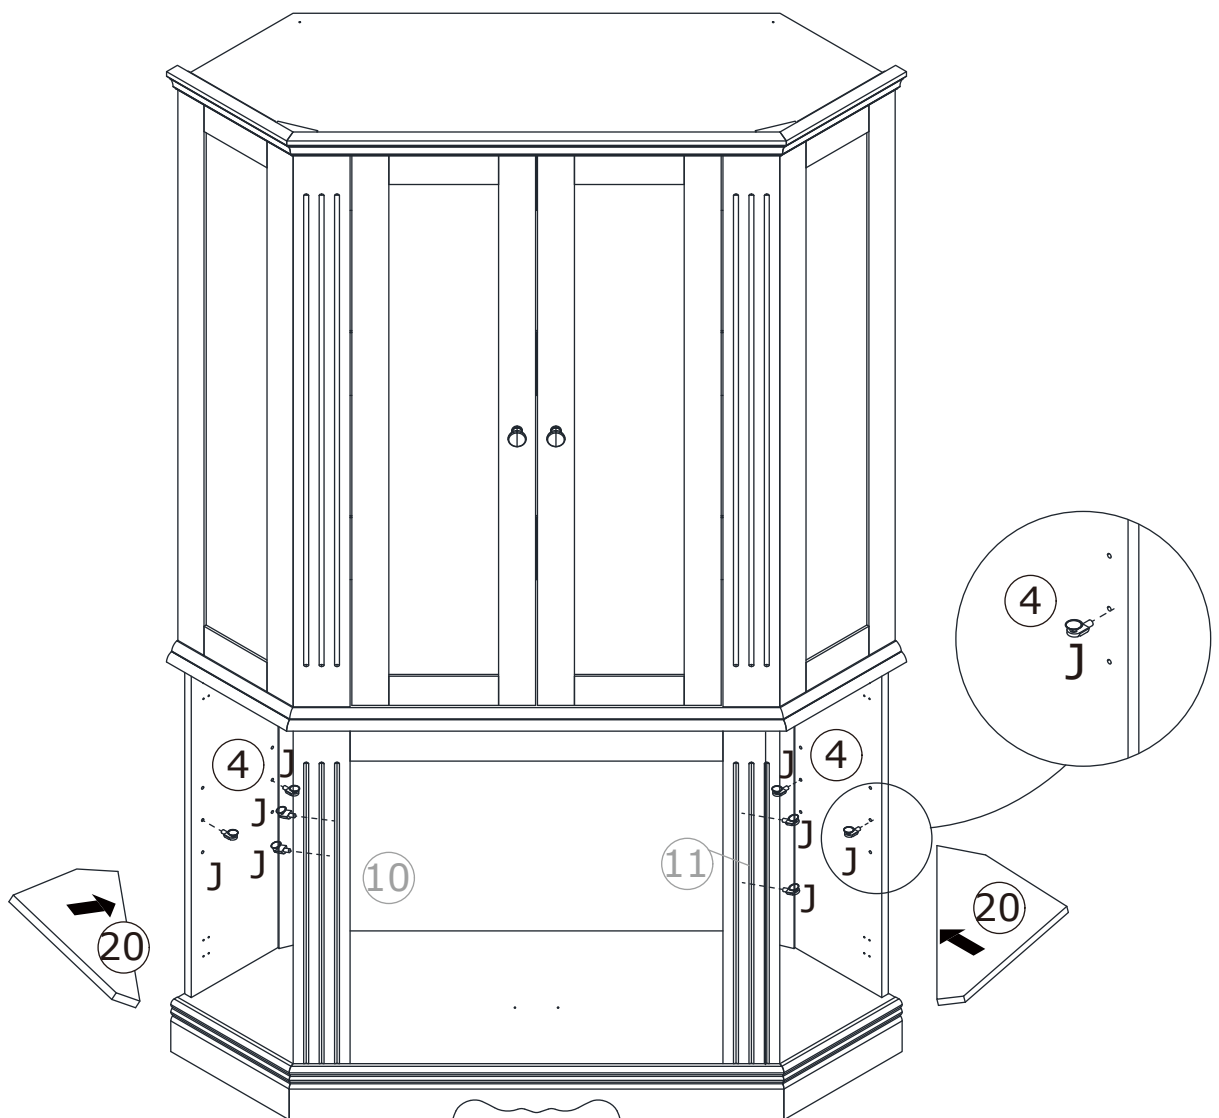


27


P x 16



 Ø4 x 14 mm



 Connect plate 14 to plate 4 by securing hinges using screw (P).

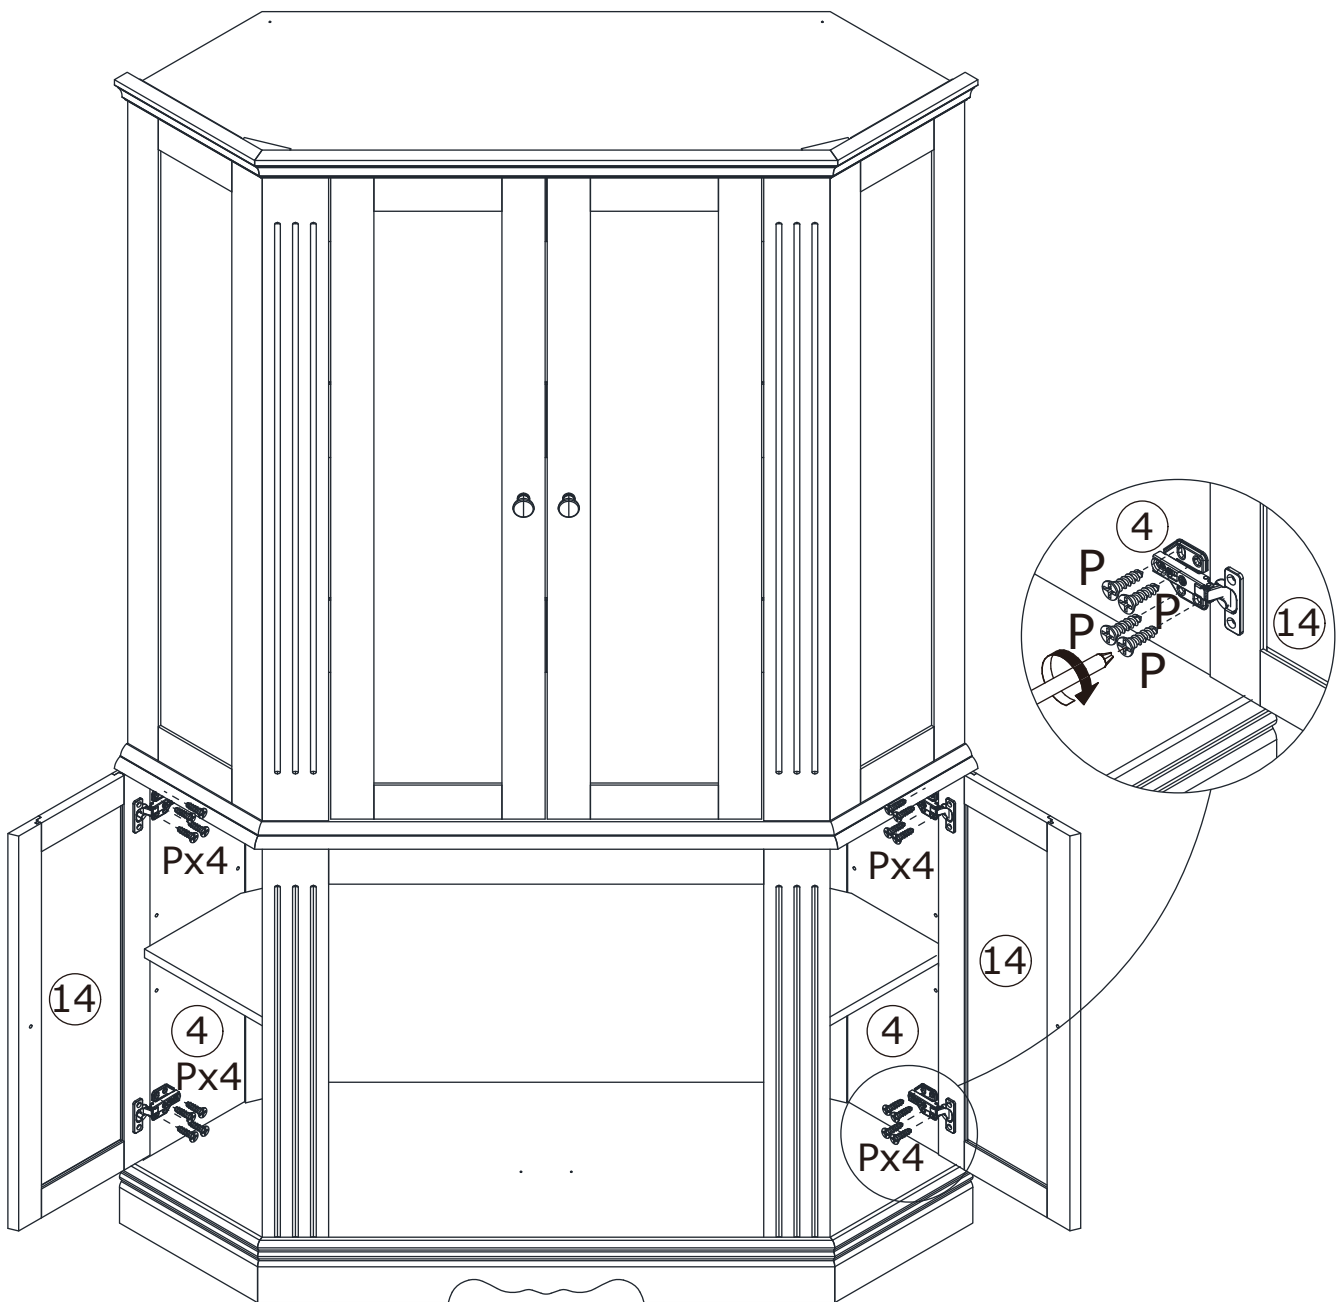


28

G x 4




Ø4 x 8 mm

 K x 1




100 x 29 mm

 
L x 1



200 x 25 mm

 

 Secure bracket (K) to the back of the fireplace using screw (G).
Secure bracket (L) to the top of the fireplace using screw (G).

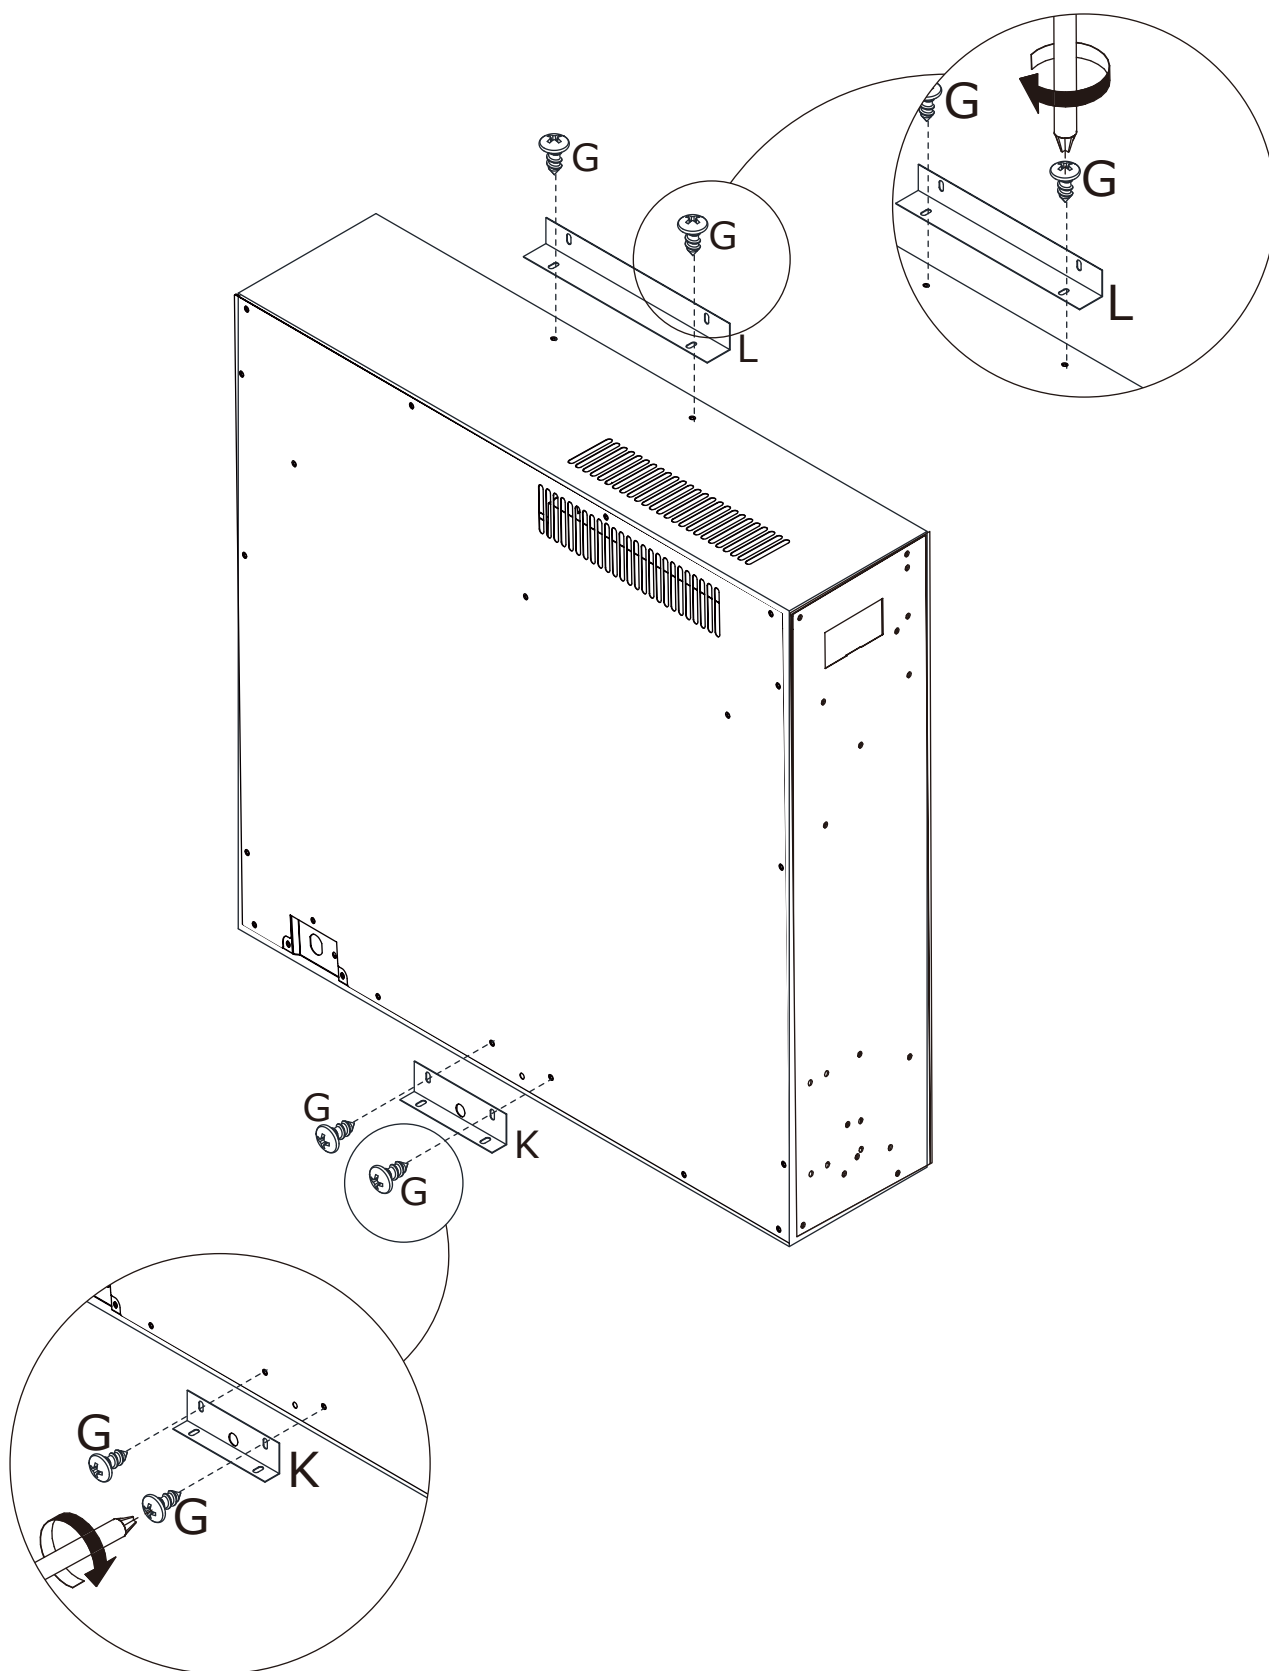


29


G x 4



 Ø4 x 8 mm




 Place the fireplace as shown, and secure it to the unit using screw (G).

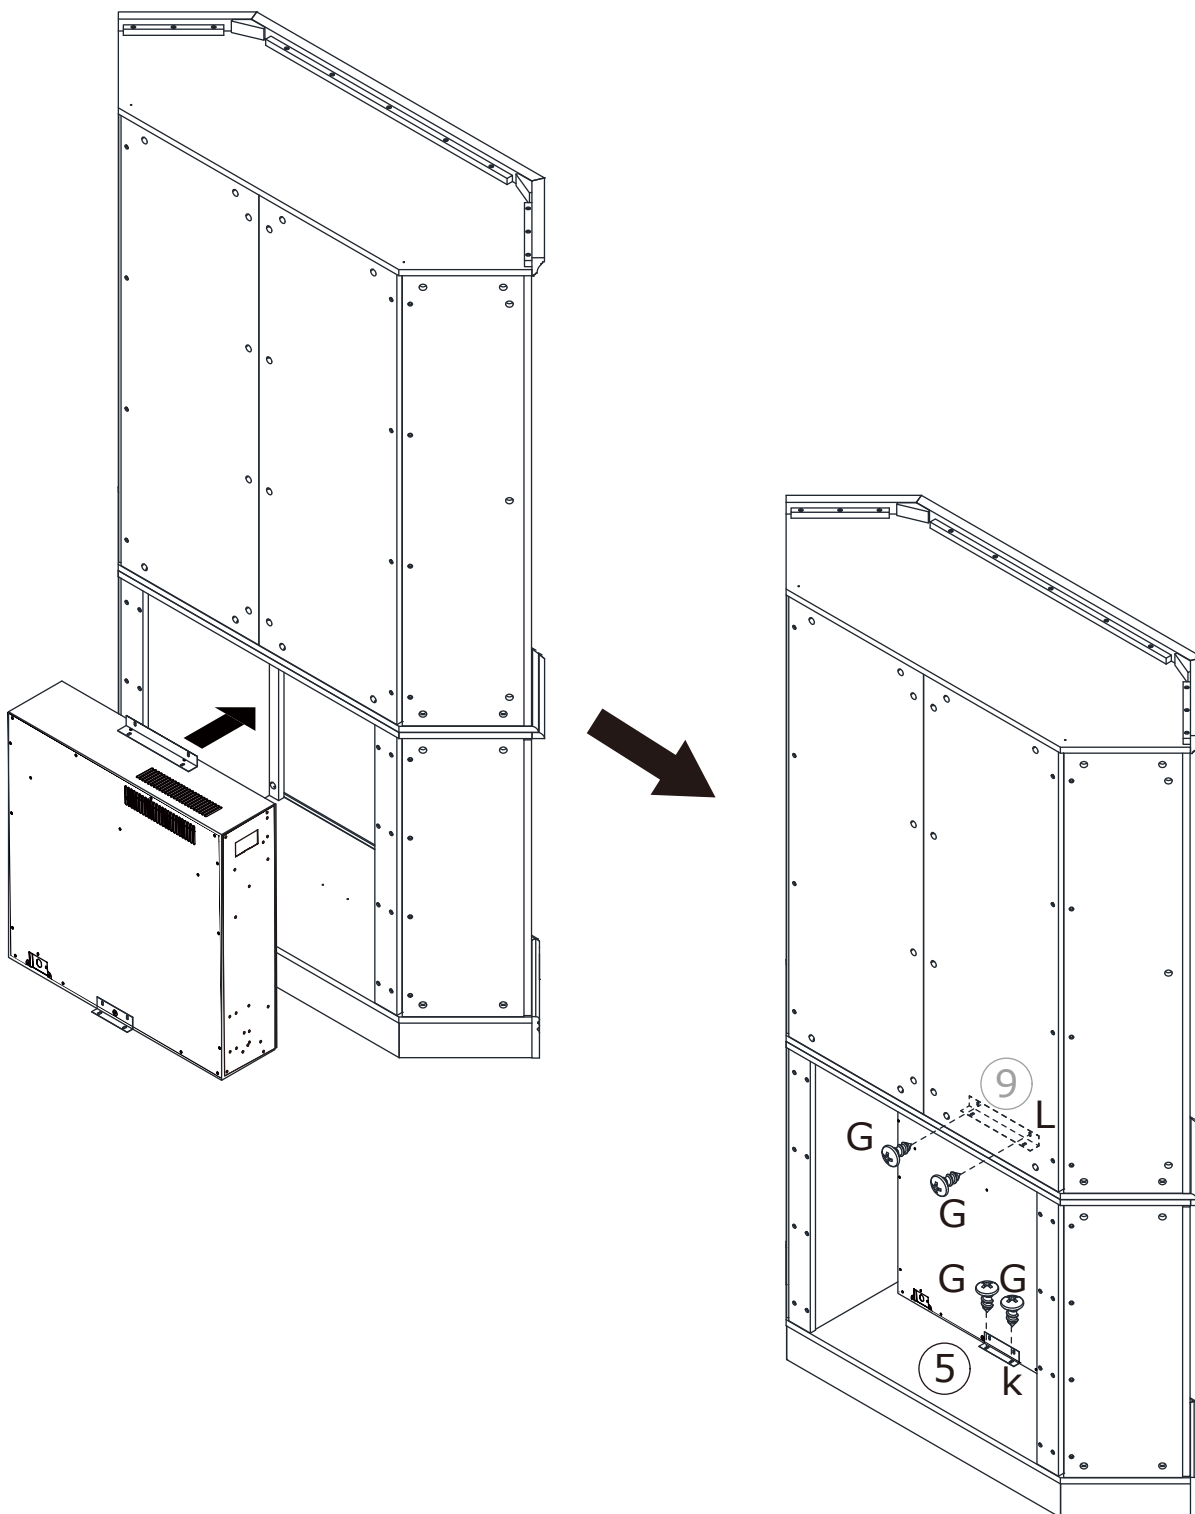


30


F x 2  Ø4 x 35 mm	Q x 2  66 x 15 mm
R x 2  Ø6 x 30 mm	S x 2  Ø4 x 12 mm

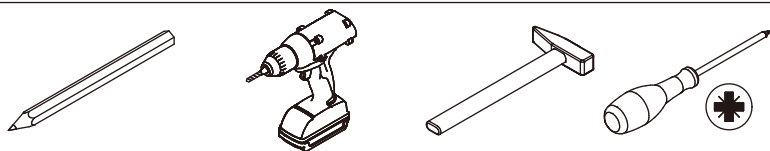 

 
1.

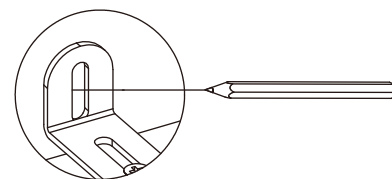

 
2.

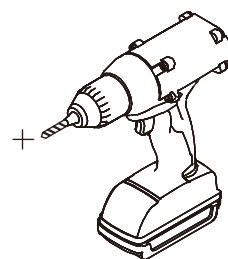

 
3.

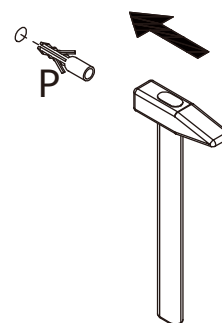

 4.

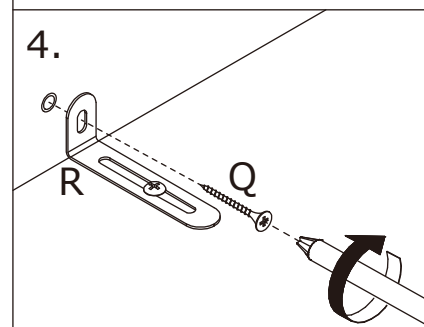

Install the anti-tip device as shown.

 


If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.


<https://youtu.be/n0Lb36SoODM>




 
①

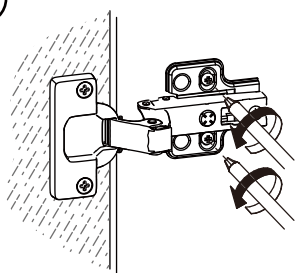


②

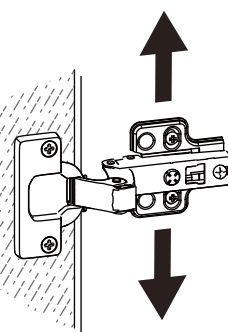 


③

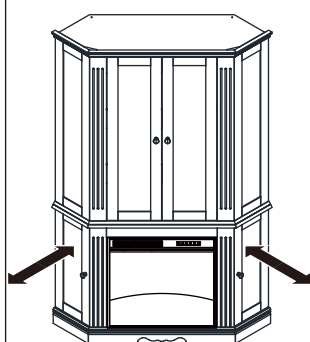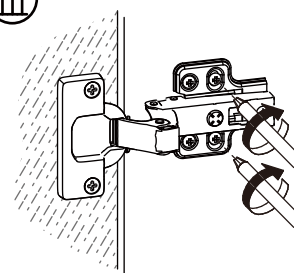  


①

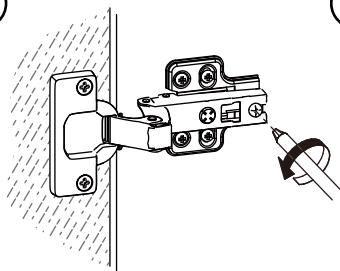 


②

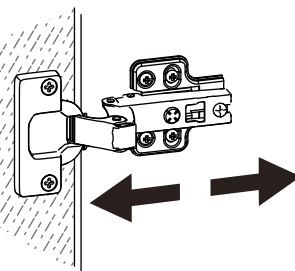 


③

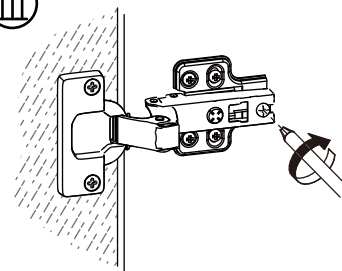 


①

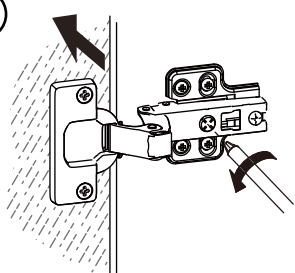 


②

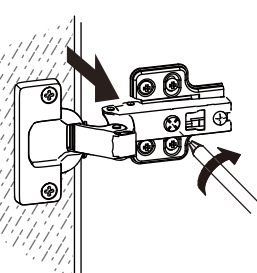 


 

 
If there is misalignment after installing,
adjust the hinge screws to the best condition

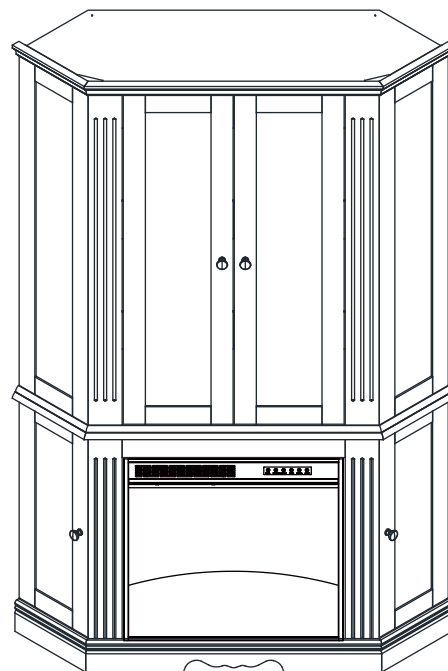



I

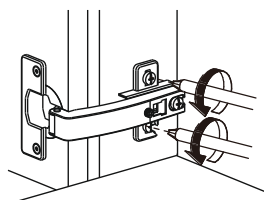 


II

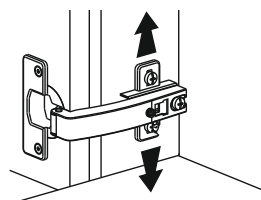 


III

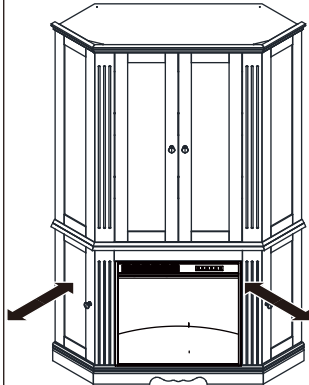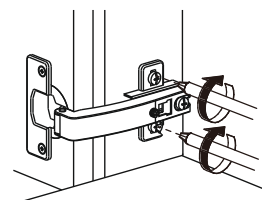  


I

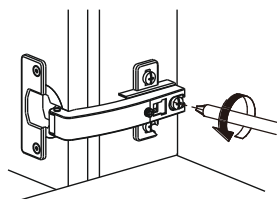 


II

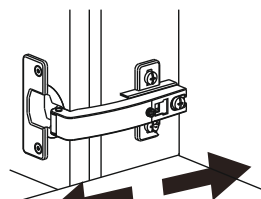 


III

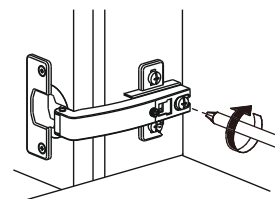 

I

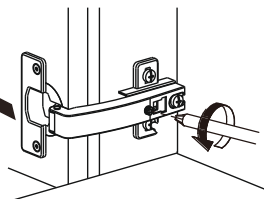 

II

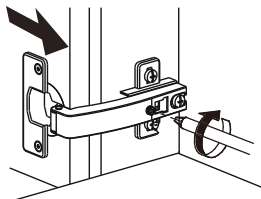 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068