

# Assembly Instruction

 






## CHAIR




Back Rest is stored at the top of chair, please take out it for assembly .

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


### Component list

 No	Drawing	Qty	Description
<b>A</b>		<b>1</b>	<b>SEAT</b>
<b>B</b>		<b>1</b>	<b>BACK CUSHION</b>
<b>C</b>		<b>4</b>	<b>METAL LEG</b>
<b>D</b>		<b>8</b>	<b>BOLT (5/16" x 25mm)</b>
<b>E</b>		<b>8</b>	<b>SPRING WASHER (5/16")</b>
<b>F</b>		<b>8</b>	<b>FLAT WASHER (5/16"*19*1.5mm)</b>
<b>G</b>		<b>1</b>	<b>ALLEN KEY (M4*59mm)</b>


# Step #1

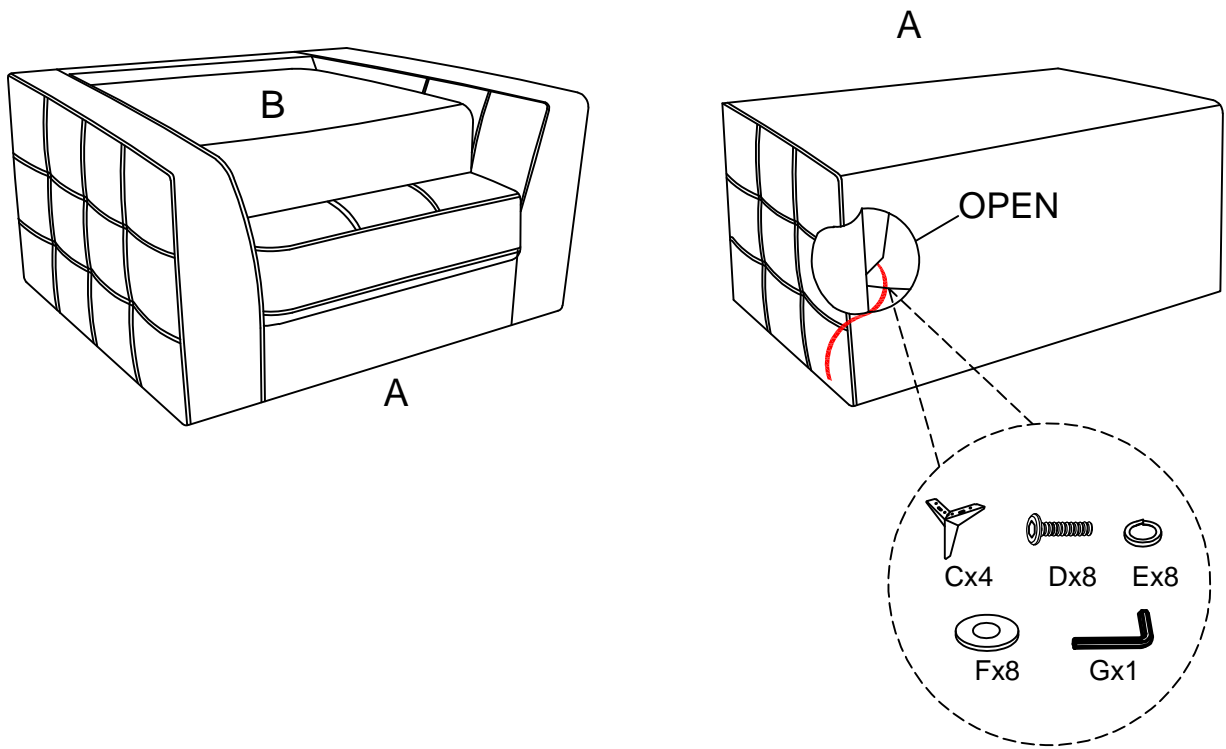

# Step #2

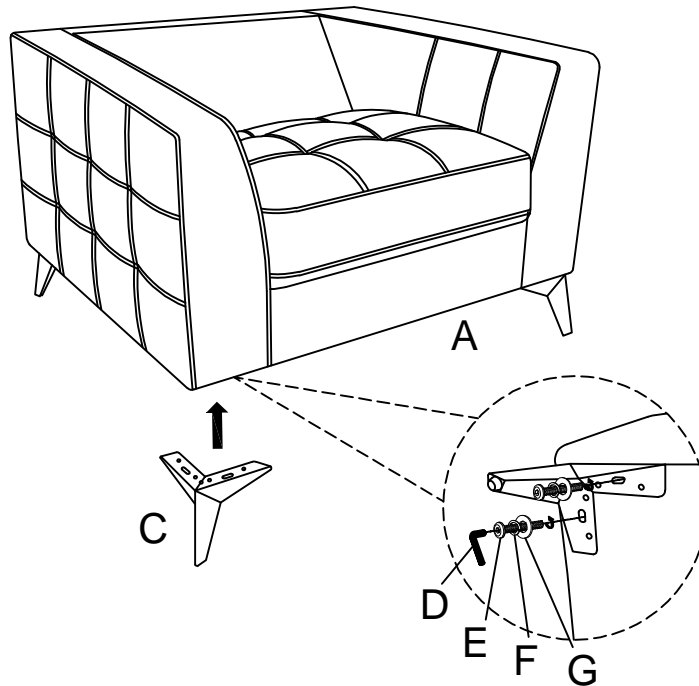

### Step #3

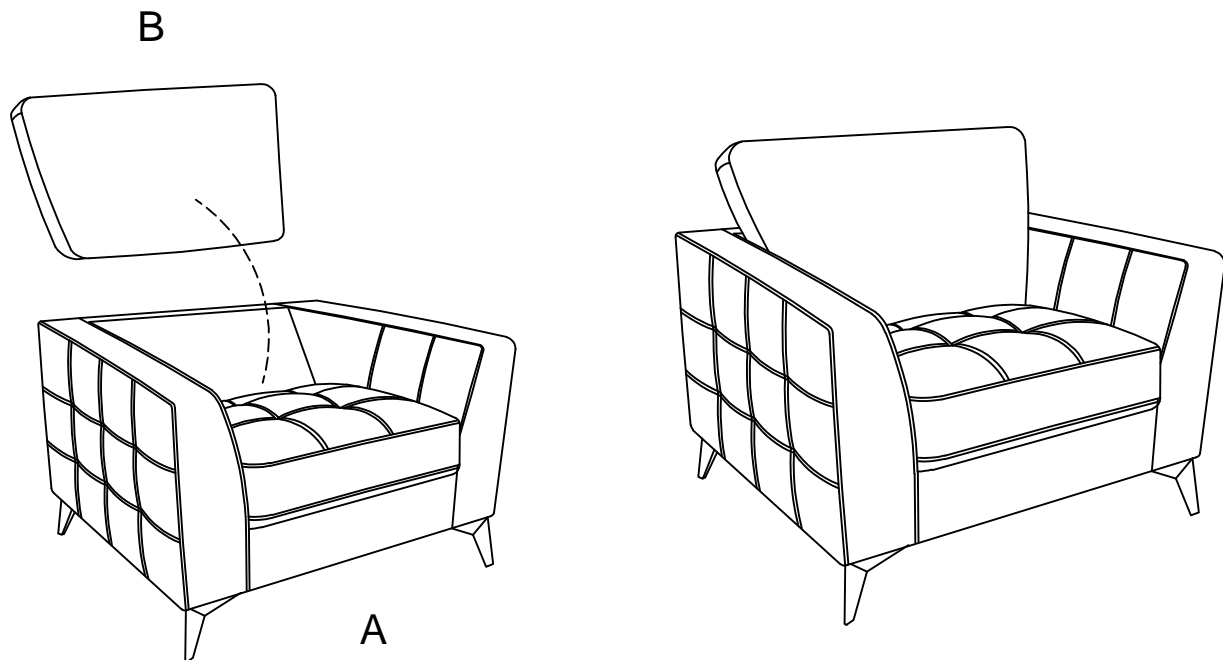

### Care Instruction for Polished Microfiber Furniture:

In order to maintain the original appearance of your Polished Microfiber Furniture,

please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Polished Microfiber.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

# Assembly Instruction

 







## LOVE SEAT




Back Rest is stored at the top of love seat, please take out it for assembly .

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


### Component list

 No	Drawing	Qty	Description
<b>A</b>		<b>1</b>	<b>SEAT</b>
<b>B</b>		<b>1</b>	<b>LSF BACK CUSHION</b>
<b>C</b>		<b>1</b>	<b>RSF BACK CUSHION</b>
<b>D</b>		<b>4</b>	<b>METAL LEG</b>
<b>E</b>		<b>8</b>	<b>BOLT (5/16" x 25mm)</b>
<b>F</b>		<b>8</b>	<b>SPRING WASHER (5/16")</b>
<b>G</b>		<b>8</b>	<b>FLAT WASHER (5/16"*19*1.5mm)</b>
<b>H</b>		<b>1</b>	<b>ALLEN KEY (M4*59mm)</b>


# Step #1

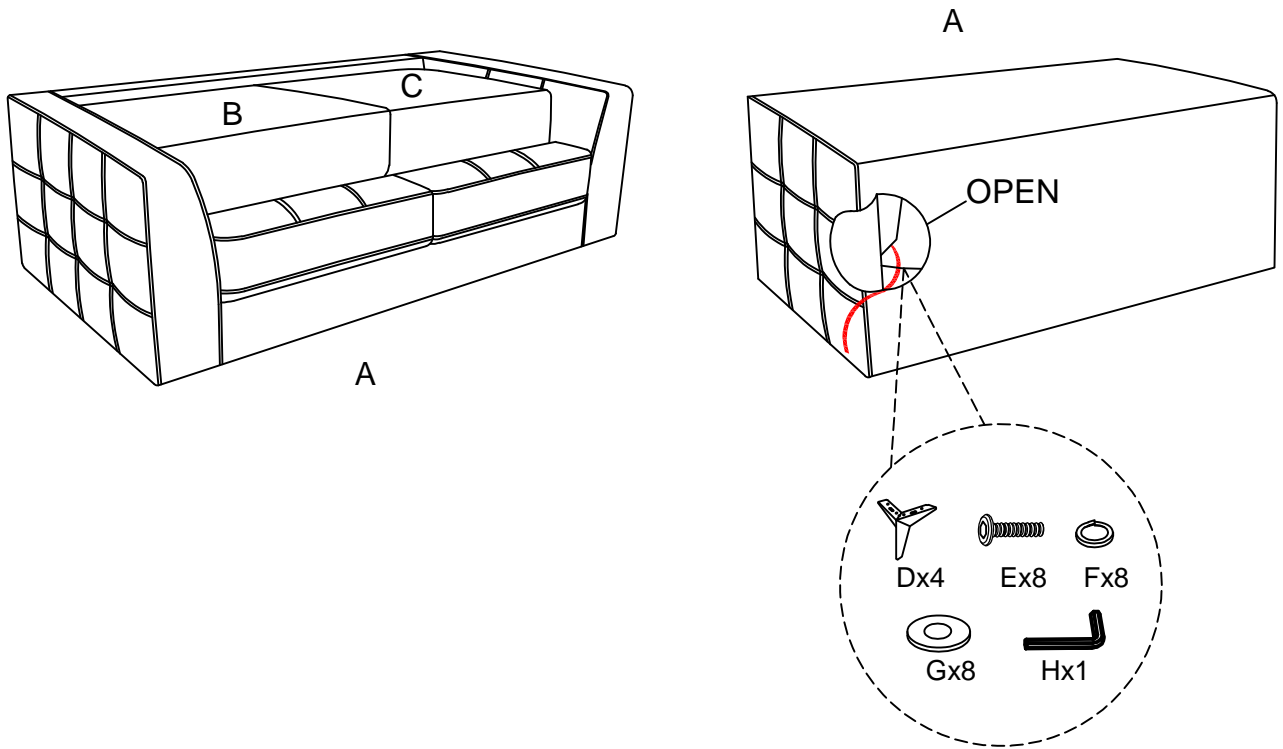

# Step #2

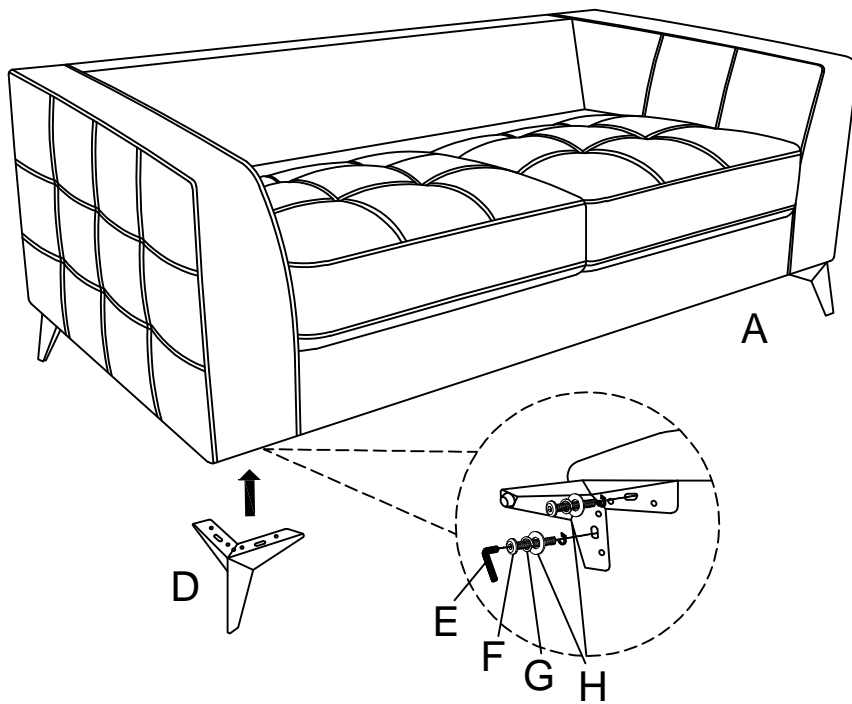

### Step #3

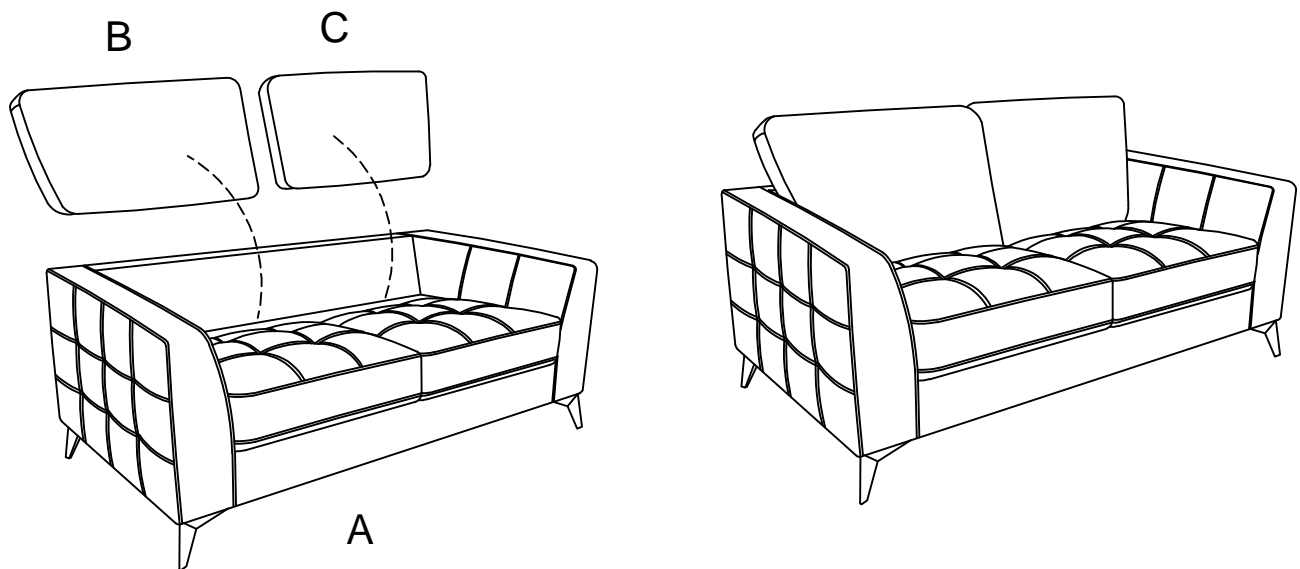

### Care Instruction for Polished Microfiber Furniture:

In order to maintain the original appearance of your Polished Microfiber Furniture,

please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Polished Microfiber.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

# Assembly Instruction

 







## SOFA




Back Rest is stored at the top of sofa, please take out it for assembly .

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


### Component list

No	Drawing	Qty	Description
<b>A</b>		<b>1</b>	<b>SEAT</b>
<b>B</b>		<b>1</b>	<b>LSF BACK CUSHION</b>
<b>C</b>		<b>1</b>	<b>RSF BACK CUSHION</b>
<b>D</b>		<b>4</b>	<b>METAL LEG</b>
<b>E</b>		<b>8</b>	<b>BOLT (5/16" x 25mm)</b>
<b>F</b>		<b>8</b>	<b>SPRING WASHER (5/16")</b>
<b>G</b>		<b>8</b>	<b>FLAT WASHER (5/16"*19*1.5mm)</b>
<b>H</b>		<b>1</b>	<b>ALLEN KEY (M4*59mm)</b>


# Step #1

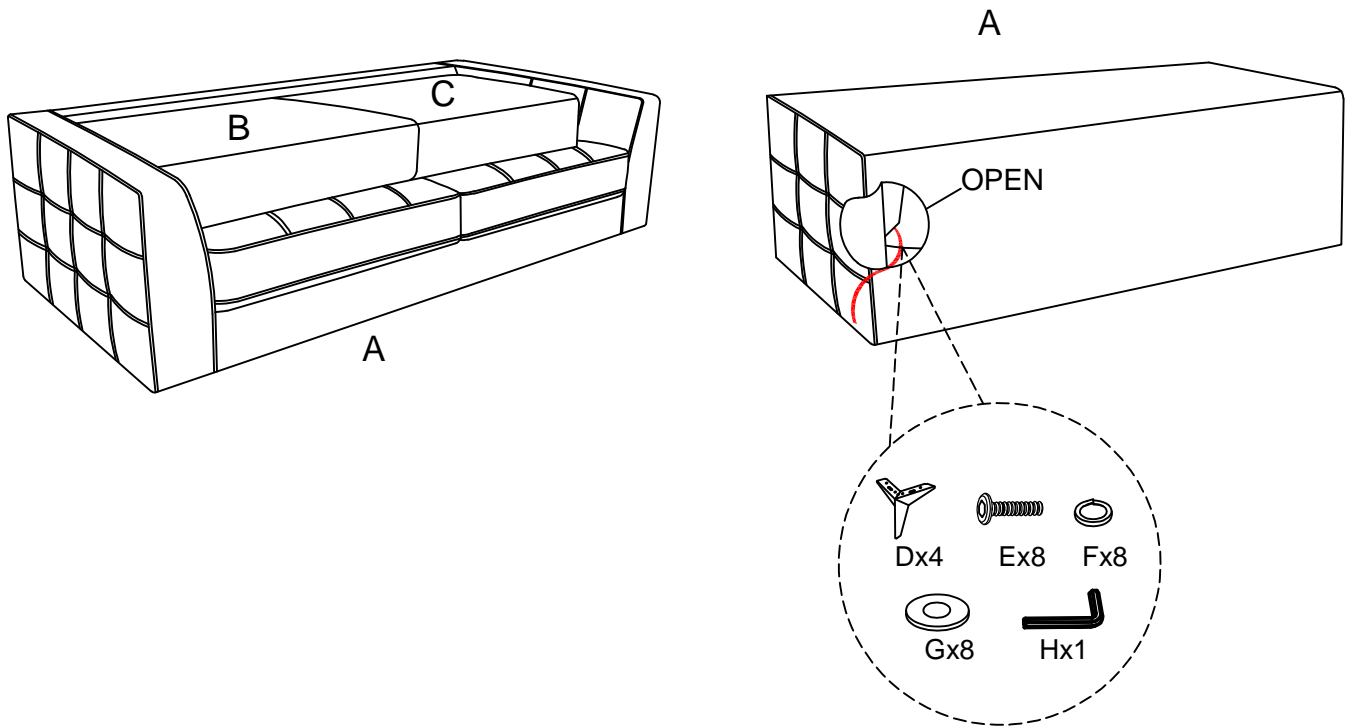

# Step #2

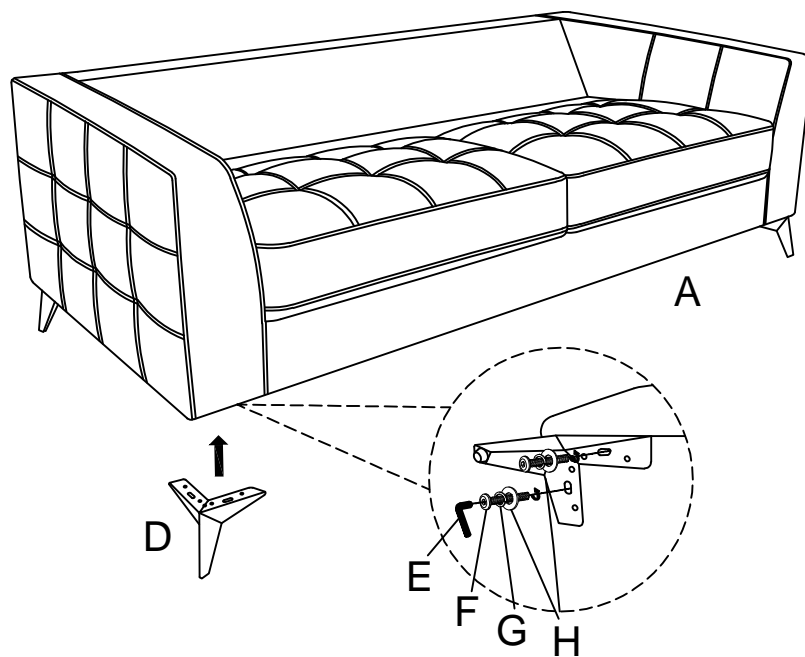

### Step #3

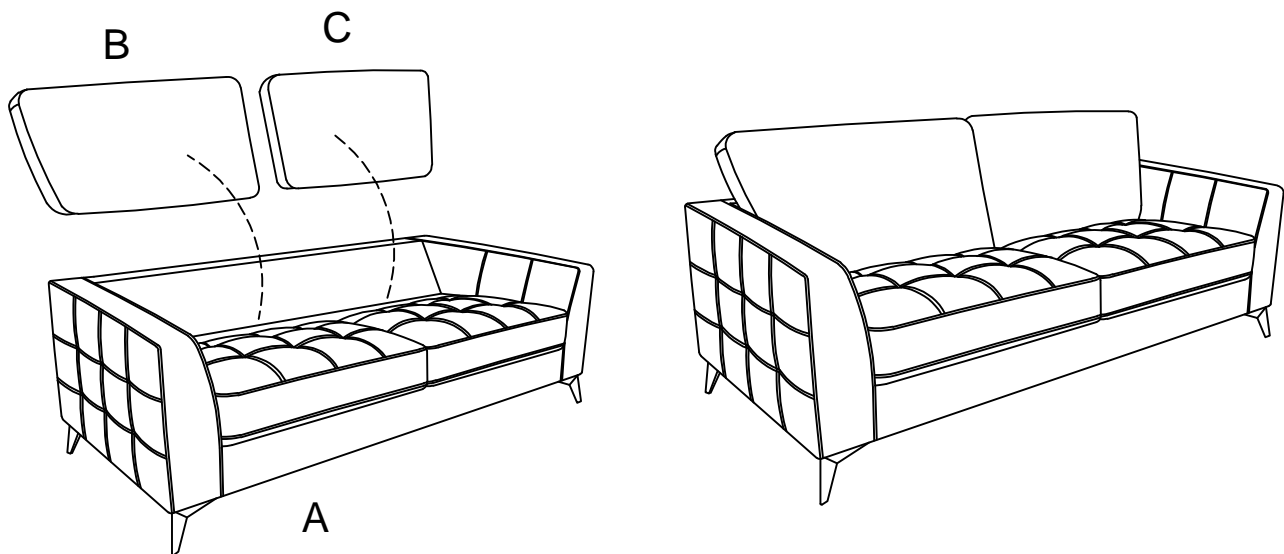

### Care Instruction for Polished Microfiber Furniture:

In order to maintain the original appearance of your Polished Microfiber Furniture,

please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Polished Microfiber.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.