 


 
 
 
 
 





 

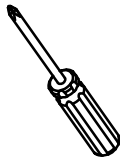 
Assembly Guide

JP-P1006



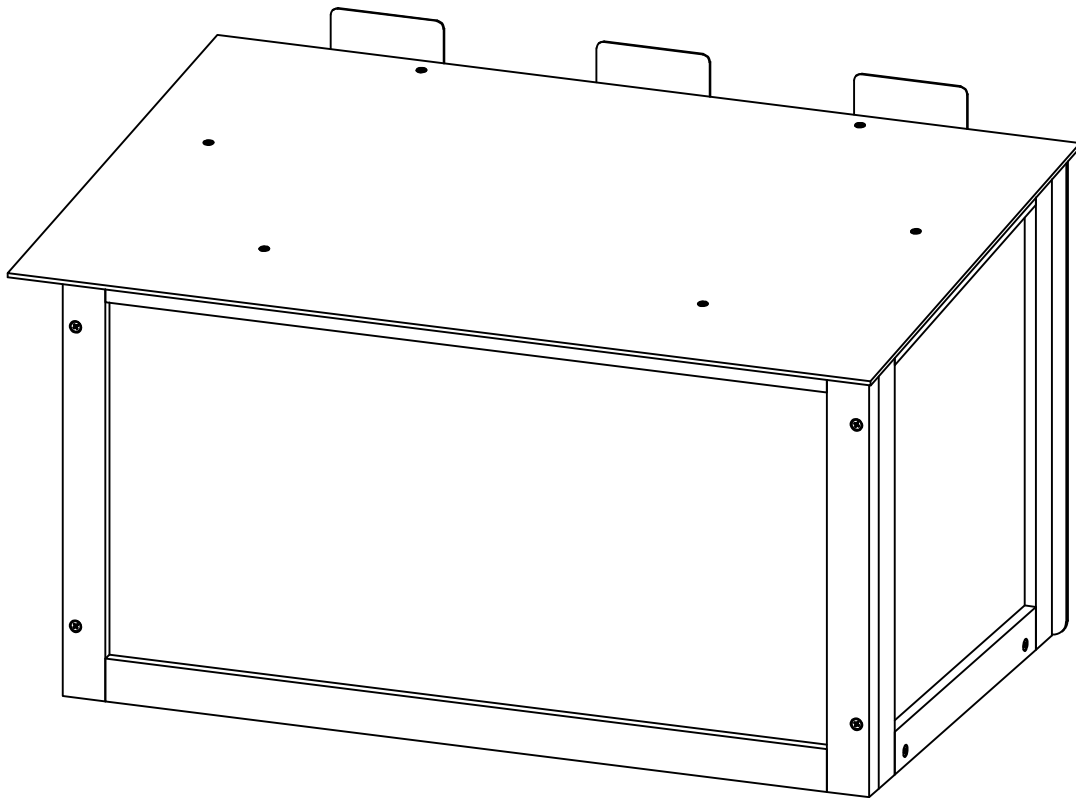


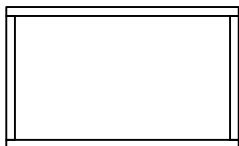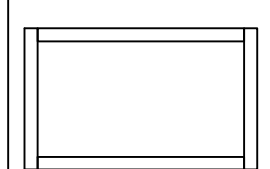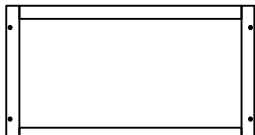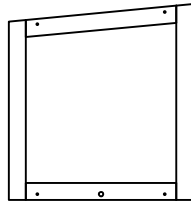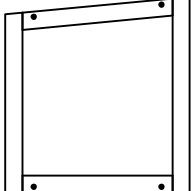READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE


ASSEMBLY & INSTRUCTION MANUAL

<p>Ax1</p> 	<p>Bx1</p> 	<p>Cx1</p> 			
<p>Dx1</p> 	<p>Ex1</p> 	<p>Fx2</p> 	<p>Gx3</p>  <p>80*50mm</p>		
<p>①x6+1</p>  <p>M3*16mm</p>	<p>②x12+1</p>  <p>M3.5*35mm</p>	<p>③x4</p>  <p>M6*15mm</p>	<p>④x4</p> 	<p>⑤x4</p>  <p>wood stick ø8*20mm</p>	<p>⑥x1</p> 

   Ax1
Dx1
Ex1
⑤x4

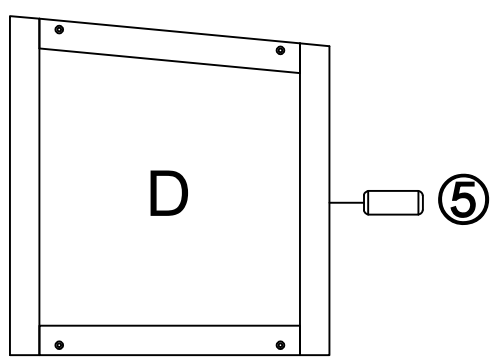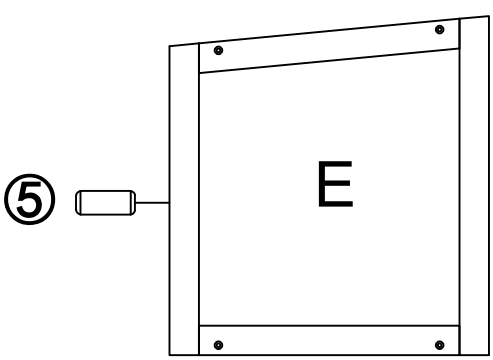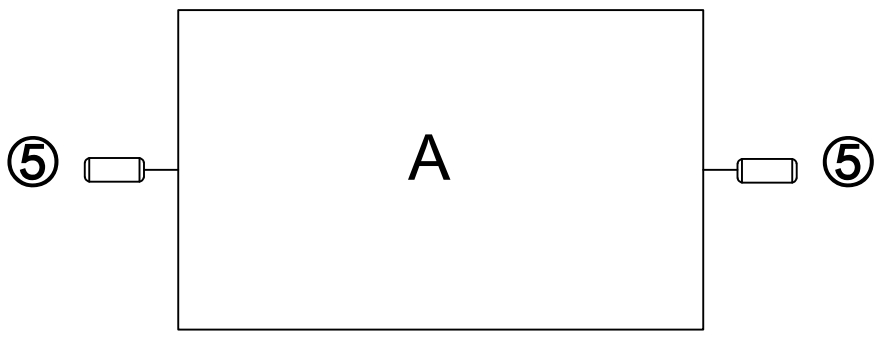


②x4

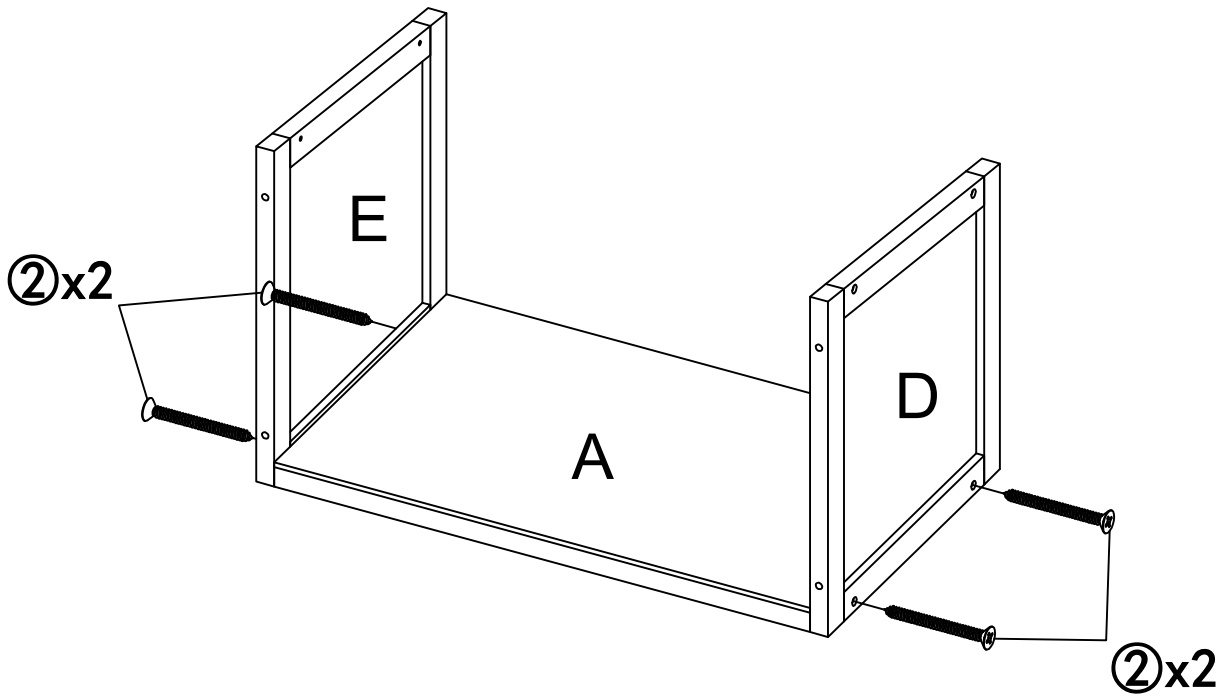 


Cx1

 ②x4

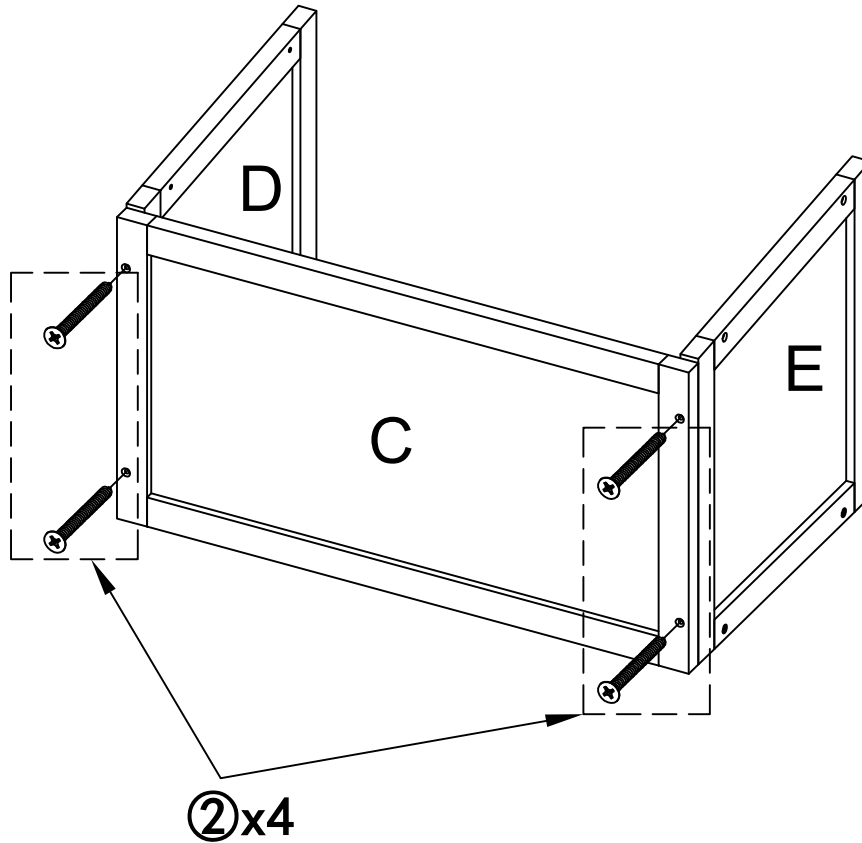

Bx1

 
②x4

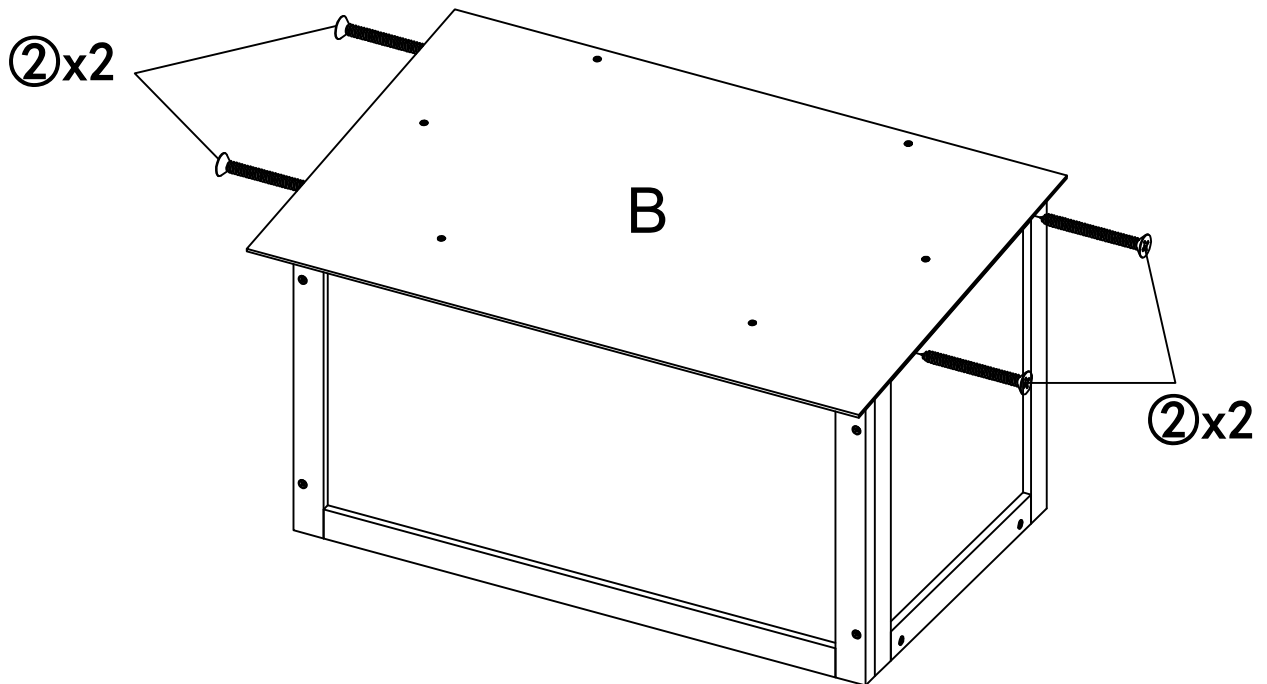


Fx2

③x4

 ④x4

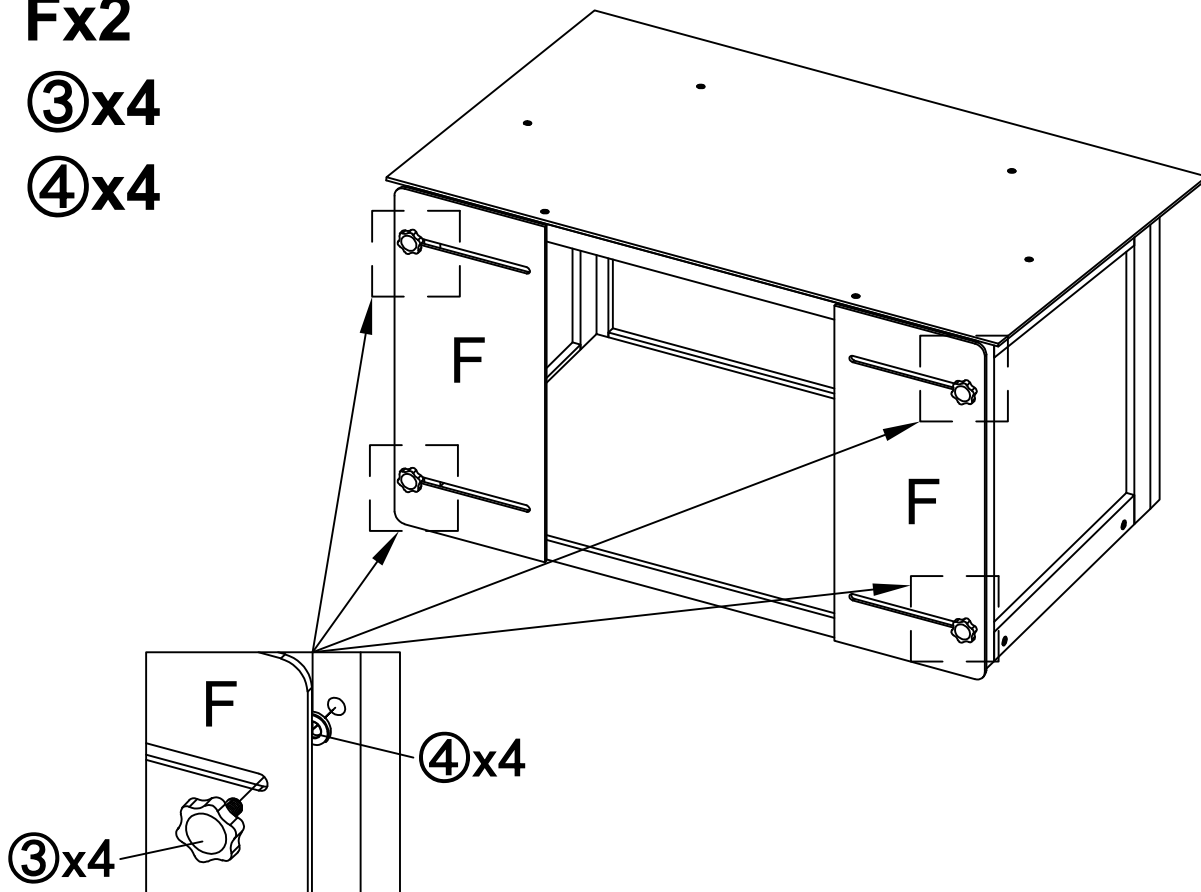

Gx3
①x6

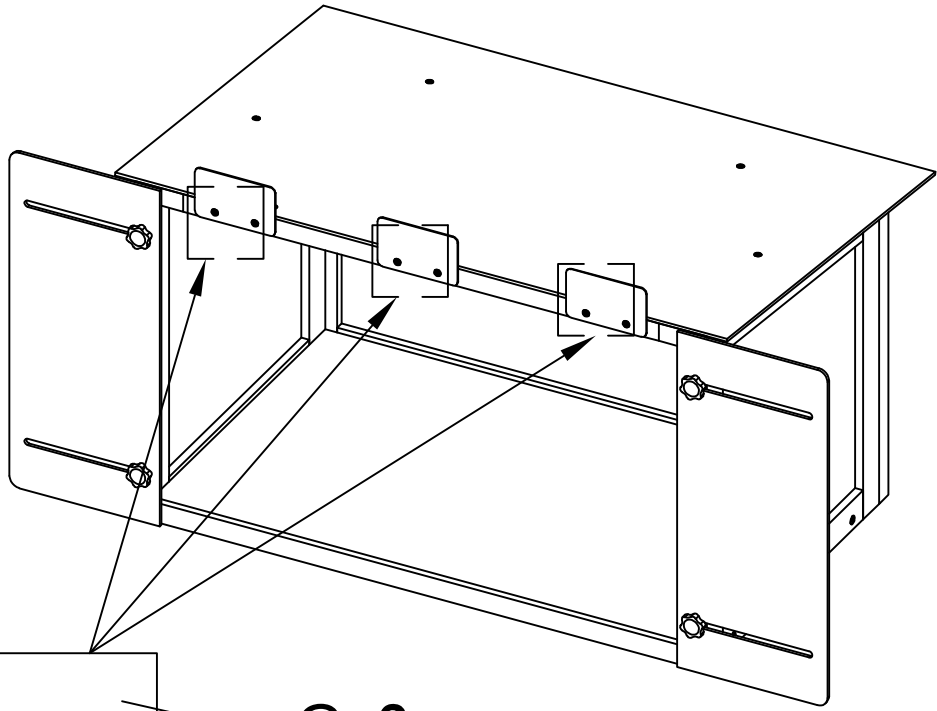 

Gx3

①x6

