







 





### Part List:

Part No.	Description	Qty.	photos
A	Top Frame	1	
B	Leg	4	
C	Frame Support Part	4	
D	Log Grate	1	
E	Fire Bowl	1	
F	Mesh Lid	1	
G	Lid Ring	1	
H	Bolt (M6x8mm)	20	
I	Poker	1	
J	Allen Wrench	1	
K	BBQ Grill	1	
L	Nut	1	


**Tool required: Allen Wrench (provided)**

### Assembly Instructions


Estimated Assembly Time: 20 Minutes

**DO NOT over tighten hardware!**


**Step 1:** Place parts on a flat surface. Assemble Legs (B) to Top Frame (A) with Bolts (H) as shown. Repeat the same steps for other legs. Tighten all bolts by hands.

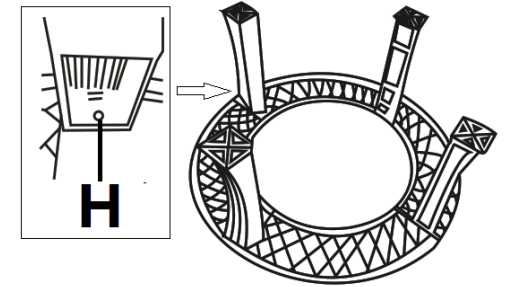

**Step 2:** Attach Frame Support Parts (C) to Legs (B) by Bolts (H) as shown. Repeat the same steps for another Frame Support Part. Tighten all bolts by Allen Wrench (J)

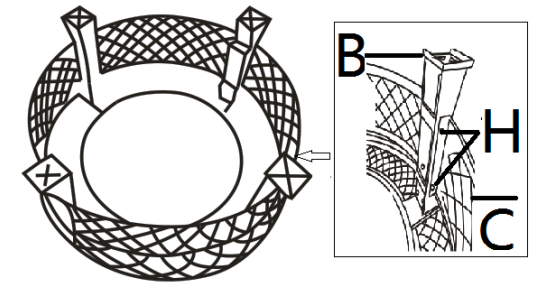

**Step 3:** Turn over the assembled fire pit frame and stand up. Place Fire Bowl (E) in the center of Top Frame (A) and then put Log Grate (D) and BBQ Grill (K) in the Fire bowl (E). Fix Lid Ring (G) on Mesh Lid (F) by Nut (L), then place the assembled Mesh Lid on the Fire bowl as shown.

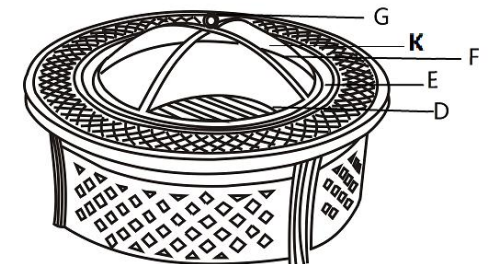

Your Fire Pit is ready for use now!

## WARNING:



### FOR OUTDOOR USE ONLY

#### FOR YOUR SAFETY:

1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

## OPERATING INSTRUCTIONS

### Lighting

1. make sure there is only a small amount of ash in the bottom of the bowl.
2. place a layer of dry kindling or a natural firestarter onto the center of the grate.
3. place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
4. use a match to light kindling or firestarter.
5. using a hook and heat resistant gloves, replace spark guard once the kindling or firestarter is lit.

### Tending the fire

You may need to shift and/or add logs for an ideal experience.

**▲ CAUTION: DO NOT** place a hot spark guard or hot fire bowl tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using a hook and heat resistant gloves, carefully remove spark guard.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals. Be careful not to shift ashes.
5. Using a hook and heat resistant gloves, replace spark guard.

## Extinguishing

1. Allow fire to burn itself out.
2. DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

## CLEANING AND CARE

### Inspecting

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

**▲ CAUTION: DO NOT** attempt to inspect this outdoor fire pit until the fire is completely out.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any components is detected, DO NOT operate until repairs are executed.

### Cleaning

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

**▲ CAUTION: DO NOT** attempt to inspect this outdoor fire pit until the fire is COMPLETELY out.

**▲ CAUTION: DO NOT** use oven cleaner or abrasive cleaners as they will damage this product.

**▲ CAUTION: DO NOT** clean any part of this outdoor fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

### Storage

**▲ CAUTION: DO NOT** move or store this outdoor fire pit until the fire is completely out.

1. Once the fire is out, coals are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
2. Store assembled in a location away from children and pets.