

ASSEMBLY INSTRUCTIONS

ASSEMBLY REQUIREMENTS	2–Person Assembly	2.5Hour Assembly Time (Approximate)	Tool Required (Not Provided)	
--------------------------	----------------------	---	---------------------------------	---

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION:

1. Remove all packaging materials ,staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on clean, flat and soft surface (e.g .carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

 
TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product ;only use the product for which it is intended.


CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquids to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g hot drinks)directly onto the wood surface.
- Do not drag and pull your furniture.


This product is for indoor and household use only –not for commercial or industrial use.

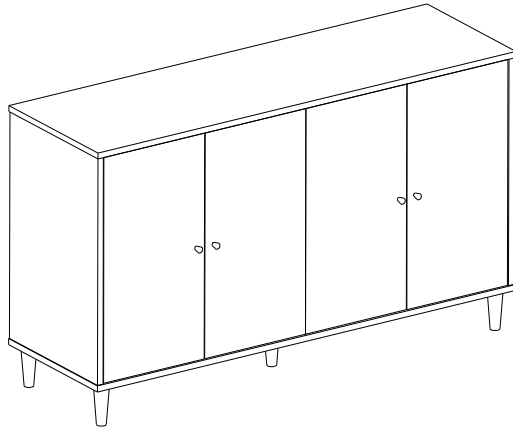


PARTS LIST

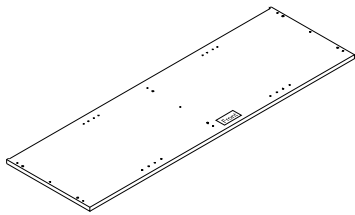 


NAME: TOP PANEL
CODE: 1
QTY: 1Pc

 


NAME: SIDE PANEL(LEFT)
CODE: 2
QTY: 1Pc

 

 NAME: SIDE PANEL(RIGHT)
CODE: 3
QTY: 1Pc

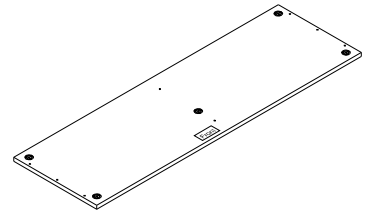

NAME: BOTTOM PANEL
CODE: 4
QTY: 1Pc

 


NAME: PARTITION
CODE: 5
QTY: 1Pc




NAME: BOTTOM SUPPORT
CODE: 6
QTY: 5Pcs



 NAME: DOOR
CODE: 7
QTY: 4Pcs

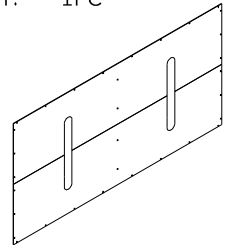

NAME: BACK PLYWOOD
CODE: 8
QTY: 1Pc

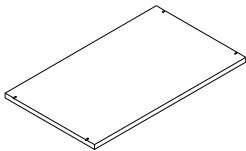 

NAME: SHELVING PANEL
CODE: 9
QTY: 4Pcs

 
HARDWARE LIST




NAME: CHIPBOARD SCREW M4X16mm
CODE: A
QTY: 48Pcs



NAME: CHIPBOARD SCREW M4X38mm
CODE: B
QTY: 8Pcs



 NAME: WOOD DOWEL M8X35mm
CODE: C
QTY: 12Pcs




NAME: CAM LOCK & CAM BOLT
CODE: D
QTY: 9Sets




NAME: HANDLE
CODE: E
QTY: 4Pcs



 
NAME: PANHEAD SCREW M4X22mm
CODE: F
QTY: 4Pcs




NAME: CAM LOCK COVER
CODE: G
QTY: 9Pcs

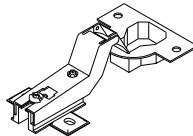 


NAME: HINGES H-7
CODE: H
QTY: 4Pcs

 

 
NAME: SHELVING SUPPORT
CODE: I
QTY: 16Pcs



 NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)
CODE: J
QTY: 32Pcs

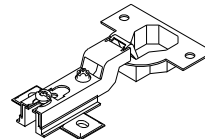

NAME: HINGES H-2
CODE: K
QTY: 4Pcs

 

NAME: MAGNET&METAL WARE
CODE: L
QTY: 8Sets



NAME: CHIPBOARD SCREW M3X12mm
CODE: M
QTY: 16Pcs



NAME: CHIPBOARD SCREW M4X25mm
CODE: W
QTY: 4Pcs



NAME: FLAT WASHER M4
CODE: X
QTY: 2Pcs



 
NAME: SCREW PLUG
CODE: Y
QTY: 2Pcs



NAME: SAFETY BELT (150mm)
CODE: Z
QTY: 2Pcs

STEP 1


- A) Insert & secure Cam Bolt(D) to Top Panel(1)
- B) Attach Magnet(L) to Top Panel(1) secure with Chipboard Screw(A)

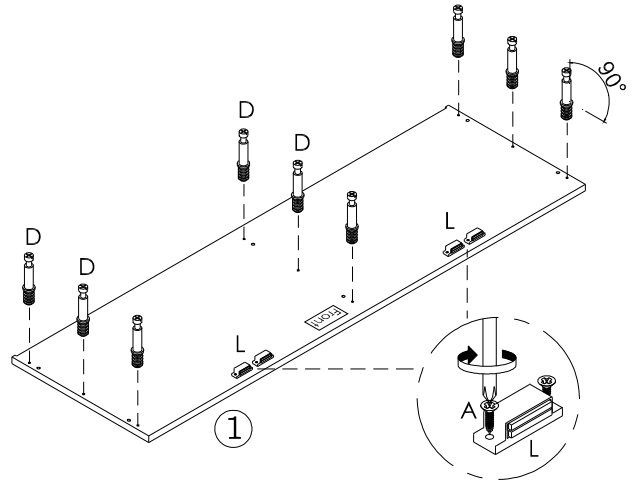

STEP 2

- A) Insert Wood Dowel(C) to Left,Right Side Panel(2,3)
- B) Attach Cam Lock(D) to Left,Right Side Panel(2,3)

 
NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

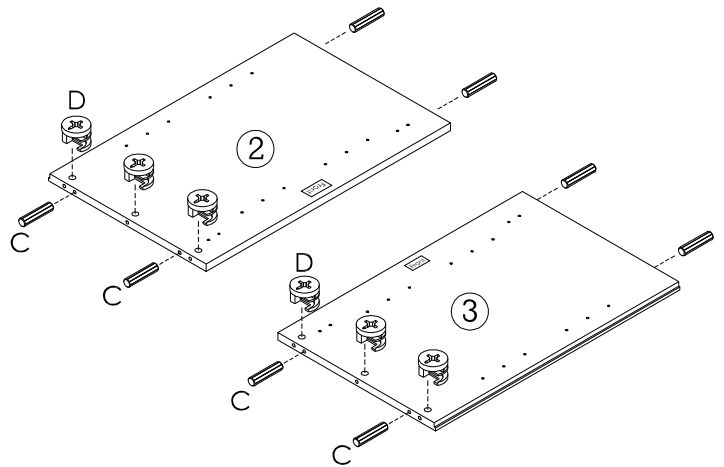

STEP 3


- A) Insert Wood Dowel(C) to Partition(5)
- B) Attach Cam Lock(D) to Partition(5)

 NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

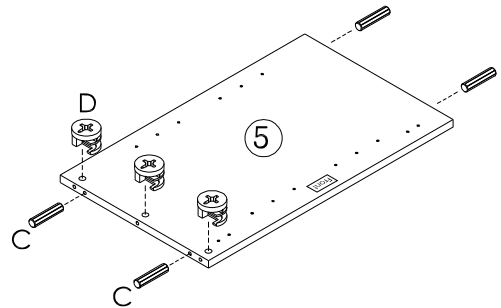


STEP 4

 - A) Attach Magnet(L) to Bottom Panel(4) secure with Chipboard Screw(A)

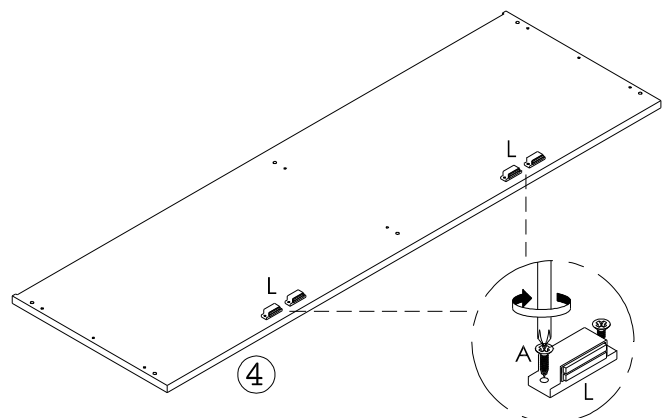


STEP 5

 - A) Attach **HINGES(K)** to 2pcs Door(7) secure using **Chipboard Screw(A)**
- B) Attach **Metal Ware(L)** to Door(7) using **Chipboard Screw(M)** to secure

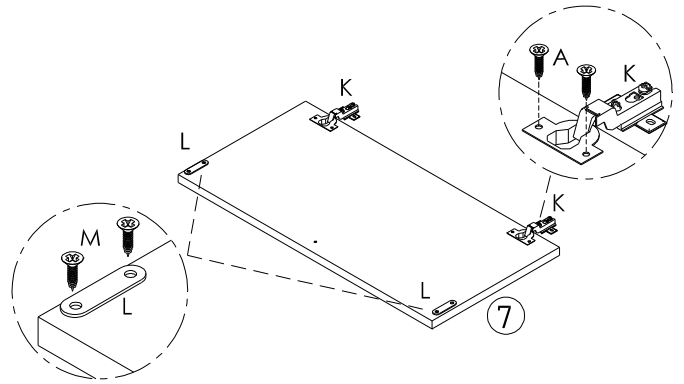


STEP 6

 - A) Attach **HINGES(H)** to 2pcs Door(7) secure using **Chipboard Screw(A)**
- B) Attach **Metal Ware(L)** to Door(7) using **Chipboard Screw(M)** to secure

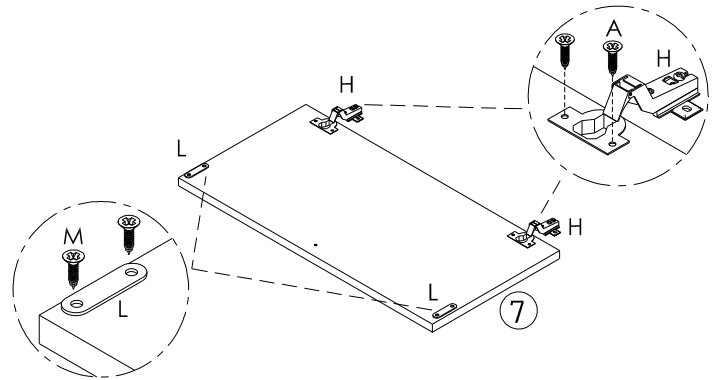


STEP 7

 - A) Attach **Bottom Panel(4)** to **Left,Right Side Panel(2,3)** & **Partition(5)** secure with **Chipboard Screw(B)**

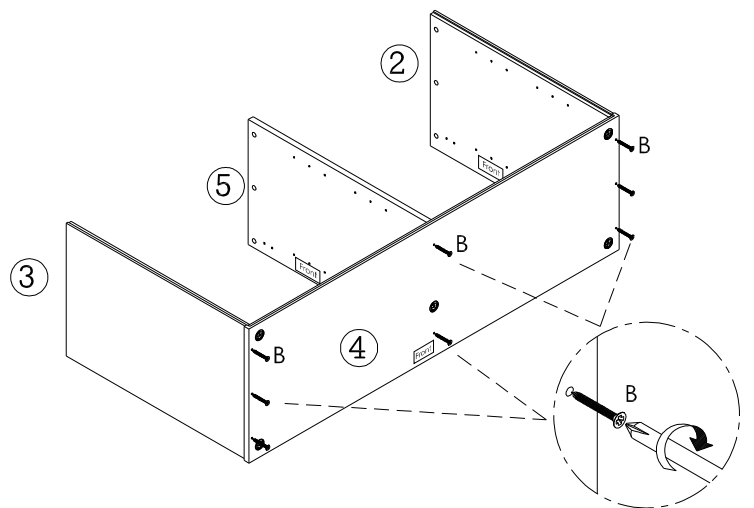


STEP 8

 - A) Attach and secure **Bottom Support(6)** turn clockwise to **Bottom Panel(4)**

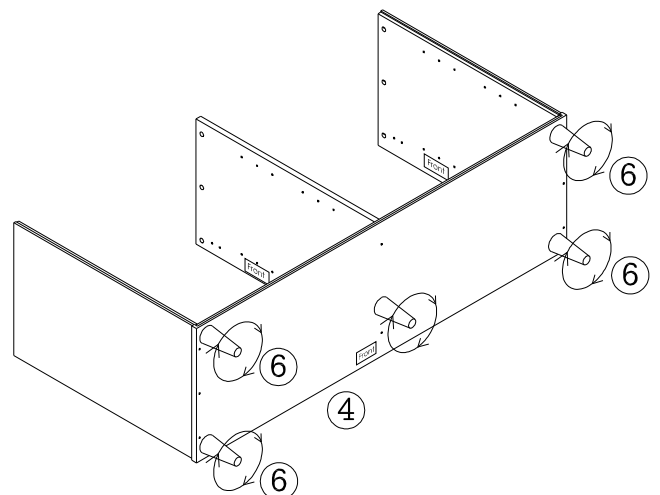


STEP 9

 - A) Attach Top Panel(1) to Left, Right Side Panel(2,3) and Partition(5) secure with Cam Lock(D)
- B) Using Cam Lock Cover(G) to cover Cam Lock(D)

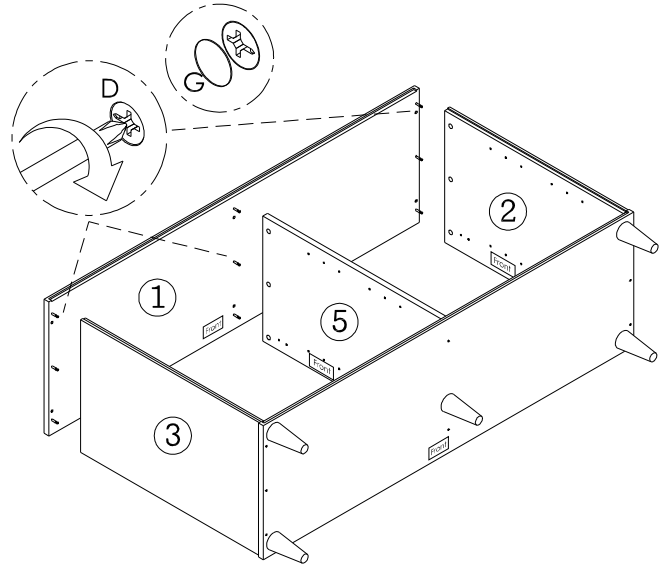


STEP 10

 - A) Attach Back Plywood(8) to assembled unit using Panhead Chipboard Screw(Black)(J) to secure

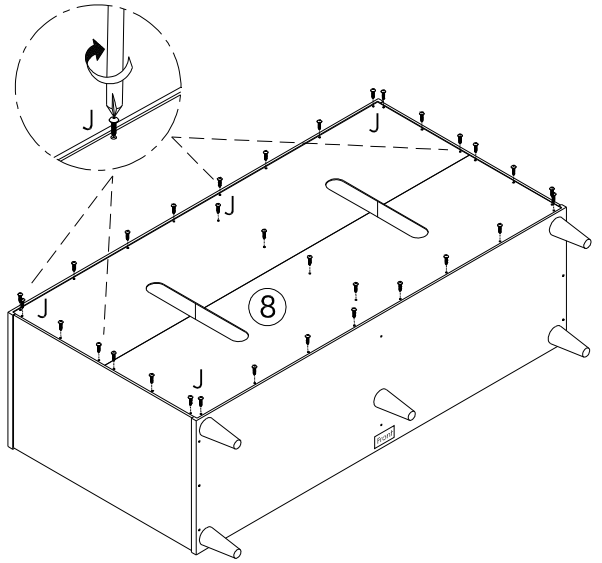


STEP 11

 - A) Attach 2pcs Door(7) with assembled Hinges(H) to Left, Right Side Panel(2,3) using Chipboard Screw(A) to secure
- B) Attach 2pcs Door(7) with assembled Hinges(K) to Partition(5) using Chipboard Screw(A) to secure

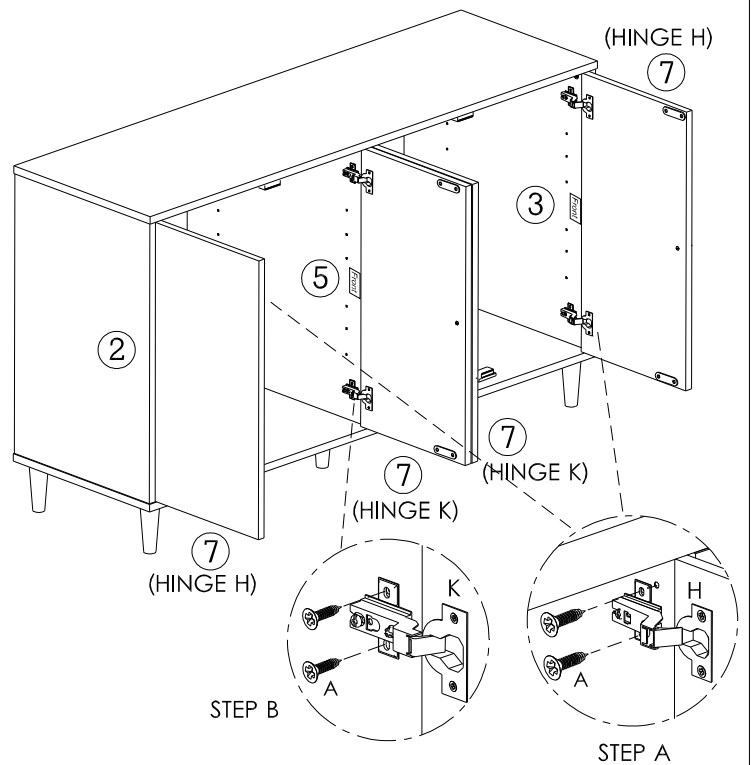


STEP 12

 - A) Attach Handle(E) to Door(7) using Panhead Screw(F) to secure

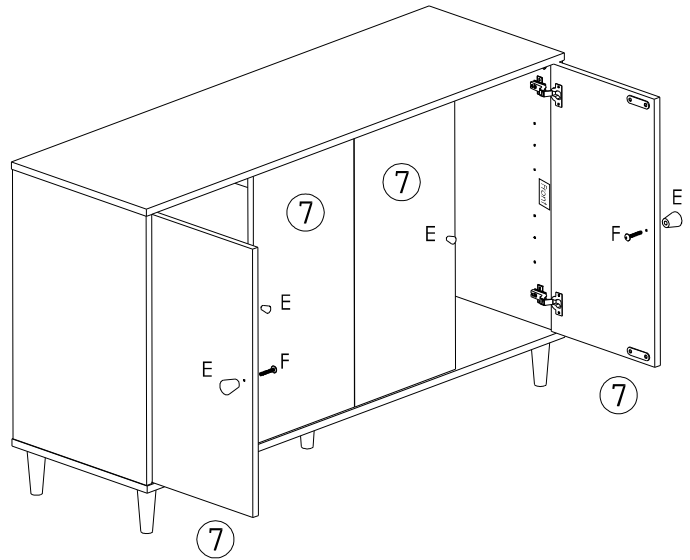

STEP 13

 
- A) Attach Shelving Support(I) to Left,Right Side Panel(3,4) & Partition(5) at desired height
B) Slot in Shelf Panel(9)

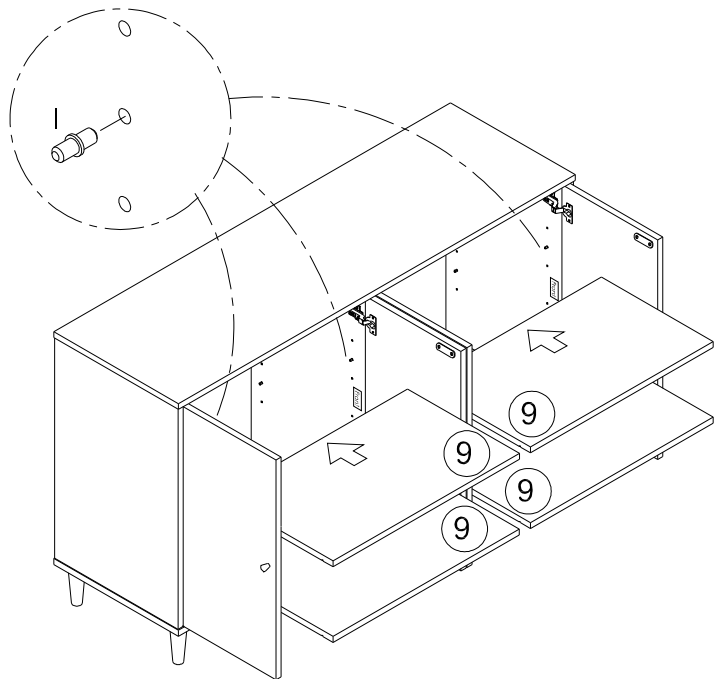

STEP 14


*Following step is OPTIONAL. Follow these steps if you wish to secure unit to a wall for added safety

 - i) Attach Safety Belt(Z) to Back Plywood and secure using Flat Washer(X) Chipboard Screw(W) to secure

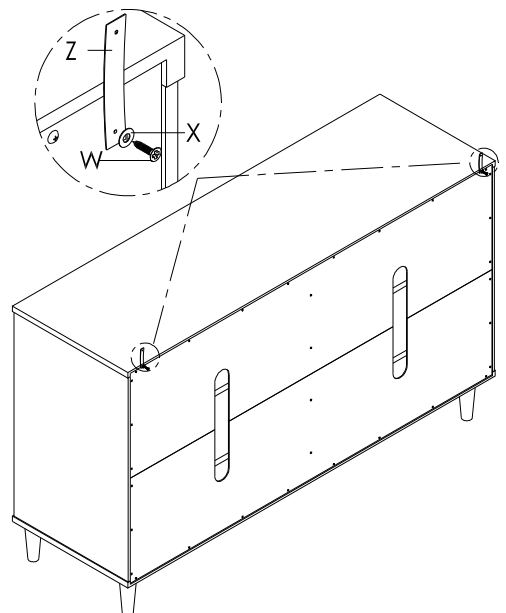


ii) Drill a hole at the wall, insert Screw Plug(Y) into hole

 iii) Move assembled unit to wall and Screw in Safety Belt(Z) using Chipboard Screw(W)

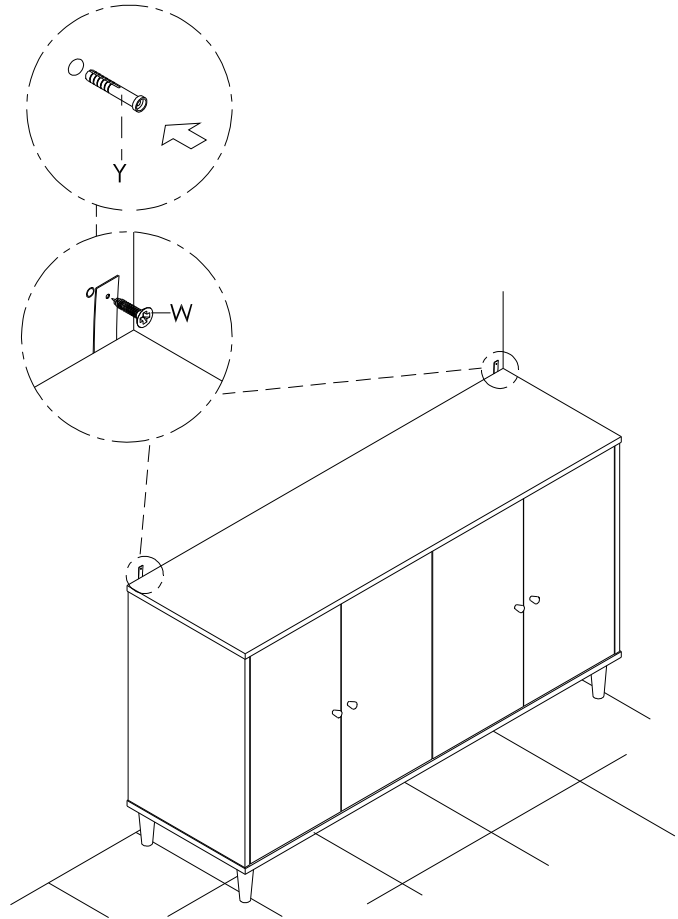


HINGE ADJUSTMENT:

 
if the door does not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

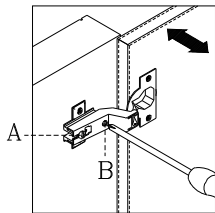

 1) Side to side adjustment:
Loosen Screw A, adjust gap with screw B and re-tighten Screw A

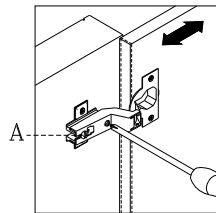

 2) Deep adjustment:
Loosen Screw A, push hinge arm forwards or backwards, re-tighten screw A.

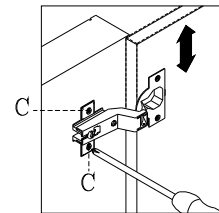

3) Height adjustment:
Loosen Screw C, adjust door height and re-tighten screw C.