
 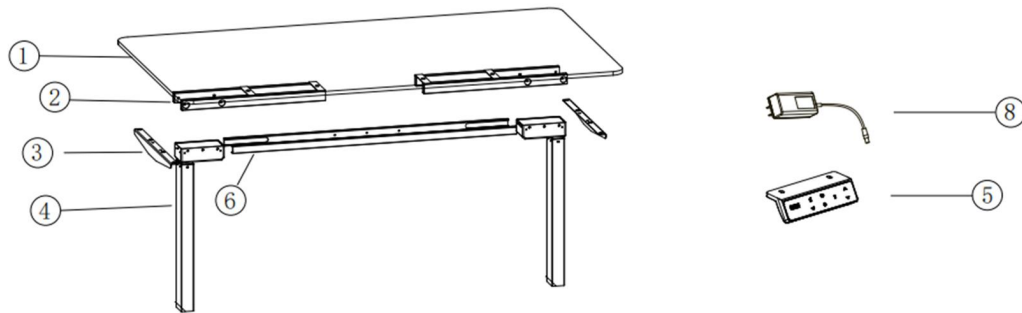
 
 



Electric Lift Table Assembly Drawing

Parts List



①  Wooden board (×1)	②  Crossbeam (×2)	③  Angle bracket (×2)
④  Table leg (×2)	⑤  Hand controller (×1)	⑥  Tension beam (×2)
⑦  Cable organizer (×1)	⑧  Power adapter (×1)	 Table legs(×2)

 
List of Screw Packets

A  M6×12(×20)	B  M6×10(×4)	C  M6×15(×8)	D  ST4×15(×14)
E  5mm T-handle Wrench	F  Phillips Screwdriver	G  Adjustable Feet (×4)	

Spare Screw Kit


A  M6×12(×2)	B  M6×10(×1)	C  M6×15(×1)	D  ST4×15(×2)
---	---	---	--

Installation Step 1

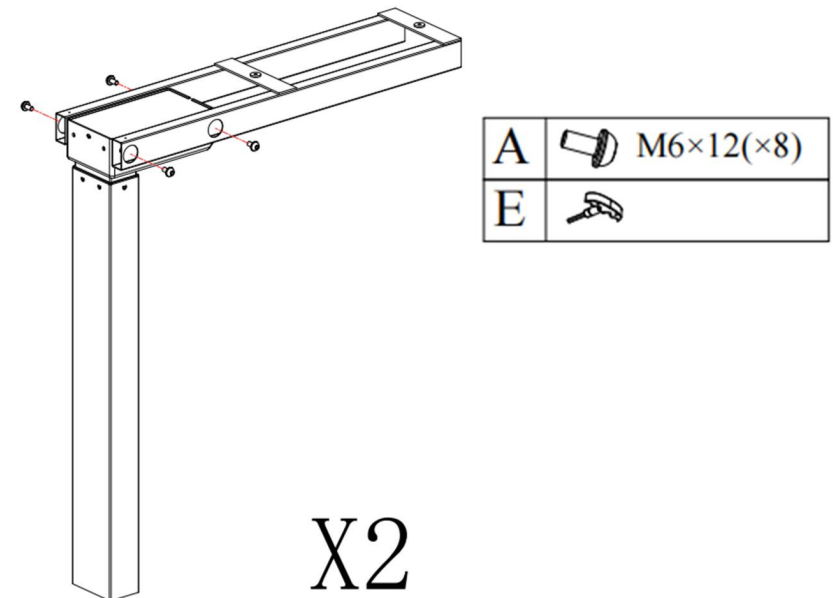

X2


Installation Step 2

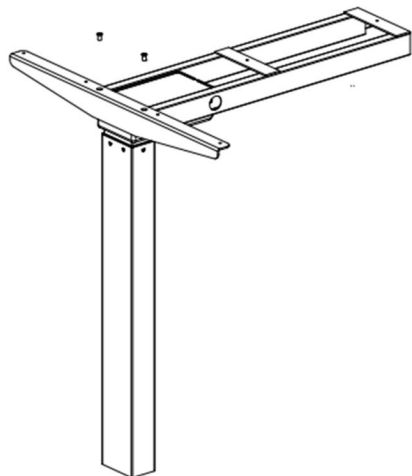


B	 M6×10(×4)
F	

X2

 Installation Step 3

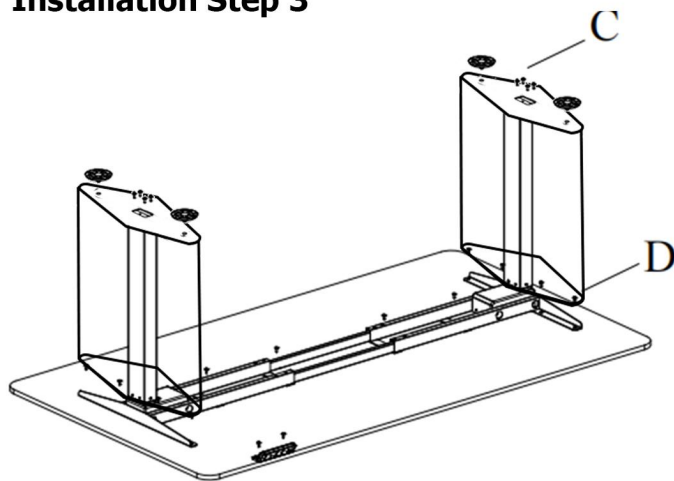


C	 M6×15(×8)
E	
D	 ST4×15(×14)
F	


Note:

- 1.The side away from the hand controller has the longer motor cable
- 2.Adjust to the appropriate length according to the desk panel hole positions
- 3.The installation force for the desk panel is about 8N



Installation Step 4

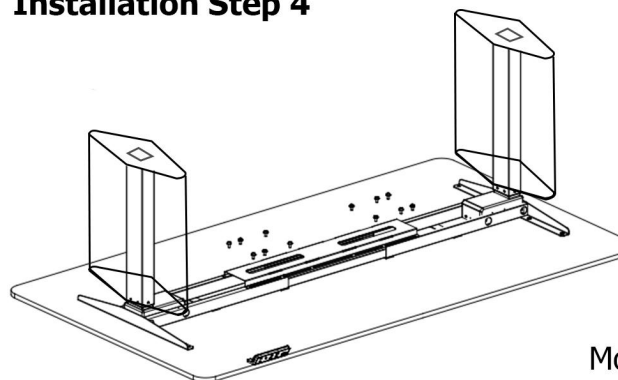

A	 M6×12(×12)
E	

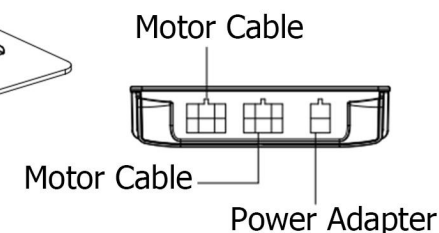

Installation Complete

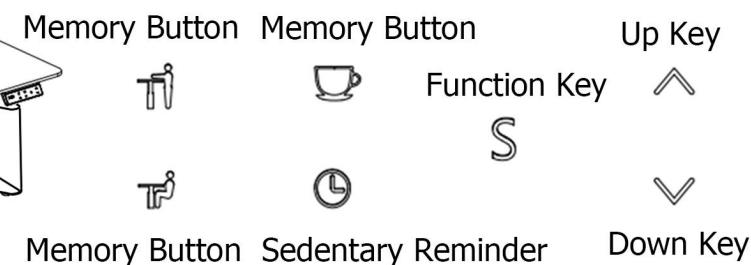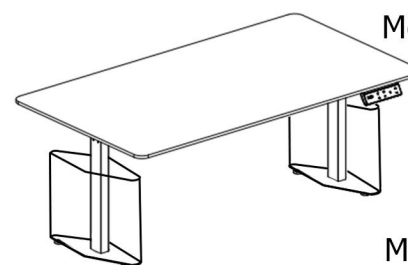

Instruction Manual:

- 1.Long-press when in lowest position or when error codes appear VKey Reset
- 2.Memory position save: Move the desktop to the desired position, press the S key, the display flashes, then press the corresponding memory key
- 3.Short-press the memory key to move to the preset height; press any key during movement to stop operation
- 4.Sedentary reminder function: Press the ⌚ key to enter sedentary reminder settings, use Up/Down keys to switch duration or turn off
 - (1). When the lifting table stays at any height exceeding the set sedentary reminder duration, the sedentary reminder is triggered
 - (2). After the sedentary reminder is triggered, it alerts every 2 minutes, each time flashing the current height for 9 seconds, with a total of 3 reminders
 - (3). If the height of the lifting table changes within the set duration or before completing three reminders, the timer resets.
 - (4). When the sedentary reminder function is enabled, the third decimal point lights up on the display in sleep mode to indicate activation. No decimal point appears when the function is disabled.
 - (5). If the reminder count reaches three and the lifting table's height remains unchanged, the sedentary reminder automatically deactivates. To reactivate, repeat the original activation procedure.
- 5.Child lock function: Simultaneously press the S key and V key, the screen displays LOC, child lock is activated. After activation, repeat the operation to deactivate the child lock.