



Partition Door Hinge Installation



The thickness of the door and the width of the column should not exceed the width of the center of the hinge.



Screw in all the screws



Next, turn on the spring mode



Insert the hexagonal screws and twist the spring without letting go.



Find the other small hole in the hole and align it.





That's it.

Check the strength of the spring.



If the door is big, adjust the force more.

If the door is small, adjust the force less.