

# MONTESSORI WOODEN KITCHEN (WCF17)

## Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: [shop@robud.com](mailto:shop@robud.com)**



98.1WCF17.150



### **WARNING:**

- CHOKING HAZARD-Small parts. STRANGULATION HAZARD-Long cord.
- Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- The product requires 2"AA/LR6/AM3 1.5V" batteries. (Batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly. If the part is damaged, fix it well before assembly.
- This toy produces flashes that may trigger epilepsy in sensitised individuals.

### **MAINTENANCE:**

- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.



# Assembly Tips

 
 


**Assembly time: 2-2.5 hours**





## **Recommended Tools:**

(Please prepare them by yourself.)

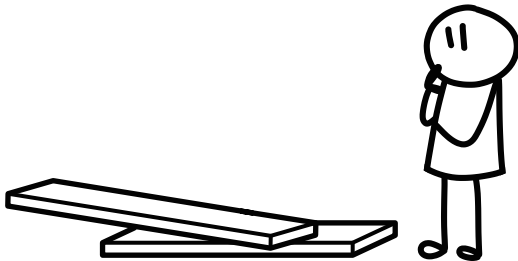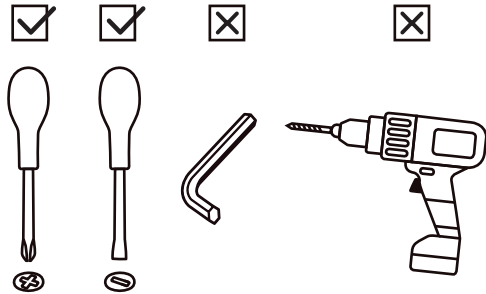

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

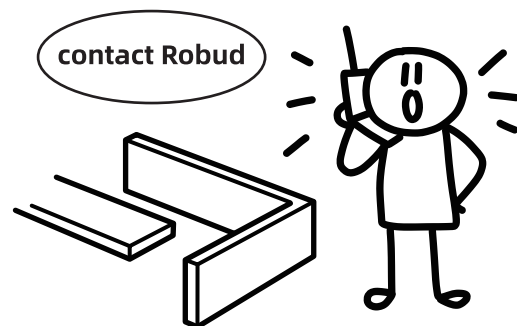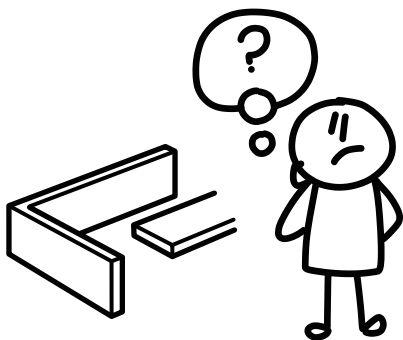

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us ***shop@robud.com***. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

# Helpful Hints and Tips

## Icon Illustration:

 
 Special attention in assembly

 Step 1

 Remove the plastic film on surface


 Step 2

 Perspective conversion

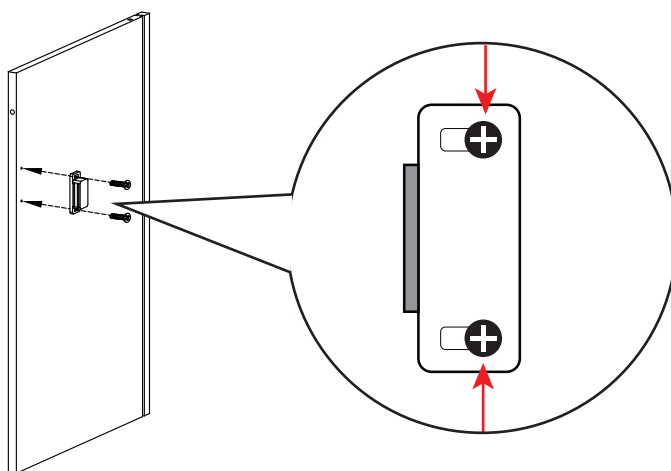

## Notice:

  
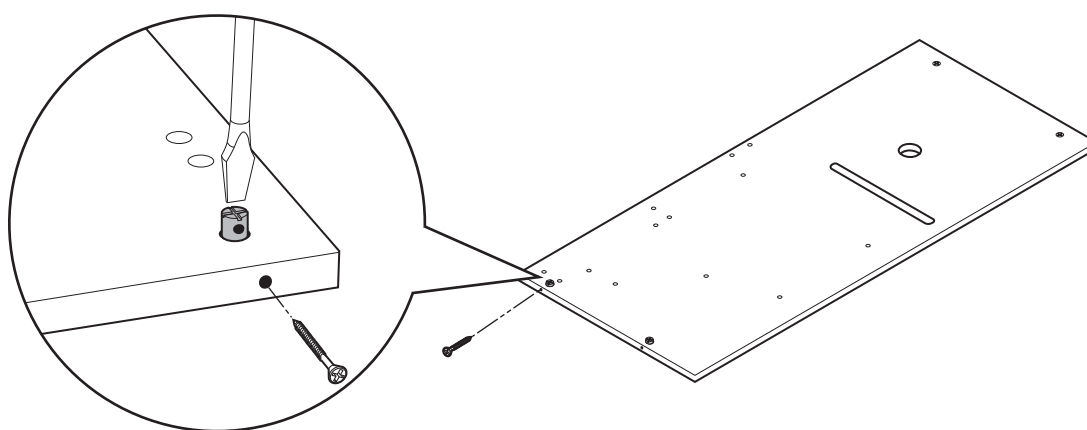 


 

 
 
 
 
 
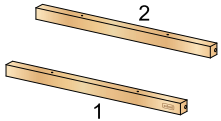 
 
 
 
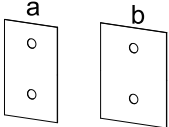 
 
 

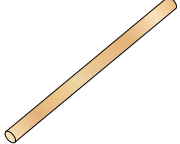 
When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.



 

 
 
 
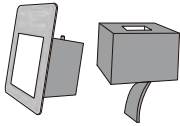 






## Notice:

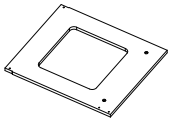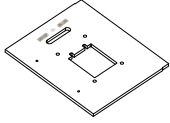The white plastic part is correctly assembled during production.  
If the screws are not in position due to transportation, use a slotted screwdriver to adjust.









# Product Parts

1	2	3	4
			
x1	x1	x1	x1
5	6	7	8
			
x1	x1	x1	x1
9	10	11	12
			
x1	x1	x2	x1
13	14	15	16
			
x1	x1	x1	x1
17	18	19	20
			
x1	x1	x4	x1

 
 
 
 
## Product Parts

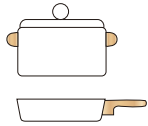21		22		23		24	
x1		x2		x2		x2	
25		26	 M3.2*10 x2 x4	27		28	
x1		x1		x1		x1	
29		30					
x2		x2		x1		x1	

## Hardware

        31	 Ø4x35mm	32	 Ø4x25mm	33	 Ø4x20mm	34	 Ø4x12mm
x4		x26		x5		x3	
35	 Ø4x10mm	36	 Ø3x16mm	37	 Ø3x10mm	38	 Ø3x8mm
x5		x12		x4		x5	


# Accessories

    39	40		
			
x2	x1	x1	x2

# Assembly Instruction

 1

31



4PCS

 
31x2

12-2

12-1


11x2

31x2

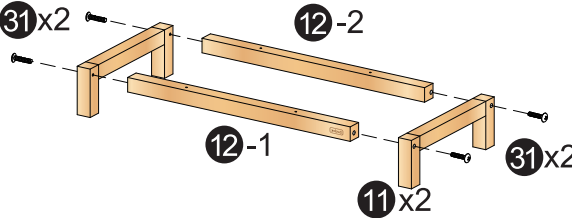

2

 32




2PCS

8


7

 32x2

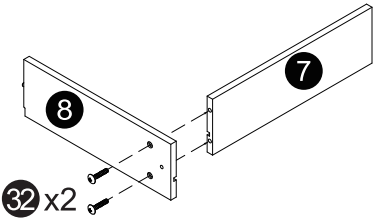

3

 34




1PCS

7

8


34

 6

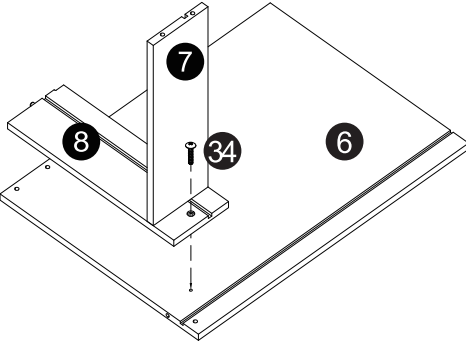


4

29



1PCS

37

 


2PCS

5

29

37x2

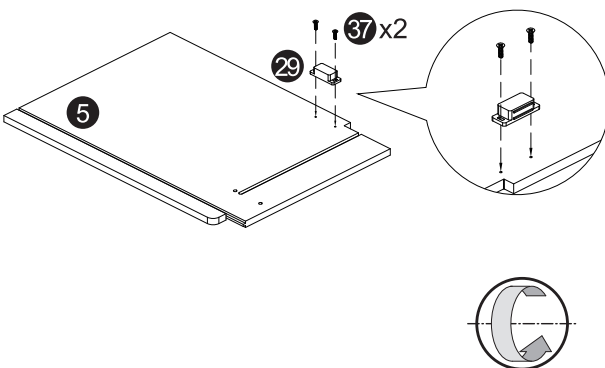

5

# Assembly Instruction

5

36

2PCS

Ø3x16mm

5

36x2

30

6

32

2PCS

Ø4x25mm

6

5

32x2

5

7

40

1PCS

38

1PCS

Ø3x8mm

13

38

40

13

8

32

4PCS

Ø4x25mm

5

13


32x4

5

# Assembly Instruction


9

29



1PCS


37



2PCS

 
Ø3x10mm

36




2PCS

Ø3x16mm

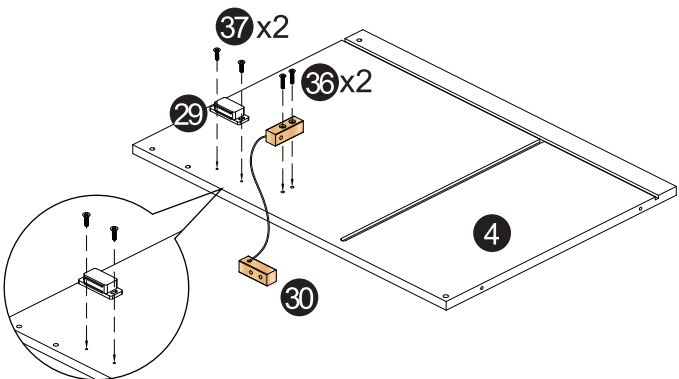


10

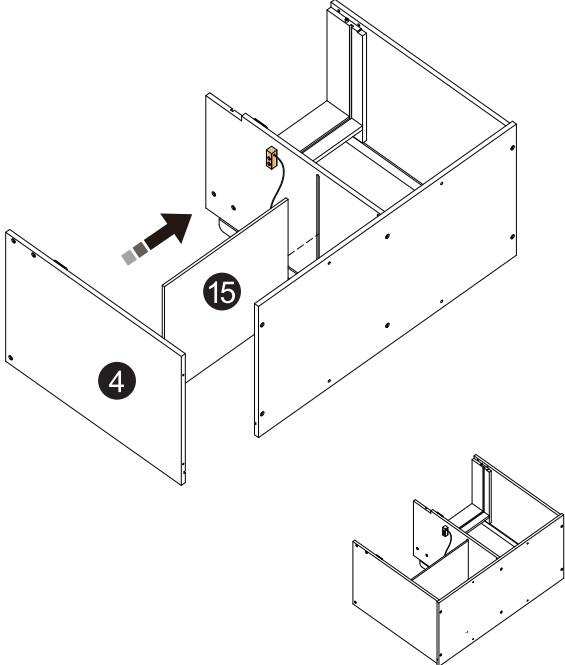 


11

32




2PCS

 Ø4x25mm

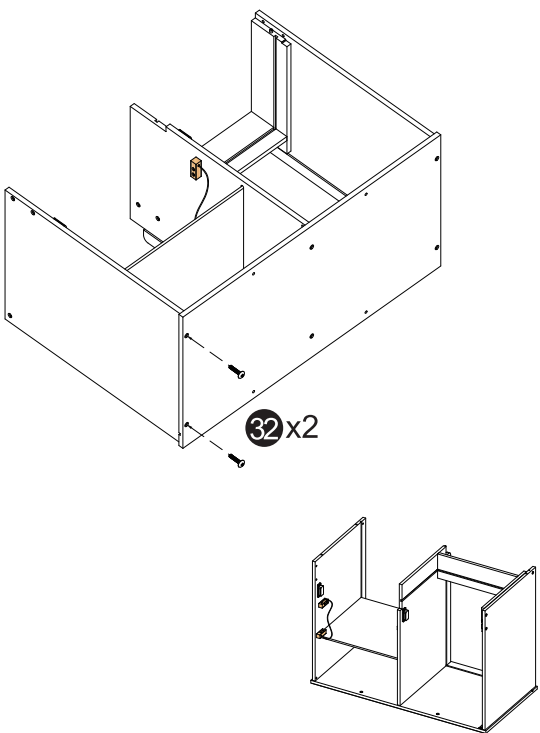


12


32



2PCS

 
 
Ø4x25mm

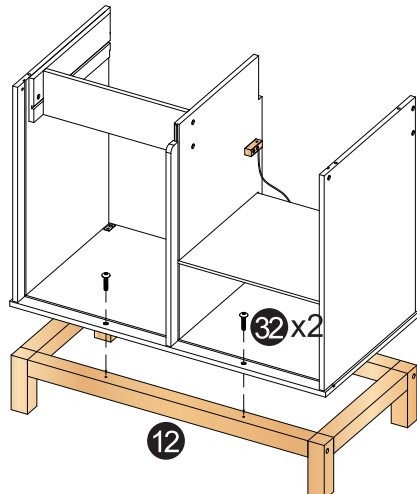





# Assembly Instruction

 
 
13

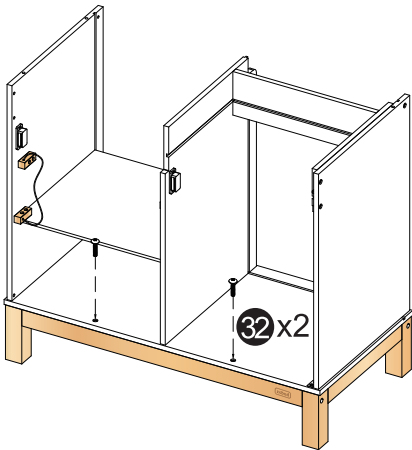


14

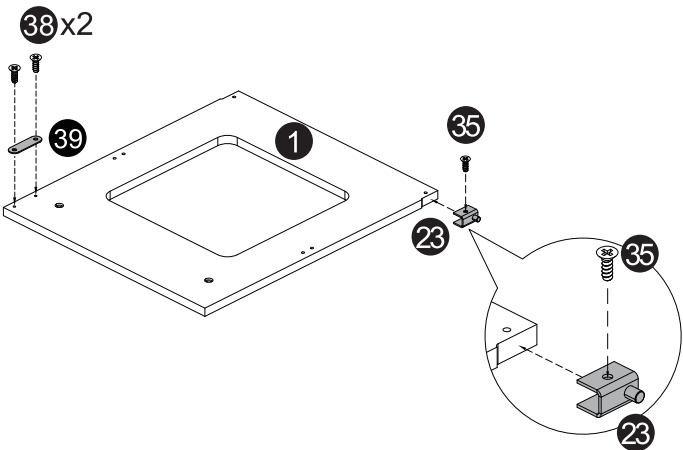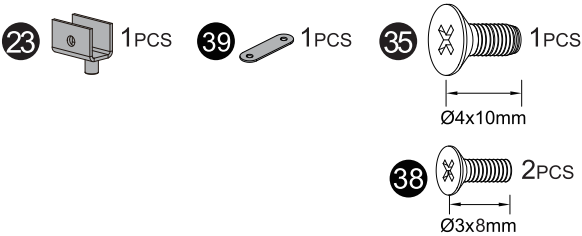  

15

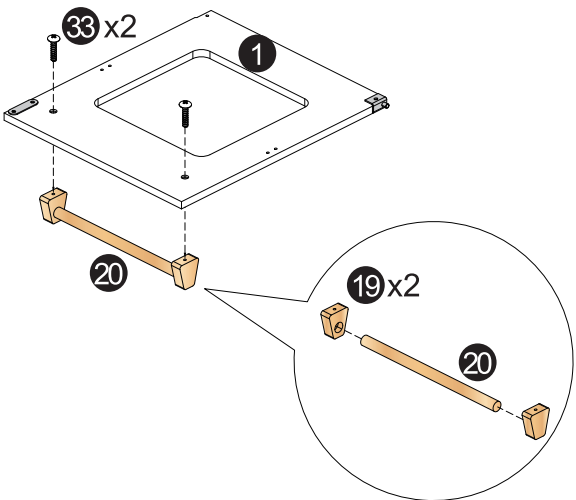  

16

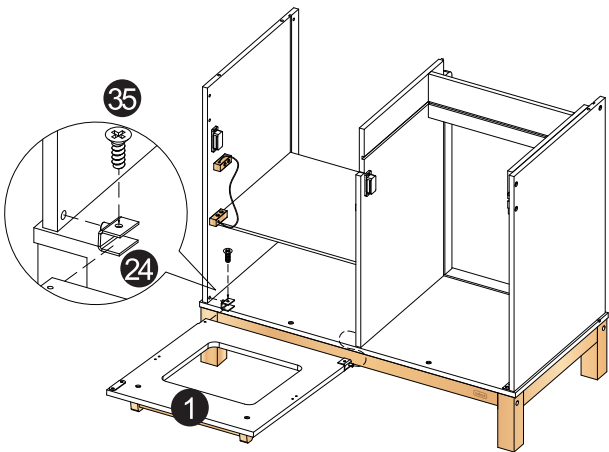 


**! Tips:**  
Assemble the part 24 first, then assemble the board 1

# Assembly Instruction

 
17

36




4PCS

Ø3x16mm

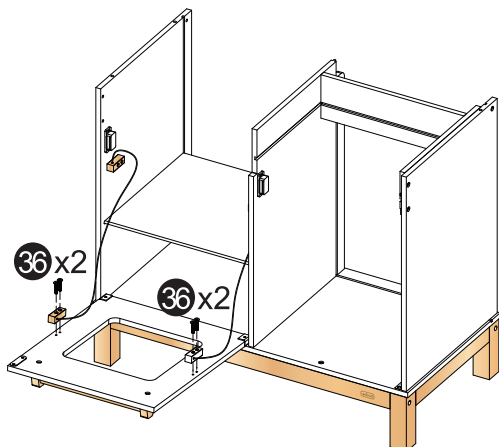


18

 23




1PCS

 24



1PCS


35



2PCS


Ø4x10mm

39



 
1PCS

38




2PCS

Ø3x8mm

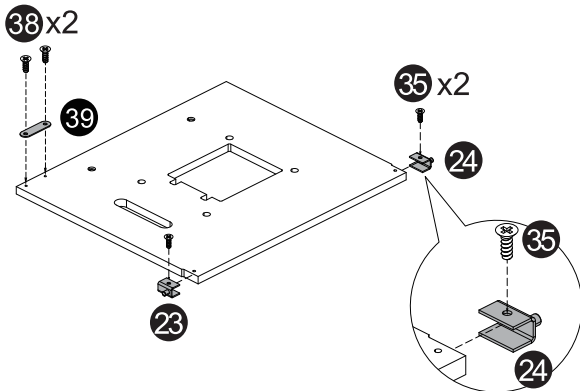


19

33




3PCS

 Ø4x20mm

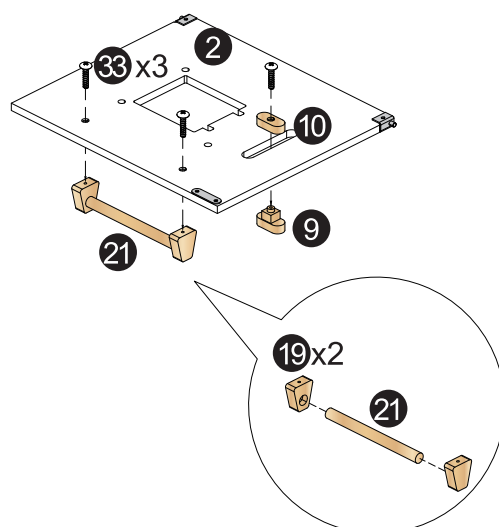


20

26




4PCS

 Ø3x8mm

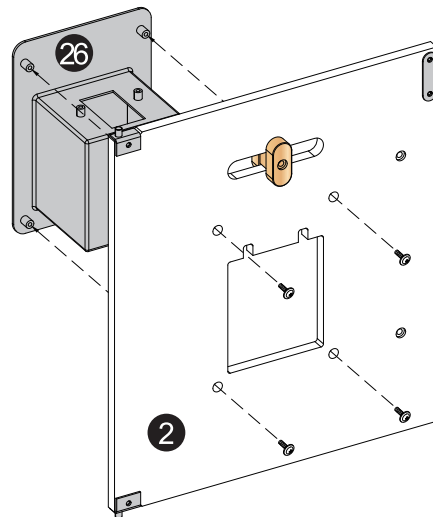


# Assembly Instruction

 21

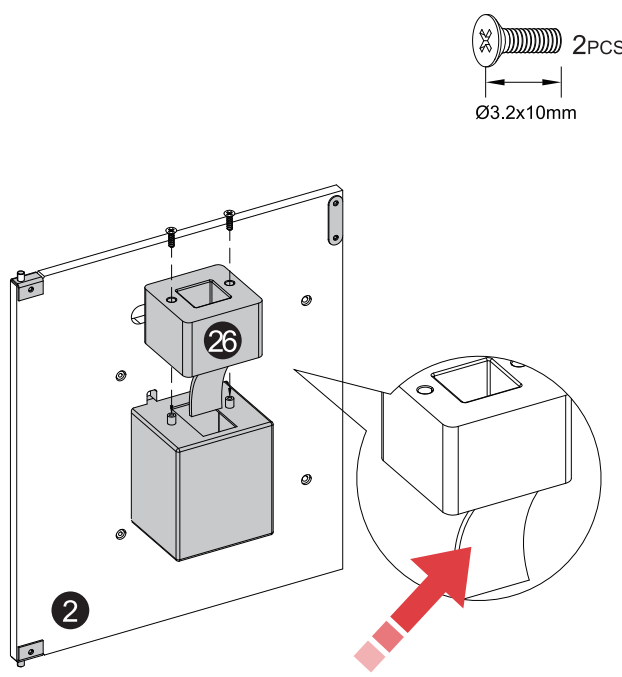


**! Notice:**  
Pay attention to radian

 
22

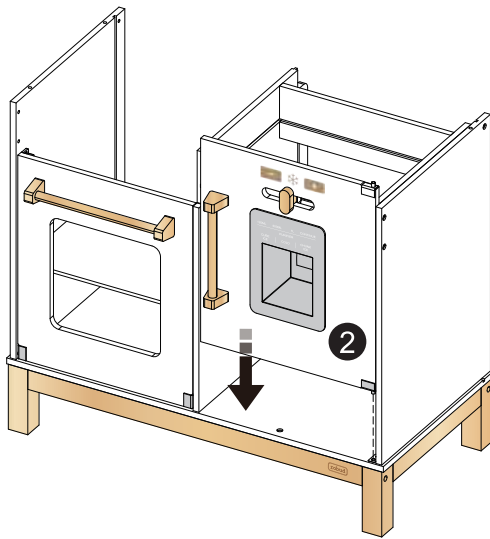

23

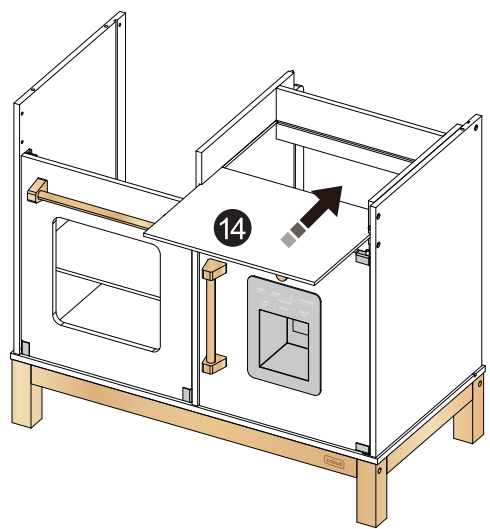 


24

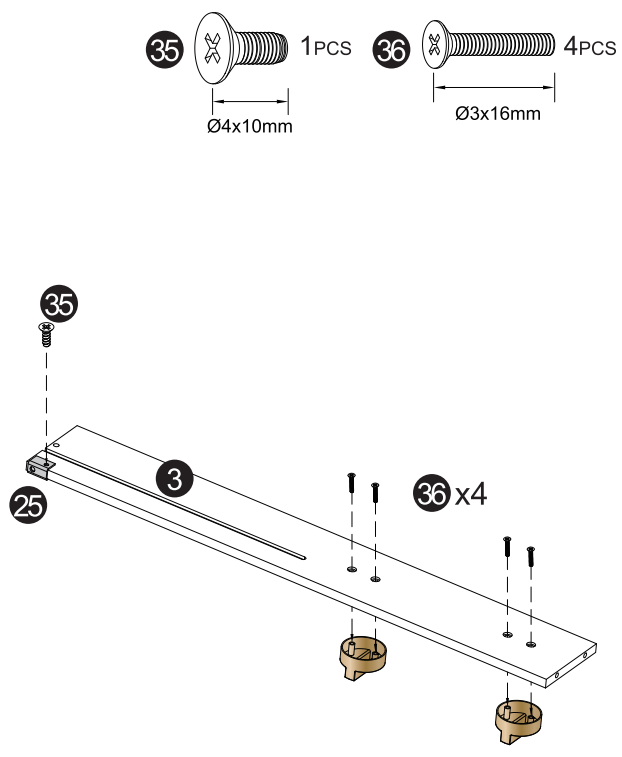 


# Assembly Instruction


 
25

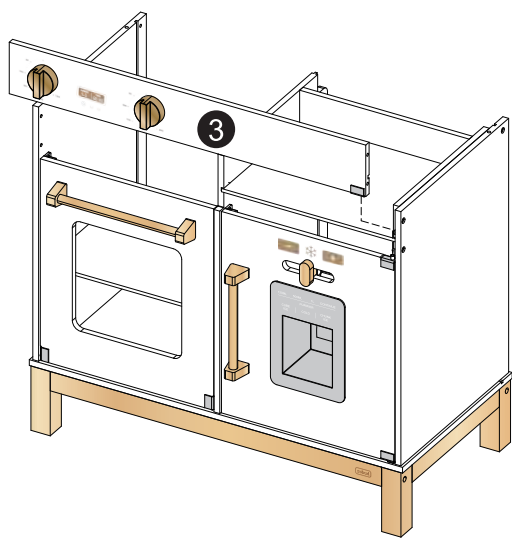

26

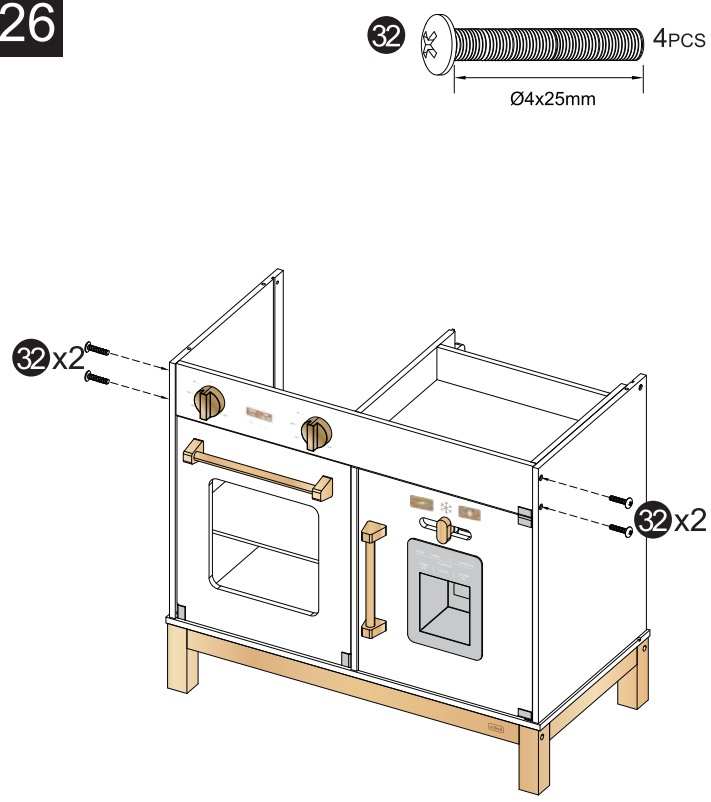 


27

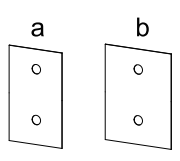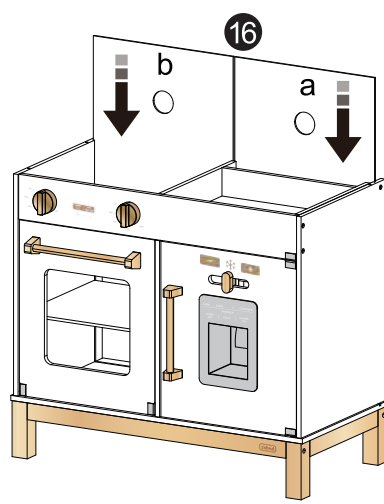  



**! Tips:**  
Pay attention to the size of a and b.

 28


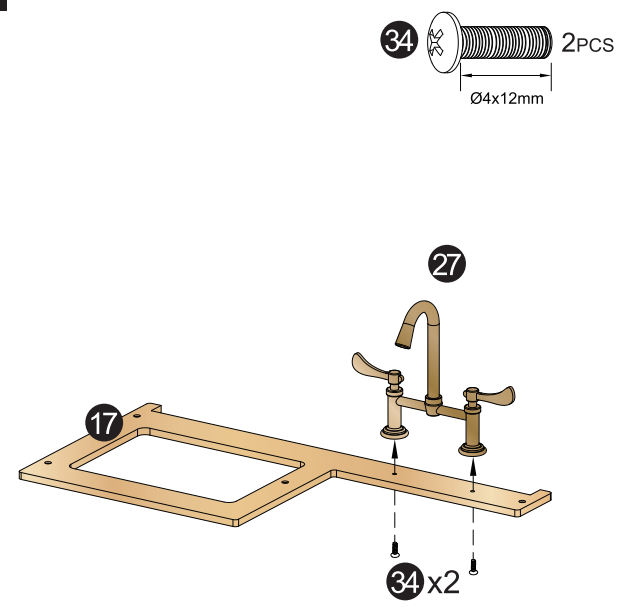


# Assembly Instruction

  29

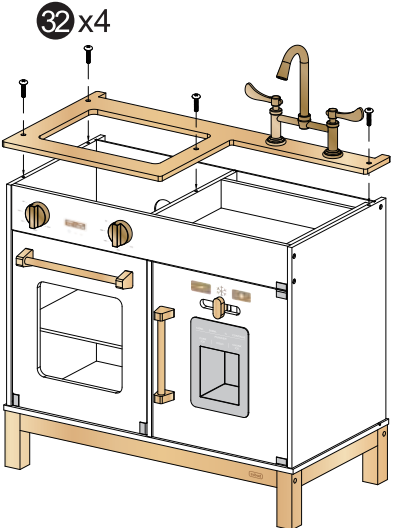



30

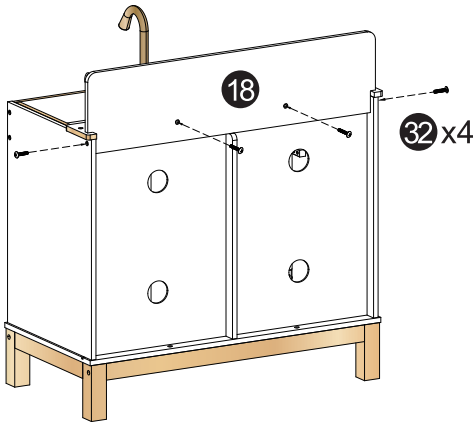  

31

  Remove the plastic film on surface

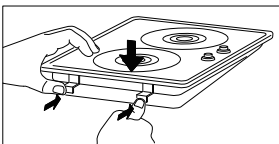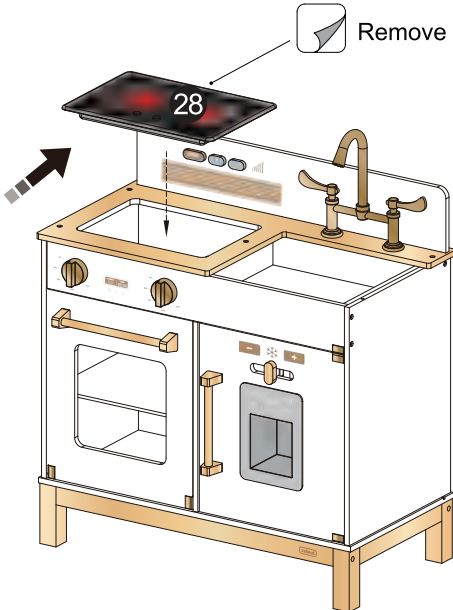

1  Unscrew it	2 
3  Tighten it	4  Close the back cover. Tighten the screw.

**Notice:**  
Use the screwdriver to loosen the screw.  
(Do not remove the screw). Open the back cover.  
Install 2"AA/LR6/AM3 1.5V" batteries provided by yourself.

# Other Products

## Modular Kitchen *NEW&HOT*



**SKU: WCF14**

Name: Dream Kitchen  
29\*11.8\*46.3(inch)  
74\*30\*117(cm)

**SKU: WCF29**

Name: Green and gold  
refrigerator  
18.1\*11\*40.5(inch)  
46\*28\*103(cm)

**SKU: WCF28**

Name: Green and gold  
oven  
16.1\*11.8\*22.4(inch)  
41\*30\*57(cm)

**SKU: WCF30**

Name: Green and gold  
washing machine  
22\*11.8\*20(inch)  
56\*30\*51(cm)



**SKU: WCF04**

Name: Vintage Green Kitchen  
21.7\*11.6\*31.5(inch)  
55\*29.5\*80(cm)

**SKU: WCF22**

Name: Vintage green  
refrigerator  
23.6\*11.8\*24(inch)  
37.5\*30\*81(cm)

**SKU: WCF20**

Name: Vintage green  
oven  
16.1\*11.8\*22.4(inch)  
41\*30\*57(cm)

**SKU: WCF21**

Name: Vintage green  
washing machine  
16.1\*11.8\*22.4(inch)  
60\*30\*61(cm)

## Other Products




WCF25



 WCF23&24



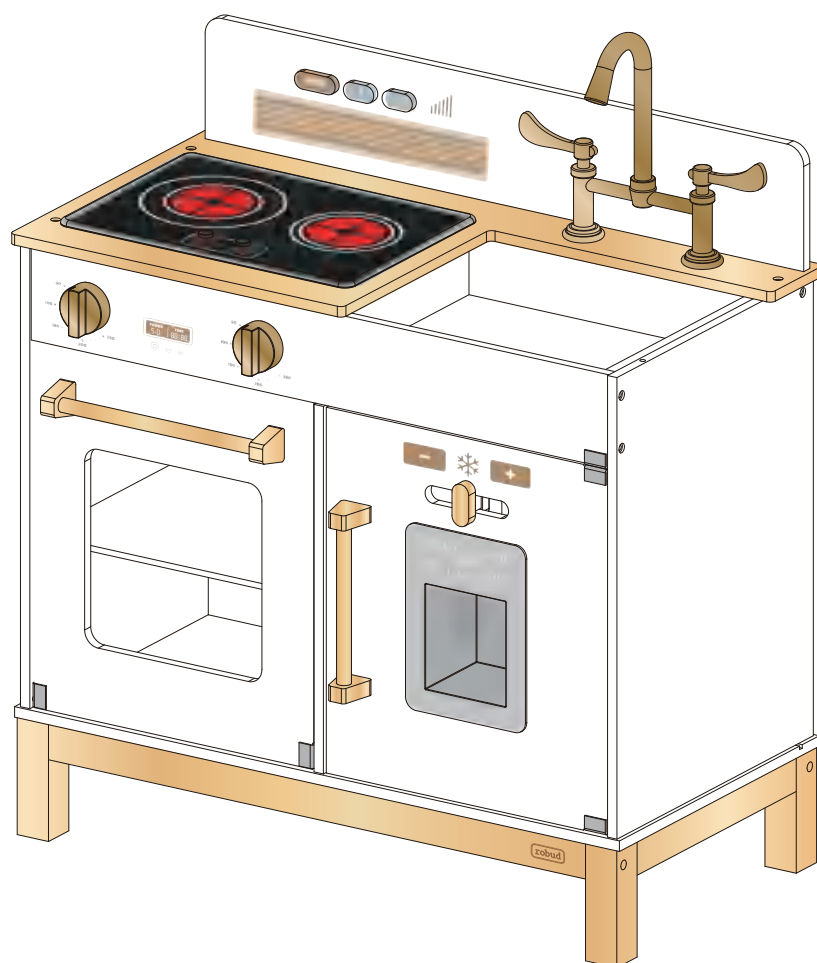

[www.robud.com](http://www.robud.com)