



SAFETY DISTANCE

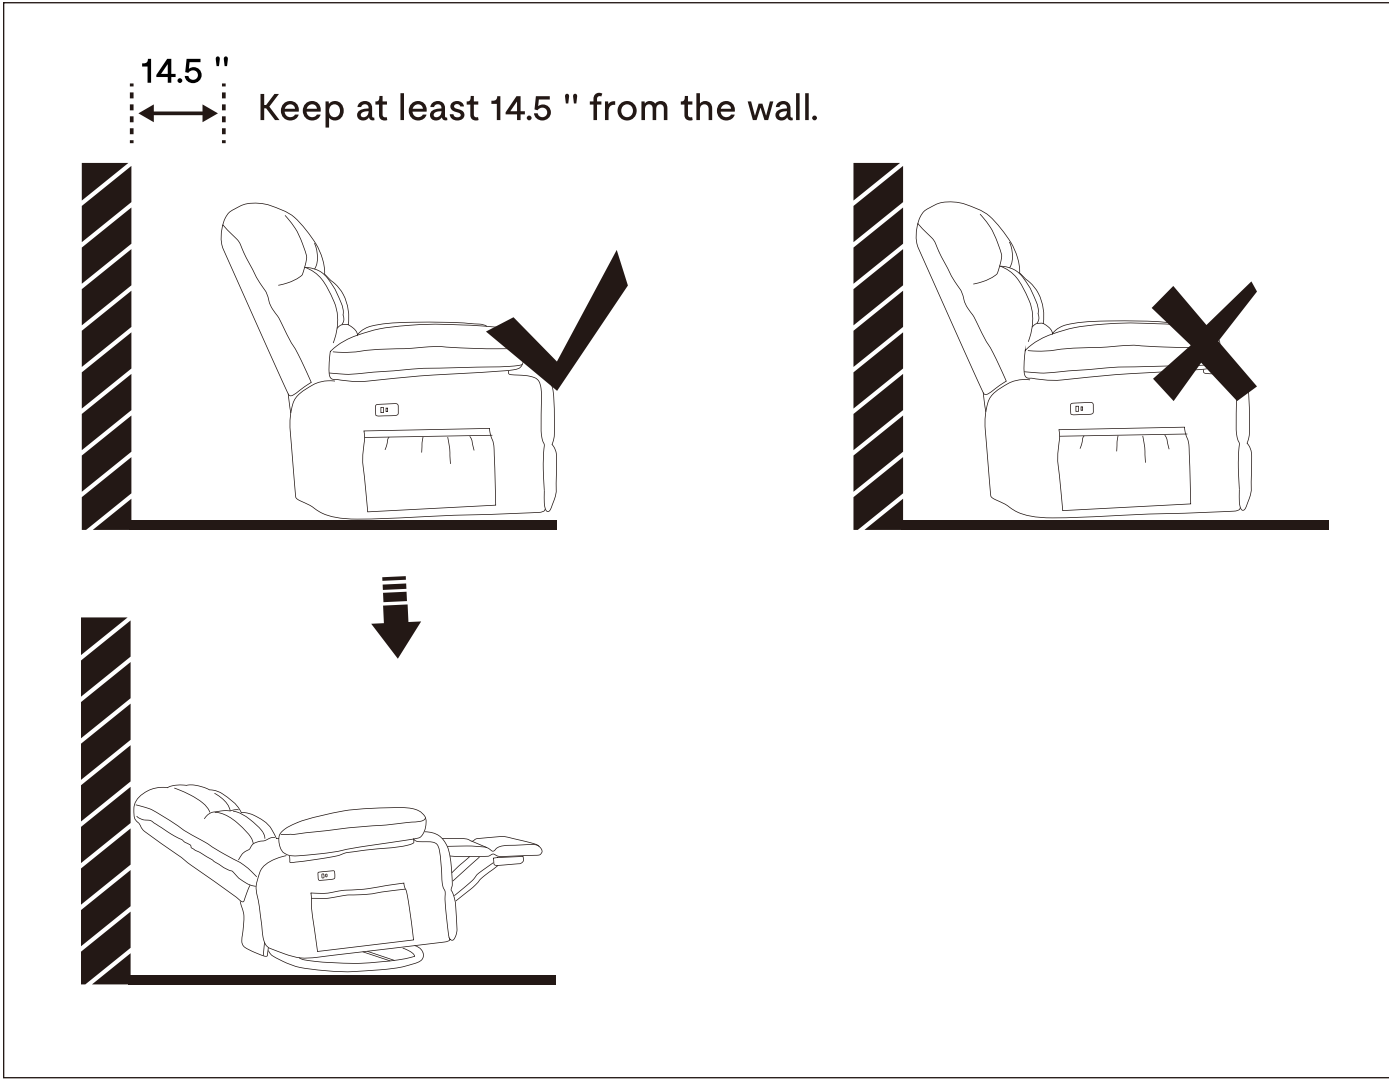

WARNINGS

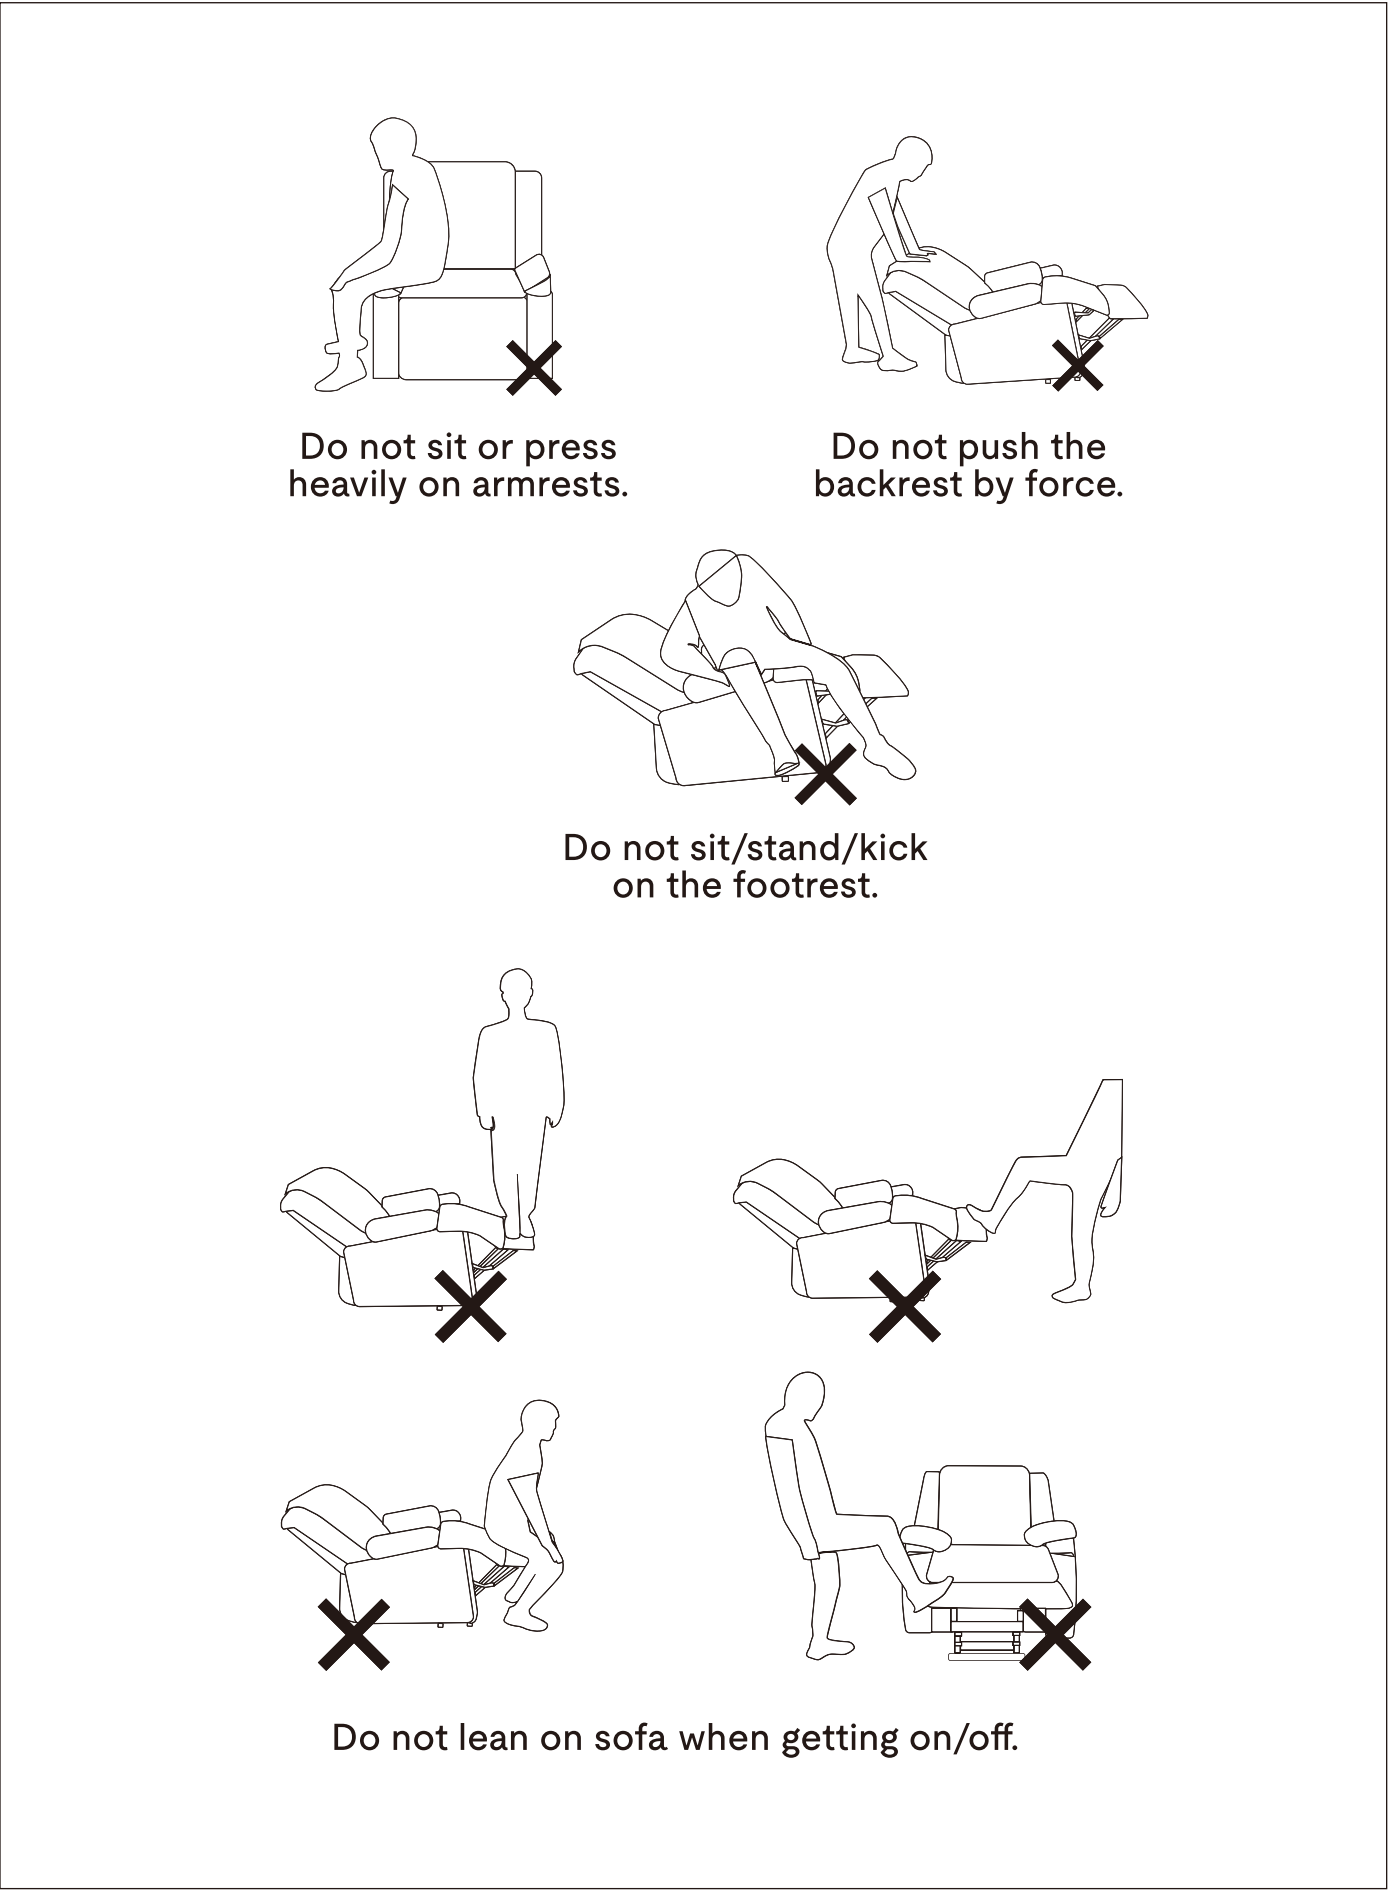

PRECAUTIONS

- **Before Use:**

- Check packaging before opening. Do not use sharp tools to open to avoid fabric damage.
- Temporary wrinkles may appear after transport, they will recover naturally.
- Read and keep this manual for future reference.

- **During Use:**

- For indoor household use only. Environment: ventilated, cool, no strong light, room temp ≤ 40°C.
- Lift sofa from bottom when moving. Do not drag.
- Place sofa flat. If floor uneven, use foot pads. Keep 1" away from walls or painted furniture.
- Keep room ventilated, avoid direct sunlight, dampness, or heat sources.
- Do not stretch body parts under frame while in use.
- Do not use strong cleaners (turpentine, gasoline, etc.). Avoid colored liquids, chemicals, oils.
- Armrest load capacity differs from seat. Do not sit on armrests.
- Avoid standing, jumping, or heavy dropping on sofa.
- Keep sharp/hard objects (keys, knives, nail clippers) away.
- Ensure no objects, pets, or children under sofa during operation.
- Do not put full weight on backrest when unfolding.
- Footrest is not designed to support body weight.

- **Cleaning Instructions:**

- Blot stains with dry cotton cloth. Then use damp cloth in circular motion (except suede).
- Use professional cleaner/protector when needed.

- **Maintenance:**

- For daily care, simply wipe with a clean, dry soft cloth. Once a week, use a feather duster or vacuum cleaner to remove dust buildup on the sofa's structure.
- It is recommended to regularly pat and tidy cushions, backrests, and other areas that are frequently used to maintain a neat appearance.

- **Other:**

- Please operate with awareness of potential risks. Persons aged 14 and above, or individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, should only use the product under proper supervision and guidance.
- Children must not use or play with the product unsupervised.
- Cleaning and maintenance must not be carried out by unsupervised children.
- This product does not contain user-serviceable parts. If malfunction occurs, please contact your supplier.

TROUBLESHOOTING

If the product malfunctions, please refer to the table below for possible causes and solutions.

Problem Description	Solution
Function frame not flexible	Adjust product position (level).2. Add a small amount of lubricant at the stuck position.
Vibration or shaking occurs when product is operating	Clear objects or obstructions under or around the sofa.2. Adjust the distance from the wall.
Unpleasant odor from product	Keep ventilation or spray sofa with specialized deodorizer.
Remote control buttons not working Massager not working USB charging not working	Check whether the connection cables are properly connected.
If the problem persists after following the above troubleshooting methods, please contact customer service.	