



# INSTRUCTION MANUAL

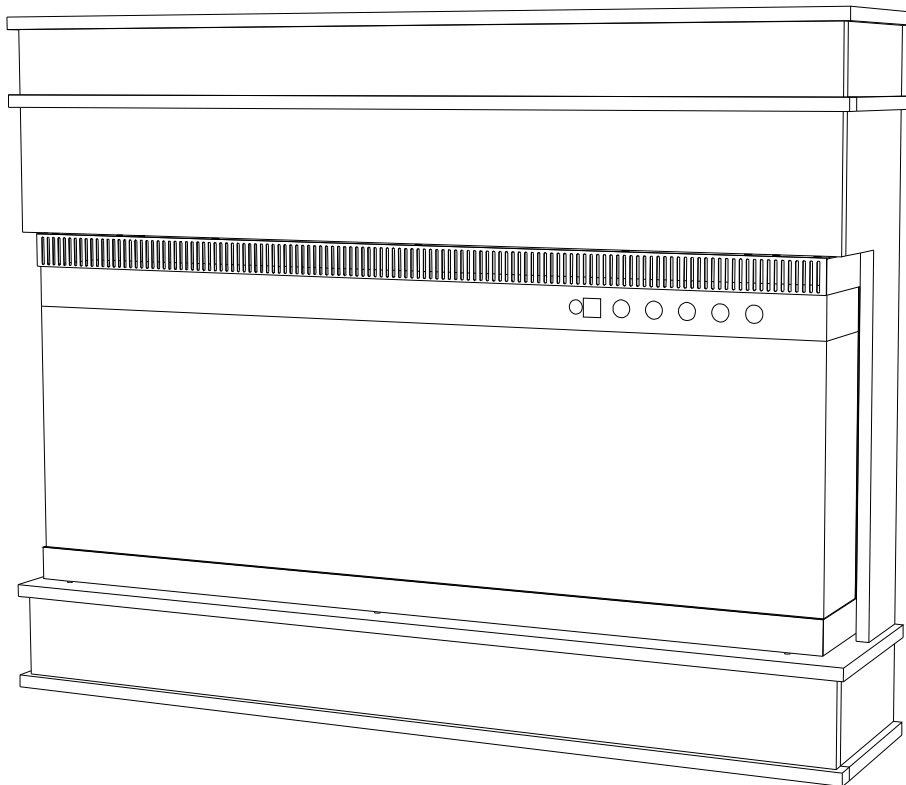


# GENERAL ASSEMBLY GUIDELINES



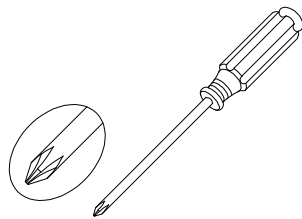


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product.

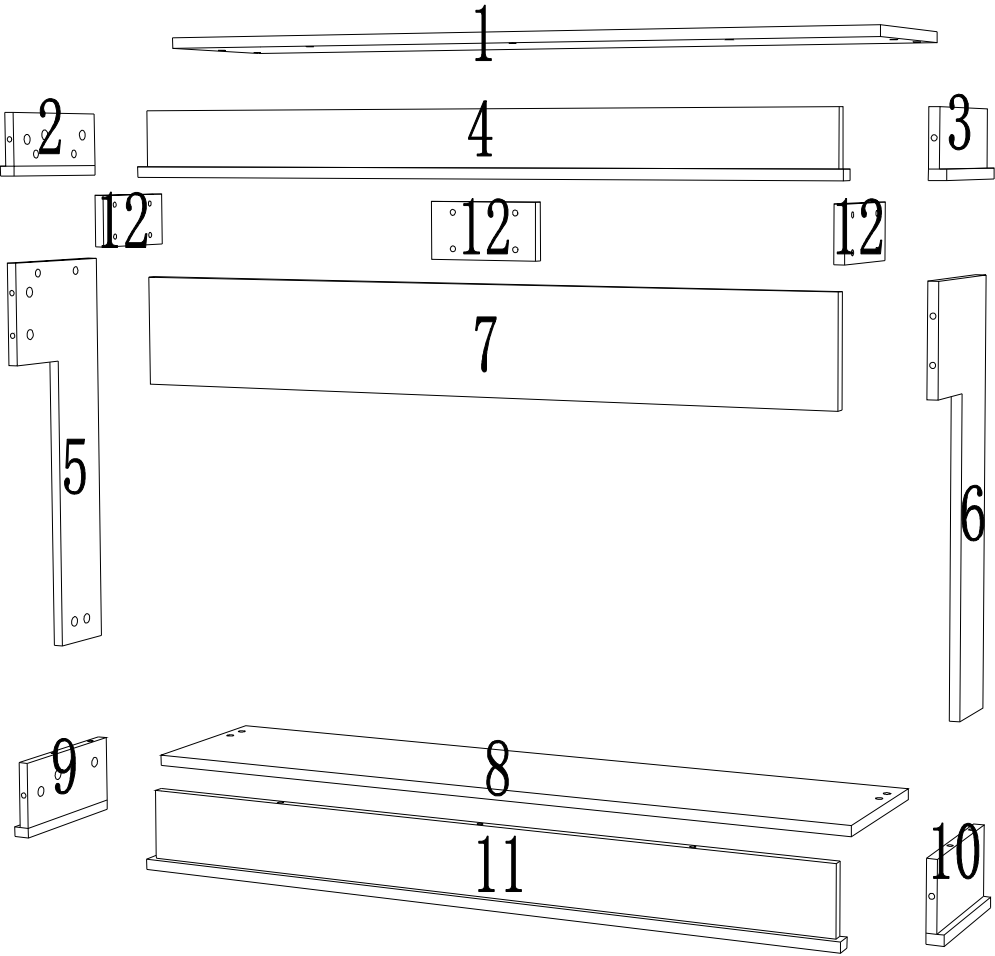

# PARTS LIST

 
 

 
 


# ACCESSORIES LIST

A			CAM LOCK	28 PCS
B			CAM LOCK	28 PCS
C		Ø6*25	BOLT	14 PCS
D			SHIM	14 PCS
E		Ø4*12	SCREW	4 PCS


*The hardware quantities listed above are required for proper assembly,  
Some extra hardware may also have been included.*

# ANTI-TIP KIT

PART	IMAGE		DESCRIPTION	QTY
AA			MOUNTING BRACKET	2 PCS
AB			ANCHOR	2 PCS
AC			NYLON STRAP	1 PCS
AD	+ 	Ø4*15	FLAT HEAD SCREW	2 PCS
AE	+ 	Ø4*30	FLAT HEAD SCREW	2 PCS

*The hardware quantities listed above are required for proper assembly,  
Some extra hardware may also have been included.*

Fig 1

A  X11

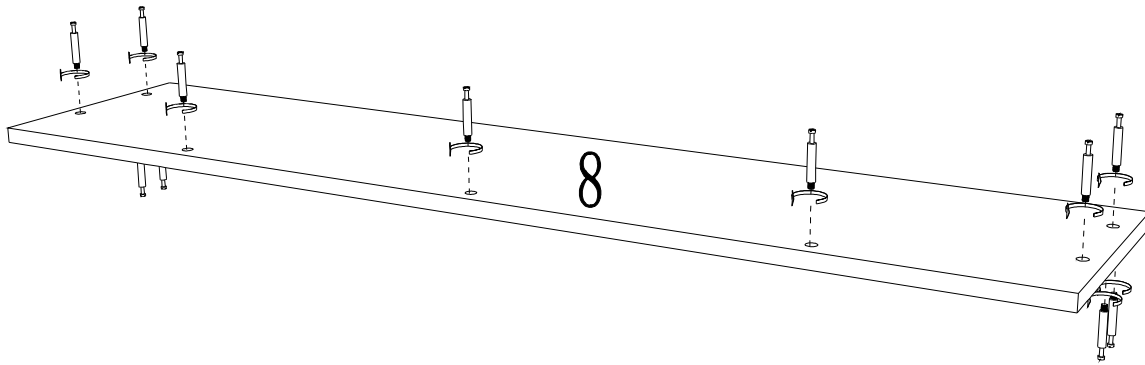



Fig 2

A  X2

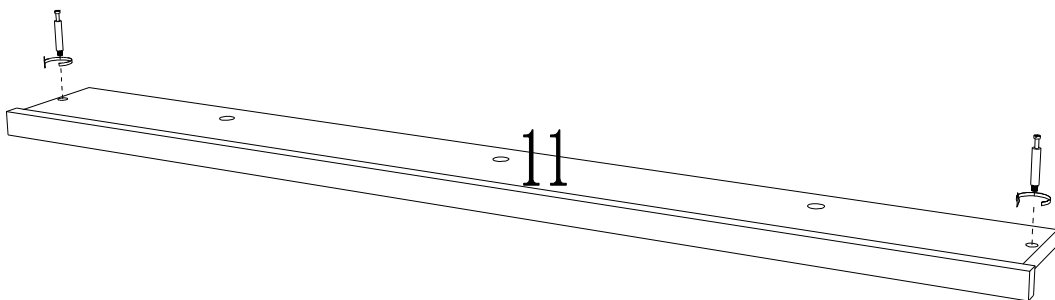


Fig 3

B



✖2

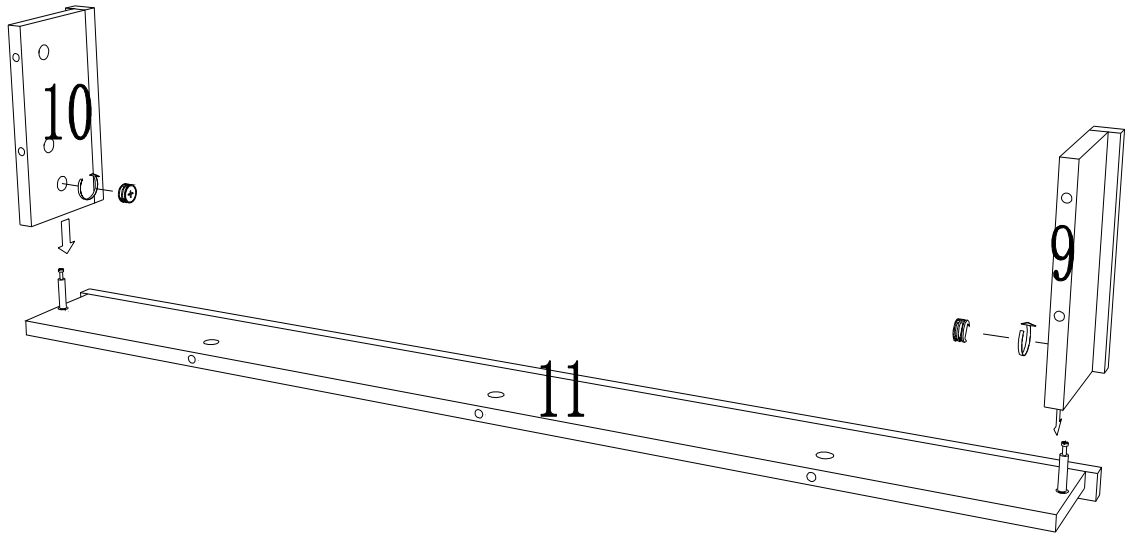


Fig 4

B



✖7

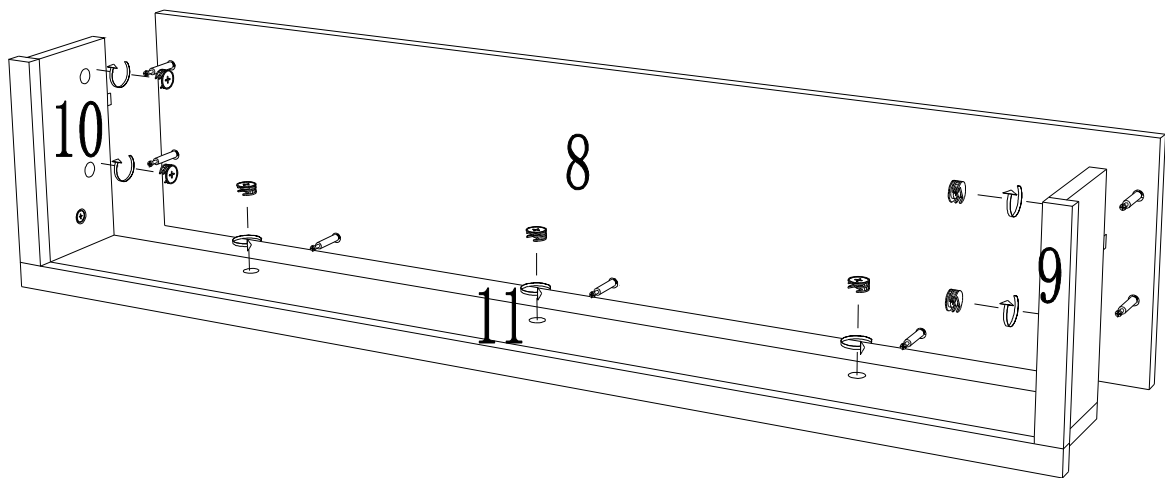


Fig 5

B



✕4

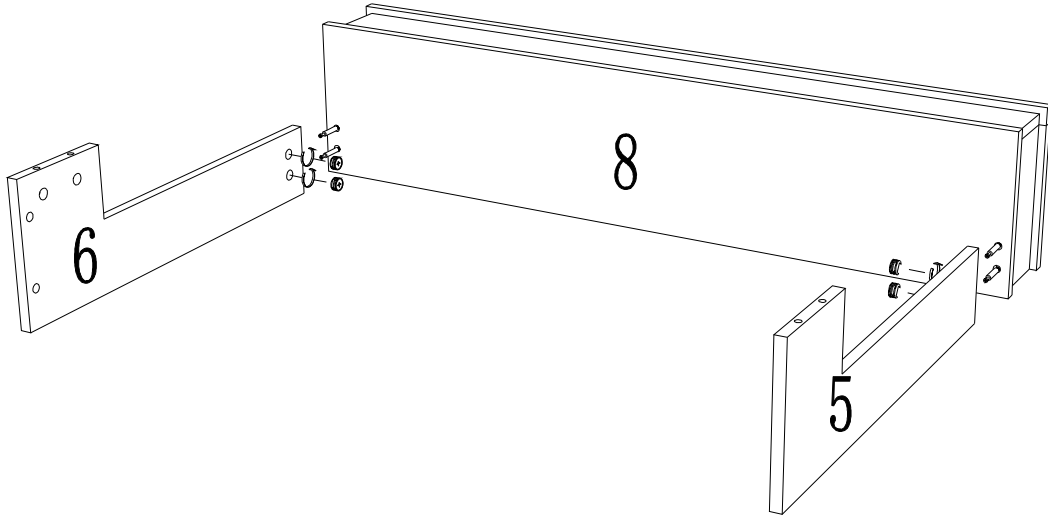


Fig 6

A



✕4

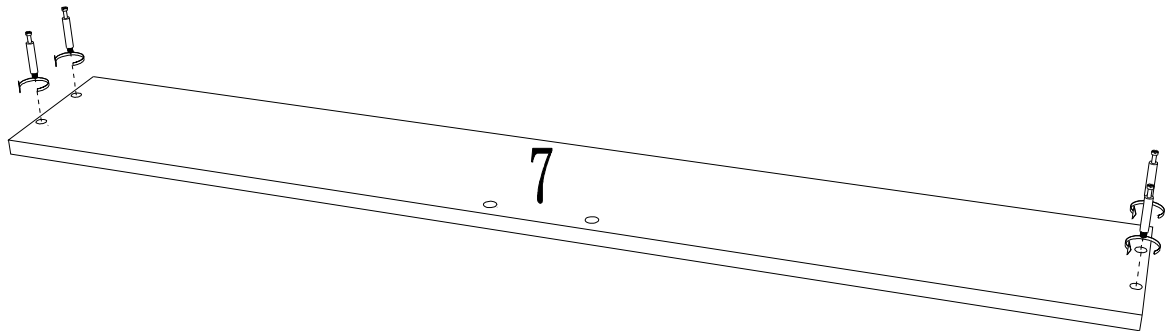


Fig 7

B



✖4


 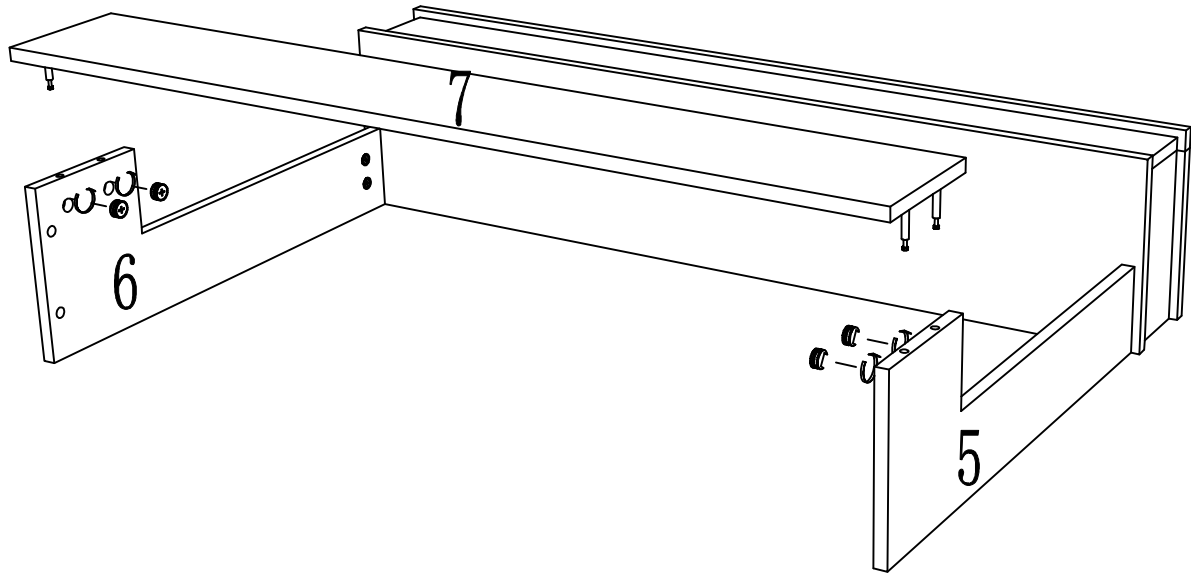


Fig 8

A



✖7

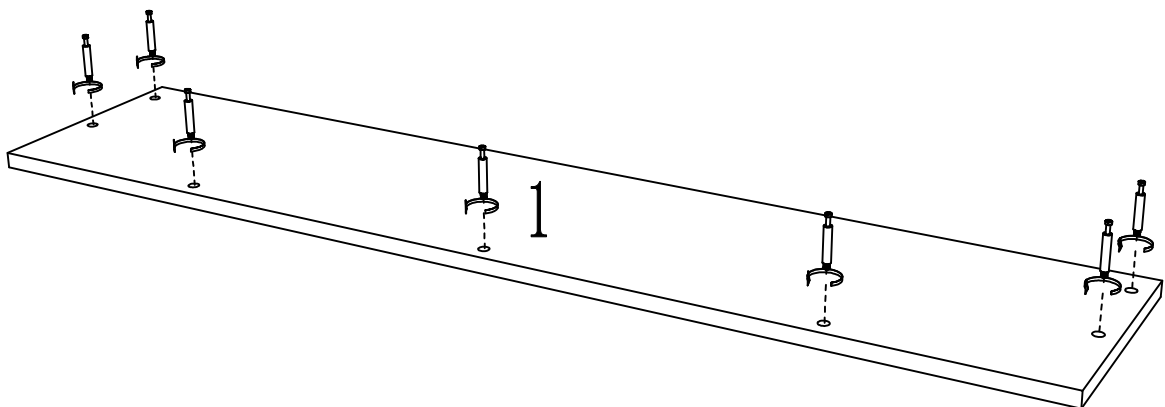
 


Fig 9

A  ×2

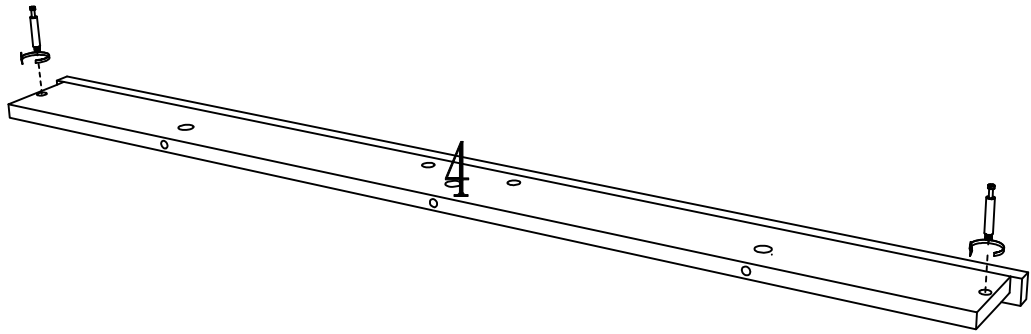


Fig 10

B  ×2

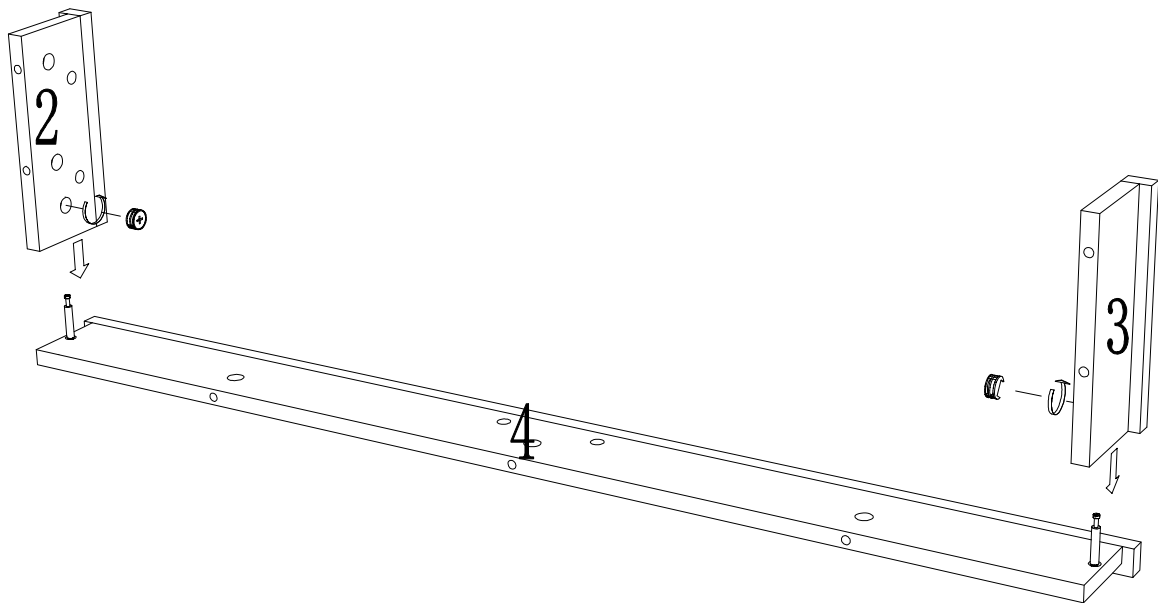


Fig 11

B



✖7

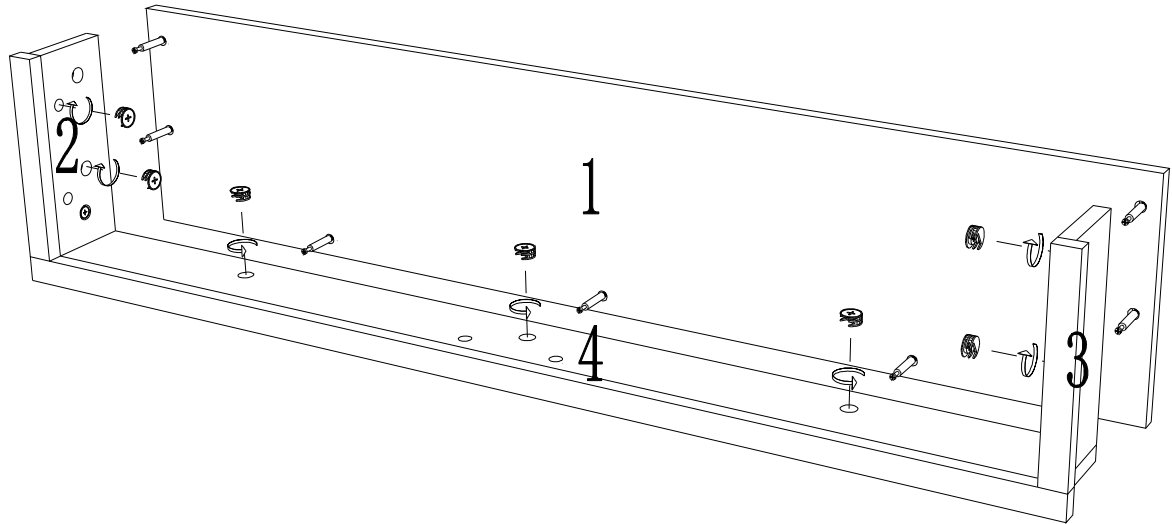


Fig 12

B




✖12

B




✖12

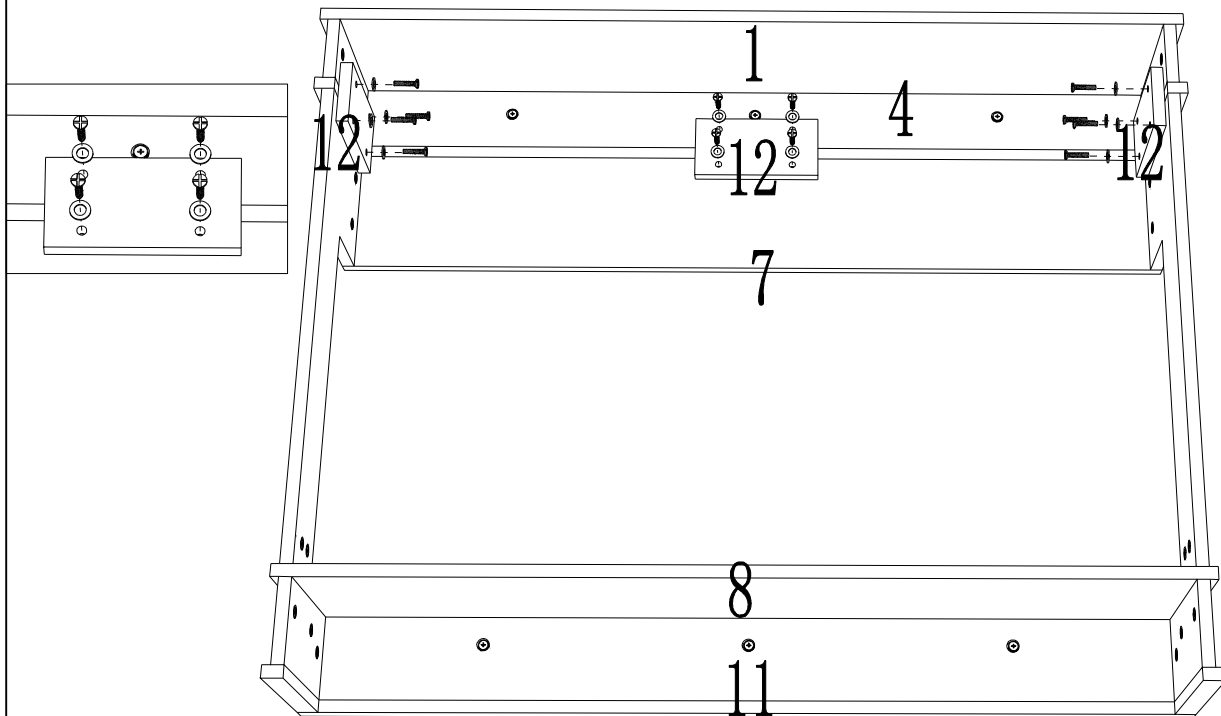

# Fig 13

Lay the heater on the floor or a soft place, install the rubber mats with 4 pcs screws ( 4x10mm)

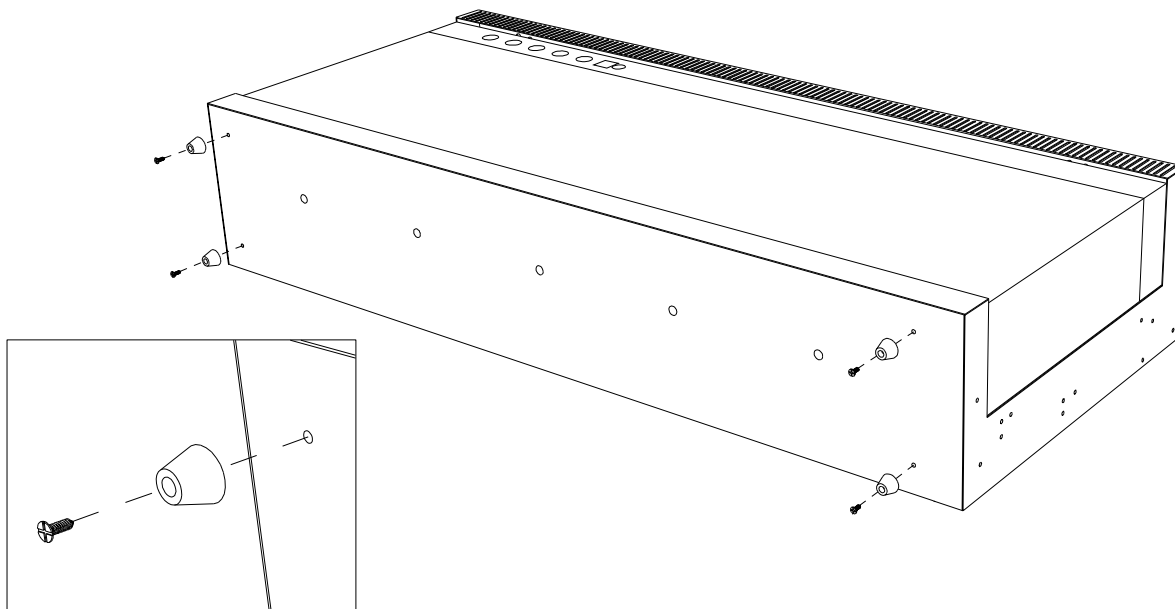

# Fig 14

Attach the fasten bracketvto the heater with 4 pcs screws ( 8x10mm)

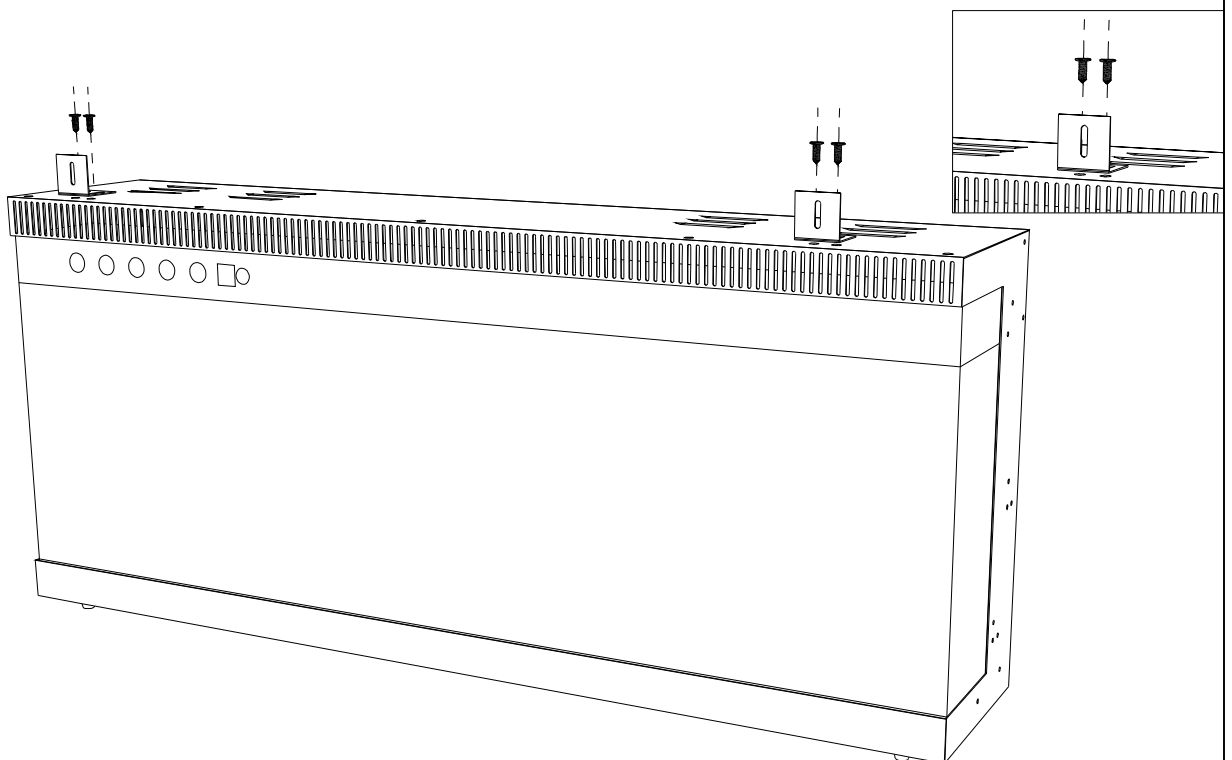


Fig 15



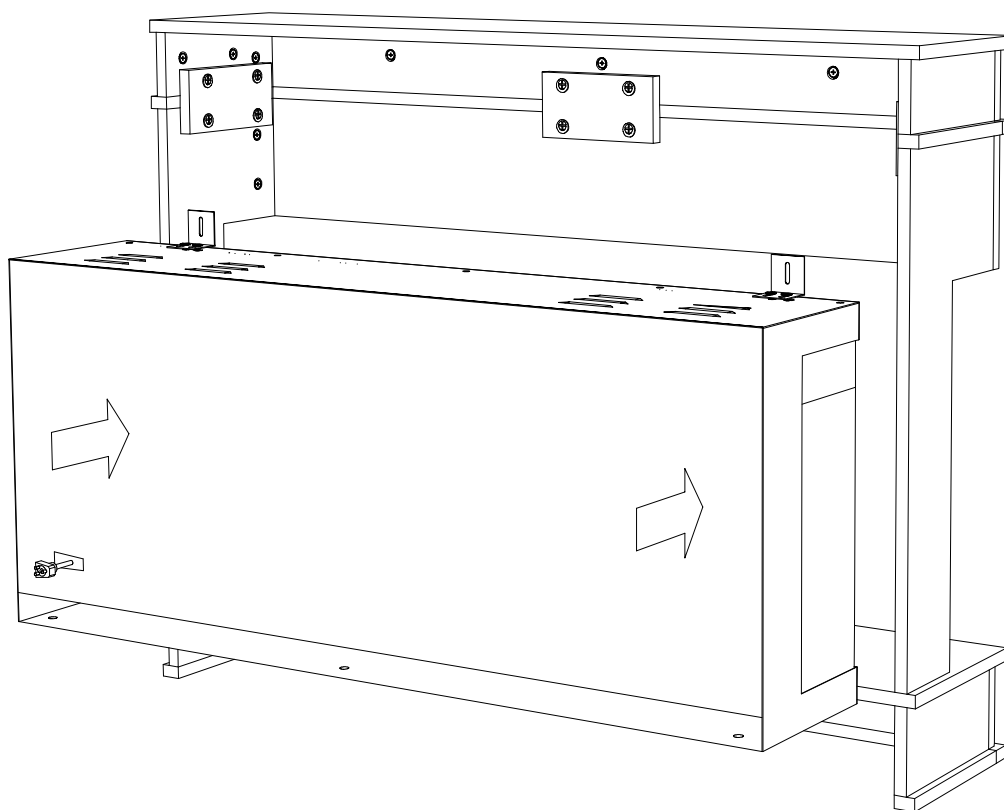


Fig 16

E  ×2

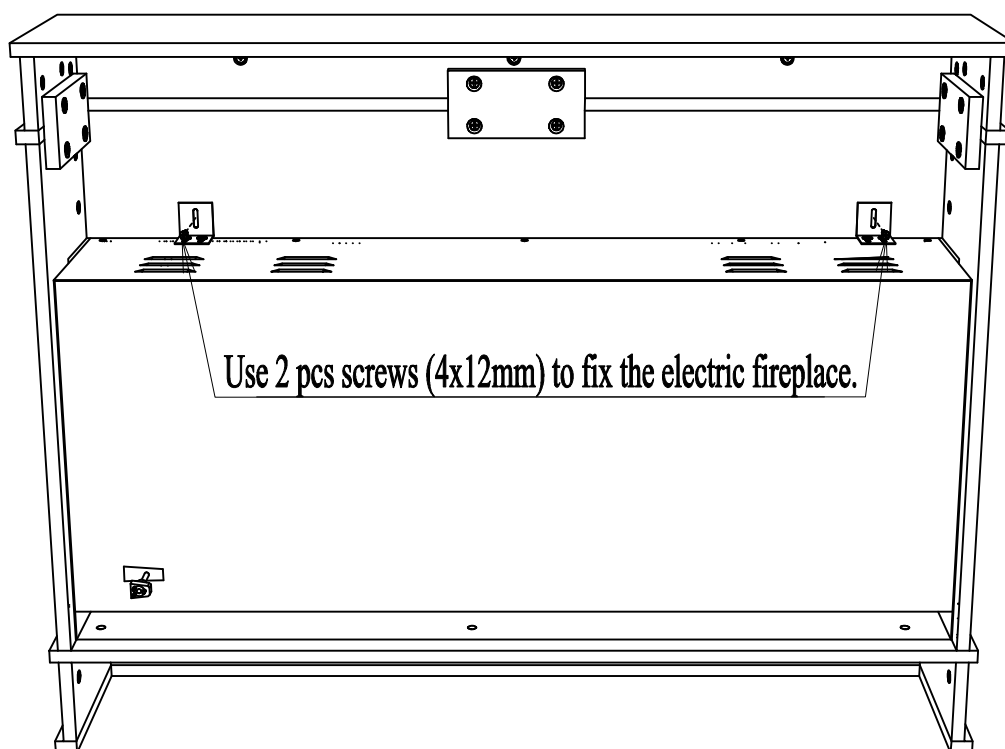


Use 2 pcs screws (4x12mm) to fix the electric fireplace.

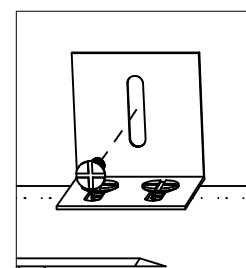

# Assembly

## Anchoring the media console

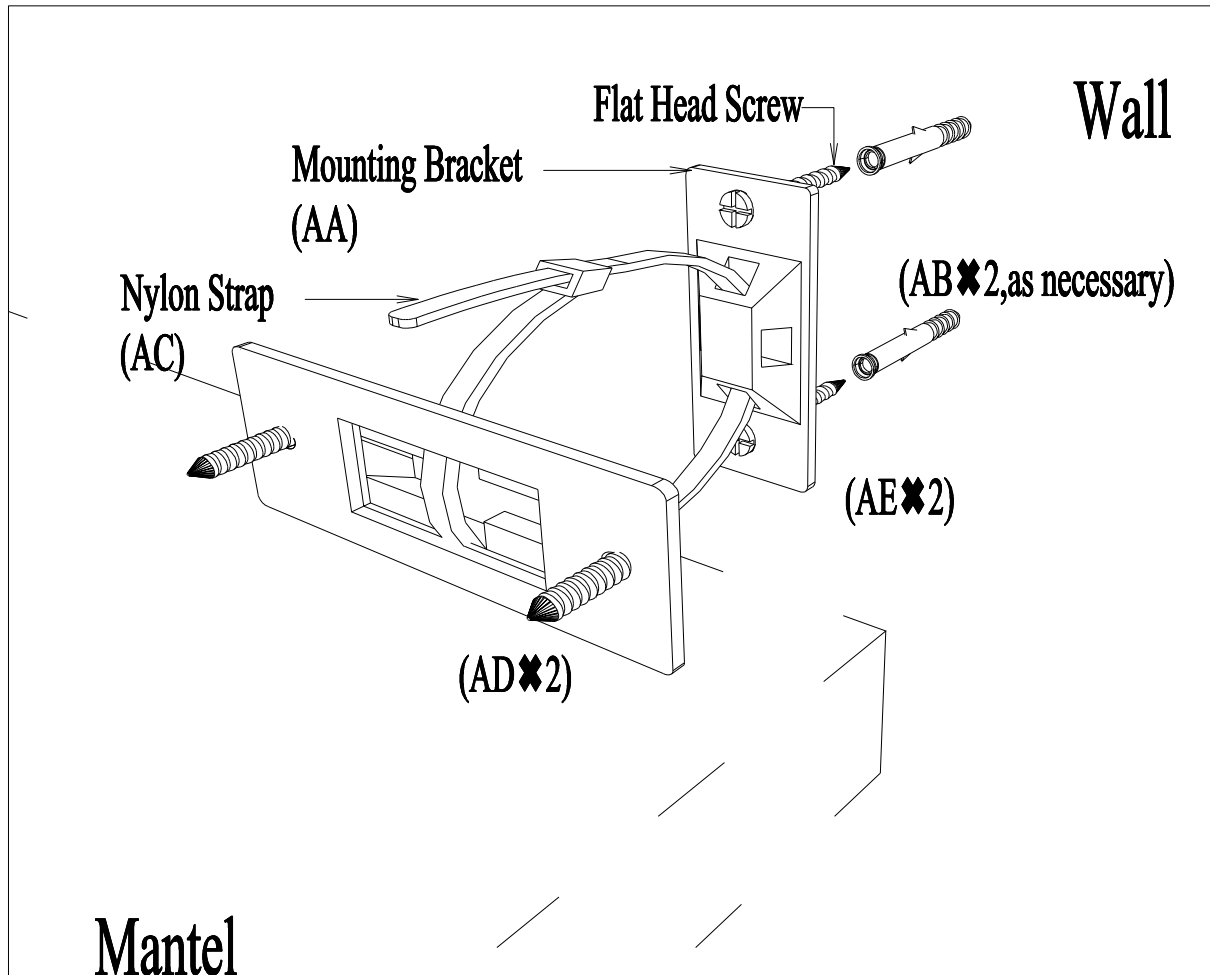

### Care and maintenance



Do not use abrasive or chemical cleaners. Discolouring or damage to finish may result.  
Clean media console with a non-abrasive cloth. Clean as often as necessary.

### NOTE:

Excessive sun exposure may cause discolouring or fading of media console finish.