

Open the override lock cover, insert the override key and turn counter-clockwise until it stops. Next turn the handle clockwise to open the safe.

## **INSTALLING BATTERIES**

Open the battery compartment cover at the rear of the door. Install the batteries as shown on diagram (4 AA batteries). Close the battery compartment cover.

# SETTING AND CHANGING PERSONAL CODE

- 1. Open the door and press the red button at the rear of the door. The yellow light will flash.
- 2. Set a personal code, input a 3 to 8 digit set of numbers.
- 3. Press "A" or "B" to confirm.

The yellow light will turn off, indicating the code is entered into successfully. Use the same procedure to change the code.

### USING YOUR PERSONAL CODE TO OPEN THE SAFE

Input your 3~8 digit personal code then press "A" or "B" to confirm. When the green light flashes, turn the handle clockwise to open the safe.

## WRONG CODE PROTECTION

If you input a wrong code, the safe will not open. If 3 consecutive inputs of the wrong code are entered, the keypad will lock for 20 seconds. If 3 consecutive inputs of the wrong code again, the system will lock for 5 minutes. Operation can resume after the five minute period.

## **EMERGENCY SYSTEM**

If you forget your code or the batteries expire, you can use the emergency system to open the safe. Open the override lock cover, insert the override key and turn counter-clockwise to the end. Turn the handle clockwise to open the safe.

### **LOW VOLTAGE**

When you open the safe the red light is flashing, this indicates system is in low voltage. Replace the expired batteries with fresh AA alkaline batteries.

### IMPORTANT WARNING

DO NOT keep your emergency override keys inside of the safe