


Smart toilet

Product specification

Installation diagram:

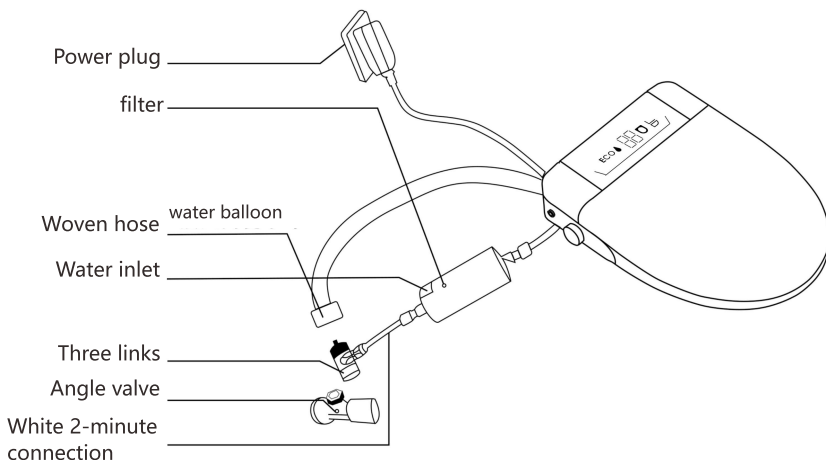

1. One end of the tee is screwed on the Angle valve, and the other end is threaded with the ceramic braided hose.
2. one end of the tee connector is twisted into the filter, and the other end of the filter is inserted into the PE2 speed nozzle to connect the intelligent seat cover.
3. open the Angle valve, open the three-way switch, plug in the power plug.

Installation master note:

1. Before installation, please open the corner valve and drain the sediment and sewage in the water pipe for 2-3 minutes before installation, so as to avoid internal blockage of the intelligent seat cover, resulting in leakage and dripping of the nozzle.
2. the filter should be aligned with the water inlet and outlet, and can not be reversed.

Catalogue

Contents

Important safety guidelines.....	1
Safety precautions.....	2
Precautions for use.....	6
Confirmation before use.....	8

Usage method

Knobs, operation keys instructions.....	10
Remote control instructions.....	11
Handrail keys use instructions.....	13
Voice command.....	14
Instructions for use.....	15

Cleaning and maintenance method

Disassembly and cleaning.....	16
When the sprinkler function is weakened.....	17
Remote control battery replacement.....	17
When not in use for a long time.....	18

When there is a danger of freezing in winter.....	19
Fault diagnosis.....	20
specification.....	21

Important safety guidelines

When using electronic products, especially in the presence of children, please follow the safe operation guide. Please read all guidelines before installing and using the product.

Hazard one to reduce the likelihood of electrocution

1. Do not place or store the product in a place where it may get wet.
2. do not drop the remote control into the bathtub, sink and other liquids.
3. do not spray water into the product or plug part.
4. after use, wipe the water on the machine, ventilation, to avoid water vapor condensation in the machine.

Warning 1 To prevent the possibility of scalding, electric shock, fire and injury

1. Users (including children) with physical, perceptual, or intellectual disabilities or lack of experience and common sense need to be accompanied by others when using the product and please adjust the temperature to the lowest setting or turn off the toilet seat temperature function. Do not allow children to play with this device
2. the product is limited to the functions listed in this manual, do not use the auxiliary equipment that is not recommended by the company.
3. product wire or plug damage, product failure, product damage or fall into the water, please do not continue to use this product. Send the product to a nearby designated service center for inspection, overhaul or adjustment.
4. please ensure that the wire is not burned.
5. Do not use this product in a drowsy or sleeping state.
6. Do not drop or insert anything into the product opening or water pipe.
7. Do not use this product outdoors.



Please save this safety guide

Safety precautions

Be sure to comply

Please read this (Safety Precautions) carefully and use it correctly. The precautions listed here are important for safety, so be sure to follow them.

The logo and meaning are described below

 warn	Indicates that misoperation without regard to this symbol may result in serious injury or death.
 Look out	Indicates that misoperations performed without regard to this symbol may result in personal injury or property damage.

Examples and descriptions of ICONS

	 It is not feasible, it is forbidden. The picture on the left shows (disassembly prohibited).
	 Represents something that must be (enforced). The picture on the left shows (must be obeyed).



warn



No splashing

Do not pour water or detergent on the product body or power plug

- May cause fire or electric shock
- May cause the toilet to break, damage or indoor water seepage.

This product is an electrical product, so do not install it in a place that is easy to be spilled by water or high humidity. When using the bathroom, please install ventilation fans or ventilation ports to keep good air circulation in the bathroom.

- May cause fire or electric shock.

Please set the sockets for power distribution as follows

- If wiring is not done according to the following requirements, it may cause fire or electric shock.

a. The circuit of the socket should be protected by high sensitivity, fast leakage switch (rated inductive current below 15mA) or insulated transformer (above 1.5KVA, below 3KVA).

b. The installation position of the socket must be above 0.3m on the floor, and as far away from the bathtub as possible.



The grounding wire of the product must be grounded and connected to the ground wire

- Electric shock may occur if not grounded.

Note: The grounding treatment mentioned here refers to the grounding resistance below 100 Ω , and the grounding wire of the switchboard uses copper wire with a diameter of 1.6mm or more.

When used in the bathroom

Please make sure that the power plug is waterproof with silicone

- May cause fire or electric shock if not waterproofed.

⚠ warn



Do not use
in wet places

Do not install this product in damp places such as bathrooms

- May cause fire or electric shock



Disassembly
prohibited

We must not disassemble, repair
or transform products without
permission

- May cause fire or electric shock



No wet hands

Do not insert or remove the
power plug with wet hands

- It could cause an electric shock



prohibit

Do not continue to use the
product when it fails

When the following situations occur,
remove the power plug and close the
inlet Angle valve to stop the water.

Fault content.....
Body leakage
The product cracks and cracks
Abnormal sounds and odors appear
Product smoke
Abnormal product heating
The toilet is clogged

- If continued use is faulty, it
may cause problems such as
fire, electric shock or water
seepage in the room



prohibit

Do not damage the power
cord or the seat cable

Do not pull, do not process,
do not heat, do not forcibly bend,
do not pull, do not place heavy
objects on the power cord and
the seat cable

- If you continue to use the product
despite the damage, it may cause fire,
electric shock and short circuit. If the
power cable is damaged, it should be
repaired by a professional.



prohibit

Do not use a loose power socket

- May cause fire or electric shock
fire and electric shock.



prohibit

Do not use multiple electrical
sockets

- Do not connect the wire or
use the extension cord in the
middle, which will lead to
fire and electric shock.



prohibit

Do not use water other than
tap water

- May cause skin irritation and
other problems



prohibit

Do not use a power supply
other than 220V AC

- May cause fire

⚠ Look out



Pay attention to low temperature scald-

- If you sit on the toilet seat for a long time,
please adjust the temperature of the toilet seat
until the temperature indicator is off.
- When the following persons use the insulated
toilet seat and the warm air to dry, please adjust
the temperature of the toilet seat to the position
where the indicator light is off, and the warm air
temperature to the state where the indicator
light is off.

Children, the elderly can not
adjust the temperature to the
appropriate degree. Sick people,
disabled people and other
people with limited mobility.
Drowsy people who have taken
sleepable drugs (sleeping pills,
cold medicines, etc.), heavy
alcohol consumption and
excessive fatigue.



No fire

Keep cigarettes and other kindling away from the product

- It could cause a fire



prohibit

Do not put or block the warm air outlet with your fingers or other objects
Do not blow the warm air out of the hand shield, do not cover the warm air out of the clothes


- May cause scalding, electric shock, burn.
- Users (including children) with physical, perceptual, intellectual disabilities or lack of experience and general knowledge.
- Do not allow children to play with this device.



prohibit

Do not exert force or impact, do not stand on the toilet seat, toilet cover or body, do not place heavy objects

- It may cause product cracking, body falling apart, and personnel injury.
- A broken toilet can flood the room.

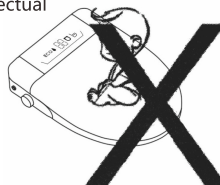

prohibit

During maintenance, please use diluted kitchen detergent (neutral), do not use the following products

(toilet detergents, residential detergents, gasoline, banana water, detergent powder, nylon brushes, etc.)

- may damage the plastic, causing it to crack and cause personal injury.
- May damage water pipes and cause water leakage.



prohibit

When the inlet Angle valve is open, do not remove the inlet filter and attach the water drain cock to the inlet filter

- It may cause water leakage.



do not twist or damage the water inlet hose


- It may cause water leakage.



prohibit

Do not use the smart cover plate to rinse anything other than large or urinating

- Otherwise, it may lead to clogged toilet seat and sewage overflow.

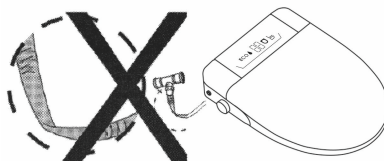

Must abide by

If you do not use it for a long time, remove the power plug

- For safety reasons, please pull out the power plug.
- When used again, the corroded water can cause skin inflammation, etc. Please use it after running the water again.



Must abide by

When water leakage occurs, close the inlet Angle valve to stop the water



Must abide by

The pages are protected against damage caused by freezing

- Freezing may cause damage to the water inlet configuration and the internal body, resulting in water leakage.



Must abide by

Tighten the water filter securely when installing it

- Otherwise it may cause water leakage water again.

Please keep warm and raise the temperature of the toilet.

Plug in the power cord properly



Must abide by

- Before use, please make sure the power cord plug is properly inserted. The plug should be tightly attached to the socket without any looseness or incomplete insertion. Otherwise, it may cause an accidental fire due to overheating.

- When this product is not in use for a long time, please unplug the power cord.



Must abide by

Do not expose this product to direct sunlight

- It is prone to cause the product to discolor, age or crack



Must abide by

Liability Statement

- When installing this product, a floor drain should be installed. Otherwise, any leakage or water accumulation problems are not the responsibility of our company.

Warm reminder

Children should not play with this product. When children use this product, they should be supervised by an adult.


2. To install this product, use the hose provided with this machine for water connection. Old hoses are not allowed for connection.

3. The place where the toilet is installed must have a floor drain. Otherwise, any water accumulation problem is not the responsibility of our company.

4. When installing a smart toilet with a water tank, please be sure to use the dedicated accessories provided with the smart toilet. Do not change the toilet accessories at will.

5. Before installing the tankless smart toilet, please test the water pressure and flow rate at the toilet installation site.



It is recommended to fill 5 liters of water in 15 seconds at the corner valve of the toilet.

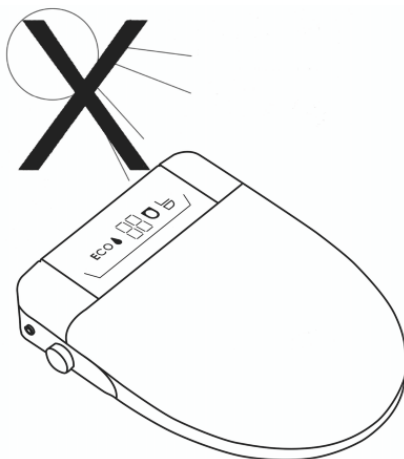

Precautions for use



Please be sure to comply with the following

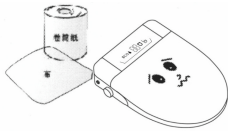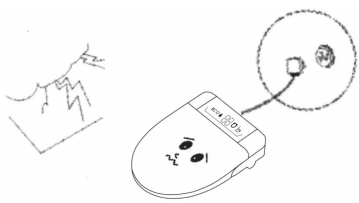

Cause of injury and damage	
Do not wipe the product body, toilet seat or lid with dry cloth or toilet paper. 	Direct flushing with water is strictly prohibited 
Fault cause	
Do not urinate on body and nozzle 	When thunder strikes, pull out the power plug 
Poor movement	
The sending and receiving signals of the seat sensor, the body detection sensor and the remote control shall not be covered. • May cause misoperation of smart toilet.	
Do not lean back against the toilet cover • May cause damage to housing and damping.	



Please be sure to abide by the following matters

To prevent damage caused by freezing at night when freezing may occur, take anti-freezing measures.

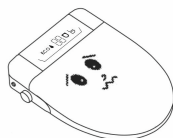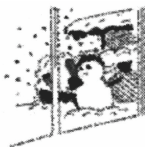

Please do not place heaters or heaters near the body.

- Discoloration or malfunction may occur

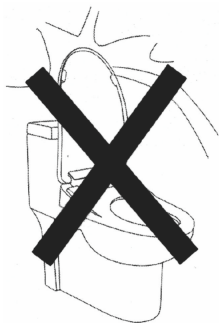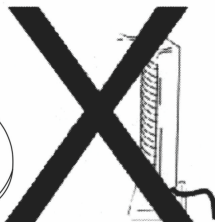

Please do not violently open the seat ring or cover

- Cracking or failure may occur


Confirm the items before use



For the first time using the smart cover plate, please be sure to confirm the project

Plug the power into the socket


1. Insert the power plug into the 220V AC socket.

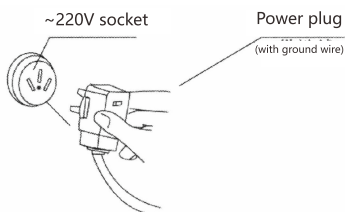

2. Check whether the power indicator of the status indicator is on



Check whether the water inlet valve is open

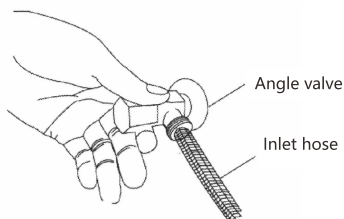

Confirm whether the water inlet hose from the water inlet valve to the intelligent cover plate is installed in place



warn

Do not use the power supply other than 220V AC. Please wire according to relevant regulations.

* Easy to cause fire *



warn

Make sure the ground cable is securely connected

The power plug of this product is three-phase plug (with ground wire).

There is a risk of electric shock in case of failure or leakage.

If there is no ground plug on the socket, consult the electrical installation company.



Confirm the items before use

Confirm functions

1. If the sprinkler and its water pipe are leaking, dry all parts of the water pipe and check with absorbent paper.

2. Press the seat ring seat sensor, whether the buzzer has a "drop" sound.

3. Check whether the cleaning and drying action is normal.

4. Whether the damping buffer mechanism is normal.


Seat sensing position



When checking cleaning and drying, the sensor should be confirmed to start. When cleaning, cover the front end of the nozzle, block the nozzle water, so as not to splash.

Instructions for Knobs and Operation Keys (Optional Functions)

Note: What style to purchase depends on what design you are buying

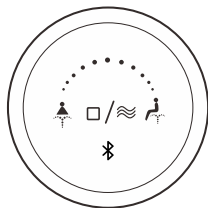

Short display screen The picture is for reference only

When the display screen lights up, it indicates that the device is on; when it turns off, it means the cover plate is off or the device has entered sleep mode.

2: Cleaning and drying: Display and activate the corresponding execution kinetic energy

Knob key operation:

Before taking a seat: Press and hold the knob for 3 seconds to turn it on or off

After taking a seat: Rotate the knob clockwise briefly to start the buttock cleaning. Then rotate the knob again to move the buttock for cleaning

(Note: You must take a seat for cleaning).

Counterclockwise short turn the knob: Start the female cleaning, and then short turn the knob again for the female moving cleaning.

(Note: You must sit down when cleaning.)

Press the knob gently: Start the warm air drying

(Note: You must sit down for drying)

To activate the corresponding usage function, gently press the knob, that is, the stop button

(to stop the function being executed).

Black long display screen

The picture is for reference only




1: When the display screen lights up, it indicates that the device is powered on; when it turns off, it means the cover plate is turned off or the device has entered a sleep mode.

2: Cleaning and drying: The corresponding execution kinetic energy is displayed and activated

The ECO light is on to activate the energy-saving mode


Remote Control Instructions (Optional Functions)

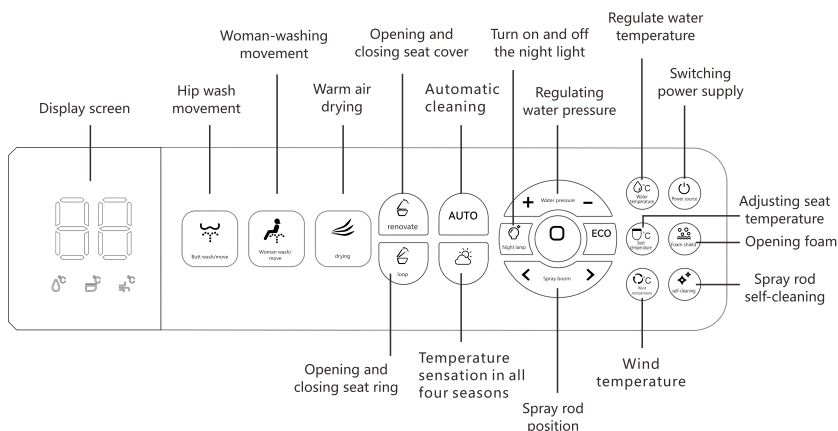

Hidden Function (Knob operation)(Using Large remote control)

- 1: Adjusting the force for flipping the cover and the coil: Press the power button briefly on the remote control to turn off the device. Within 3 seconds, press the nozzle forward to enter the adjustment. Press the forward button briefly again to adjust the force for flipping the cover. Press the backward button to adjust the force for flipping the coil. After adjusting the required force, turn on the machine and confirm.
- 2: Microwave on/off: When the device is turned on, press and hold the lid button on the remote control for a long time. The lid will close once and open twice.
- 3: Microwave sensing distance: Press the power button briefly on the remote control to turn off the device. Within 3 seconds, press the flip cover button briefly to enter the adjustment. Press the nozzle forward movement button to increase the gear. Press the backward movement button to decrease the gear. After adjusting the required distance, turn on the machine to confirm.
- 4: Automatic foaming on and off: Press the power button briefly on the remote control to turn off the device. Within 3 seconds, press and hold the foaming button for a long time. One beep will turn it off, and two beeps will turn it on. Confirm the startup.
- 5: Bubble duration setting: Press the power button briefly on the remote control to turn off the device. Within 3 seconds, press the water temperature button briefly to enter the adjustment. Press the water temperature button briefly again to increase the gear (cycle button). After adjusting the required time, turn on the device to confirm.
- 6: Infrared therapy on/off: Briefly press the power button on the remote control to turn off the device. Within 3 seconds, briefly press the hip wash button. Press once to turn it off and twice to turn it on. Confirm the startup.
- 7: Four Seasons temperature on and off: Press the short power button on the remote control to turn off the power and enter the adjustment state. Then press the seat temperature button briefly. One beep turns off the function, and two beeps turn on the function. Confirm the startup.
- 8: Remote control alignment (Long turn the knob in the direction of the buttock wash. After the cover plate makes a long beep, briefly press any key on the remote control.)
- 9: Restore factory Settings. When the device is turned on, press and hold the power button on the remote control for a long time to restore the cover plate to factory Settings.

Instructions for Small Remote Control (Optional Functions)

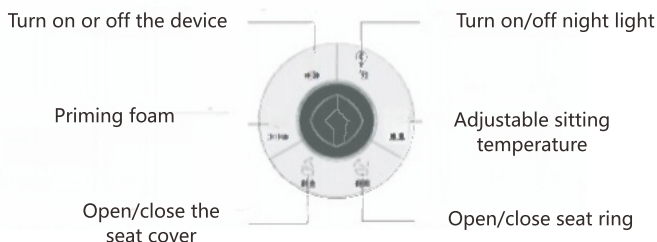

Hidden function (Handrail style operation method)(Use a small remote control.

1: To adjust the force for flipping the lid and the circle, briefly press the power button on the remote control to enter the shutdown state. Within 3 seconds, briefly press the lid adjustment button to enter the adjustment state. After checking if the cover plate display shows the 07 position, briefly press the lid again to adjust the force for flipping the lid, and briefly press the picture flipping button to adjust the force for flipping the circle. After selecting the required force, briefly press the power button on the remote control to turn on the machine for confirmation. (Note: 01 is the lowest gear and 14 is the highest gear.)

2: Microwave on/off: When the cover plate is turned on, press and hold the lid flip button on the remote control for a long time. The cover plate will beep once to turn off the microwave, and beep twice to turn it on (Note: Microwave is also known as radar).

3: Microwave sensing distance. Briefly press the power button on the remote control to turn off the device. Within 3 seconds, briefly press the seat temperature button to enter the adjustment state. Briefly press the flip cover button to increase the gear. Briefly press the flip ring button to decrease the gear. After selecting the required distance, briefly press the power button on the remote control to turn on the device and confirm.

4: Automatic foaming: Press the power button briefly on the remote control to enter the shutdown state. Within 3 seconds, press the foam button briefly on the remote control. The cover plate will beep once to turn off the automatic foaming function, and beep twice to turn it on. Power on to confirm.

5: To set the bubble duration, briefly press the power button on the remote control to turn off the device. Within 3 seconds, briefly press the night light button to enter the adjustment state. Then, briefly press the night light button again to increase the gear (cycle button), and turn on the device to confirm.

6: Infrared therapy on and off: When the cover plate is turned on, press and hold the night light button for a long time. One beep turns off the therapy function, and two beeps turn it on to confirm the startup.


7: To turn on and off the temperature throughout the four seasons, briefly press the power button on the remote control to power off and enter the adjustment state. Then, briefly press the seat temperature button, and the function will be turned off with one beep and turned on with two beeps.

8: Remote control alignment (Long turn the knob in the direction of buttocks washing, the cover plate will beep once long, and short press any key on the remote control).

9: Manual UV (when sitting out, briefly press the spray lever adjustment function on the armrest).

10: Press and hold the power button on the remote control for a long time to restore the cover plate to factory Settings.

Armrest Button Usage Instructions (Optional Functions)

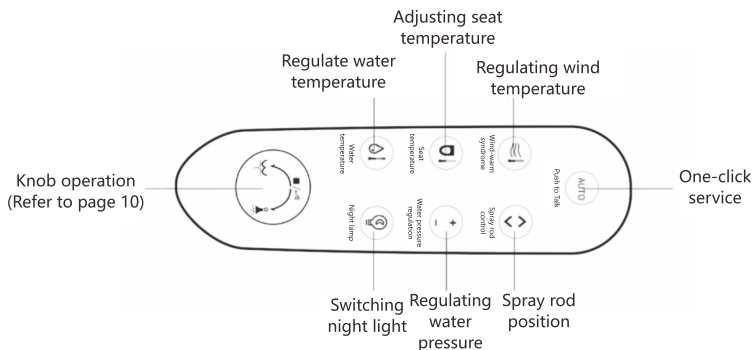

Before taking a seat:

- 1: Press and hold the knob for a long time to turn it on/off.
- 2: Buttocks/Female cleaning/One-click cleaning (cannot be performed at this time if not seated)
- 3: Drying: On/off (cannot be performed at this time if no seat is taken)
- 4: Cleaning position/water potential (cannot be carried out if no seat is taken)
- 5: Water temperature/seat temperature/air temperature: Adjustable. Each function has four Settings (circulation key).
- 6: Night light switch: Press briefly to turn on and off (cycle key)

After taking a seat:

- 1: Press the knob briefly to stop the ongoing cleaning function.
- 2: Buttocks/Women/One-Button Pass/Drying: The corresponding functions can only be activated when sitting down.
- 3: Cleaning Position: When the cleaning function is enabled, adjust the nozzle to a comfortable position for cleaning. There are three levels of adjustment (cycle key).
- 4: Mobile cleaning: When the cleaning function is enabled, the pipe undergoes repeated cleaning from front to back. Press this function again to return to fixed cleaning
- 5: Water pressure adjustment: When the cleaning function is enabled, the water pressure adjustment is divided into three levels: pressurized cleaning and reduced water pressure (cycle key).
- 6: Water temperature/air temperature/seat temperature: The same as the pre-seat function (cycle key).

"Intelligent Speech Recognition" Usage Method (Optional Function)

● Usage method:

First, use "Xiao Ai Xiao Ai" to wake up the voice system and reply "I'm here!" After that, control is carried out using instructions.

After the voice system sends out "Call me if you need", it needs to be awakened again to be controlled.

● Usage example:

- Xiao Ai, Xiao Ai
- I'm here.
- Turn on the recognition function
- The recognition function has been enabled

Speech recognition instruction list

Category	Instruction
Wake-up word (must be awakened before use)	Xiao Ai Xiao Ai/Xiao Ma Xiao Ma
Basic functions	Open the lid/Close the lid Open the seat ring/Close the seat ring Turn on the night light/Turn off the night light Speak louder/softer
Cleaning and drying functions	Turn on cleaning/Turn off cleaning Female mode/Turn off cleaning Turn on drying/Turn off drying
Cleaning function adjustment	Mobile cleaning Clean the nozzle
Temperature regulation	Raise (increase) the seat temperature/lower (decrease) the seat temperature Raise (increase) the water temperature/lower (decrease) the water temperature Increase (raise) the air temperature/decrease (lower) the air temperature

Instructions for use

Energy-saving function

The following measures can effectively save energy after use, put down the cover.

- Seat temperature and water temperature should not be blindly set to high.
- Adjust to the comfort level.
- Spring, summer, autumn and winter, please adjust according to the temperature.
- Try to use devices with power-saving functions.
- When going out for a long time, please cut off the power supply.
- The machine has automatic sleep function after 3 minutes.
- Sit down/press the button to wake up

* When freezing is possible, please take anti-freezing measures

Close seat ring and cover slowly

The smart cover plate is equipped with a damping buffer so that you avoid the collision sound when closing the seat.

Pedestal sensor

Because the seat sensor is installed, when there is no seat, even if the switch is mistakenly pressed, the spray will not spray water, and the functions of hip cleaning and female cleaning will not be started. The sensor does not work if the following conditions occur: Not seated within sensor range.

※ Please change your seat position

There's water coming out around the nozzle

Before and after cleaning or when the warm water switch is set on, there is water around the nozzle, which is a normal phenomenon in construction, not a fault.



※ In addition to the above conditions, if the water does not stop, please close the water inlet valve, pull the power plug out of the socket, and contact the purchased business to solve.

Remote control unit


When the dry battery power is about to run out, the remote control light turns dark or no display, the remote control operation can not be sensed, please replace the new battery in time.

Disassembly and cleaning

Use disassembly method

Disassembly method of intelligent cover plate


1. Remove the power plug from the socket.

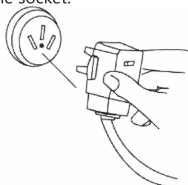

2. Close the water inlet valve to stop supplying water.



3. Press the mounting latch on the right of the smart cover, pull the cover forward, and remove the smart cover

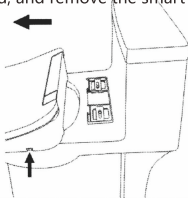

4. Gently place the smart cover on the floor cushion.



1. Be sure to remove the power plug from the socket.

※ Dry burning of heater can cause smoke or fire.

2. Do not connect external power cables or water supply pipes.

※ May cause damage or leakage.

3. When removing the smart cover plate for cleaning, Be sure to handle with care.

※ It will lead to leakage and failure.

4. Do not turn the smart cover upside down without unplugging the power supply. In addition, do not place it directly on the ground.

※ May cause surface scratches or faults.

Do not turn the cover upside down!
Don't put it on the ground!




When I feel the nozzle function weakening


Use the smart cover for a long time if you feel that the spray strength is weakened, please clean the filter in the following order. (Cycle depends on local water quality)

Cleaning method of filter screen

1. Close the water inlet valve.

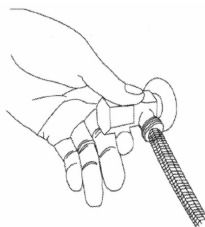


3. Wash the strainer attached to the filter with a small brush and water.

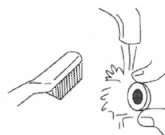

4. Put the filter into the filter in the original direction, and then tighten the water supply hose to ensure that it is firm.

2. Rotate and remove the strainer. Please place a basin and other containers under the corner valve, when a small amount of water will flow out.

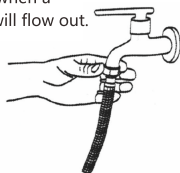

5. Open the Angle valve to supply water to the original position.



6. Finally, be sure to run. (Refer to page 10)

Close the water inlet valve when removing the filter.

When installing the filter, tighten the water supply hose; otherwise, water leakage and indoor water accumulation may occur.

Remote control battery replacement

When the battery is running low, Remote control indicator light fades or turns off.

※ Under normal circumstances, the remote control light is bright.

※ The included battery is mainly used to check the operation of the installation, so the service life may be short.

Replace the battery as follows.

 
Look out

The positive and negative electrodes of the battery must coincide with the logo on the remote control. New batteries and old batteries cannot be mixed.

Please use alkaline batteries.

Remote control battery replacement

Open the rear cover of the battery area of the remote control and replace it with a new battery (two No. 7 batteries).



Battery rear cover


When not in use for a long time

Please be sure to drain the water in the following situations.


- Do not use the smart toilet for a long time due to traveling. (Water pollution can cause blockage)
- When the villa is not used for a long time. (In unoccupied homes, temperatures drop faster than expected and are prone to freezing and leaking)

Drain water and cut off power

1. Close the water inlet valve.

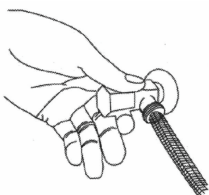


3. Remove the power plug from the socket.

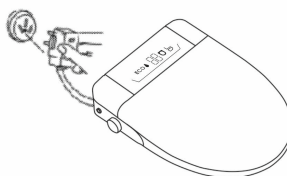

2. Drain the water from the hose.

- Place a washbasin and other container under the inlet valve.
- Remove the water supply hose from the inlet valve and place the end of the water supply hose into the container.

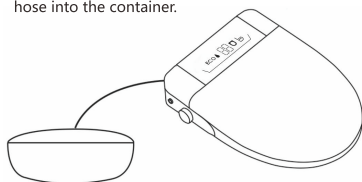

4. When the drain bolt is unscrewed, the water in the small water tank in the cover plate machine is drained, and the bolt is screwed back to its original position.

5. When using again, please be sure to test run.



Look out

When removing the water supply hose,
Be sure to close the inlet valve.
When installing a water supply hose,
Please insert it firmly into place.

※ Easy to cause water leakage
resulting in indoor water.



If freezing occurs, the water does not
spray out

In case the water supply hose or water supply
connector freezes and does not spray water,
cover the hose or water supply connector with a
cloth soaked in hot water to thaw it, or increase
the indoor temperature to allow it to thaw
naturally.

Look out

Do not pour hot water or blow hot air on the hose.

※ May cause damage to the main water supply pipe.

When there is a danger of freezing in winter

In the cold winter, the smart cover plate will be damaged and leaked due to the freezing of water in the cover plate. To prevent freezing, perform the following operations. Please unplug it and plug it into the power outlet to turn on the power.



General anti-freeze measures

1. Switch the water temperature switch and seat temperature switch to [high], and close the seat cover.

2. Turn on the heat in the room.
• If there is no heating in the room, please drain the water from the water supply hose as follows

a. Close the water inlet valve to stop supplying water.




b. Drain the water from the hose.

※ Place a washbasin and other container under the drain valve.

※ Remove the water supply hose from the inlet valve and put the end of the water supply hose into the container.



※ After drainage, please insert the water supply hose.

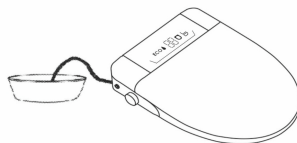

C. Before using again, please be sure to test run.



Look out

When removing the water supply hose,
Be sure to close the inlet valve.

When installing a water supply hose,
Please insert it firmly into place.

※ Easy to cause water leakage
resulting in indoor water.



If freezing occurs, the water does not
spray out

In case the water supply hose or water supply
connector freezes and does not spray water,
cover the hose or water supply connector with a
cloth soaked in hot water to thaw it, or increase
the indoor temperature to allow it to thaw
naturally.

Look out

Do not pour hot water or blow hot air on the hose.

※ May cause damage to the main water supply pipe.

Fault diagnosis

If there is a fault

Some faults can be eliminated by simple operation, please confirm the following before commissioning repair



fault	reason	Elimination method
Unable to spray water	The power outlet is not powered on	Confirm power failure
	The power switch is in the [Off] state	Press the power switch to make the power light on the display part of the body
	The power plug is not plugged into the socket	Plug in the power
	Electrical leakage occurs	Please unplug the power and order the repair
	The water inlet valve is closed	Open inlet valve
	The filter hole is blocked	Cleaning screen
	The connecting water inlet pipe twists and turns and is blocked	Water pipe straightening
	Not falling within the limited range of the seat sensor	Adjust seating position
	Cleaning nozzle is blocked	Cleaning nozzle
	The water supply hose freezes	Use a cloth soaked in warm water to warm the water supply hose and water supply connection. Or raise the indoor temperature to allow it to thaw naturally.
The spray water is not gentle	The water temperature is not set at the proper temperature	Press the water temperature button to adjust to the appropriate temperature
The seat ring is not warm	Seat temperature is not set at suitable temperature	Press the seat temperature button to adjust to the temperature
The xuan key keeps flashing		To indicate component failure, contact the after-sales service

If the fault cannot be immediately rectified through the above confirmation, please contact the merchant who purchased the product.

Product Specification

Category			Specifications
Rated voltage			220V~, frequency 50Hz
Power			1250W
Cleaning function	Water yield	Hip washing	About 650mL/min
		Women washing	About 650mL/min
	Outlet water temperature		Room temperature: 0°C, 34°C, 37°C, 40°C (4 Settings)
	Warm water heating mode		Instant heating type
	Heater power		1600W
	Safety devices		Inlet and outlet water temperature sensors, leakage protection devices, temperature controllers
Drying function	warm air temperature		0°C, 45°C, 50°C, 55°C (4 Settings)
	wind speed		6800 RPM
	Heater power		The average is approximately 2.2 million
	Safety devices		Bimetallic strip, temperature fuse wire
Seat ring heating	Seat ring temperature		Room temperature: 0°C, 34°C, 37°C, 40°C (4 Settings)
	Heater power		About 40W
	Safety devices		Temperature sensor, temperature fuse
Deodorization	type		Activated carbon high-efficiency catalyst filter
Mobile cleaning			The nozzle moves forward and backward by 1.5cm
Nozzle position			Adjustable front and back
Water supply temperature			3~40°C
Static pressure of water supply			0.15-0.75MPa