


# *Super Washer*

**Model: 840**

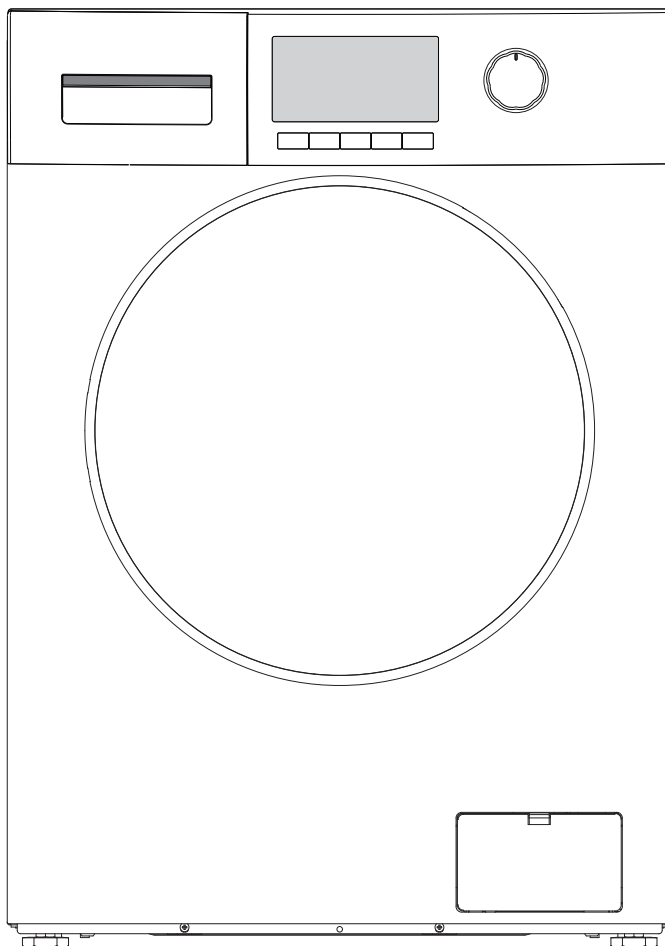

## **OWNER'S MANUAL**

|                                                                                    |                                        |                                                                                                                      |
|------------------------------------------------------------------------------------|----------------------------------------|----------------------------------------------------------------------------------------------------------------------|
|  | <b>DO NOT RETURN TO STORE!</b>         |  <b>1-800-776-3538</b>            |
|                                                                                    | <b>HAVE QUESTIONS OR NEED SERVICE?</b> |  <b>Service@ApplianceDesk.com</b> |

Read the instructions carefully and keep for future reference. Information maybe updated from time to time so please refer to the website for the latest version of the manual.

## TABLE OF CONTENTS

|                                             |    |
|---------------------------------------------|----|
| Introduction.....                           | 1  |
| Warranty Information .....                  | 2  |
| Technical Data.....                         | 4  |
| Important Safety Instructions.....          | 5  |
| Diagram of the Washer.....                  | 6  |
| Handling and Placement.....                 | 7  |
| Remove Shipping Bolts and Level Washer..... | 8  |
| Electrical.....                             | 9  |
| Plumbing.....                               | 10 |
| Special Installation Requirements.....      | 11 |
| Operating Instructions.....                 | 12 |
| Program Selection Chart.....                | 13 |
| Special Wash Programs.....                  | 14 |
| Control Panel.....                          | 15 |
| Display Panel.....                          | 16 |
| Maintenance.....                            | 18 |
| Troubleshooting.....                        | 20 |
| Error Codes.....                            | 21 |

# INTRODUCTION

***Congratulations on your new Super Washer! In addition to its contemporary design, this is a highly sophisticated engineered product that will give you many years of satisfaction.***

## **Here are some of the best reasons for buying your Super Washer**

---

### **1. Easy Operation**

This appliance is simple to use as a washer.

### **2. Efficient Operation**

With a high spin speed of 1400 rpm, more water is extracted, resulting in shorter dry times.

### **3. Convenience**

This appliance can be permanently installed and be made portable with the installation of the portability kit (sold separately) where needed.

### **4. Placement Options**

The Washer's sleek design makes it a perfect appliance for any kitchen or laundry room. Its compact size makes the Washer perfect for placement on each floor of your home.

### **5. Better Clothing Appearance**

This Washer has no agitator to damage your clothes so they look better and last longer.

### **6. Water Savings**

This appliance uses very little water for washing and far less than a standard full size top-loading washer. A new feature introduced is automatic water level which helps in saving water as it automatically decides the water intake depending on the quantity of your clothes.

### **7. Energy Savings**

This appliance is engineered to provide valuable energy savings when compared to other washers

### **8. Maintenance**

Since the machine has a self-cleaning pump, this appliance needs no cleaning of lint after every washing. Instead, there is a convenient coin trap which only needs to be cleaned every few months.

### **9. Space Savings**

The washer is of optimum size saving space around your home.

### **10. Add a sock**

In this feature, the program can be stopped at any time to add forgotten items to the wash. Press PAUSE for 5 seconds. Door will open after draining water so that it does not overflow. Load clothes. Close door. Press the START button. Washer will continue from the point it stopped.

## WARRANTY INFORMATION

**Your appliance is protected by this warranty under normal, personal, family or household use for 1 Year Parts & Labor and limited commercial use (90 days) in USA and Canada.**

### WARRANTY

Consolidated Brands undertakes to the consumer / owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year parts & labor from the date of original purchase. For commercial use, the product is warranted for a period of 90 days.

During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the written instructions provided with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer / owner. If a unit is installed in a closet or cabinet, it should be removed by the consumer / owner, for access by service technicians. If this is not done, there will be an extra charge.

### EXCLUSIONS

In no event shall Consolidated Brands be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, operation misuse, neglect, alterations, normal wear and tear, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship, damage due to other products while combined use with this product or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer / owner.

Most work is covered. The defining factor is, has the machine malfunctioned (Consolidated Brands is responsible) or has the customer omitted or done something to cause malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

You can register your Warranty by either of the following methods:

1. Scan Chat-AI

- Open Smart Phone
- Open Camera
- Click the Link

2. Register online at [ApplianceDesk.com/Warranty](https://ApplianceDesk.com/Warranty)



**Note: QR Code is also used to obtain Product Information, Manuals and Updates**

### WARRANTY SERVICE

This warranty is given by:

**Consolidated Brands**

5006 Steffani Lane,  
Houston, Texas, 77041, USA

#### QUESTIONS / SERVICE

Phone/Text: 1-800-776-3538

Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)

Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)



## **THE FOLLOWING ARE NOT COVERED UNDER WARRANTY:**

### **Installation**

1. **Non-removal of shipping bolts, causing vibration / internal damage.**
2. Non-adjustment of feet to level machine, causing vibration / internal damage.
3. Not conforming to minimum space requirements for built-in installation, causing excess heat and resulting in damage to internal components.
4. Installation in a corrosive environment.
5. Incorrect water pressure i.e below 7.25 psi or above 145 psi
6. Incorrect water inlet hose installation (use only factory supplied hoses with metric threads on the L shaped side to fit water valve)

### **Maintenance**

1. Non-cleaning of coin trap for debris, causing the unit to not drain out water and resulting in drain pump malfunction.
2. Improper maintenance (such as, but not limited to, scale build-up, freeze damage, or vent blockage).

### **Damage**

1. Breakage of cosmetic parts e.g., door handle, knob.

### **Other**

1. Accident, abuse or misuse.
2. Using solvents to clean the machine or wash clothes, causing damage.
3. Misapplication of this product e.g., use in a non household/commercial environment.
4. Any other cause not due to defects in materials or workmanship.
5. Problems or damage due to fires, flooding, electrical surges, freezing or any acts of God.
6. Any damage caused by poor water quality.
7. Operating the appliance with anything other than potable water at all times.
8. Force majeure.

## **Warranty Limitations**


1. If a unit is located more than 25 miles away, there will be a trip charge.
2. If a unit is in a remote area more than 75 miles away, the machine should be taken to the technician's workshop.
3. All repairs or replacements are warranted only for the remainder of the original warranty period.
4. If a return or replacement is required, allow 3-4 weeks to process.
5. Replacement units will be delivered with curbside delivery only.
6. We may require the return of products or parts to our warranty department for which the shipping charges are to be pre-paid by the consumer / owner.
7. Charges may be incurred if warranty coverage is not applicable.
8. Service would be provided from Monday to Friday between normal business hours.

## **GENERAL**

Since it is the responsibility of the consumer/owner to establish the warranty period by verifying the original purchase date, Consolidated Brands recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

## TECHNICAL DATA

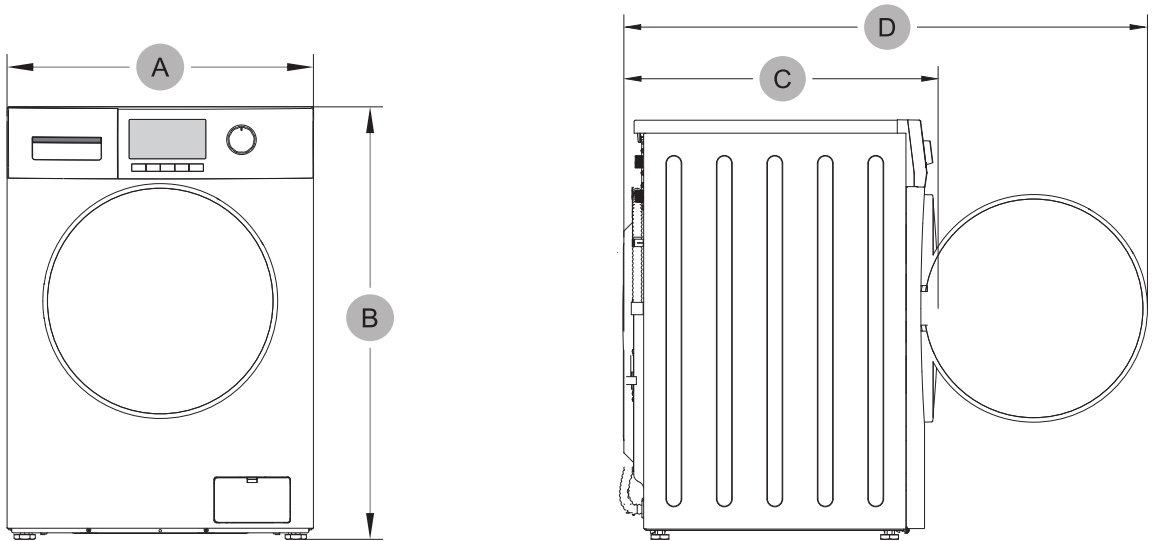

|                             |                         |                               |
|-----------------------------|-------------------------|-------------------------------|
| Type                        |                         | Front loading washing machine |
| Model                       |                         | <b>840</b>                    |
| Dimensions<br>(inches/cm)   | A. Width                | 23.6 / 60                     |
|                             | B. Height-overall       | 33.5 / 85                     |
|                             | C. Depth                | 24 / 615                      |
|                             | D. Depth with door open | 41.3 / 1,035                  |
| Rated voltage               |                         | 110 - 120V / 60Hz 9A          |
| Water pressure (psi/Mpa)    |                         | 7.25 - 145 / 0.05 - 1.00      |
| Wash capacity (lb/kg)       |                         | 26.0 / 12.0                   |
| Net weight (lb/kg)          |                         | 163 / 74                      |
| Spin revolution (rpm)       |                         | Max. 1,400                    |
| Power<br>consumption<br>(W) | Washing                 | 120                           |
|                             | Spin                    | 500                           |
|                             | Wash heater             | 1,000                         |



**Intertek**

4007606



**Intertek**

EP 5033552

ENERGY  
PERFORMANCE  
VERIFIED

RENDEMENT  
ENERGETIQUE  
VERIFIE

**Electrical Testing Laboratories**

**US      N° 4007606      CANADA EP 5033552**

*The ETL Listed Mark is the legal equivalent to the UL and CSA Listed Marks*

**Note:** All rights reserved.  
Designs, Specifications and Manual subject to change without notice

## IMPORTANT SAFETY INSTRUCTIONS

**Your Washer has been built in compliance with safety regulations, to protect you and your family.**


**WARNING** – To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. Read all instructions before using the appliance.
2. Do not wash articles that have been previously cleaned in, washed in, or spotted with gasoline, other flammable or explosive substances, as they emit vapors that could ignite or explode.
3. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
4. Before the appliance is removed from service or discarded, remove the door.
5. Do not reach into the appliance if the tub or drum is moving.
6. Do not install or store this appliance where it will be exposed to the weather.
7. Do not tamper with controls.
8. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have skills to carry out.
9. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
10. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated Hydrogen.
11. Check the Coin Trap every few months to remove any coins, buttons or similar size objects.


### California Proposition 65

**WARNING:** This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.


## DIAGRAM OF THE WASHER

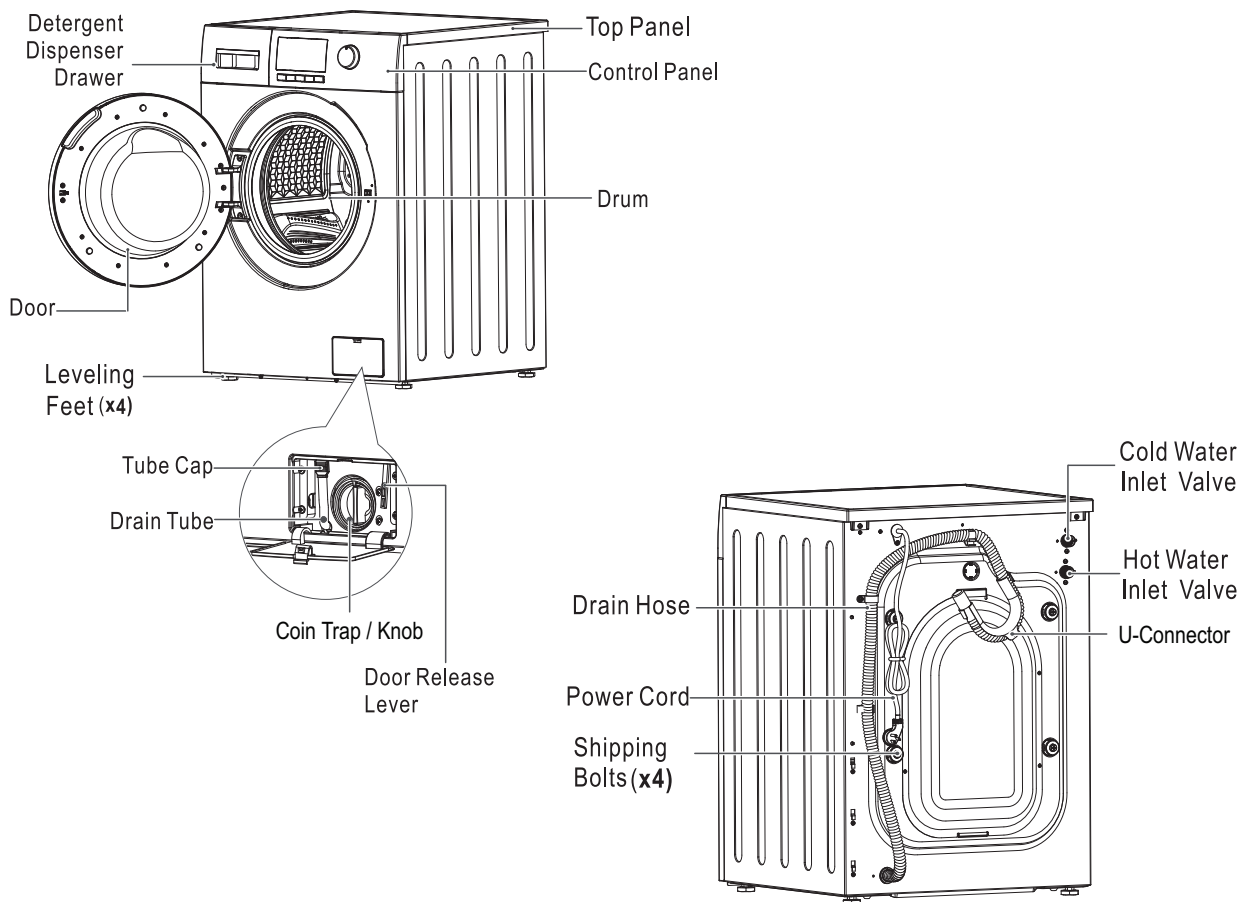

### Included

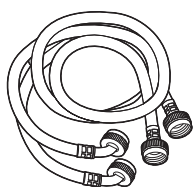

Cold/Hot water hoses

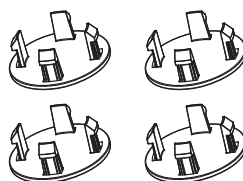

Caps for covering shipping bolts

### NOTE

- Contact Customer Service if any accessories are missing.
- For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
- The images in this manual may be different from the actual components and accessories, and are subject to change by the manufacturer without prior notice for product improvement purposes.

## HANDLING AND PLACEMENT

### Handling

Please handle the machine carefully and use appropriate means while lifting and moving the machine so that it does not get damaged.

- Ensure not to drag the appliance.
- Ensure not to hold on to protruding parts when lifting.

### Placement

Inspect the Washer to ensure there is no damage.

Any residual moisture inside the drum is due to the final testing which every washing machine undergoes before leaving the factory. This is normal.

- Place the appliance away from direct sunlight, sources of heat and high humidity, and also away from areas or moisture and exposure to cold temperatures.
- Ensure the appliance is placed in a well-ventilated and dry environment.
- Ensure that the appliance is placed on flat and stable ground. Adjust the 4 feet to make it level.

### Disposal

All packaging materials are recyclable.

Please dispose of packing material and your old appliance in accordance with local regulations.

## DANGER

**Suffocation from plastic and folding cartons.**

**Keep children away from the shipping carton and packing material.**

**Before discarding the appliance, remove the door in order to prevent risk of child entrapment.**

|                                                                                                                                                                     |                |                                                                                     |                                                                                                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                  | <b>CAUTION</b> |  | The model number and the serial number are on the label affixed to the back of the unit. These numbers are also available on the front of the cabinet behind the door.                                                       |
| <b>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</b>                                                                                                                       |                |                                                                                     | You should note the model and serial numbers of this unit in the space provided. Retain this booklet as a permanent record of your purchase to aid in identification in the event of theft.<br>MODEL# _____<br>SERIAL# _____ |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONALS. |                |                                                                                     |                                                                                                                                                                                                                              |

## REMOVE SHIPPING BOLTS AND LEVEL

The free-floating drum inside the Combo is held in place during transport with 4 shipping bolts. (Fig. 1.) Remove each shipping bolt along with the retainer, bush and washer. (Fig. 2.)

**Failure to remove shipping bolts may cause severe vibration, noise and can lead to permanent damage to the machine. IT WILL ALSO VOID THE WARRANTY.**

Store all these parts for future use when moving the Combo to a new location. (Fig. 3.)

**DO NOT transport the machine without reinstalling the shipping bolts.**

Close the holes left open by the bolts with the caps provided (Fig. 4).

It is important for the machine to be perfectly level. For this reason, the machine is fitted with adjustable feet used for leveling the machine before use (Fig. 5.)

An adjustable wrench or 17mm open end wrench is required to loosen or tighten the leveling feet.

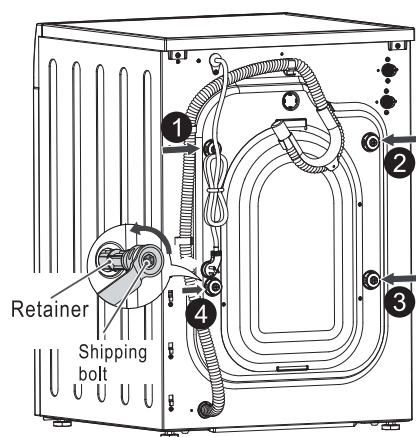


Fig.1

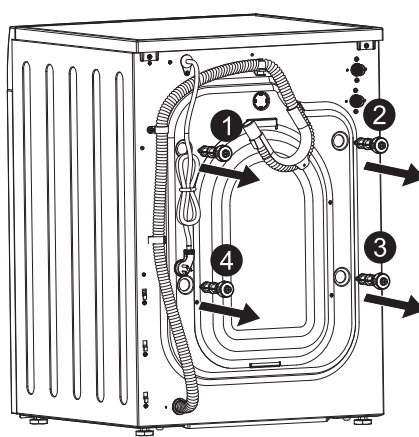


Fig.2

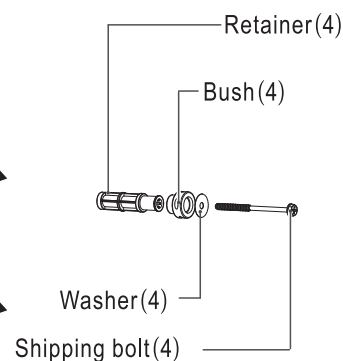


Fig.3

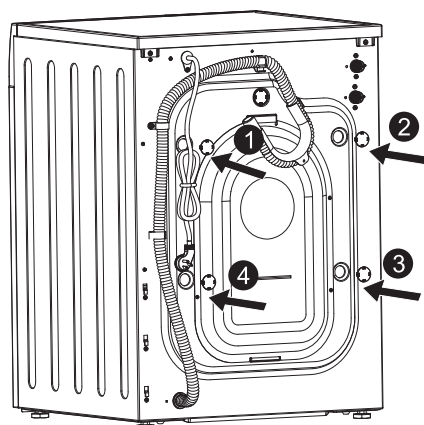


Fig.4

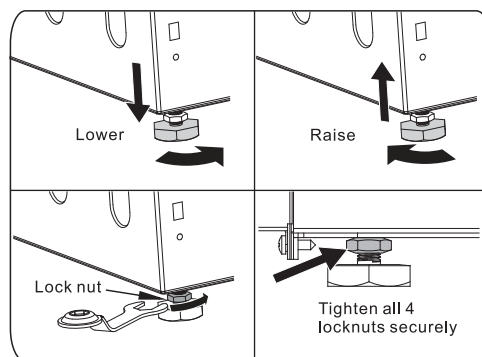


Fig.5


# ELECTRICAL

## CONNECTION

Connect the plug to a power outlet - 110V / 60Hz with minimum 15 Amps. Make sure that the voltage and frequency available correspond with those stated on the serial number plate located on the machine. Do not use adaptors or extension cords since they could result in overheating and burn out. It should **not** be controlled by a wall switch or pull cord which might be turned off accidentally.

## POWER SUPPLY

This Super Washer must be connected to an individual circuit identical to the one specified on the rating plate of the loading port protected by fuses or circuit breaker conforming to local codes.

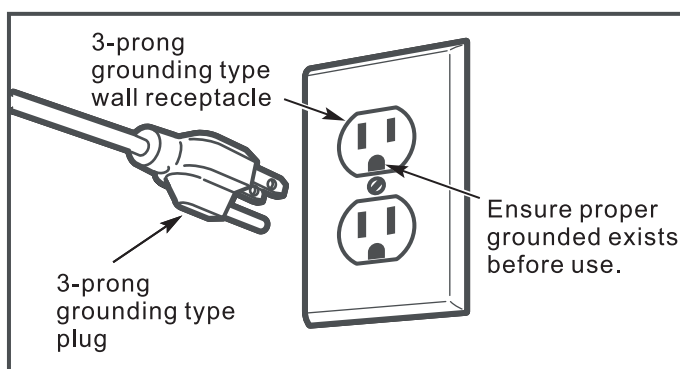

## GROUNDING

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

## WARNINGS

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified or service representative or personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

**Note:** If the electrical power supply does not meet the specifications listed above, please call a licensed electrician.

## PLUMBING

### ONLY USE THE WATER INLET HOSES THAT COME WITH THE MACHINE.

**Reason:** They are custom hoses. The L-Shaped side uses metric thread to fit the valve and the straight side uses US pipe (NPT) thread. *Replacement hoses will not fit the metric thread and will leak.*

### CONNECTING TO THE WATER FAUCET

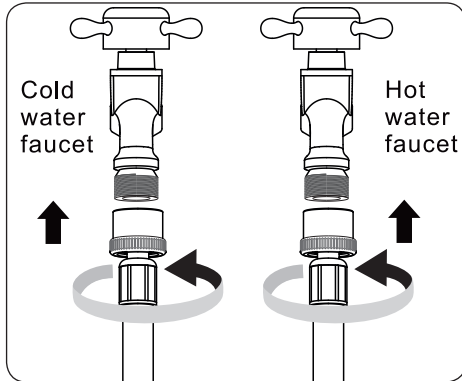


Fig.6

To connect the hoses to the water faucets:

- Connect the straight end of each hose to the cold or hot faucet.
- Turn the fittings by hand until they are tight, and then tighten them by just an additional two-thirds of a turn with a plier. Do not overtighten the fittings. They can be damaged.
- When done, pull the water hoses up and down to check if they are properly connected.

### CONNECTING TO THE MACHINE

To connect the hoses to the machine:

- Connect the L-shaped end of each hose to the cold or hot water valve on the rear of machine.
- Open both the faucets, and check if there is a leak.

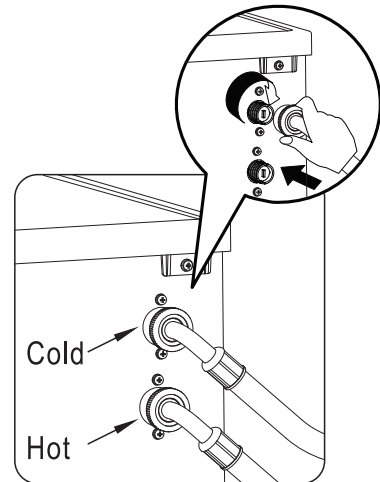


Fig.7

### CONNECTING THE DRAIN HOSE

Connect the standpipe to a drain duct (with internal diameter of at least 1.6 inches) or place it for drainage in to a sink or a tub, ensuring that there are no kinks or bends. The free end must be at a height of 24"-40" from the floor. The hose can be held in place using the white plastic clamp on the upper part of the back panel.

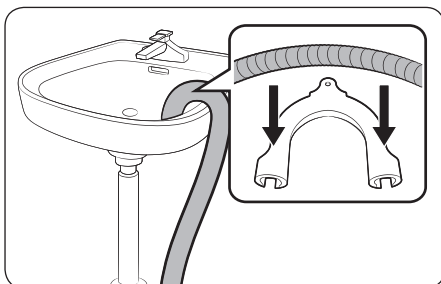


Fig.8

Height difference between the installation location of the washing machine and the drainage point:

Minimum 24", and Maximum 40".

- Attach water drain hose to hose guide.
- Hook the hose guide over the side or standpipe (Fig.8).
- When the water is being drained, check that the water flow out of the hose is adequate.



## SPECIAL INSTALLATION REQUIREMENTS

### MINIMUM CLEARANCE OTHER THAN ALCOVE OR CLOSET INSTALLATION

Minimum clearances to combustible surfaces: 2" (5 cm) clearance both sides and 3" (7.5 cm) rear.

### BUILT-IN, RECESSED, CLOSET AND ALCOVE INSTALLATION

The Super Washer may be installed in a built-in, recessed area, closet or alcove.

The installation spacing is in inches and is the minimum acceptable.

Other installations must use the minimum dimensions indicated.

Minimum clearance between dryer cabinet and adjacent walls are: 2" either side and 3" front and rear.

Minimum vertical space from floor to overhead cabinets, etc. is 52" (132 cm).

Closet door must be louvered or otherwise ventilated and must contain a minimum of 60 sq. in. of open area equally distributed. If this closet contains both washer and a dryer, doors must contain a minimum 120 sq. in. of open area equally distributed.

No other fuel-burning appliance shall be installed in the same closet with dryer.

★ Additional clearances for wall, door and floor molding may be required.

**NOTE:** If a door is installed that potentially encloses the unit while running, the door must allow for a minimum of 20 sq. in. of air free movement. There must also be a 1" additional space in front of the unit to the closed door and 1" from the back of the unit to the wall. Additional spacing should be considered for easy installation, servicing and compliance with all applicable local, state and federal codes.

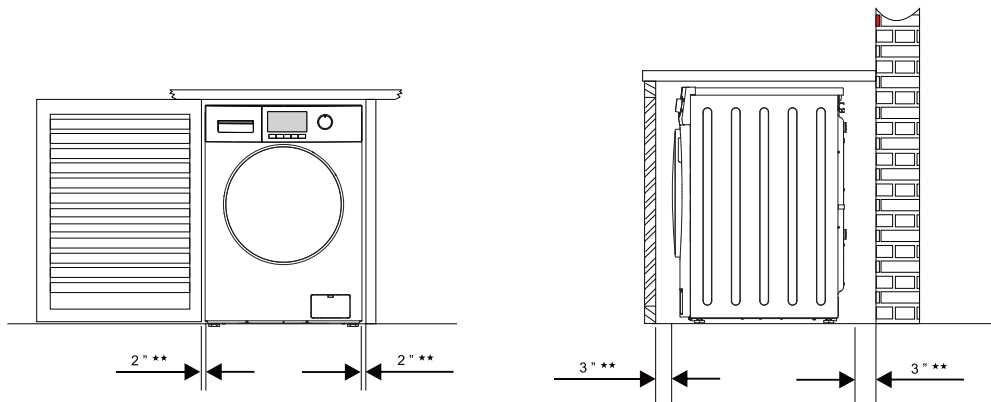


Fig. 9

### ADA COMPLIANCE

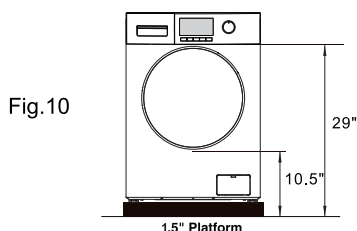


Fig.10

Use 1.5" height platform to make the machine ADA compliant.

## OPERATING INSTRUCTIONS

1. Ensure the Washer is turned off. (Power Indicator light should be off).
2. Separate clothes by type, color and degree of soiling.
3. For small items such as socks and children's clothes please use a mesh bag.
4. Load clothes of the selected type loosely into the drum. Ensure to put in a full load of clothes.
5. Close the Washer door. You will hear a click when it is correctly closed.

Use High Efficiency (HE) detergent about 1 table spoon.

Add detergent to Dispenser A.

You can add fabric softener and pre-wash detergent as shown in the diagram to compartment B & C.

**Note: The washer is designed to be used with a full and balanced load. If a small or half load of clothes is put in the washer, it will be unbalanced causing the drum to rotate slowly during the spin cycle and will not extract sufficient water. This will result in wet clothes at the end of the cycle and will not be ready to put in the dryer.**

### Detergent Dispenser

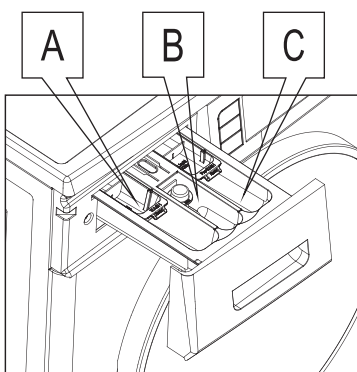


Fig. 11

Dispenser A:

**Detergent for main wash**

Dispenser B:

**Fabric Softener**

Dispenser C:

**Detergent for pre-wash and bleach**

**The blue cups are only for liquid detergent.**

**Please do not add powder in these cups.**

Note : concentrated fabric softener must be diluted with a little water before being poured into the dispenser  
(This prevents the over flow siphon from getting blocked)

Your washer is designed to use a High Efficiency (HE) detergent, which reduces or eliminates suds and results in more efficient washing.



## WINTERIZING

### **How to winterize for cold weather**

- 1) Pour 2 cups of RV type Antifreeze in soap dispenser.
- 2) Select WINTERIZE cycle on knob and press START. Machine will Rinse & Spin.
- 3) Open coin trap once cycle is finished and drain out remaining water.
- 4) Shut off water at both faucets and disconnect water inlet hoses from faucets and drain.

## PROGRAM SELECTION CHART

### Wash Cycles

Each wash program has default temperature, spin speed and rinse settings. You can use the buttons on the control panel to changes the defaults for most of the programs.

| Wash Programs     | Description of Load                         | Wash Temperature | Spin Speed (rpm) | Rinse | Display Time min |
|-------------------|---------------------------------------------|------------------|------------------|-------|------------------|
| 1. Normal         | Mixed Clothes<br>(Shirts, Trousers, etc)    | Warm             | 1400             | 1     | 51               |
| 2. Heavy +Prewash | Mixed Cottons<br>(T-Shirt, Jeans)           | Hot              | 1400             | 2     | 75               |
| 3. Quick 20'      | Light Sports Wear                           | Cold             | 800              | 1     | 20               |
| 4. ECO            | Cotton Blends                               | Cold             | 800              | 1     | 42               |
| 5. Wool           | Light Fabrics                               | Cold             | 500              | 1     | 41               |
| 6. Delicate       | Machine-Washable<br>(Silk, Polyester, Wool) | Cold             | 800              | 1     | 36               |
| 7. Power Wash     | Mixed Cottons                               | Hot              | 1400             | 2     | 61               |
| 8. Drain          | -                                           | -                | -                | -     | 2                |
| 9. Winterize      | -                                           | -                | -                | -     | 2                |
| 10. Allergen 131° | Mixed Cottons                               | Hot              | 1400             | 2     | 65               |
| 11. Self Clean    | -                                           | Hot              | 400              | 1     | 45               |
| 12. PET           | Mixed Cottons                               | Warm             | 1000             | 2     | 52               |
| 13. Baby          | Cotton Blends and Light Fabrics             | Warm             | 1000             | 1     | 60               |
| 14. Sanitize 165° | Mixed Cottons                               | Hot              | 1400             | 2     | 69               |
| 15. Quiet 60 dB   | Mixed Cottons                               | Cold             | 800              | 1     | 49               |

### PET CYCLE

Before loading clothes and sheets into the appliance, remove as much pet hair as possible in order to prevent buildup and clogging of the drain pump. Wipe the surface of clothes and sheets with a lint roller or a damp rubber glove to easily remove pet hair.


After the end of the wash cycle, run a quick wash cycle without clothes. After the cycle ends, wipe down the drum with a damp cloth to collect any pet hair on the drum surface.

 **The total working time will vary with the laundry size, water pressure, water temperature and ambient temperature etc.**

## SPECIAL WASH PROGRAMS

| PROGRAM              | PURPOSE                                                                                | HOW IT WORKS                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ECO</b>           | Energy-efficient wash using less water and power for everyday cleaning.                | Uses lower wash and rinse temperatures, longer cycle times, and optimized drum motions to reduce power use.                                                                                                                                                                                                                                                                                      |
| <b>Power Wash</b>    | Deep cleaning for heavily soiled items.                                                | Uses higher water levels, stronger agitation, and hotter water. May include an extra rinse or pre-wash.                                                                                                                                                                                                                                                                                          |
| <b>Quiet 60'</b>     | Minimize noise during operation.                                                       | Reduces spin speed and slows drum movement to lower vibration and sound.                                                                                                                                                                                                                                                                                                                         |
| <b>Sanitize 160°</b> | Kills germs, bacteria, and allergens.                                                  | Heats water to very high temperatures (up to ~160 - 170°F / 70-75°C).                                                                                                                                                                                                                                                                                                                            |
| <b>PET Cycle*</b>    | Remove pet hair and odors. (See instructions below)                                    | Uses extra rinse cycles, higher water levels, and sometimes soak to loosen fur and dander.                                                                                                                                                                                                                                                                                                       |
| <b>Self Clean</b>    | Cleans the washer drum itself.                                                         | Runs hot with extra water and strong agitation (empty). Some machines suggest adding a cleaning tablet or vinegar.                                                                                                                                                                                                                                                                               |
| <b>Allergen 131°</b> | Reduce common allergens like dust mites and pollen.                                    | Uses high-temperature water and an extended wash cycle to break down and flush away allergens.                                                                                                                                                                                                                                                                                                   |
| <b>Winterize</b>     | Prepare the machine for cold weather or storage (to prevent freezing damage).          | Drains all water from the hoses, pump, and internal parts. Some versions circulate antifreeze through the system.                                                                                                                                                                                                                                                                                |
| <b>Baby Wash</b>     | Gently but thoroughly clean baby clothes, while removing detergent residues and germs. | <ul style="list-style-type: none"> <li>• Uses <b>higher water temperatures</b> (often around 140-160°F / 60-70°C) to sanitize fabrics and kill bacteria.</li> <li>• Includes <b>extra rinse cycles</b> to ensure <b>no detergent residue</b> remains - important for babies sensitive skin.</li> <li>• Gentle drum movements protect delicate fabrics like cotton and soft baby wear.</li> </ul> |

## CONTROL PANEL

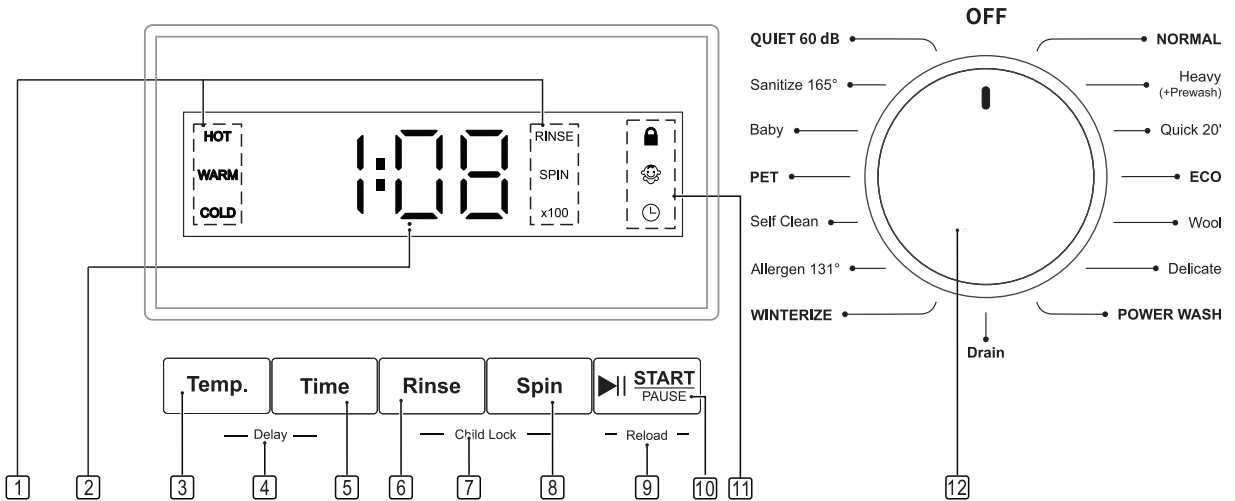




### Display Panel and Buttons

|    |                        |                                                                                                                                                                                                                                                                                                                                  |
|----|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Temperature Indicators | Highlights the water temperature during the main wash cycle.                                                                                                                                                                                                                                                                     |
| 2  | Digital Display        | Shows the total time of the selected program before and after starting. It also displays the rinse times, spin speed, and delay time when pressing the option button(s).                                                                                                                                                         |
| 3  | Temperature Button     | Press this button to select the water temperature for the main wash cycle of the chosen program.                                                                                                                                                                                                                                 |
| 4  | Delay                  | Press and hold Temp and Time buttons for 3 seconds to set the delay time from 3 to 24 hours, in one-hour increments, before the start of the wash cycle.                                                                                                                                                                         |
| 5  | Time Button            | Press this button to select the duration of the wash cycle for the chosen program.                                                                                                                                                                                                                                               |
| 6  | Rinse Button           | Press this button to set the number of rinse cycles for the selected program.                                                                                                                                                                                                                                                    |
| 7  | Child Lock             | Press and hold Rinse and Spin buttons to activate the Child Lock function, which prevents children from playing with the buttons. Repeat to deactivate this function.                                                                                                                                                            |
| 8  | Spin Button            | Press this button to set the spin speed for the last spin cycle of the selected program.                                                                                                                                                                                                                                         |
| 9  | Reload Function        | Press and hold the START/PAUSE button for 3 seconds to stop the cycle and add more clothes.                                                                                                                                                                                                                                      |
| 10 | START/PAUSE            | Press this button to start or pause the selected wash program.                                                                                                                                                                                                                                                                   |
| 11 | Indicators             | Illuminates door lock  , child lock  and delay start  when applicable. |
| 12 | Program Selection Knob | Turn the knob clockwise to turn ON and select from 15 programs.                                                                                                                                                                                                                                                                  |

## DISPLAY PANEL

### How to run a Wash Cycle


1. Rotate the **Program Knob** clockwise to select a wash program. Default information for the selected program will be shown on the Display Panel.
2. Press the **START/PAUSE** button to start the cycle. The time will be displayed, and the Lock icon  will illuminate. Please do not try to open the door while the washer is locked.
3. When the cycle is completed, "End" will be displayed, and the Lock icon  will go off. You can now remove clothes from the washer.

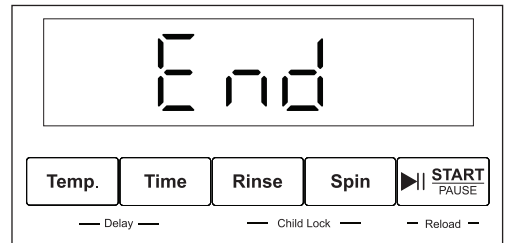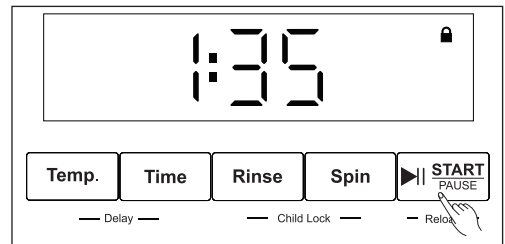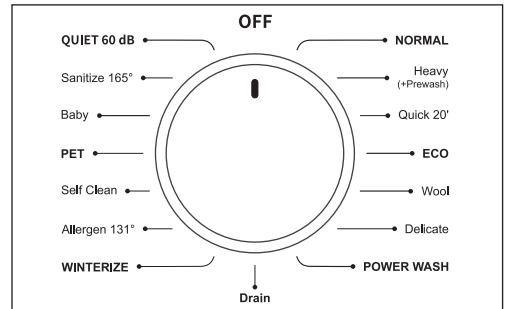


### Selecting Wash Options

For most of the wash programs, you can change the default settings to suit your preference by pressing the buttons below the Display Panel.


Press the **Temp** button to select hot, warm or cold water temperature for the main wash.

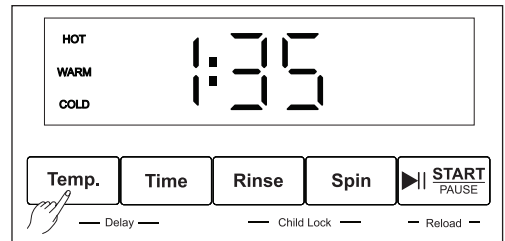


Press the **Time** button to add 5, 10 or 15 minutes to the main wash cycle.

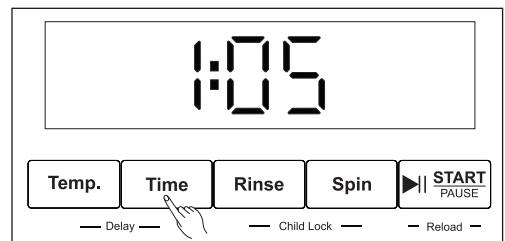

Press the **Rinse** button repeatedly to select the number of rinses from 1, 2 or 3. Press and hold for 3 seconds to select and display the number on the Display Panel.

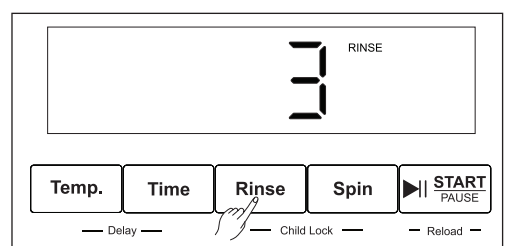

Press the **Spin** button repeatedly to select the final spin speed. Press and hold for 3 seconds to select and display the number on the Display Panel.

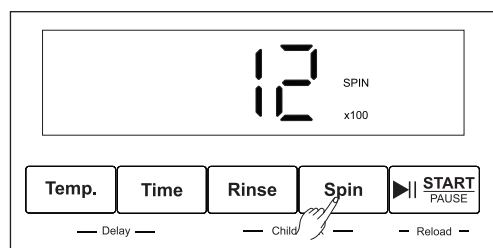

To **delay** the start of the wash cycle:

1. Press the **Temp** and **Time** buttons at the same time and hold for 3 seconds. The ⌚ icon will display.
2. Press the **Time** button to select how many hours to delay the start. The time increases in one-hour increments, from 3 – 24 hours.
3. To cancel the delay option, turn the Knob to the Off position and then reselect the wash program.



To activate the **Child Lock**:

Press the **Rinse** and **Spin** buttons at the same time and hold for 3 seconds. The Child Lock 🛡️ icon will display. This feature prevents the program to be changed during the wash cycle, should a child play or press the buttons on the washer. Repeat this process to cancel child lock.



## Reload Function

To add forgotten items into the washer once the wash cycle has begun:

1. Press and hold the **START/PAUSE** button for 3 seconds. The water in the drum will drain and the lock icon 🛡️ will go off.
2. You can then open the door and load the additional clothes.
3. Close the door and press **START/PAUSE** and the cycle will restart from the point at which it stopped.



### Note:

**During the wash cycle, if you accidentally turn the Knob, an error will show on the Display Panel.**

**The time and "Px" will flash intermittently. Turn the Knob to the Off position and reselect the wash program.**

## MAINTENANCE

### General Cleaning

Clean the outside and inside of the appliance regularly, including the door gasket, using water, mild detergent and a soft cloth. Please do not use strong chemicals and abrasive materials to clean.

### Cleaning the coin trap

- Turn off the Washer.
- Open the service flap. (bottom right corner) (Fig. 12)
- Turn knob to the left. (Fig.13)
- Remove foreign objects/fluff from inside and clean the interior. (Fig.14)
- The pump impeller wheel located behind the water filter, must be able to rotate.  
Remove detergent residue and fluff from the pump cover thread and pump housing.
- Insert the coin-trap cover and screw tight, close the service flap. (Fig.15)

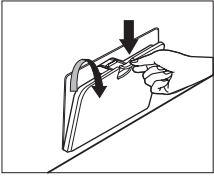


Fig. 12

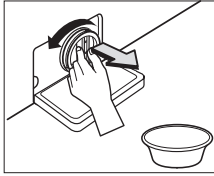


Fig. 13

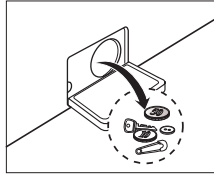


Fig. 14

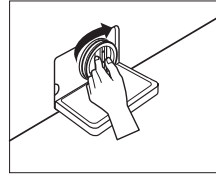


Fig. 15

### Cleaning the Detergent drawers

- Press release lever on the inside of the drawer and pull it out. (Fig.16)
- Remove the cap from the Fabric Softener compartment.
- Clean the drawer recess with a bristle brush. (Fig.17, Fig.18)
- Reinsert the cap (Pushing it firmly into place).
- Push the drawer back into place.
- Run a rinse program without any laundry in the drum.

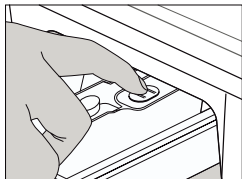


Fig. 16

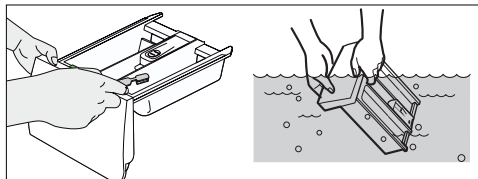


Fig. 17

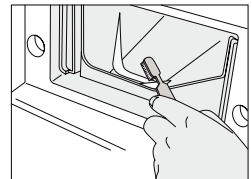


Fig. 18

### Cleaning the water inlet filter

- Turn off the water tap. (Fig.19)
- Unscrew the water inlet hose. (Fig. 20)
- Clean the filter using a hard bristle brush under the running water. (Fig. 21)
- Insert the filter into the valve and tighten up the inlet hose. (Fig. 22)

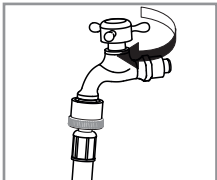


Fig. 19

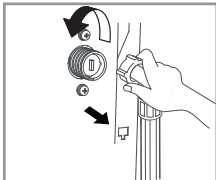


Fig. 20

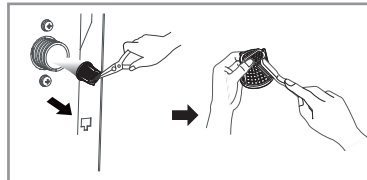


Fig. 21

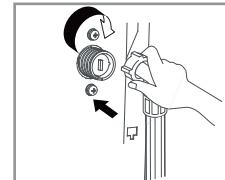



Fig. 22



## Emergency Release

If the Washer door is locked and clothes need to be removed, follow this procedure:

- Open the service flap.
- Drain the remaining water.
- Pull down the emergency release lever with a tool and release.
- Door can then be opened.
- Close the service flap.

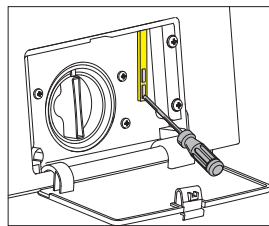

## The dangers of freezing

If the machine is exposed to freezing temperatures, certain precautions should be taken.

- Turn off the water tap.
- Unscrew the inlet hose.
- Unhook the drain hose.
- Pull forward the drain hose and the inlet hose in a bowl placed on the floor, and let the water drain out.
- Screw the water inlet hose back on and reposition the drain hose.

## Vacation

If the Washer is not going to be used for an extended time, ensure that the door is left open to prevent mold and odors.

## TROUBLESHOOTING

In most cases, when your Super Washer fails to work, the problems arising can be easily solved without having to call for a technician. Before calling for assistance, always check these points.

| Problem                                | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Will not start                         | <ul style="list-style-type: none"> <li>• Make sure the door is firmly closed. E -1</li> <li>• Make sure your Washer - Dryer is plugged in.</li> <li>• Make sure the water source faucet (s) are open.</li> <li>• Make sure to press the Start/Pause Button to start your Washer.</li> <li>• Make sure the Child Lock is not activated.</li> <li>• Before your machine starts to fill, it will make a series of clicking noises to check the door lock.</li> <li>• Check the fuse or reset the circuit breaker.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Has no water or not enough water       | <ul style="list-style-type: none"> <li>• Turn faucet (s) on fully. E -3</li> <li>• Make sure the door is tightly closed.</li> <li>• Straighten the water inlet hose (s).</li> <li>• Disconnect hoses and clean filters. Hose filter screens may be clogged.</li> <li>• Open and close the door, then press the Start/Pause Button.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Vibrates or is too noisy               | <ul style="list-style-type: none"> <li>• Make sure your machine is set on a level surface. If the surface is not level, adjust your machine feet to level the appliance.</li> <li>• Make sure that the shipping bolts / rods are removed.</li> <li>• Make sure your machine is not touching any other object.</li> <li>• Make sure the laundry load is balanced.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Stops                                  | <ul style="list-style-type: none"> <li>• Plug the power cord into a live electrical outlet.</li> <li>• Check the fuse or reset the circuit breaker.</li> <li>• Close the door and press the Start/Pause Button to start your machine.</li> <li>• For your safety, your machine will not tumble or spin unless the door is closed.</li> <li>• Before your machine starts to fill, it will make a series of clicking noises to check the door lock.</li> <li>• There may be a pause or soak period in the cycle. Wait briefly and it may start.</li> <li>• Check the filters on the inlet hoses at the faucets for obstructions.</li> <li>• Clean the filters periodically.</li> </ul>                                                                                                                                                                                                                                                                                                         |
| Door locked or will not open           | <ul style="list-style-type: none"> <li>• Press the Start/Pause Button to stop your machine.</li> <li>• Your machine door will remain locked before the water temperature cool down to 55°C.</li> <li>• It may take a few moments for the door lock mechanism to disengage.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Does not drain and/or spin             | <ul style="list-style-type: none"> <li>• Check the fuse or reset the circuit breaker. E -2</li> <li>• Straighten the drain hoses. Eliminate kinked hoses. If there is a drain restriction, call for service.</li> <li>• Close the door and press the Start/Pause Button. For your safety, your Washer will not tumble or spin unless the door is closed.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Fills with the wrong temperature water | <ul style="list-style-type: none"> <li>• Turn faucet (s) on fully.</li> <li>• Make sure the temperature selection is correct.</li> <li>• Make sure the hoses are connected to the correct faucets.</li> <li>• Flush water lines.</li> <li>• Check the water heater. It should be set to deliver a minimum 49° C (120° F) hot water at the tap. Also check the water heater capacity and recovery rate.</li> <li>• Disconnect the hoses and clean the screens. The hose filter screens may be clogged.</li> <li>• As your Washer is filling, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal.</li> <li>• While your Washer is filling, you may notice just hot and/or just cold water going through the dispenser when cold or warm wash temperatures are selected. This is a normal function of the automatic temperature control feature as your Washer determines the temperature of the water.</li> </ul> |

|                                              |                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Load is too wet at the end of the wash cycle | <ul style="list-style-type: none"> <li>• Use the High or Extra High spin speed. E -4</li> <li>• Use High Efficiency (HE) detergent to prevent over-sudsing.</li> <li>• Load is too small. Very small loads (one or two items) may become unbalanced and not spin out completely.</li> </ul>                                                                      |
| Leaks water                                  | <ul style="list-style-type: none"> <li>• Make sure the door is firmly closed. E -4</li> <li>• Make sure all hose connections are tight.</li> <li>• Make sure the end of the drain hose is correctly inserted and secured to the drainage system.</li> <li>• Avoid overloading.</li> <li>• Use High Efficiency (HE) detergent to prevent over-sudsing.</li> </ul> |
| Has excessive suds                           | <ul style="list-style-type: none"> <li>• Use High Efficiency (HE) detergent to prevent over-sudsing. E -4</li> <li>• Reduce the detergent amount for soft water, small or lightly soiled loads.</li> <li>• Non-HE detergent is NOT recommended.</li> </ul>                                                                                                       |

## ERROR CODES


| Code | Possible Cause                            | Solution                                                                                                                                                                                                                                                                                                                            | Component                                 |
|------|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| E1   | Door Open                                 | Ensure the door is completely CLOSED and properly latched.                                                                                                                                                                                                                                                                          | Door Switch                               |
| E2   | Drain Issue                               | Clean the drain FILTER thoroughly.<br>Ensure the drain HOSE is not kinked, bent, blocked, or crushed.                                                                                                                                                                                                                               | Drain Pump                                |
| E3   | Water Inlet Valve                         | Confirm that the WATER FAUCETS are fully turned ON.<br>Check and clean the inlet valve filter if clogged.<br>Check if there is any water leakage from water / drain hoses.                                                                                                                                                          | Inlet Valves                              |
| E4   | Excess Water / Excessive Suds             | Ensure the door is properly CLOSED.<br>Use appropriate spin speed and adequate High Efficiency (HE) detergent.                                                                                                                                                                                                                      | Inlet Valves                              |
| E5   | Motor                                     | Ensure the drum is NOT OVERLOADED and select the appropriate wash program based on the fabric type.                                                                                                                                                                                                                                 | Motor + Electronic Module                 |
| E6   | Communication Error                       | If the unit is not responding, UNPLUG it for 10 -15 minutes and plug it back in.<br>If the DISPLAY FLICKERS or the unit makes noise while off, perform a power reset by unplugging and reconnecting after 10–15 minutes.                                                                                                            | Communication Cable                       |
| E7   | Washing Heater                            | Reduce load size and restart the cycle.<br>Avoid OVERLOADING the unit.                                                                                                                                                                                                                                                              | Washing Heater                            |
| E8   | Overload / Temperature Sensor Malfunction | Reduce load size and distribute clothes evenly.<br>Connect properly the HOT and COLD faucet.                                                                                                                                                                                                                                        | Temperature Sensor (@rear-bottom of Drum) |
| E10  | Water Pressure Switch                     | Ensure faucets are FULLY OPEN.<br>Confirm hoses are not kinked or blocked.<br>Clean inlet FILTERS if necessary.<br>Check water pressure (not above 145 PSI)<br>Turn OFF & unplug → see if water still enters<br>Clean inlet valve filters / screens<br>Check hoses for tight connection / damage<br>Try a RESET (unplug 5 -10 mins) | Water Level Sensor                        |

**Information or Parts:**  
**[www.ApplianceDesk.com/Parts](http://www.ApplianceDesk.com/Parts)**



# Vented Dryer (Sensor)

24 inch / 61cm - 220V  
Model: 880 DL

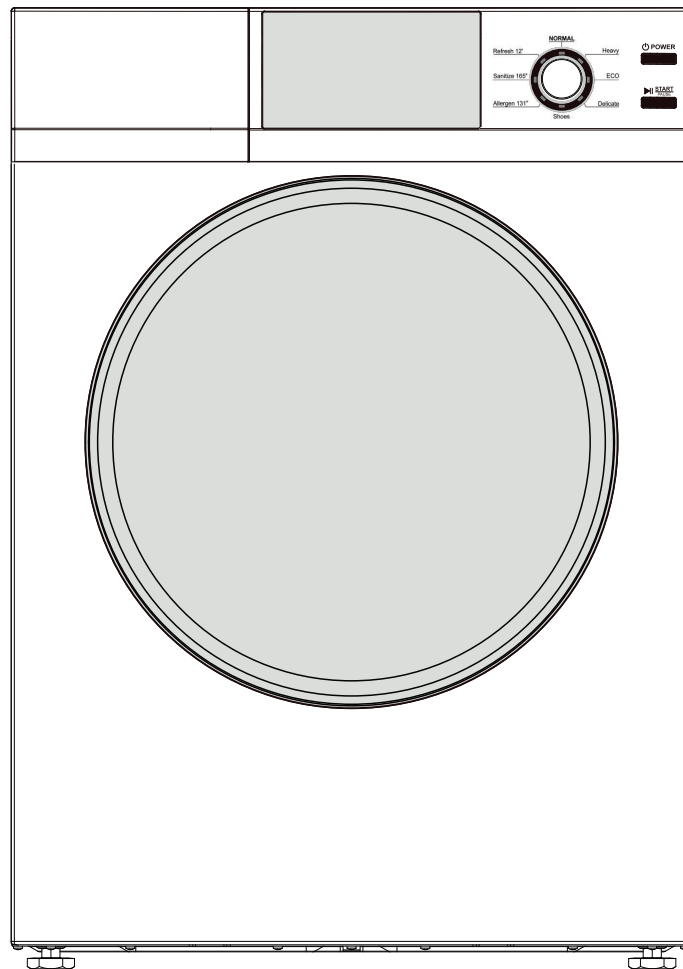

## OWNER'S MANUAL

|                                                                                     |                                        |                                                                                                                      |
|-------------------------------------------------------------------------------------|----------------------------------------|----------------------------------------------------------------------------------------------------------------------|
|  | <b>DO NOT RETURN TO STORE!</b>         |  <b>1-800-776-3538</b>            |
|                                                                                     | <b>HAVE QUESTIONS OR NEED SERVICE?</b> |  <b>Service@ApplianceDesk.com</b> |

Read the instructions carefully and keep for future reference. Information maybe updated from time to time so please refer to the website for the latest version of the manual.

## WARRANTY INFORMATION

**Your appliance is protected by this warranty under normal, personal, family or household use for 1 Year Parts & Labor and limited commercial use (90 days) in USA and Canada.**

### WARRANTY

Consolidated Brands undertakes to the consumer / owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year parts and labor, two years motor and five years rust only from the date of original purchase. For commercial use, the product is warranted for a period of 90 days.

During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the written instructions provided with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer / owner. If a unit is installed in a closet or cabinet, it should be removed by the consumer / owner, for access by service technicians. If this is not done, there will be an extra charge.

### EXCLUSIONS

In no event shall Consolidated Brands be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, operation misuse, neglect, alterations, normal wear and tear, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship, damage due to other products while combined use with this product or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer / owner.

Most work is covered. The defining factor is, has the machine malfunctioned (Consolidated Brands is responsible) or has the customer omitted or done something to cause malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

You can register your Warranty by either of the following methods:

1. Scan Chat-AI

- Open Smart Phone
- Open Camera
- Click the Link



2. Register online at [ApplianceDesk.com/Warranty](https://ApplianceDesk.com/Warranty)

**Note: QR Code is also used to obtain Product Information, Manuals and Updates**

### WARRANTY SERVICE

This warranty is given by:

**Consolidated Brands**

5006 Steffani Lane,  
Houston, Texas, 77041, USA

### QUESTIONS / SERVICE

Phone/Text: 1-800-776-3538

Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)

Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)

## **THE FOLLOWING WORK ARE NOT COVERED UNDER WARRANTY:**

---

### **Installation**

1. Non-removal of shipping bolts, causing vibration / internal damage.
2. Non-adjustment of feet to level machine, causing vibration / internal damage.
3. Using incorrect length of venting i.e. more than 10 feet unless used with a booster fan.
4. Not conforming to minimum space requirements for built-in installation, causing excess heat and resulting in damage to internal components.
5. Installation in a corrosive environment.

### **Maintenance**

1. Non-cleaning of vent fan & exhaust hose for lint, causing the unit to not dry properly.
2. Improper maintenance (such as, but not limited to, scale build-up, freeze damage, or vent blockage).

### **Damage**

1. Breakage of cosmetic parts e.g., door handle, knob.

### **Other**

1. Accident, abuse or misuse.
2. Using solvents to clean the machine, causing damage.
3. Misapplication of this product e.g., use in a non household/commercial environment.
4. Any other cause not due to defects in materials or workmanship.
5. Problems or damage due to fires, flooding, electrical surges, freezing or any acts of God.
6. Force majeure.

## **Warranty Limitations**

1. If a unit is located more than 25 miles away, there will be a trip charge.
2. If a unit is in a remote area more than 75 miles away, the machine should be taken to the technician's workshop.
3. All repairs or replacements are warranted only for the remainder of the original warranty period.
4. If a return or replacement is required, allow 3-4 weeks to process.
5. Replacement units will be delivered with curbside delivery only.
6. We may require the return of products or parts to our warranty department for which the shipping charges are to be pre-paid by the consumer / owner.
7. Charges may be incurred if warranty coverage is not applicable.
8. Service would be provided from Monday to Friday between normal business hours.

## **GENERAL**

---

Since it is the responsibility of the consumer / owner to establish the warranty period by verifying the original purchase date, Consolidated Brands recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

All rights reserved. Manual subject to change without notice.

***Congratulations on your new Vented Dryer!***

In addition to its contemporary design, this is a highly sophisticated engineered product that will give you many years of satisfaction.

Here are some of the best reasons for buying your Dryer:

- Direct line plug to prevent fuse from blowing
- Options for Sensor and Time Dry programs
- Sanitize and Allergen programs for ultimate clean clothes
- Refresh program and Auto Wrinkle Guard for perfectly dry clothes
- Delay time to operate dryer at your convenience
- 240V lets you plug it in anywhere
- Reversible door option as preferred
- Safety Lock



## **Safety**

In order to reduce the risk of fire, electric shock, and/or injury, please follow safety precautions. Read all instructions carefully and save for future reference.

- Use the appliance indoors. It is not intended to be used outdoors.
- Ensure that open flame sources, such as candles are not placed on top of the dryer.
- Do not place items in the dryer that are soiled with flammable liquids, oils and other chemicals. These items should be washed thoroughly before placing them in the dryer.
- Ensure fabric softeners or products to eliminate static are not used inside the dryer, unless recommended by manufacturers of these products.
- Do not dry items containing rubber, plastic or similar materials.
- Ensure the dryer and electrical cord are not placed near heat sources, such as radiators, heaters, air ducts or in direct sunlight.
- Ensure vents and ventilation openings are not blocked.
- Ensure the power cord is not bent or twisted, and not exposed in an area where it could be a tripping hazard.
- Do not use the dryer if the cord is damaged.
- To disconnect the dryer, press the power button to turn it off, then grasp the plug of the power cord firmly and pull straight out of the outlet.
- Do not open the dryer and reach into the drum while it is rotating.
- Ensure the dryer is not overloaded.
- Do not tamper with controls.
- Perform regular maintenance and cleaning of lint filter after each use. Ensure periodic cleaning of exhaust duct is done by a qualified technician.
- Check that foreign objects are not in the drum.
- This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

## **Safe Disposal**

Before discarding the appliance, please remove the door to prevent risk of child entrapment.


Keep children away from the shipping carton and packing components.

Please dispose off this appliance and all packaging material in accordance with local regulations.

### **California Proposition 65**

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

## Technical Data

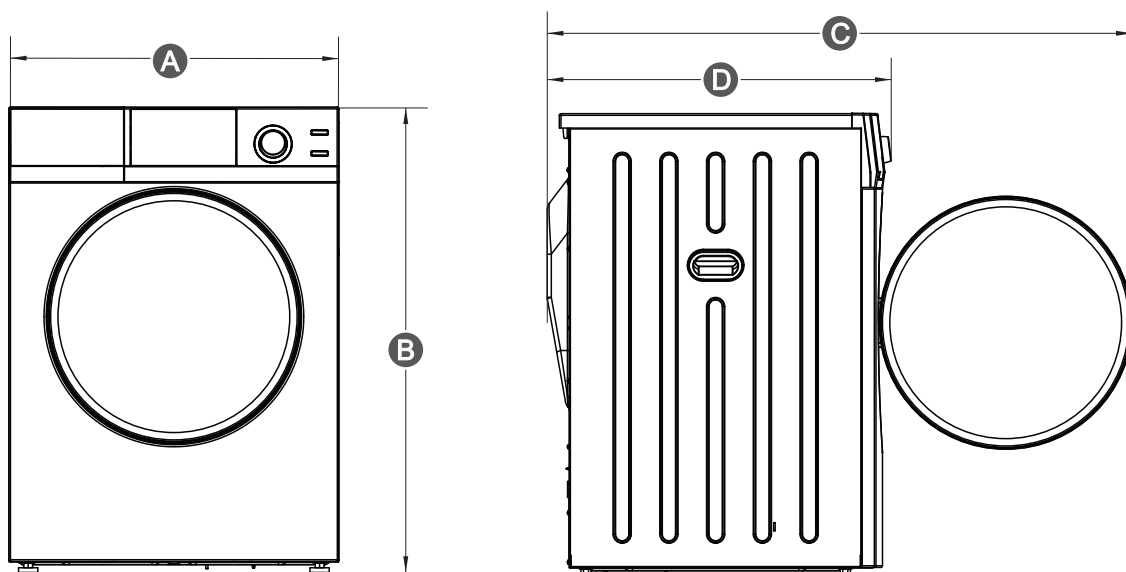

|                             |                         |                       |
|-----------------------------|-------------------------|-----------------------|
| Type                        |                         | Vented Electric Dryer |
| Model                       |                         | <b>880DL</b>          |
| Dimensions<br>(inches / mm) | A. Width                | 23.6 / 600            |
|                             | B. Height-overall       | 33.5 / 850            |
|                             | C. Depth                | 25.2 / 640            |
|                             | D. Depth with door open | 41.9 / 1064           |
| Rated voltage               |                         | 110-120V / 60Hz 12A   |
| Dry capacity (cu. ft. / L)  |                         | 3.9 / 110             |
| Net weight (lb / kg)        |                         | 79 / 36               |
| Heater rating (W)           |                         | 2,400                 |
| Power<br>consumption        | No heat (W)             | 280                   |
|                             | Heating (W)             | 2,950                 |




Intertek  
4007606


**US N° 4007606 CANADA**

*The ETL Listed Mark is the legal equivalent to the UL and CSA Listed Marks*

## Diagram of the Dryer

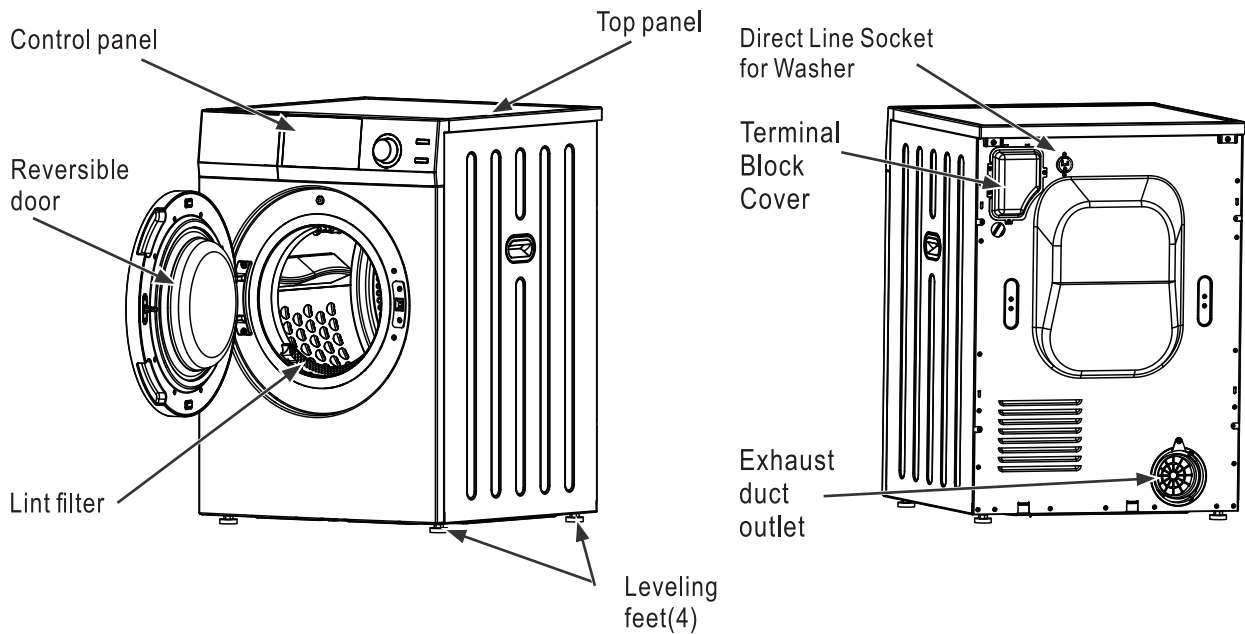

## Accessories

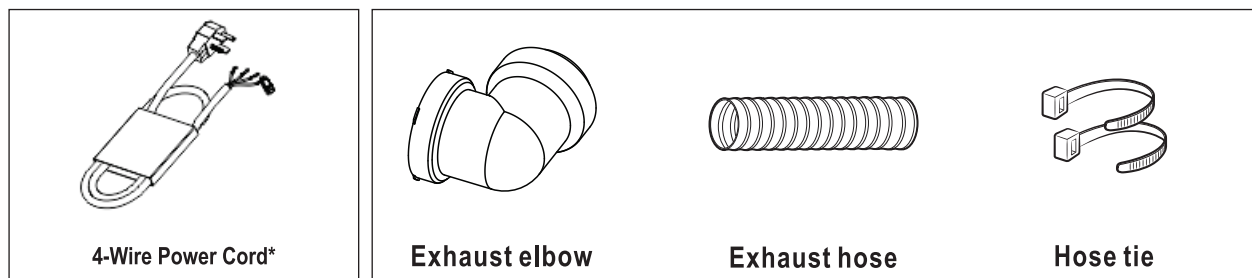

### NOTE:

1. For your safety and for extended product life, use only authorized components. The manufacture is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
2. The images in this manual may be different from the actual components and accessories, and are subject to change by the manufacture without prior notice for product improvement purpose.

**\* The 4-wire power cord is included with the appliance. If you require a 3-wire power cord, please contact Customer Service: Phone: 204-697-1606 or Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)**

## Installation

---

### **The dryer must be installed and serviced by a qualified technician.**

Install the dryer according to manufacturer's instructions and local codes.


- The dryer must be properly grounded. Do not modify the plug.
- Do not install the dryer in a tight-fitting cabinet. Ensure there is adequate ventilation space all around the dryer (please see detailed installation instructions).
- Do not use flexible plastic venting materials which may collapse. Use only vent hoses that are approved by the manufacturer.
- In Canada and the United States, only those foil-type flexible ducts, if any, specifically identified for use with the appliance by the manufacturer shall be used and that comply with the outline for the Clothes Dryer Transition Duct, subject to 2158A, shall be used.
- In Canada, the exhaust duct shall be 4" (10.2 cm) in diameter.  
In the United States, the exhaust duct shall be 4" (10 cm) in diameter.
- The total length of flexible metal duct shall not exceed 8 feet (2.4 m).
- The duct shall not be assembled with screws or other fastening means that extend into the duct and catch lint.
- The appliance shall not be exhausted into a chimney, wall, ceiling, attic, crawl space, or a concealed space of a building.

## Built-In, Recessed, Closet and Alcove Installation

---

- The dryer MUST be vented to the outdoors.
- The dryer may be installed in a built-in, recessed area, closet or alcove.
- The installation spacing is in inches and is the minimum acceptable.
- Other installations must use the minimum dimensions indicated.
  - a) Minimum clearances between the dryer cabinet and adjacent wall are: 2" either side and 3" front and rear.
  - b) Minimum vertical space from floor to overhead cabinets, etc. is 52" (132cm).
- The rear of the dryer should face a wall.
- Consideration must be given to provide adequate clearance for installation and service.
- Closet doors must be louvered or otherwise ventilated and have at least 60 square inches of open area. If the closet contains both a washer and a dryer, door must contain a minimum of 120 square inches of open area.
- No other fuel-burning appliance shall be installed in the same closet with the dryer.

**NOTE:** If a door is installed that potentially encloses the unit while running, the door must allow for a minimum of 20 square inches of free air movement. There must also be a 1" additional spacing should be considered for easy installation, servicing and compliance with space in front of the unit to the closed door and 1" from the back of the unit to the wall.

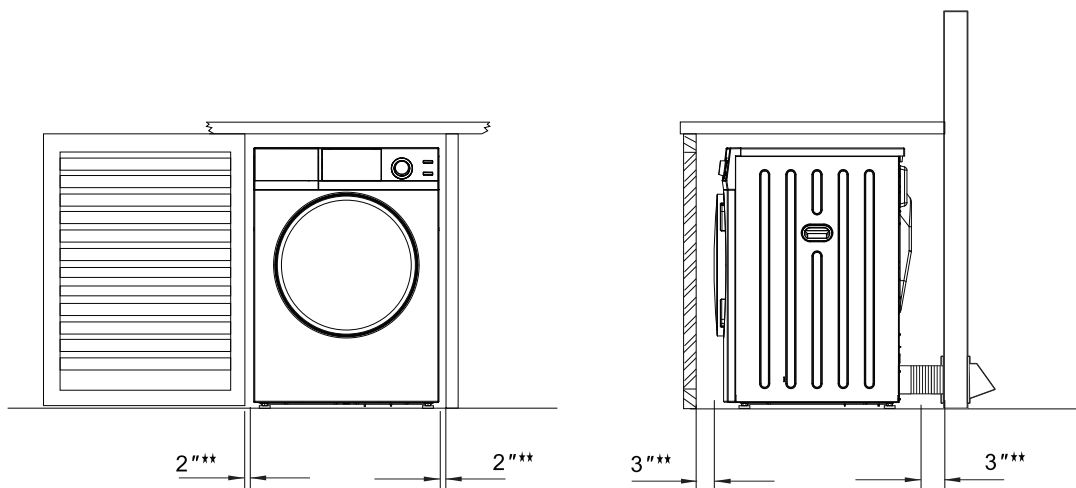

### Minimum clearance other than alcove or closet installation

- Minimum clearance between the dryer cabinet and adjacent walls or other surfaces is: 2" clearance both sides and 3" rear.
- The rear of the dryer should face a wall.
- Consideration must be given to provide adequate clearance for installation and service.


### Mobile home installation

- The dryer must be exhausted to the outdoors with the termination securely fastened to the mobile home structure. The exhaust **MUST NOT** be terminated beneath the mobile home or manufactured home.
- Provisions must be made for the introduction of outside air into the dryer. The free air opening shall not be less than 25 square inches.
- The exhaust duct material **MUST BE METAL**.
- The vent duct **MUST NOT** be connected to any other duct, vent or chimney.
- The dryer must be attached to the floor following instructions available from the dealer.
- Installation must comply with the current **CAN/CSA Z240MH** series Mobile Home Installation Codes.
- **DO NOT** use sheet metal screws or other fastening devices which extend into the interior of the exhaust vent.


### Level the Dryer

1. Follow the installation requirement to install the dryer.
2. Move your dryer to an appropriate location. Consider installing the dryer and washer side-by-side, to allow access to electrical, and exhaust connections.
3. Set your dryer back in an upright position.
4. To ensure that the dryer provides optimal drying result, it must be leveled. To reduce the vibration, noise and unwanted movement, the floor must be a perfectly level, solid surface.
5. Adjust the leveling feet only as much as necessary to level the dryer. Extending the leveling feet more than necessary can cause the dryer to vibrate.

**Fasten the lock nuts of 4-leveling feet against the bottom floor after the dryer is leveled.**

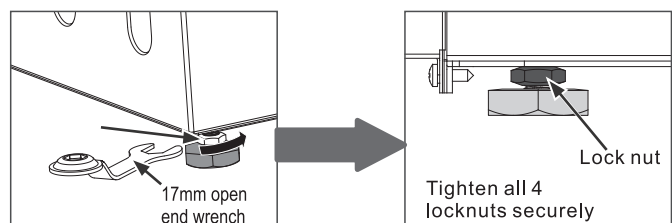


### ADA Compliance

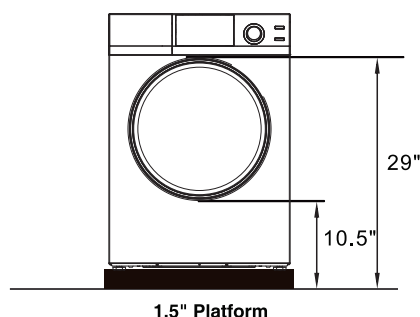

Use 1.5" height platform to make the machine ADA compliant.

## Venting Connections

- This dryer **MUST** be vented to the outdoors.
- Use only 4" (10.2 cm) rigid metal duct for the home exhaust duct.
- Use only 4" (10.2 cm) rigid metal, UL-listed flexible metal, or UL-listed metal foil dryer transition duct to connect the dryer to the home exhaust.
- **Do not** use flexible duct inside the dryer.
- **Do not** exhaust into a chimney, kitchen exhaust, gas vent, wall, ceiling, attic, crawl space, or concealed space of a building. The combination of lint and grease could create a fire hazard or damages.
- **Do not** install a screen in or over the exhaust duct.
- **Do not** install a booster fan in the exhaust duct.
- **Do not** use duct longer than specified in the exhaust length table.
- Provide an access for inspection and cleaning the exhaust system at least once year.
- Failure to follow these instructions can result in death or fire.

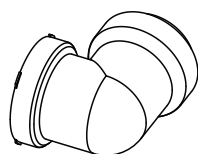

**This Dryer Vent Elbow attachment is included with your Dryer.  
Attach it to the Exhaust Duct outlet at the back of your Dryer.**

## Exhaust system check list hood or wall cap

- Terminate in a manner to prevent back drain or entry of birds or other wildlife.
- Termination should present minimum resistance to the exhaust air flow and should require little or not maintenance to prevent clogging.
- Wall caps must be installed at least 12" (30 cm) above ground level or any other obstruction with the opening pointed down.
- If roof vents or louvered plenums are used, they must be equivalent to a 4" (10.2 cm) dampened wall cap in regard to resistance to air flow. Prevention of back drafts and regular maintenance are required to prevent clogging.

## Separation of turns

Separate all turns by at least 3 ft. (1 m) of straight duct, including distance between last turn and dampened wall cap. If two turns must be closer than 3 ft. (1 m) deduct 10 ft. (3 m) from the maximum length.

## Turn other than 90°

- One turn of 45° or less may be ignored.
- Two 45° turns should be treated as one 90°.
- Each turn over 45° should be treated as one 90°.
- Deduct 10 ft. (3 m) for each additional elbow. It is not recommended to use more than three 90° elbows.

## Sealing of joints

- All joints should be tight to avoid leaks. The male end of each section of duct must point away from the dryer.
- Do not assemble the duct work with fasteners that extend into the duct. They will serve as a collection point for lint.
- Duct joints can be made air and moisture-tight by wrapping the overlapped joints with duct tape.


### Routing and connecting ductwork.



- Ductwork and fittings are NOT included and must be purchased separately.
- The exhaust duct run should be as short as possible.
- Use as few elbow joints as possible.
- The male end of each section of exhaust duct must point away from the dryer.
- Insulate ductwork that runs through unheated areas in order to reduce condensation and lint buildup on duct surfaces.
- Incorrect or inadequate exhaust systems are not covered by the dryer warranty.

### Insulation

Ductwork which runs through an unheated area or is near an air conditioning duct, should be insulated to reduce condensation and lint build up and be sloped down toward outdoors.

**Note:** Never install screen inside exhaust duct.

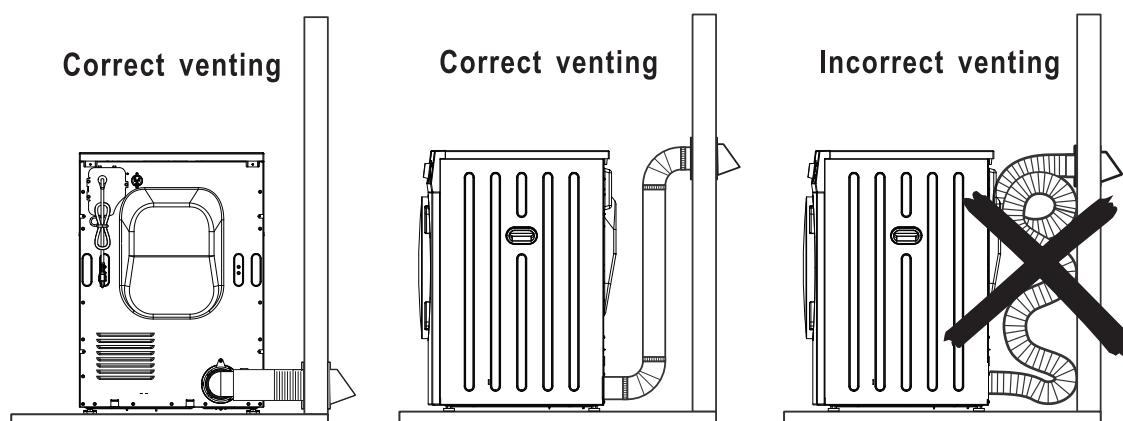
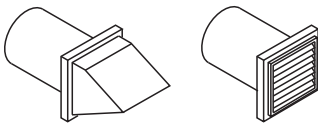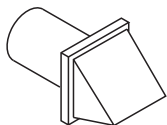
| EXHAUST LENGTH    | Wall Cap Type                                                                                      |                   |                                                                                                       |                   |
|-------------------|----------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------|-------------------|
|                   | Recommended                                                                                        |                   | Use only for short-run installation                                                                   |                   |
|                   | <br>4" (10.2cm) |                   | <br>2.5" (6.4cm) |                   |
| No. of 90° elbows | Rigid                                                                                              | Metallic Flexible | Rigid                                                                                                 | Metallic Flexible |
| 0                 | 24.4 m (80 ft.)                                                                                    | 12.5 m (41 ft.)   | 22.6m (74 ft.)                                                                                        | 10.1 m (33 ft.)   |
| 1                 | 20.7 m (68 ft.)                                                                                    | 11.3 m (37 ft.)   | 18.9 m (62 ft.)                                                                                       | 8.8 m (29 ft.)    |
| 2                 | 17.4 m (57 ft.)                                                                                    | 10.1 m (33 ft.)   | 15.5 m (51 ft.)                                                                                       | 7.6 m (25 ft.)    |
| 3                 | 14.3 m (47 ft.)                                                                                    | 8.8 m (29 ft.)    | 12.5 m (41 ft.)                                                                                       | 6.4 m (21 ft.)    |

**Do not use non-metallic flexible duct.**




## Electrical

### Direct Line

The Dryer is equipped with a socket on the back panel. Please insert the plug from your Washer into this Dryer socket. The Dryer electrical cord and plug can then be inserted into the wall outlet. This Direct Line will prevent the fuse from blowing when both the Washer and Dryer are operating.

**Note:** This will only work with the same brand Washer and Dryer.

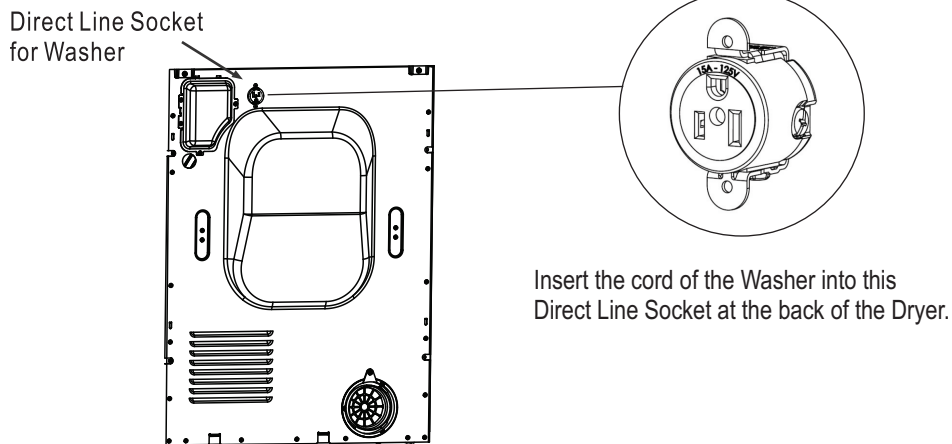

### A wiring diagram is located on the back of the dryer.

The 4-wire power cord is included with the appliance. If you require a 3-wire power cord, please contact Customer Service: Phone: 204-697-1606 or Email: [Service@ApplianceDesk.com](mailto:Service@ApplianceDesk.com)

#### **⚠ WARNING**

- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. **DO NOT** modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electric shock, or personal injury, all wiring and grounding must be done in accordance with local codes.
- It is your responsibility to provide adequate electrical services for your dryer.  
Before operating or testing, follow all grounding instructions in the Grounding section.
- An individual branch (or separate) circuit serving only your dryer is recommended. **DO NOT USE AN EXTENSION CORD.**
- Before making the electrical connection, turn off the circuit breaker(s), or remove the dryer's circuit fuse(s) at the electrical box. Be sure the dryer cord is unplugged from the outlet. **NEVER LEAVE THE ACCESS COVER OFF THE TERMINAL BLOCK.**

#### **⚠ WARNING**

- Disconnect power supply before servicing.
- Replace all parts and panels before operating.
- Failure to do so can result in death or electric shock.



This dryer must be connected to an individual circuit identical to the one specified on the rating plate of the loading protected by fuses or circuit breaker conforming to local codes.

### For electrical connections using a power cord:

- Use a new UL-listed 240V 30 amp dryer power supply cord with closed ring terminals or spade terminals with upturned ends.
- Use a UL-listed strain relief.
- Disconnect power before making electrical connections.
- Failure to do so can result in death, fire or electrical shock.

### Grounding instructions

**For a grounded, cord-connected dryer:** This dryer must be grounded. In the event of malfunction or breakdown, the grounding will reduce the risk of electric shock by providing a path of least resistance for the electrical current. This dryer uses a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

### For direct wire connections:

- Use AWG 10 copper wire.
- Connect to a 30 A minimum individual branch circuit, fused at 30 A maximum.
- Use a UL-listed strain relief.
- Disconnect power before making electrical connections.
- Failure to do so can result in death, fire or electrical shock.


**For a permanently connected dryer:** This dryer must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal on the appliance.

### WARNING

TO PREVENT ELECTRIC SHOCK, DISCONNECT POWER BEFORE SERVICING.

This dryer should be connected to an individual branch circuit with AWG 10 copper wire minimum through a 30 amp fuse or circuit breaker. **DO NOT fuse neutral.**

**Use copper conductors only.**

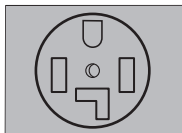


**4-Wire Receptacle  
(NEMA Type 14-30R)**

Use the instructions in this section if your home has a 4-wire receptacle (NEMA type 14-30R) and you will be using a UL listed, 120/240 volt minimum, 30 amp, dryer power supply cord.




**3-Wire Receptacle  
(NEMA Type 10-30R)**

Use the instructions in this section if your home has a 3-wire receptacle (NEMA type 10-30R) and you will be using a UL listed, 120/240 volt minimum, 30 amp, dryer power supply cord.

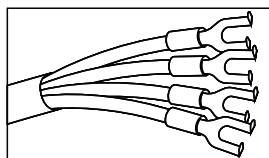


Spade terminals  
with upturned ends

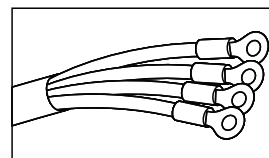

Ring terminals

 **NOTE:** Since January 1, 1996, the National Electrical Code requires that new constructions use a 4-wire connection to an electric dryer. A 4-wire cord must also be used where local codes do not permit grounding through the neutral. 3-wire connection is NOT for use on new construction.




8. Properly secure the power cord to the strain relief.
9. Reinstall the cover with the hold-down screws.

11

## Connecting Dryer Using 3-Wire Connection

If required, by local codes, install external ground (not provided) to grounded metal, or other established ground determined by a qualified electrician.

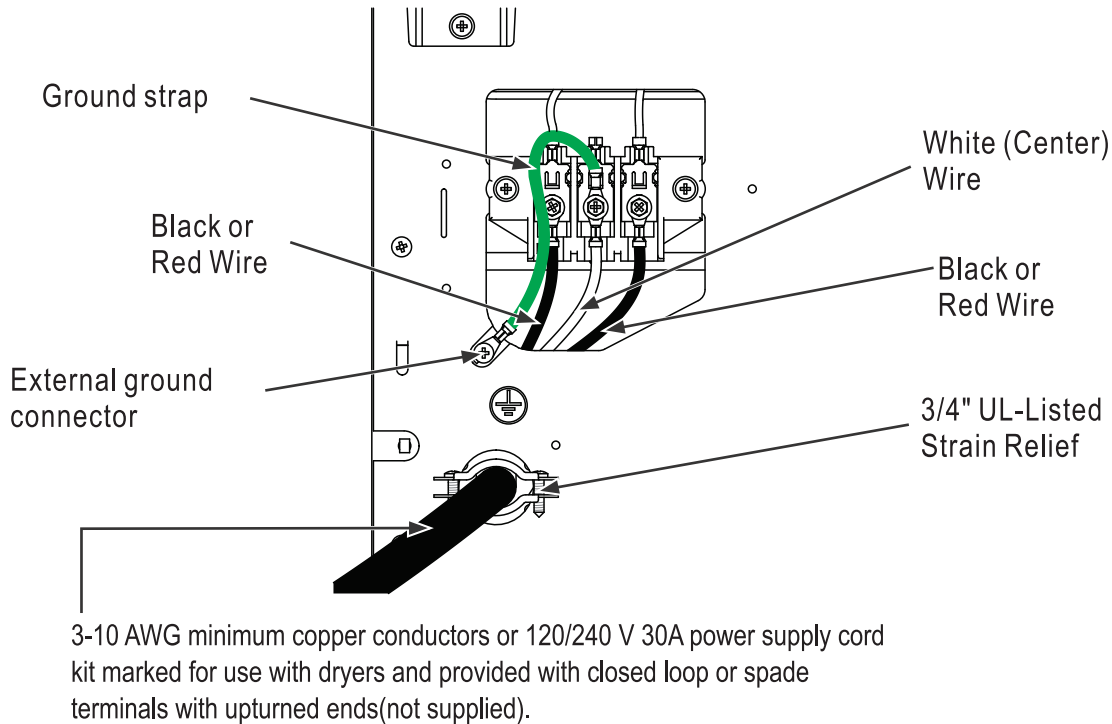

### 3-wire Connection

**Not** for use in Canada.

**DO NOT** use for Mobile Home Installations.

**NOT** for use on new construction.

**NOT** for use on recreational vehicles.

**NOT** for use in areas where local codes prohibit grounding through the neutral conduction.


1. Turn off the circuit breaker(s) (30 amp) or remove the dryer's circuit fuse at the electrical box.
2. Be sure the dryer cord is unplugged from the wall receptacle.
3. Remove the power cord cover located at the upper back.
4. Install 3/4-in. UL-listed strain relief to power cord entry hole. Bring power cord through strain relief.
5. Connect power cord as follows:
  - A. Connect the 2 hot wires to the outer screws of the terminal block (marked L1 and L2).
  - B. Connect the neutral (white, or center) wire to the center screw of the terminal block (marked N).
6. Be sure the ground strap is connected to the external ground connector's screw on cabinet rear.

**Tighten all terminal block screws (3) securely.**

7. Properly secure power cord to strain relief.
8. Reinstall the cover with the hold-down screws.


**NEVER LEAVE THE ACCESS COVER OFF OF THE TERMINAL BLOCK.**

## Control Panel

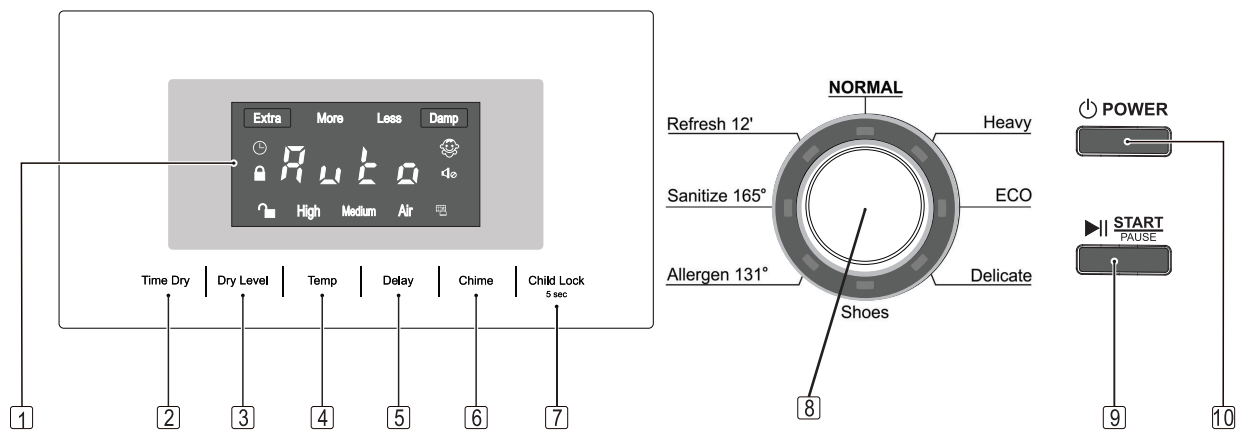

|    |                      |                                                                                                                                                                                                                                  |
|----|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Display Screen       | The <b>Display screen</b> shows the estimated time remaining in the dry cycle. It also illuminates options that are selected for Dry Level, Temperature (heat level), Delay start, Chime, Child lock, and Clean Filter Reminder. |
| 2  | Time Dry             | Press <b>Time Dry</b> to select the minutes to run the dry cycle.                                                                                                                                                                |
| 3  | Dry Level            | Press <b>Dry Level</b> to select how much you want the clothes to dry. Press repeatedly to select from Extra, More, Less or Damp.                                                                                                |
| 4  | Temp.                | Press <b>Temp.</b> to select the heat level for drying clothes. Press repeatedly to select from: High, Medium or Air.                                                                                                            |
| 5  | Delay                | Press <b>Delay</b> to start the dry cycle at a later time. Select from 1 to 24 hours.                                                                                                                                            |
| 6  | Chime                | Press <b>Chime</b> to turn the end of cycle chime sound, or button chime sound on or off.                                                                                                                                        |
| 7  | Child Lock           | The Child Lock function prevents children from playing with the buttons on the control panel. Press and hold <b>Child Lock</b> for 5 seconds to set or release the Child Lock.                                                   |
| 8  | Dry Cycle Dial       | To select a dry cycle, rotate the <b>Dry Cycle Dial</b> to the desired cycle: Normal, Heavy, ECO, Delicate, Shoes, Allergen 131°, Sanitize 165°, and Refresh 12'.                                                                |
| 9  | Start / Pause button | Press the <b>Start/ Pause</b> button to start, pause, or restart the dry cycle.                                                                                                                                                  |
| 10 | Power button         | Press the <b>Power</b> button once to turn the dryer on. Press and hold it for 3 seconds to turn the dryer off.                                                                                                                  |

## Display Panel

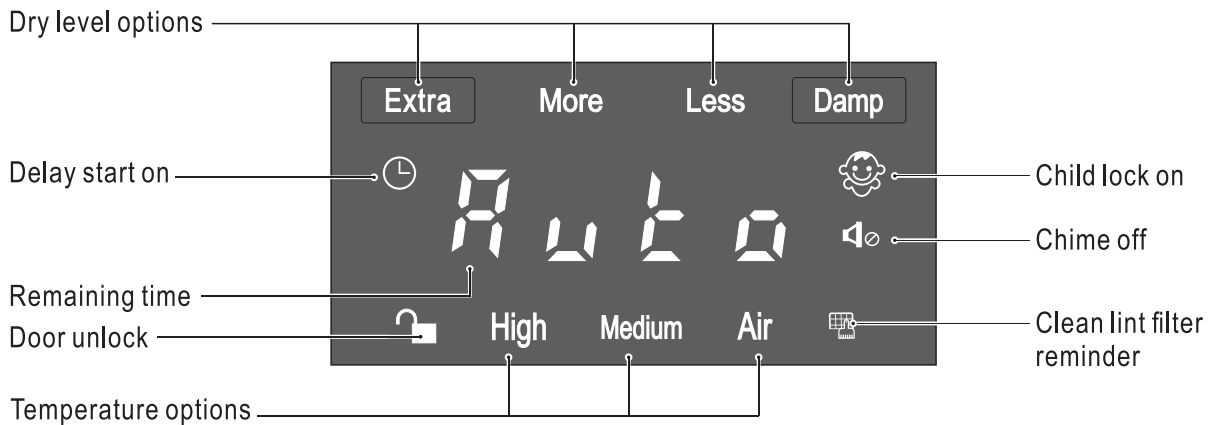

## OPERATING INSTRUCTIONS

**Before using the Dryer, please check the inside of the drum to ensure that children or pets have not climbed into the appliance.**

### Operating the Dryer

#### Before Starting the Dry Cycle

- Empty pockets of items
- Do not dry clothes with residues of oil or flammable substances
- Follow clothing manufacturer's care labels.

Load clothes loosely into the dryer, ensuring that the clothes have enough room to tumble and to let the air circulate through the clothes. Filling the dryer with too many clothes will require more time to dry and may cause wrinkle in the clothing.

**Ensure that lint has been removed from the filter for efficient drying.**

The Clean Lint Filter Reminder icon will flash on the display screen.

### Power On

Close the door firmly and press the **Power** button to turn on the dryer. If the door is not closed properly, the **door unlock** icon will appear on the **Display Screen**.

The LED will illuminate on the **Display Screen** and on the **Dry Cycle Dial**.

The default setting is for **NORMAL** dry cycle, "**More**" Dry Level, "**Medium**" Temp and **2** hours dry time.

### Select a Dry Cycle

If the default **NORMAL** dry cycle is desired, the cycle can be started. If an alternate cycle is desired, rotate the **Dry Cycle Dial** in either direction to any of the other cycles: **Heavy**, **ECO**, **Delicate**, **Shoes**, **Allergen131°**, **Sanitize165°**.

The indicator light by the cycle name will illuminate. Each of the cycles has pre-set dry times, dry levels and temperatures, based on sensor drying. Sensor dry cycles monitor the moisture in the clothes and shut the dryer off automatically when the selected dry level is reached.

Note: The time shown remaining on the display screen may increase or decrease during the dry cycle as the sensor dry function monitors for moisture in the clothes and adjusts the time.

## Refresh

Refresh 12' is a time dry cycle which tumbles the clothes for a short time while blowing hot air into the drum. This reduces wrinkles and refreshes the clothes. Use this cycle after the drying is completed and before taking clothes out of the dryer. This is optional.

## Select Dry Level and Temperature

After the dry cycle is selected, you have the option to change the Dry Level and the Temperature.

- Press Dry Level to select how much you want the clothes to dry. Press repeatedly to select from: Extra, More, Less or Damp. The selection will illuminate on the display screen.
- Press Temp to select the heat level for drying clothes. Press repeatedly to select from: High, Medium or Air. The selection will illuminate on the display screen.

Note: Some dry cycles do not allow these settings to be changed. For example, Allergen and Sanitize only use High heat.

## Options

In addition to selecting the dry level and temperature, you can also select options on the Control Panel for **Delay**, **Chime** and **Child Lock**.

- Press **Delay** to start the dry cycle at a later time. Select from 1 to 24 hours. Each time you press increases the time in one-hour increments.
- Press **Chime** to turn the end of cycle chime sound on or off. An indicator light will illuminate on the **Display Screen** to show if the Chime is on or off.
- The Child Lock function prevents children from playing with the buttons on the control panel. Press and hold **Child Lock** for 5 seconds to set or release the Child Lock. An indicator light will illuminate on the display screen to show that the Child Lock is set. Once Child Lock is set, no button except for the **Power** button will function until the Child Lock has been released.

## Time Dry

If you want to set a specific time for drying (not using sensor dry cycles) press **Time Dry** to select the minutes to run the dry cycle. Repeated pressing of **Time Dry** increases the time in 10-minute increments up to one hour.

## Start the cycle

After dry cycle and options have been selected, Press the **START/PAUSE** button to start the cycle. The cycle can be paused at any time either by opening the door, or by pressing the **START/PAUSE** button.

## End of the cycle

When the cycle is completed, "**End**" will be displayed on the screen and the chime will sound if it has been set. Open the dryer door and remove the clothes from the dryer. It is recommended that clothes be removed from the dryer when the cycle ends and the clothes are still warm. Folding them right away will reduce wrinkles.

If clothes have been sitting in the dryer for a while after the cycle has ended, the **Refresh 12'** cycle can be run for a quick refresh of the clothes.

## Program Selection Chart

| Cycle         | Fabric type     | Dry level (Default) | Temperature (Default Heat) | Sensor Dry Pre-set Time |
|---------------|-----------------|---------------------|----------------------------|-------------------------|
| NORMAL        | Mixed cottons   | More                | Medium                     | 2 hrs                   |
| Heavy         | Towels, jeans   | Extra               | High                       | 2 hrs 30 mins           |
| ECO           | Mixed cottons   | More                | Medium                     | 1 hr 40 mins            |
| Delicate      | Silk, Wool      | Damp                | Air                        | 2 hrs                   |
| Shoes         | Shoes           | More                | Medium                     | 2 hrs                   |
| Allergen 131° | Sheets          | Extra               | High                       | 2 hrs 15 mins           |
| Sanitize 165° | Mixed Cottons   | Extra               | High                       | 2 hrs 30 mins           |
| Refresh 12'   | Mixed and Heavy |                     | Medium                     | 12 mins                 |

**NOTE:** For **Allergen 131°**, **Sanitize 165°** and **Delicate** cycles, the **Dry Level** and **Temperature** cannot be changed from the default settings.

### Allergen Function

The Allergen 131° cycle heats the air to 131°F to remove allergens from clothes. This Sensor Dry cycle is pre-set to High heat temperature and Extra Dry Level and runs for 2 hours and 15 minutes. Turn the Dry Cycle Dial to Allergen 131° and press the Start/Pause button.

Clothes that have already been dried in another dry cycle, can be additionally run in the Allergen 131° cycle. Turn the Dry Cycle Dial to Allergen 131°, and press Time Dry and select the minutes to dry, then press the Start/Pause button.

### Sanitize Function


The Sanitize 165° cycle heats the air to 165°F to remove germs from clothes. This Sensor Dry cycle is pre-set High heat temperature and Extra Dry Level and runs for 2 hours and 30 minutes. Turn the Dry Cycle Dial to Sanitize 165°, and press the Start/Pause button.

Clothes that have already been dried in another dry cycle, can be additionally run in the Sanitize 165° cycle. Turn the Dry Cycle dial to Sanitize 165°, and press Time Dry and select the minutes to dry, then press the Start/Pause button.

### Drying Rack (Optional)

The drying rack can be used to dry items such as delicates and shoes.

- Install the drying rack by placing the front lip on top of the lint filter.
- Place items to be dried flat on the rack, leaving enough space for air circulation.
- Lower the top bar onto the rack to hold the items in place.

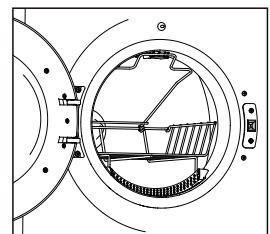



## Maintenance

To reduce the risk of electric shock, disconnect this dryer from the power supply before attempting any user maintenance other than cleaning the lint trap at the door. Pressing the POWER button does not disconnect this appliance from the power supply.

### Cleaning

Clean with a soft, damp cloth. Do not use abrasive substances.

Do not spray cleaners directly on the panel.

The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.

Apply such products away from your dryer and wipe up any spills or over spray immediately.

Protect the surface from sharp objects as they may scratch or damage the finish.

Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separated storage box.

### Lint Filter


Clean the lint filter before each dry cycle.

Pull the lint filter straight up. Moisten your fingers and remove the captured lint. Once clean, slide the filter back into its position.

Have a qualified technician vacuum the lint from the dryer once a year.



**NEVER operate the dryer without its lint filter in place.**

**NEVER operate the dryer with a wet lint filter.**

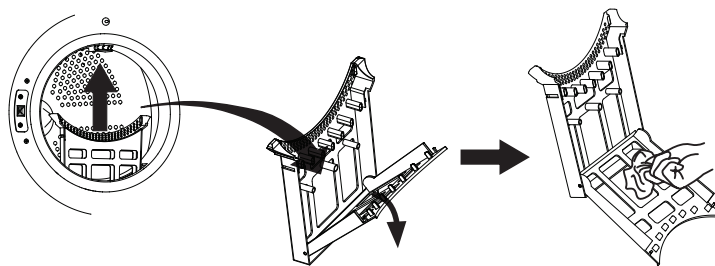



**Clean the lint filter at exhaust outlet regularly.**

1. Release the tie to remove the exhaust hose from the exhaust elbow.

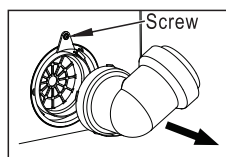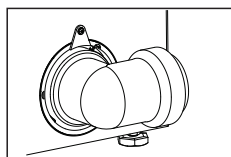

2. Turn the exhaust elbow counter clockwise about 30°, and pull it out.

3. Unscrew the screw that hold the lint filter in its place. Turn the filter about 30°, then pull it out. Clean all the lint on the filter and in the exhaust duct.

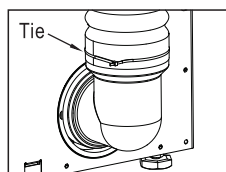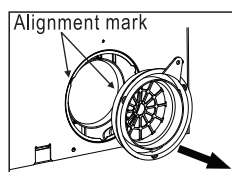


4. Re-install all the parts by following the reserve steps.

## Door Reversal


### Reversing the Door Swing (Optional)

- Before you start, unplug your dryer from its electrical outlet.
- Handle any parts carefully to avoid scratching the surface.
- This dryer must be exhausted to the outdoors.
- Do not move the dryer when service until door swing reversal completed.
- These steps are for changing the hinge and door assembly from left side to the right side. If you ever want to switch them back to the left side, follow these instructions and reverse all references to the left and right.

**Step 1.** Open the door. Remove the two screws holding the hinge/door assembly to the cabinet. Carefully set them aside.

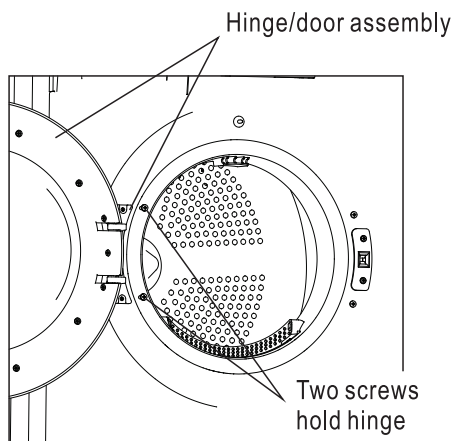


**Step 2.** Remove the two screws holding the strike plate, and the other two screws above and under the strike plate.

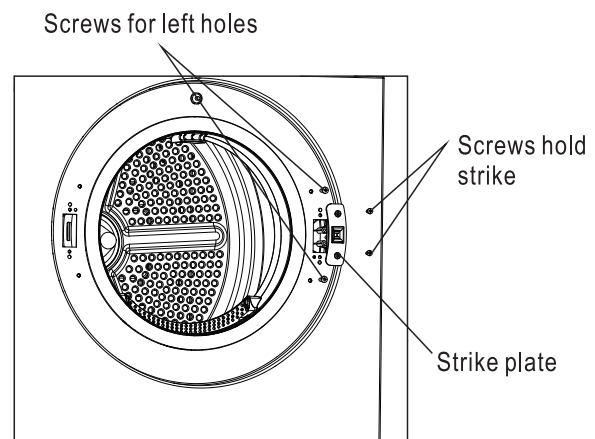


**Step 3.** Rotate the strike plate, then re-install it on the opposite side. And screw the other two screws into the holes left after remove the hinge/door assembly.

Secure with two same screws

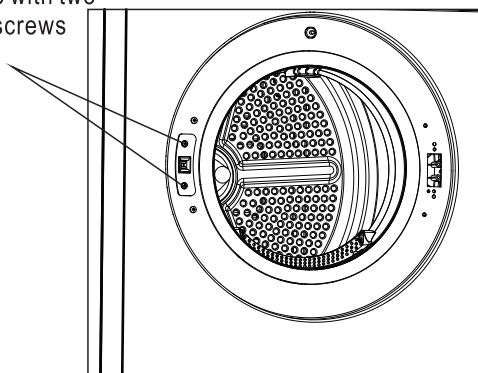

**Step 4.** Rotate and replace the hinge/door assembly on the opposite side, secure them using the same screws.

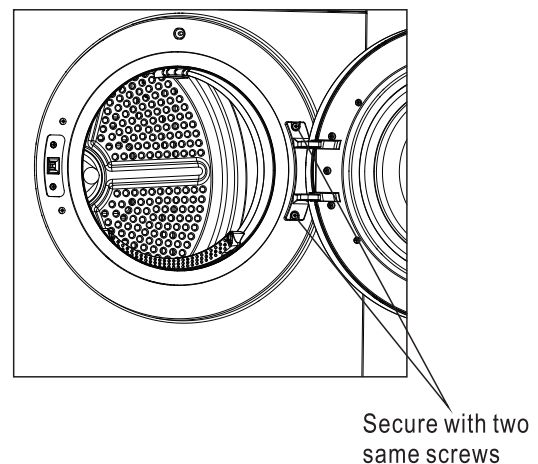

## Troubleshooting

In most cases, when your Dryer fails to work, the problems arising can be easily solved without having to call for a technician. Before calling for assistance, always check these points.

| Problem                                               | Possible Causes                                                                                                           | Solutions                                                                                                                                                                                                                                                       |
|-------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dryer will not turn on                                | Power cord is not properly plugged in.<br>House fuse is blown, circuit breaker has tripped, or power outage has occurred. | Make sure that the plug is plugged securely into a grounded outlet matching the dryer's rating card.<br>Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is circuit overload, have it corrected by a qualified electrician. |
| Dryer shakes or make noise                            | Some shaking/noise is normal.<br>Dryer may be sitting unevenly.                                                           | Move the dryer to an even floor space, or adjust the leveling legs as necessary until it is even.                                                                                                                                                               |
| Clothes take too long to dry                          | Improper or obstructed duct                                                                                               | Check the Installation Instructions to make sure the dryer venting is correct.<br>Make sure duct is clean, free of kinks and unobstructed.<br>Check to see if outside wall cap operates easily.                                                                 |
|                                                       | Improper sorting                                                                                                          | Separate heavy items from lightweight items (generally, a well-sorted washer load is a well-sorted dryer load).                                                                                                                                                 |
|                                                       | Large loads of heavy fabrics (like beach towels)                                                                          | Large, heavy fabrics contain more moisture and take longer to dry. Separate large, heavy fabrics into smaller loads to speed drying time.                                                                                                                       |
|                                                       | Controls improperly set                                                                                                   | Match the settings to the clothes to dry.                                                                                                                                                                                                                       |
|                                                       | Lint filter is full                                                                                                       | Clean the filter before every load.                                                                                                                                                                                                                             |
|                                                       | Blown fuses or tripped circuit breaker                                                                                    | Replace fuses or reset circuit breakers. Since most dryers use 2 fuses/breakers, ensure both are operating.                                                                                                                                                     |
|                                                       | Overloading/combining loads                                                                                               | Do not put more than one wash load in the dryer at a time.                                                                                                                                                                                                      |
| The dry level was chosen, but load is still damp      | Load consists of a mixture of heavy and light fabrics                                                                     | When combining heavy and light fabrics in a load, select Extra dry level.                                                                                                                                                                                       |
|                                                       | Lint filter is blocked                                                                                                    | Check and clean the lint filter.                                                                                                                                                                                                                                |
|                                                       | Dry sensor is dirty                                                                                                       | Clean the sensor with a moist cloth.                                                                                                                                                                                                                            |
| Control button(s) not responding                      | Child lock activated                                                                                                      | This is normal, press the button for 5 seconds to release.                                                                                                                                                                                                      |
|                                                       | The option is incompatible with the desired dry cycle.                                                                    | This is normal, select the right options for your dry cycle.                                                                                                                                                                                                    |
| Remaining time changed to a lower or a greater number | The estimated time may change when dry a smaller, or bigger load than normal load.                                        | This is normal.                                                                                                                                                                                                                                                 |
| Dryer doesn't heat                                    | Fuse is blown/circuit breaker is tripped                                                                                  | Check the fuse/circuit breaker, and replace fuse or reset breaker.                                                                                                                                                                                              |

| Problem                                                     | Possible Causes                                                                                                                             | Solutions                                                                                                                                                                                                        |
|-------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clothes are still wet and dryer shut off after a short time | The door was opened before the end of dry cycle, then the load was removed, and a new wet clothes were loaded without selecting a new cycle | A new dry cycle must be selected for each new load.                                                                                                                                                              |
|                                                             | Load was already dry except for collars and waistbands                                                                                      | Choose Quick Dry or Time Dry to dry damp collars and waistbands. In the future, when drying a load with collars and waistbands, choose Extra.                                                                    |
| Clothes are wrinkled                                        | Over drying                                                                                                                                 | Select a shorter drying time.<br>Remove items while they still hold a slight amount of moisture.<br>Select a Damp setting.                                                                                       |
|                                                             | Items sit in dryer after cycle ends                                                                                                         | Remove items when cycle ends and fold or hang immediately.                                                                                                                                                       |
|                                                             | Overloading                                                                                                                                 | Separate large loads into smaller ones.                                                                                                                                                                          |
| Clothes shrink                                              | Some fabrics will naturally shrink when washed. Others can be safely washed, but will shrink in the dryer.                                  | To avoid shrinkage, follow garment care labels exactly. Some items may be pressed back into shape after drying. If you are concerned about shrinkage in a particular item, do not machine wash or tumble dry it. |
| Greasy spots on clothes                                     | Drying dirty items with clean ones                                                                                                          | Use your dryer to dry only clean items. Dirty items can stain clean items and the dryer.                                                                                                                         |
|                                                             | Clothes were not completely clean                                                                                                           | Sometimes stains which cannot be seen when the clothes are wet appear after drying. Use proper washing programs before drying.                                                                                   |
| Lint on clothes                                             | Lint filter is full                                                                                                                         | Clean lint screen before each load.                                                                                                                                                                              |
| Static occurs                                               | Synthetics, permanent press and blends can cause static                                                                                     | Try a fabric softener.                                                                                                                                                                                           |
|                                                             | Over drying                                                                                                                                 | Try a fabric softener.<br>Select Damp dry level.                                                                                                                                                                 |

## Error Codes

Information codes may be displayed to help you understand better what is wrong with your dryer.

| Error Codes | Problem              | Solutions                                                                                                 |
|-------------|----------------------|-----------------------------------------------------------------------------------------------------------|
| E -1        | Door is open         | Close the door well.                                                                                      |
|             | Door switch failure  | Check the wiring connections between door switch and the Electronic Module.<br>Replace a new door switch. |
| E -2        | Dry sensor failure   | Check the wiring connections between dry sensor and the Electronic Module.<br>Replace a new dry sensor.   |
| E -5        | Dry heating failure  | Clean the lint filter at exhaust outlet.<br>Push down the button of thermostat.                           |
| E -7        | Drum does not rotate | Belt has fallen off or broken.<br>Replace belt.                                                           |

If Error Codes display that are other than the ones listed in the table, please contact Customer Service.

