

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

122180
Dining Table Base

ITEM: 122180



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A LEG SUPPORT FRAME



1PC

 
B LEG



4PCS

HARDWARE IDENTIFICATION

 1 BOLT
(M6 x 50mm - RBW)



8PCS

2 LOCK WASHER
(1/4" - RBW)



8PCS

3 FLAT WASHER
(1/4" - RBW)



8PCS

4 ALUMINIUM DISC
(Ø50 x 10mm - SR)



4PCS

5 THREADED BOLT
(M8 x 20mm - RBW)



4PCS

6 ALLEN WRENCH
(4mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **122180**




ASSEMBLY INSTRUCTIONS

STEP 1

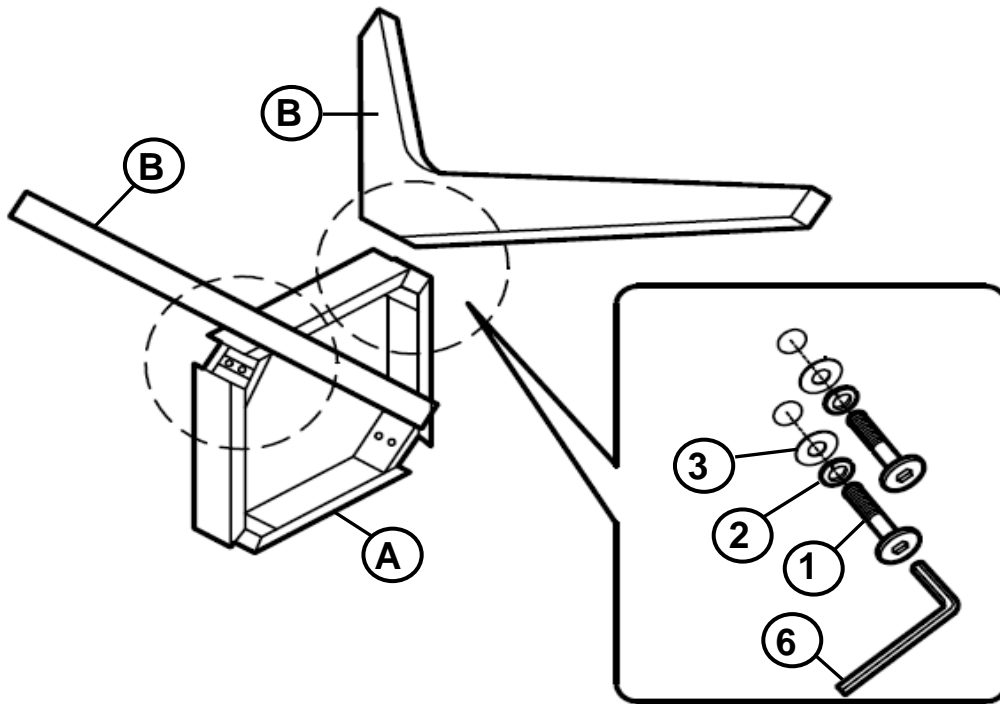

STEP 2


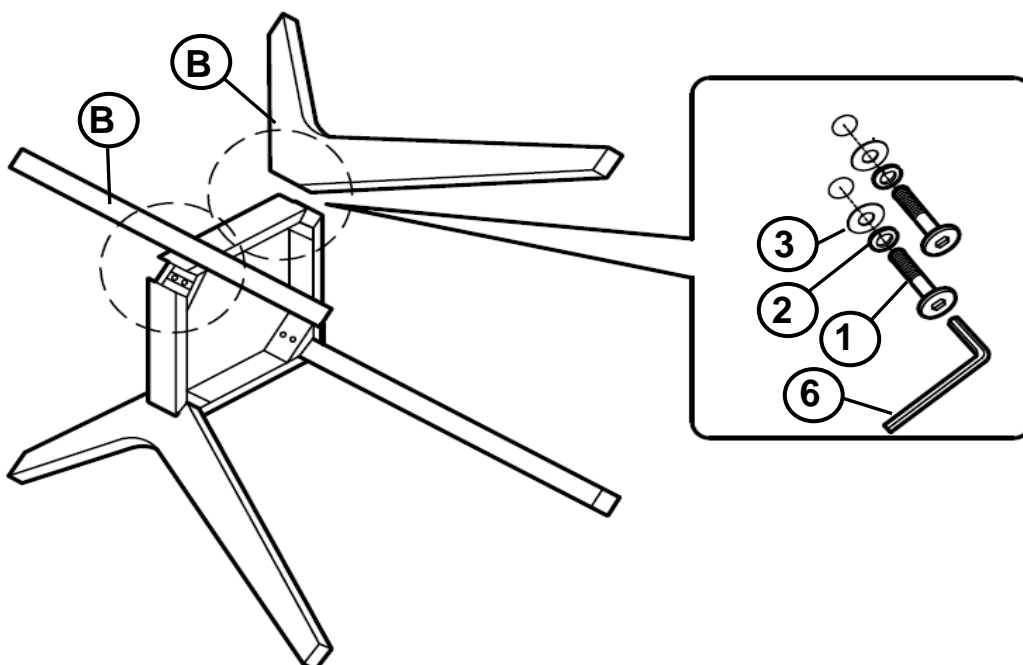


ITEM: **122180**




ASSEMBLY INSTRUCTIONS


STEP 3

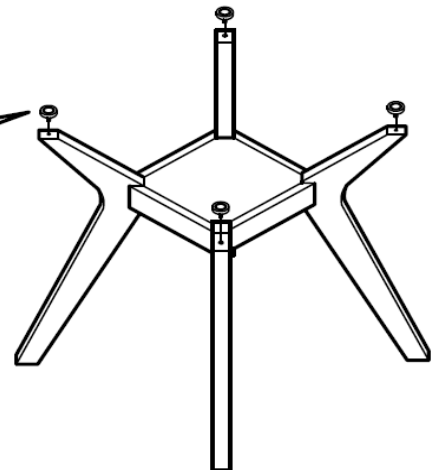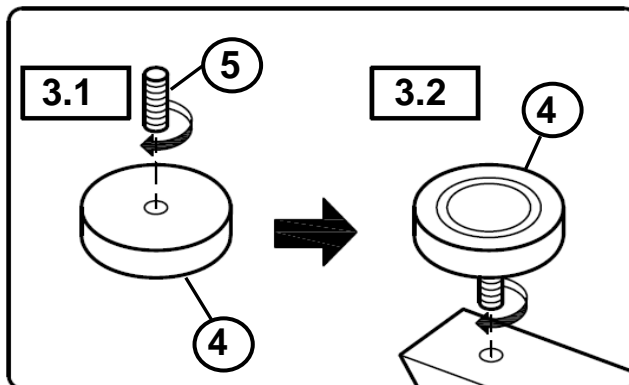

STEP 4

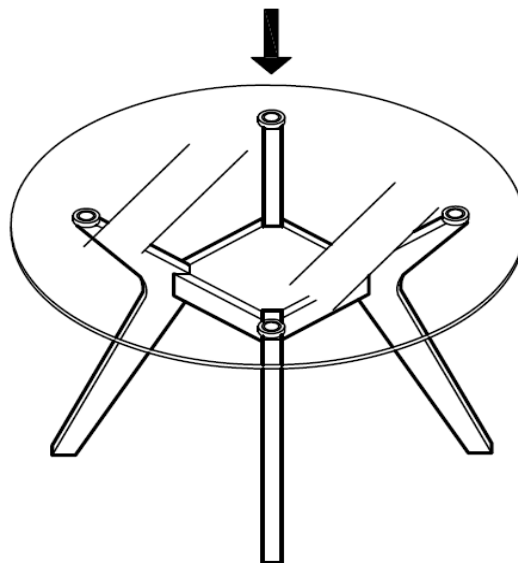


STEP 5 **COMPLETE**

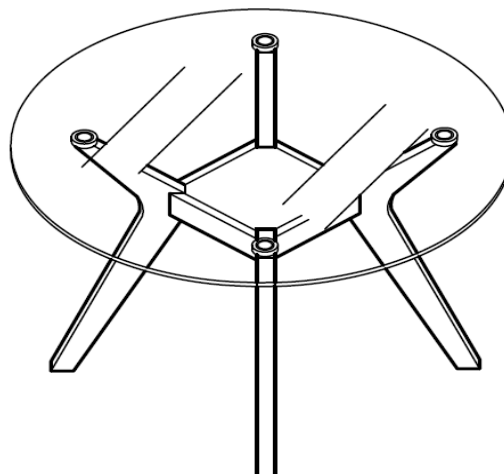

NOTE : GLASS TOP NOT INCLUDED



ITEM: 122180

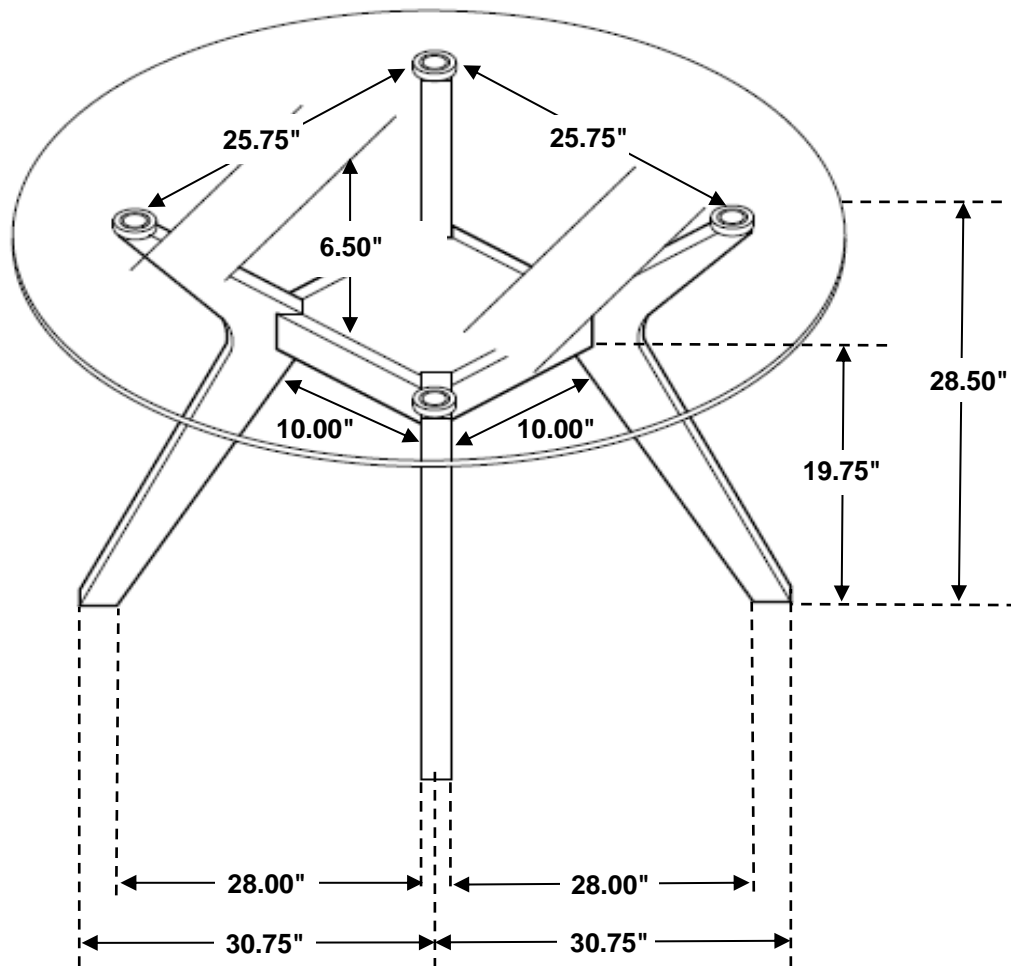

Note : Dimension tolerance $\pm 5\%$