


Multi-Scenario

Ceiling

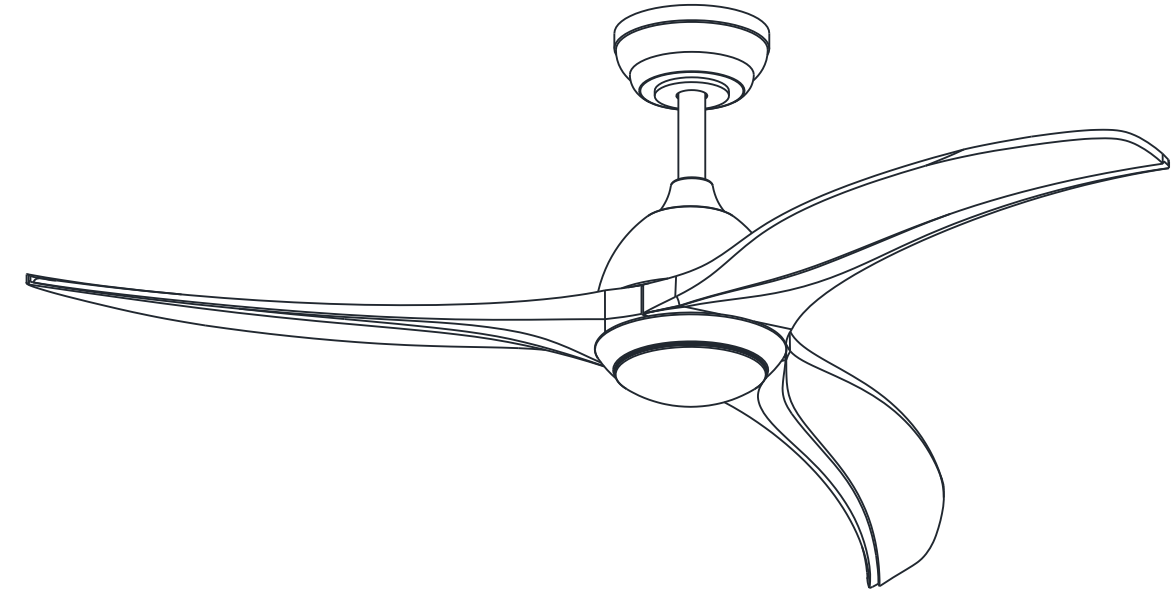

User Manual

Pre-Installation

Light kit fitter assembly

Fan-Motor assembly × 1PCS Light kit fitter assembly × 1PCS LED × 1PCS

Blade X 3PCS Decorative cover X 1PCS lamp shade × 1PCS

Slide - on mounting bracket (inside canopy) X 1PCS 4.92 inch Ball/downrod assembly X 1PCS Canopy X 1PCS Coupling cover X 1PCS

Parts Kit

AA Mounting screws × 4 BB Expansion bolts × 2 CC Plastic wire nut (not to scale) × 3 DD Blade attachment screw × 7 EE iron Washers × 7

NOTE Hardware not shown to actual size.

Install downrod assembly

Finish

Finish

Finish

Fastening the blade arms to the motor

1. Remove the pre installed screws
2. Install the fan blade on the corresponding screw hole, and then install and fix it with the removed screws.

1. Remove the pre installed screws and install the lamp at the specified position

1. Put the LED light source into the disc (the LED light source has a magnet, which can be directly magnetized on the disc)
2. Pass the LED lead of the motor through the hole in the middle of the LED light source.
3. Then plug the male terminal of LED lead into the female terminal of LED light source (as shown in figure)

1. Screw the glass lampshade into the lamp in a counterclockwise direction. Make sure the glass lampshade is locked.

Installation of the hanging bracket

CONCRETE CEILING

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.

2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.

WOODEN CEILING

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket (selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.

2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

Install downrod assembly

Hang the fan

- Carefully feed the motor wires up through the downrod
- Align the holes and replace hanger pin and locking pin.
- Tighten the two collar setscrews.
- Slip coupling cover, canopy cover and canopy onto the downrod.

Install canopy

- Ensure the loosened screws is inserted into the key holes on the mounting bracket.
- Carefully raise the canopy up to the mounting bracket. Rotate the canopy clockwise.
- Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened
- Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

Making the electrical connections

WARNING Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

IMPORTANT Use the plastic wire connectors (BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

WARNING Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.

IMPORTANT: Use the plastic wire connectors (BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

Matters needing attention:

- Receiver can not be mounted on the plane to avoid affecting the unevenness of the cover and ceiling.
- Receiver sub-inputs and outputs are strictly prohibited from adjusting input and output pairs.
- If there is a wall switch on the fan, it must be on to control effectively.
- Wiring should be done according to the color of the wire and the instructions on the sleeve.
- When using the remote control, please check whether the battery is installed or not. Pay attention to the positive and negative poles of the battery. The control key of the handle flashes every key that is pressed
- The antenna must be exposed to the outside of the lamp during installation

Antenna

Battery type [7#1.5V*2]

Motor output Line (UVW) phase line

Blue Line Output Light Line N Black Line Input Fire Line L

White Line Output Light Line L White Line Input Zero Line N

Install remote control

Preparing for mounting

- Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
- Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
- Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket

LIGHT MUST BE KEPT AT THE ON POSITION
FAN MUST BE KEPT AT THE HIGH SPEED

Use of remote control

Turn off lights and fans/Always close The light is on/off

Close the wind fan

Regulating fan wind speed

Fan is turned

The wind class

Timing off fan

Fan reversal

Turn on the controller, then you will hear a sound "Di". Press "FAN" within 2 minutes till you hear the sound "Di Di". Check code is done. If not, turn off the controller, and repeat it after 1 minute.

Code Clear: Within 5 seconds upon turning on, long press "ALL OFF" button, the light flashes 2 times, then the action is done.

IF THE REMOTE CONTROL CANNOT BE EFFECTIVELY CONTROLLED, PLEASE CHECK THE BATTERY, AND REMOVE THE BATTERY IF NOT IN USE FOR A LONG TIME.