

ASSEMBLY INSTRUCTIONS

MODEL: WF319354 DRESSER

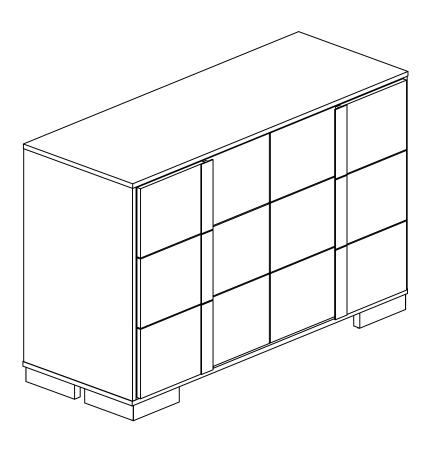

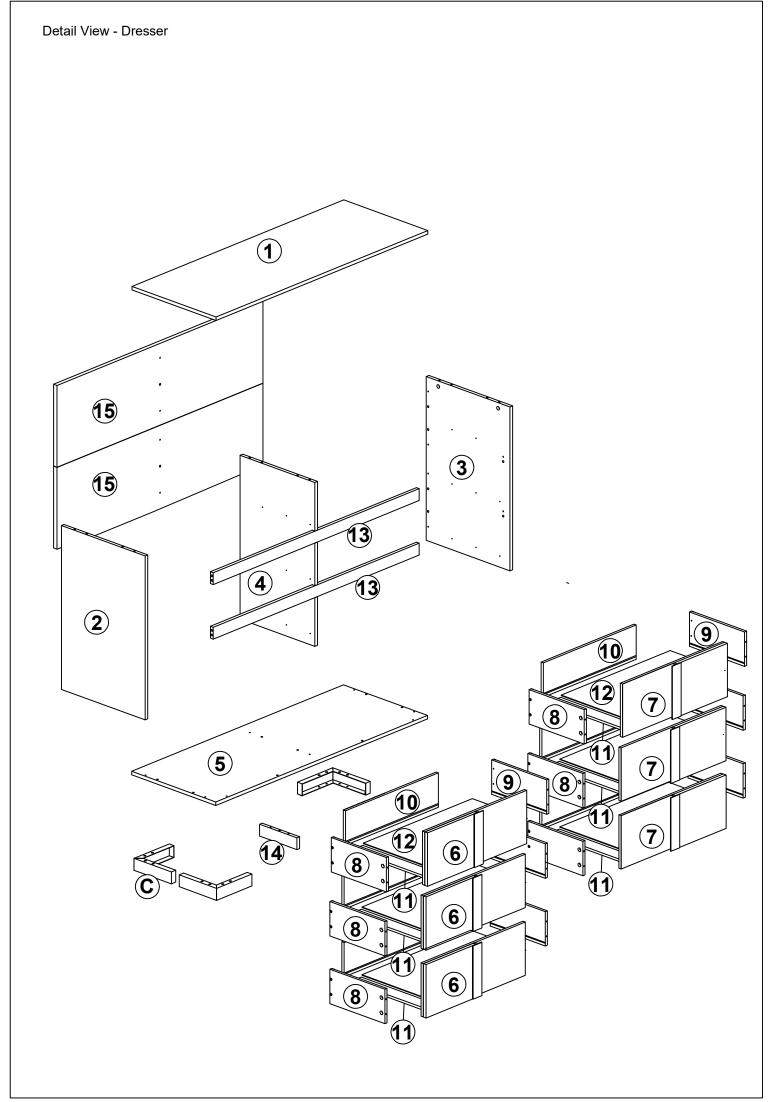

NO		PART LIST	QTY
1	Top Panel		1
2	Side Panel L		1
3	Side Panel R		1
4	Centre Panel		1
5	Bottom Panel		1
6	Drawer Front (L)		3
7	Drawer Front (R)		3
8	Drawer Box Side L		6
9	Drawer Box Side R		6
10	Drawer Box Back		6
11	Drawer Box Support		6
12	Drawer Bottom Ply		6
13	Front Horizontal		2
14	Bottom Centre Leg		1
15	Back Panel		2


NO	HARDWARE LIST	
A	Handle	6
В	Truss Head M4 x 18mm	12+(1)
С	Metal Leg	4
D	Pan Head Screw m3.5 x 12mm Blk √aaaaaa →	16+(1)
E	Flat Head Chipboard Screw m3.5x12mm Rbw ◄█████	72+(7)
F	Flat Head Screw m4 x 32mm	48+(4)
G	Extension Slide 300mm CR CL DL DL DR	24
Н	Minifix Fastener Connector D15mm x 9.8mm	54+(5)
1	Cam Dowel Length 33mm	54+(5)
J	Wood Dowel 6mm x 30mm	18+(1)
К	Wood Dowel 8mm x 30mm	31+(3)


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture part on a clean and a flat surface, such as carpet or rug, to prevent from being scratched.


CAUTION:


- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part of reach of children.




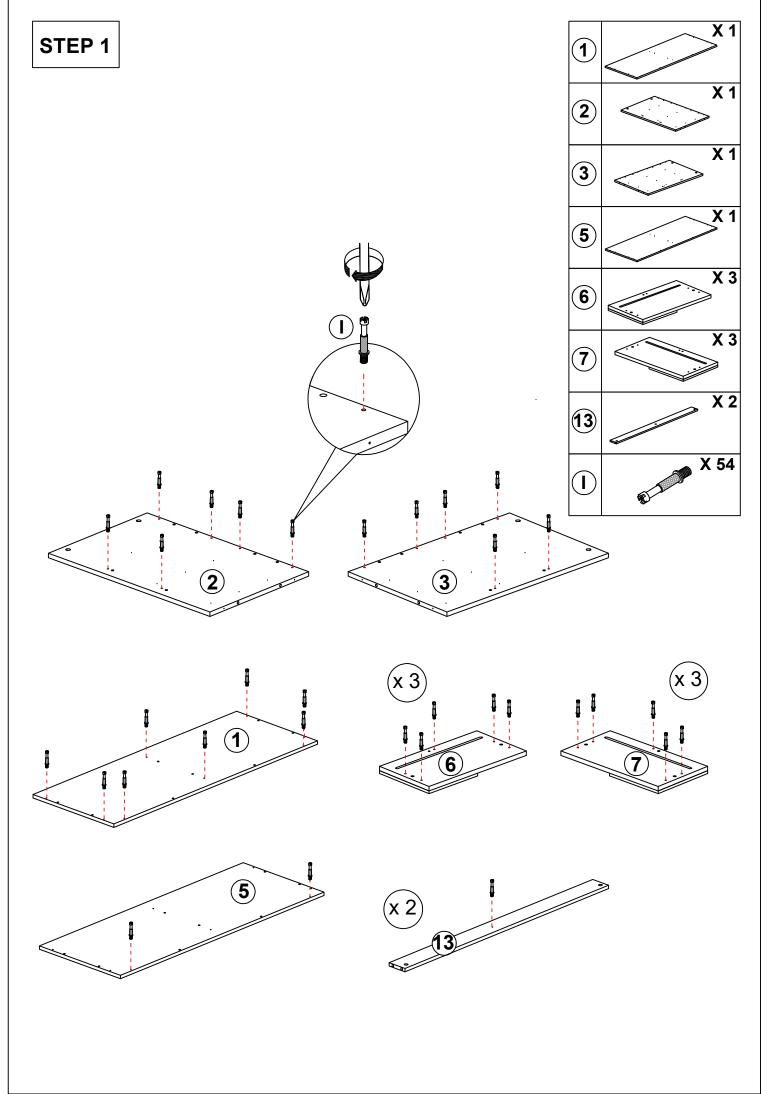


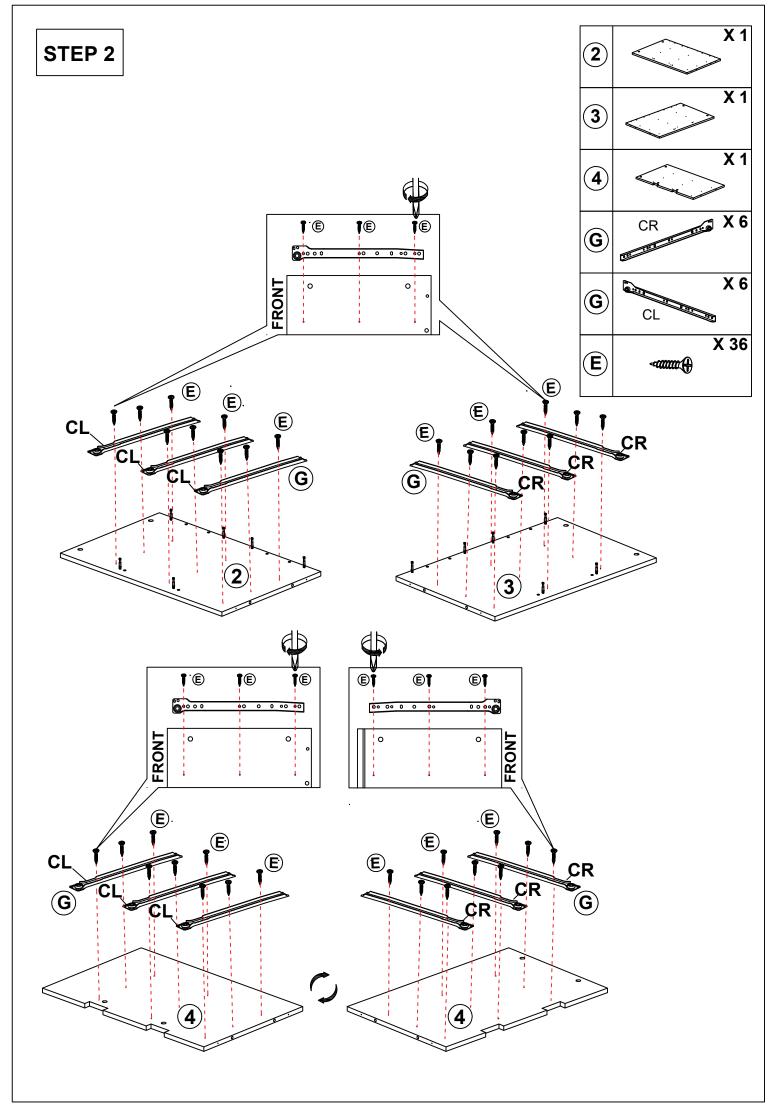


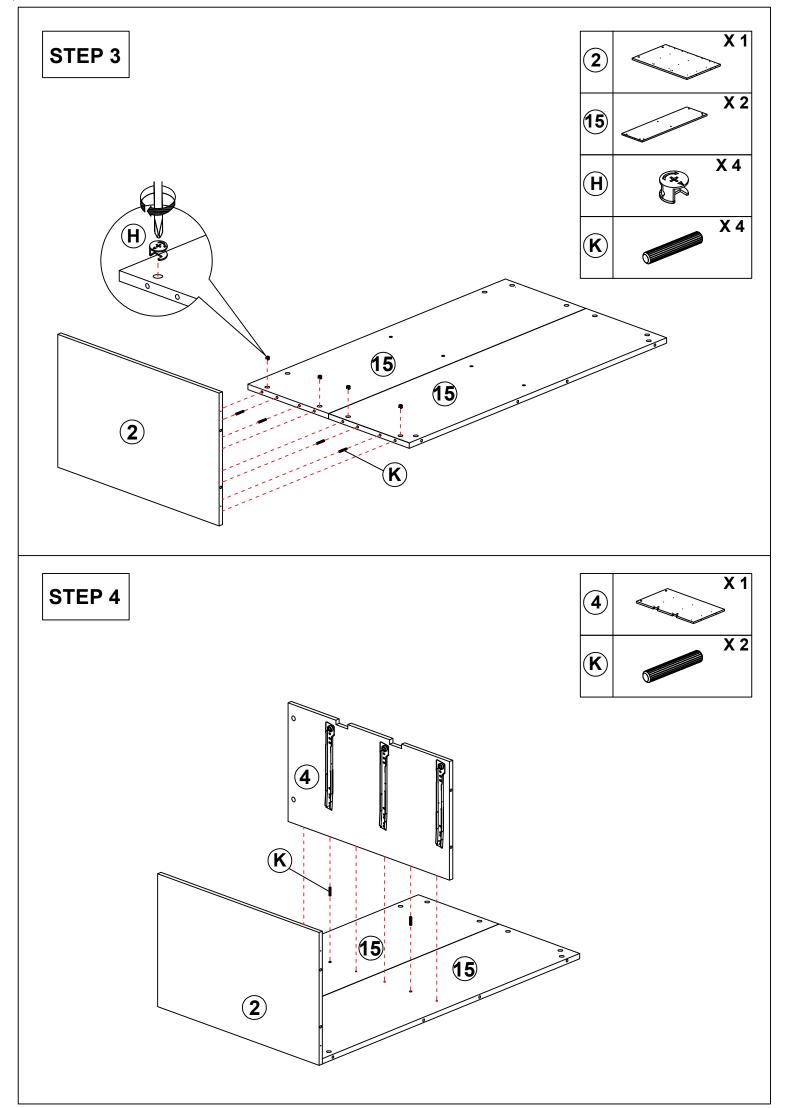


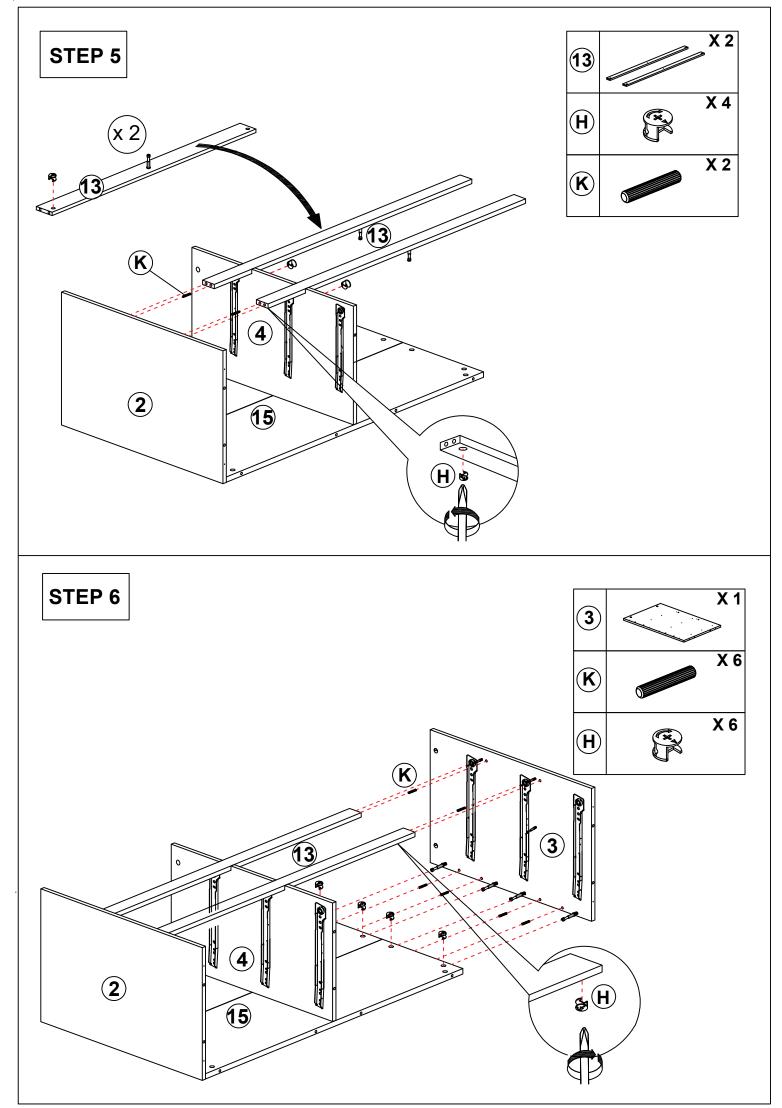


 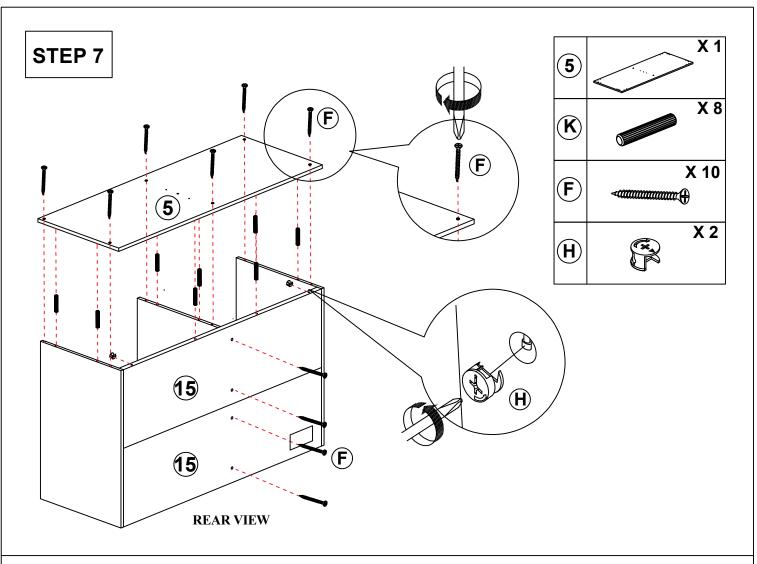


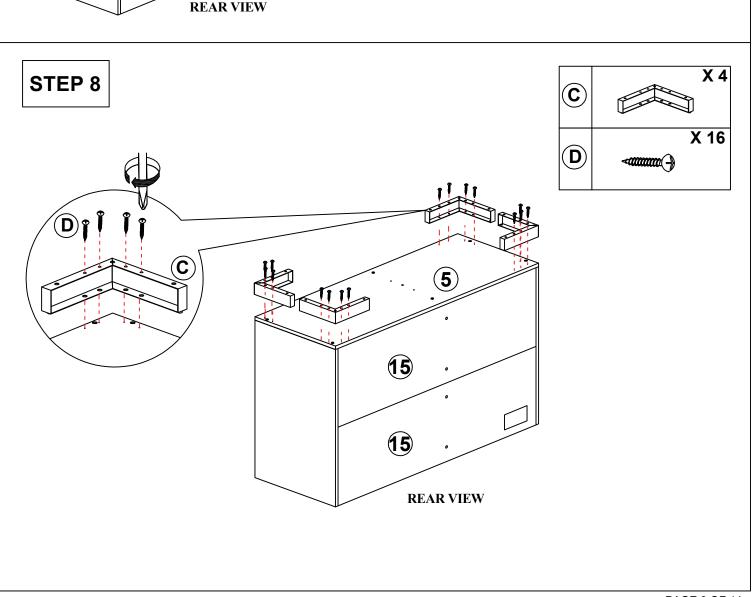

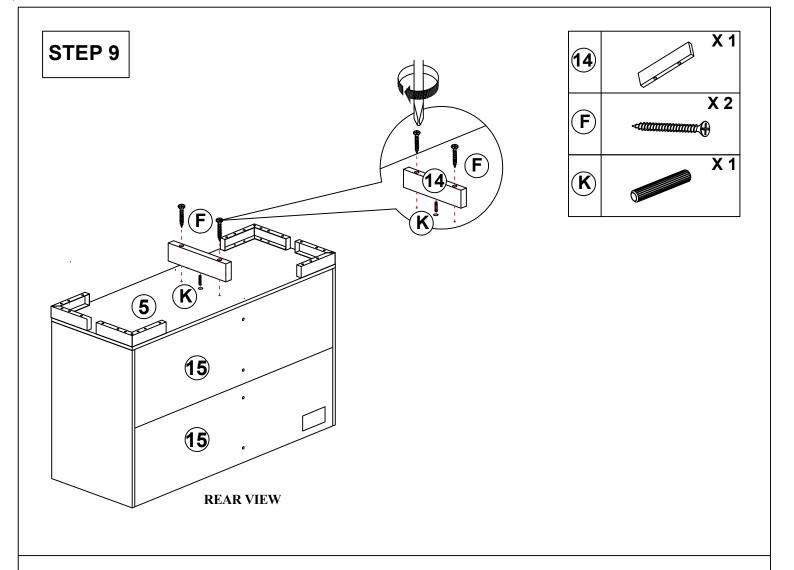

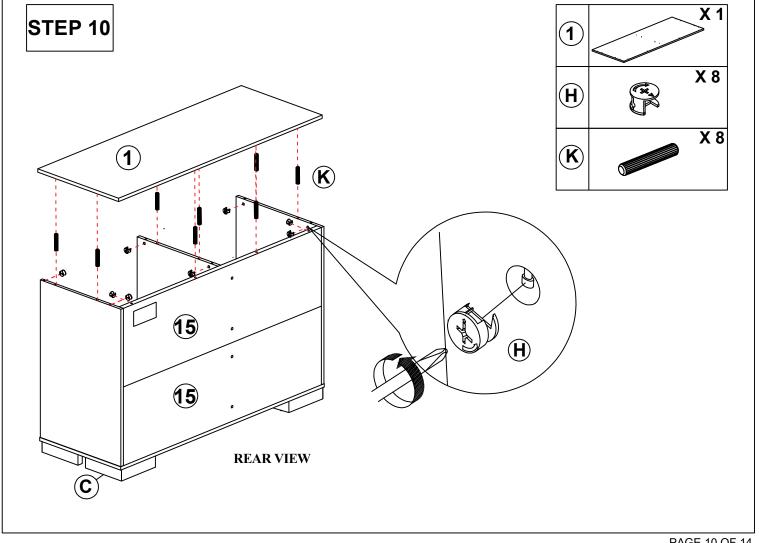


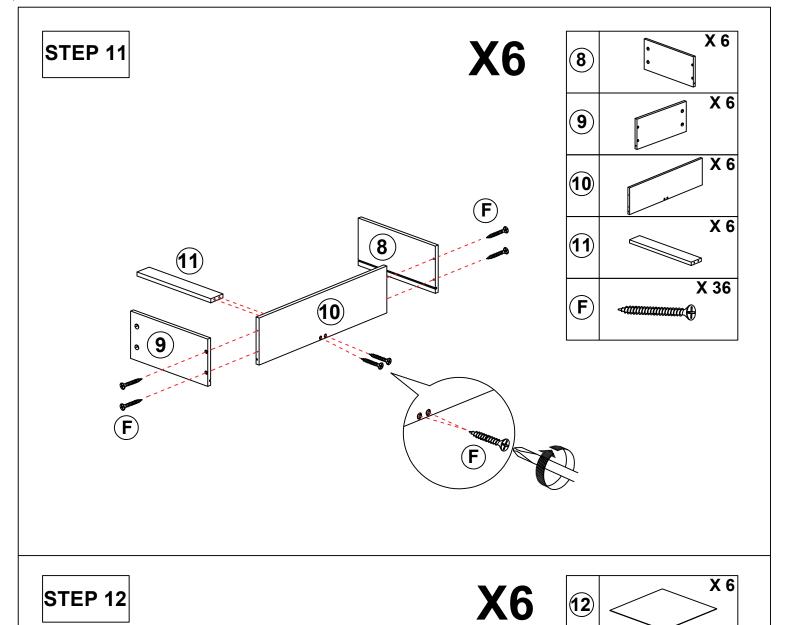





STEP 12

12

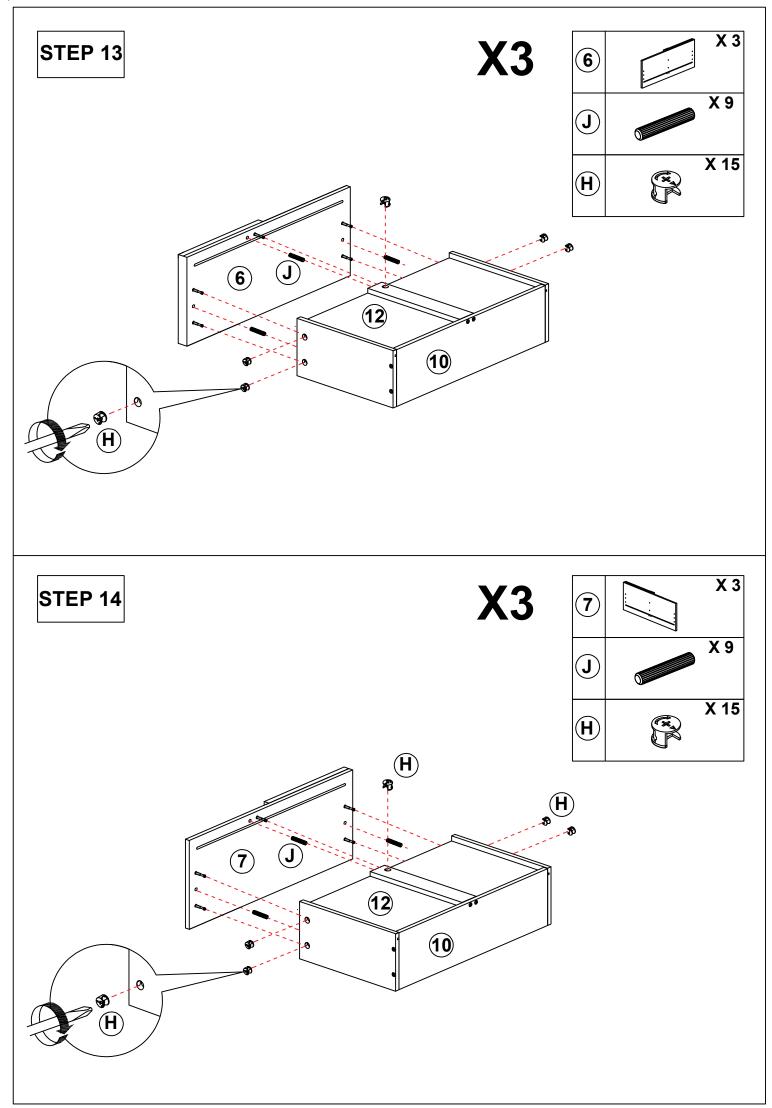

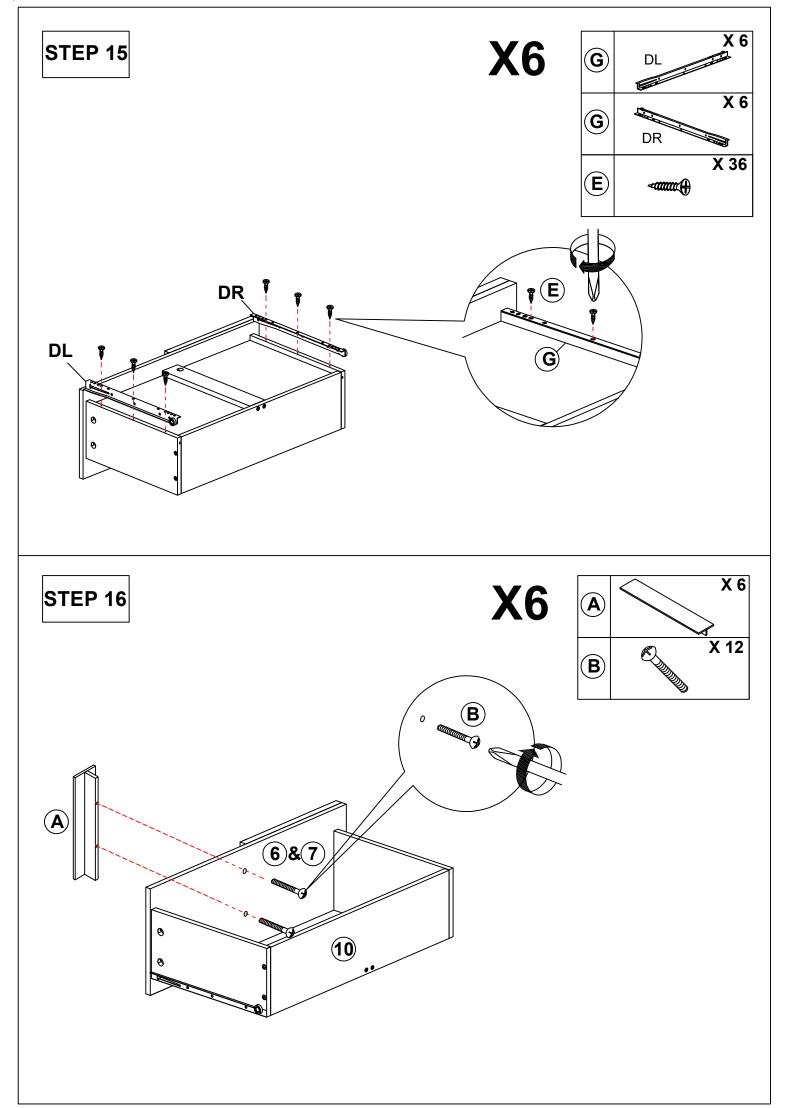

STEP 17

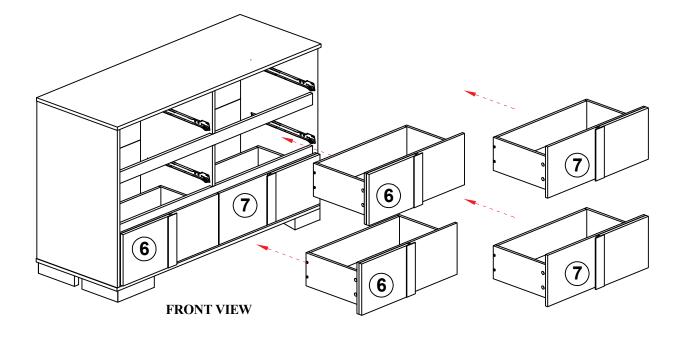

COMPLETE ASSEMBLY

