 


60INCH 3 DOORS MOBILE KITCHEN STORAGE ISLANDS

Installation & Assembly

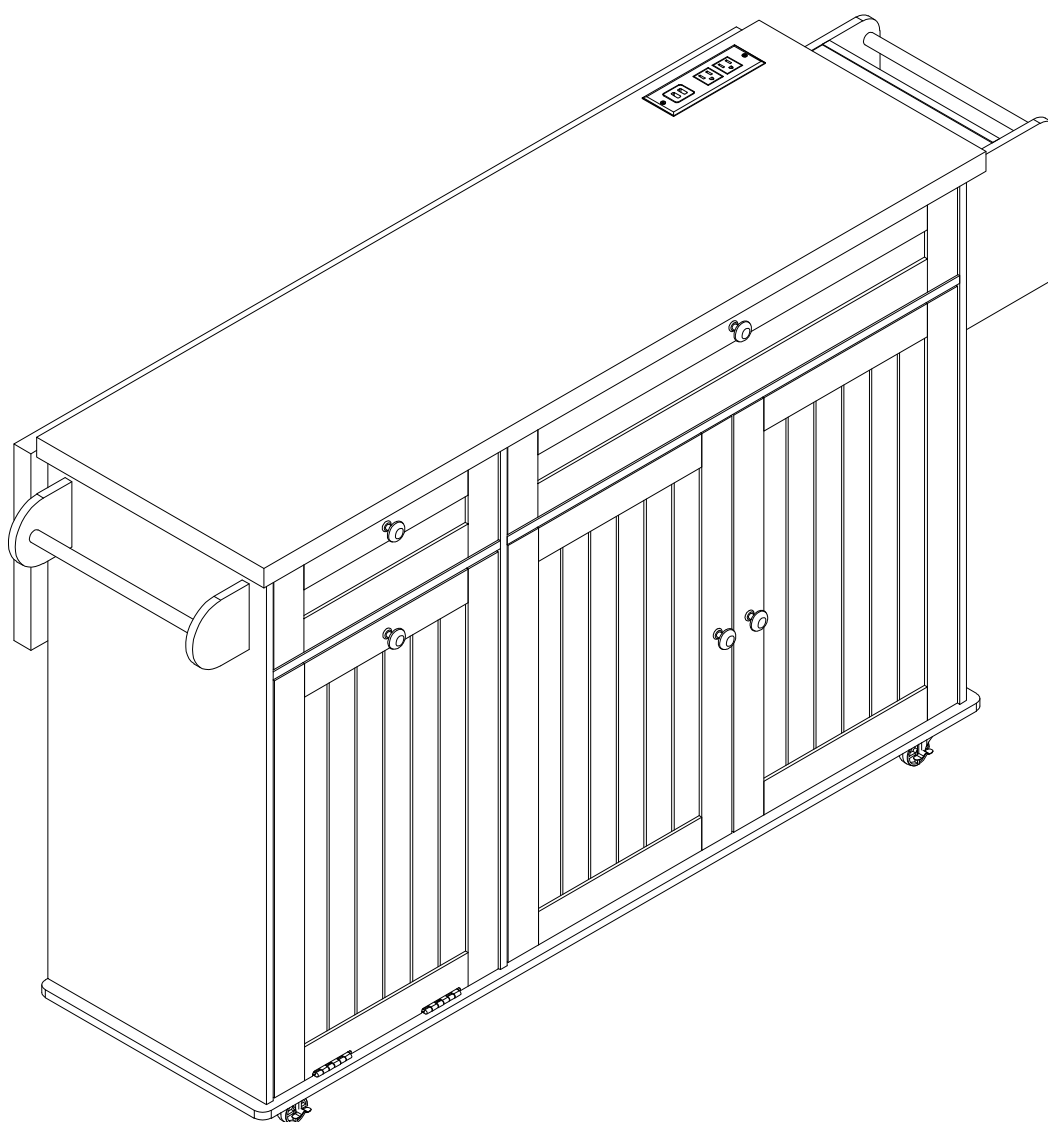

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

 
PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter of a number, check carefully before using any of them. keep them prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scatching or damaging the surface of the product.
3. The main components of the product are relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.


* PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

* IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT OUR CUSTOMER SERVICE ONLINE.


PARTS LIST

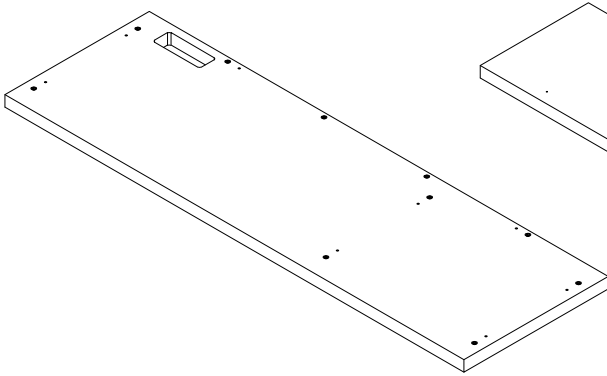


① x1PC

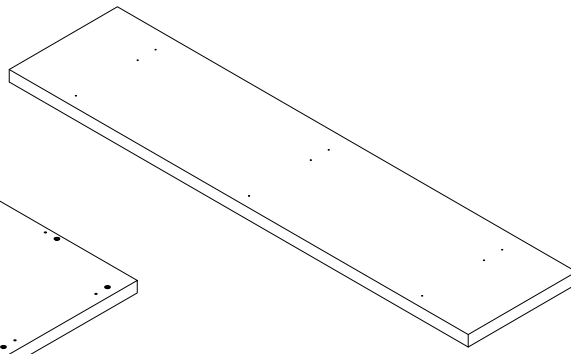 


② x1PC

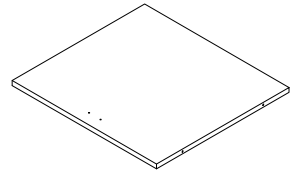 


③ x1PC

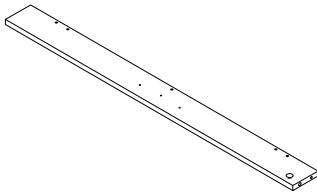 


④ x1PC

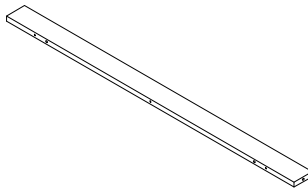 


⑤ x1PC

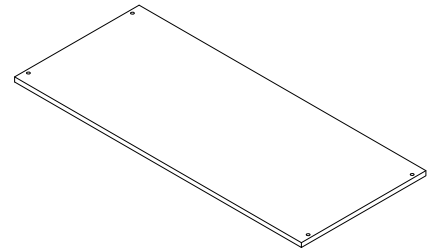 


⑥ x2PCS

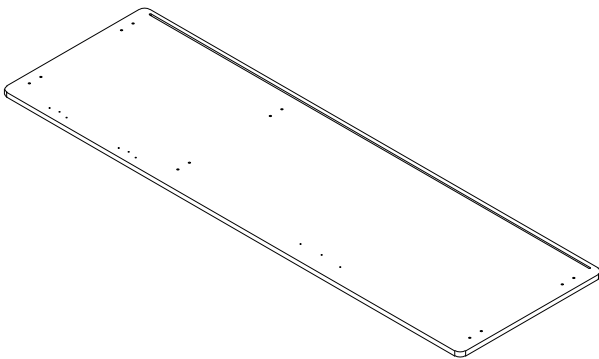 


⑦ x1PC

 


⑧ x2PCS

 


⑨ x3PCS

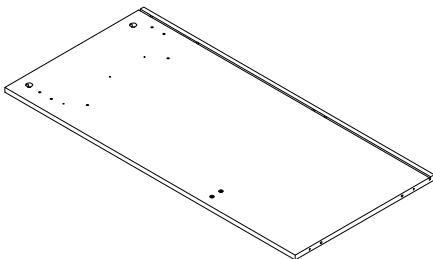 

⑩ x1PC

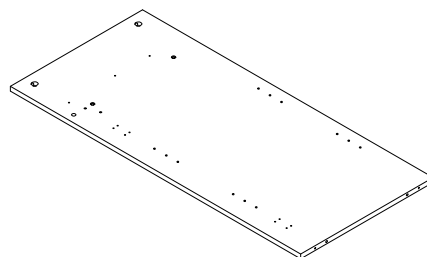 


⑪ x1PC

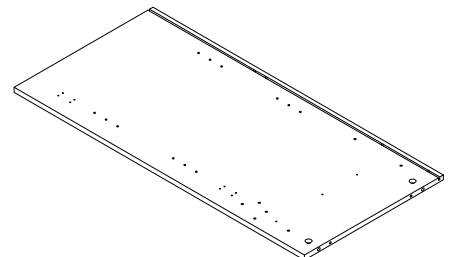 


⑫ x1PC

 
PARTS LIST




⑬ x1PC

 


⑭ x1PC

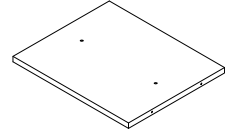 


⑮ x1PC

 


⑯ x1PC

 


⑰ x1PC

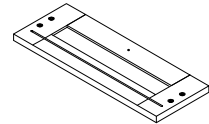 


⑱ x1PC

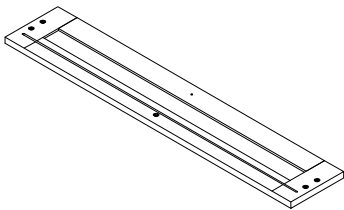 


⑲ x1PC

 


⑳ x2PCS

 


㉑ x2PCS

 

㉒ x1PC

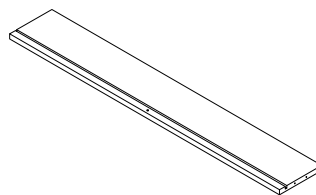 


㉓ x1PC

 


㉔ x2PCP

 
PARTS LIST

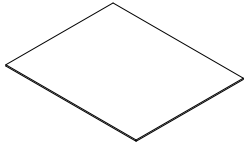


②⑤ x1PC

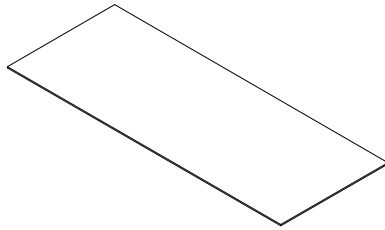 


②⑥ x1PC

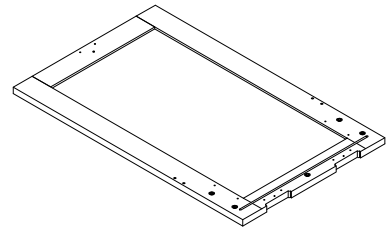 


②⑦ x1PC

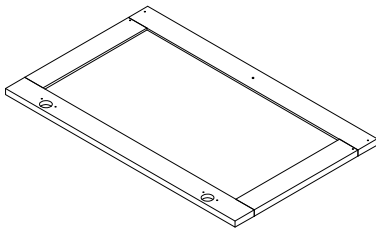 


②⑧ x2PCS

 


②⑨ x1PC

 


③⑩ x1PC

 


③① x1PC

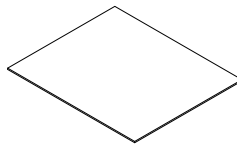 


③② x1PC

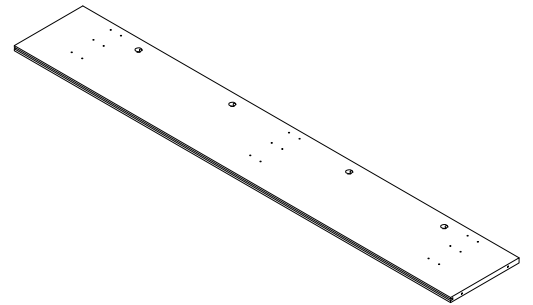 


③③ x1PC

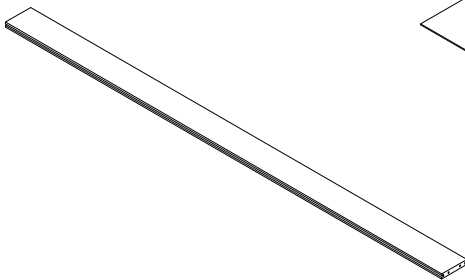 


③④ x1PC

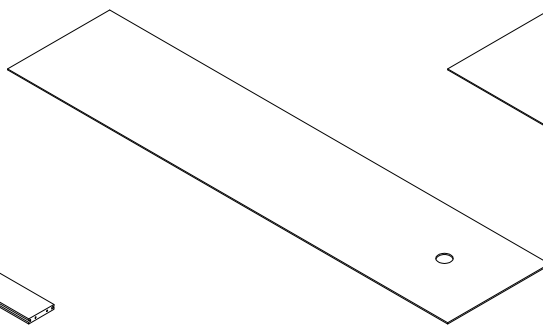 


③⑤ x1PC

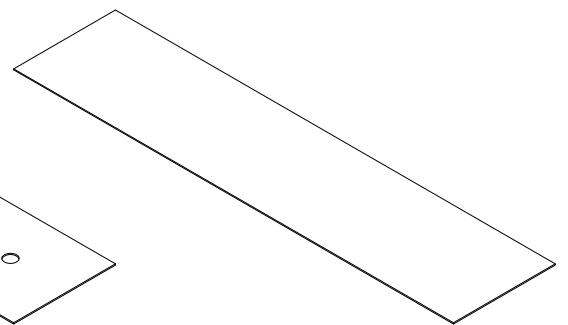 

③⑥ x1PC

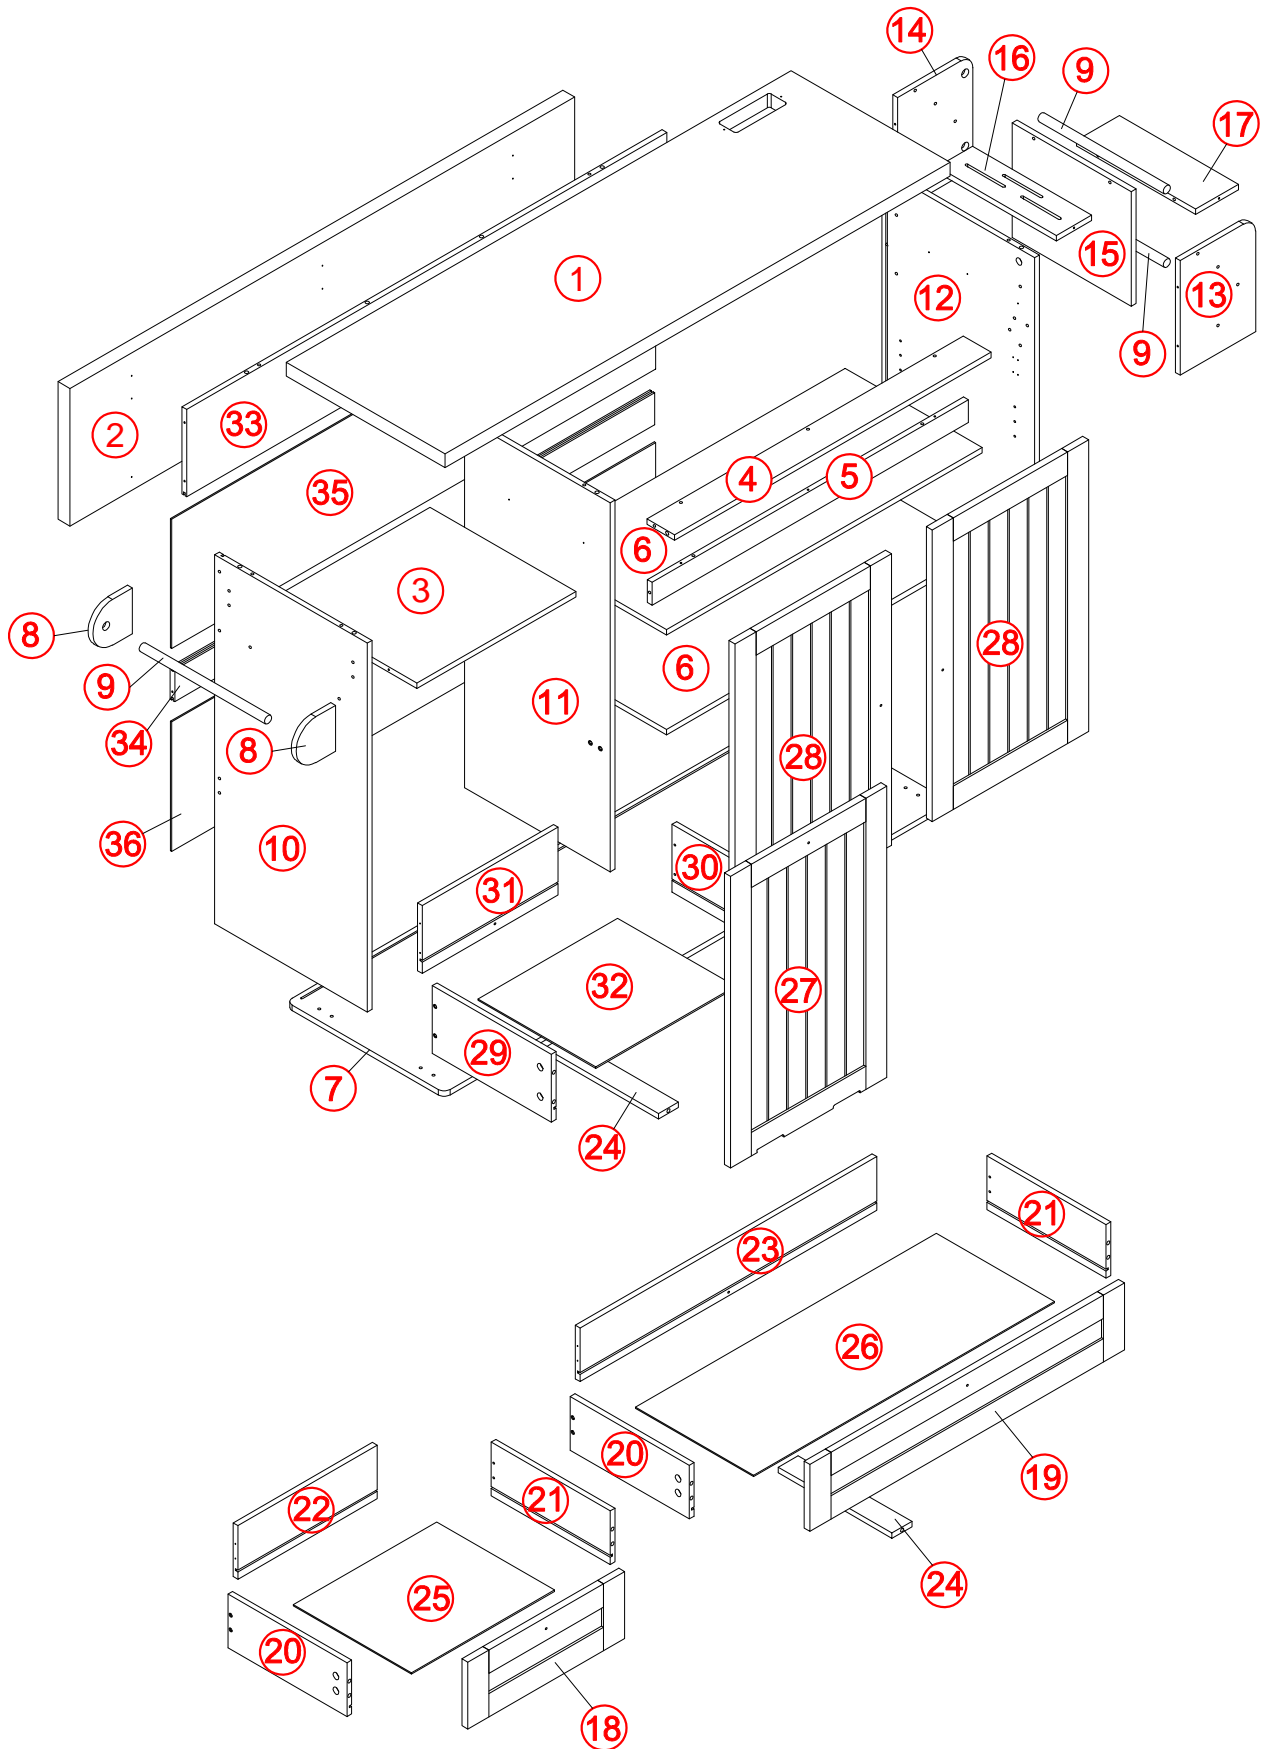 

HARDWARE LIST

 


A×1PC



B×39PCS



 
C×23PCS



D1×5PCS



 D2×5PCS




E×8PCS



F1×25PCS



 
F2×25PCS

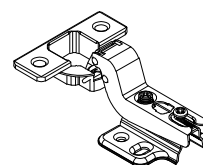


G×4PCS



 H×39PCS

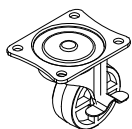


I×4PCS

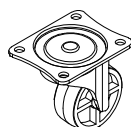 


J×1PC



 
K×14PCS

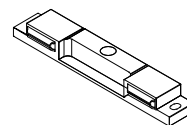

120*19mm
L1×2PCS

 


54*12*1.0mm
L2×5PCS

 

M1×9PCS




 M2×17PCS

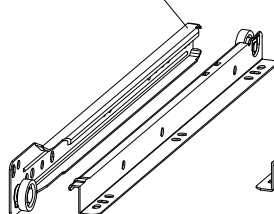


N1(CL)x2PCS

 N1(DL)x2PCS

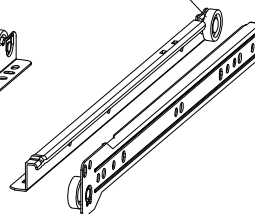


N2(DR)x2PCS

 
N2(CR)x2PCS

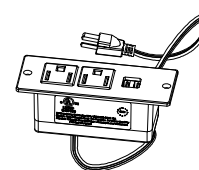


O×1PC

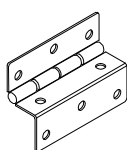 

P×2PCS

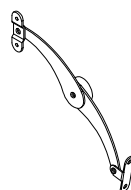 


Q1×(CL)1PC

 

Q2(CR)x1PC




 R×8PCS



41*19mm
S×1PC

 
HARDWARE LIST

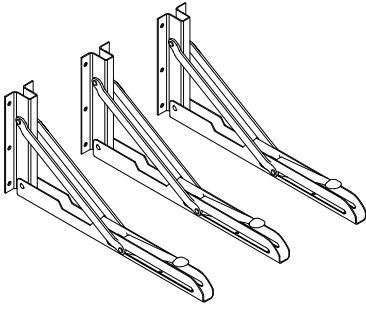


T×3PCS






 
U×83PCS







V×4PCS

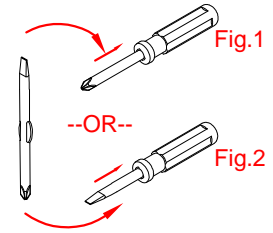 

   
 
STEP 1

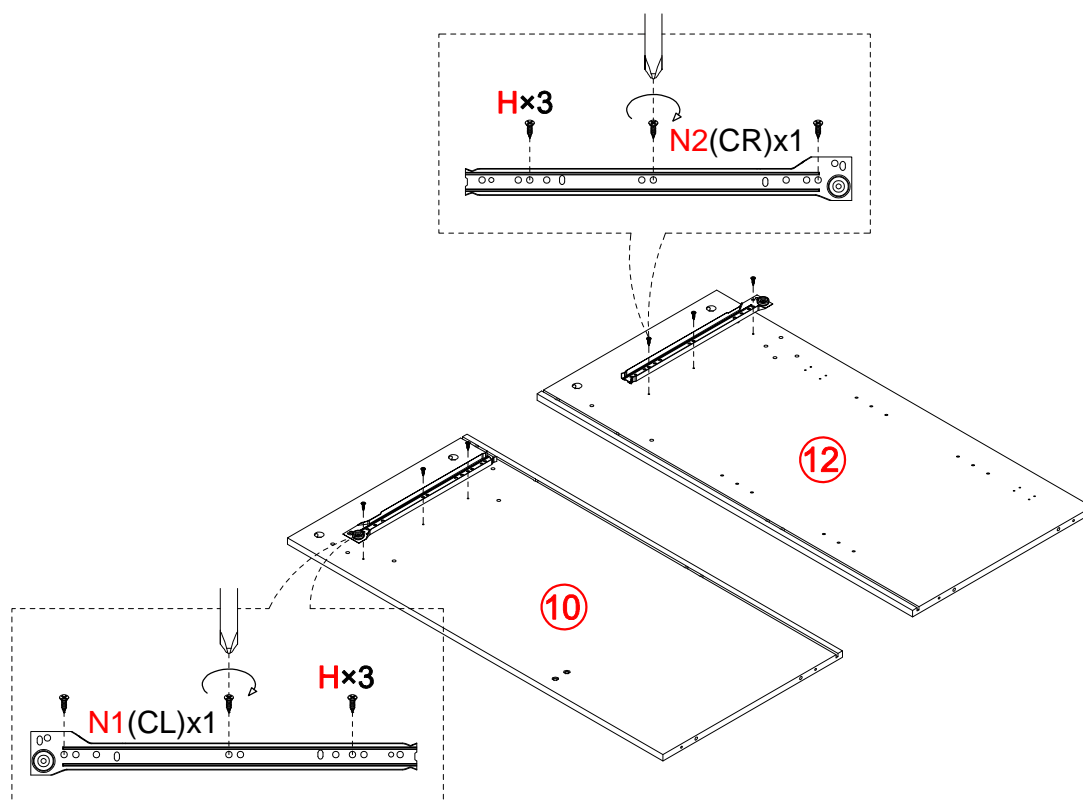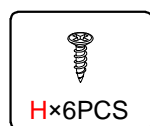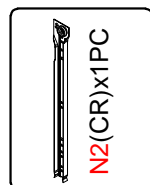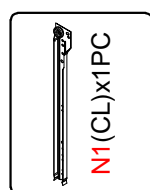

 
 
 
 
STEP 2

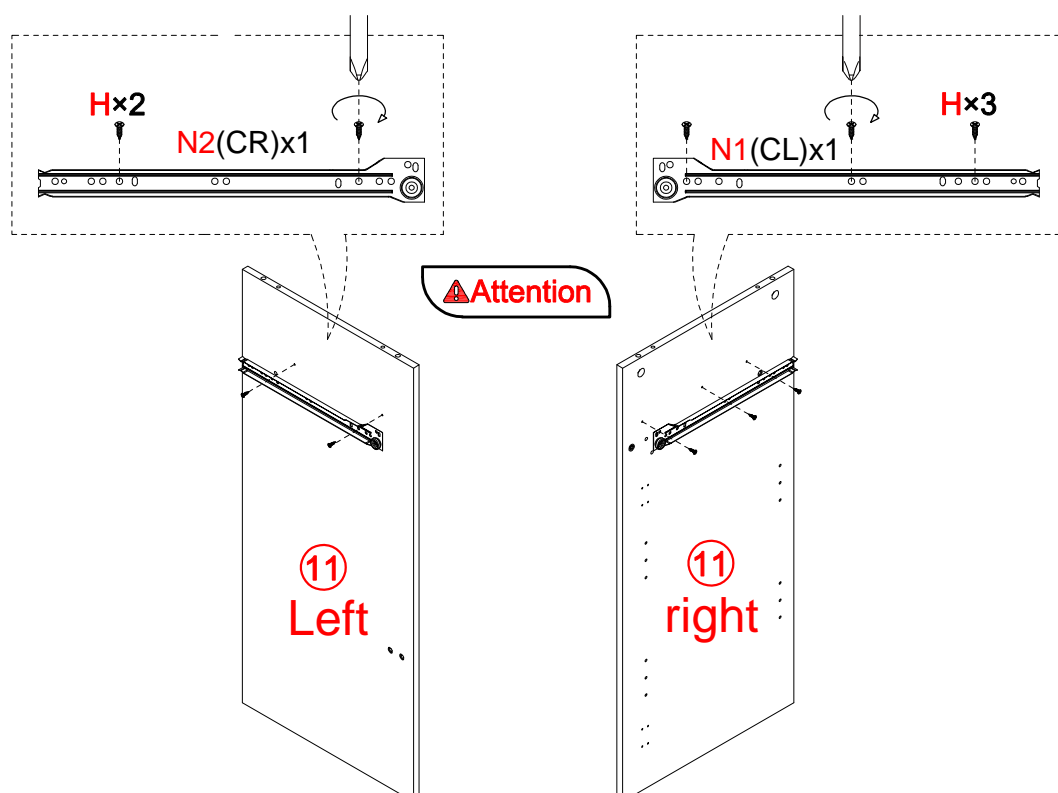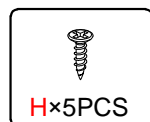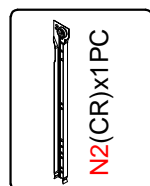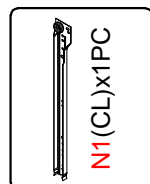


 
 
STEP 3

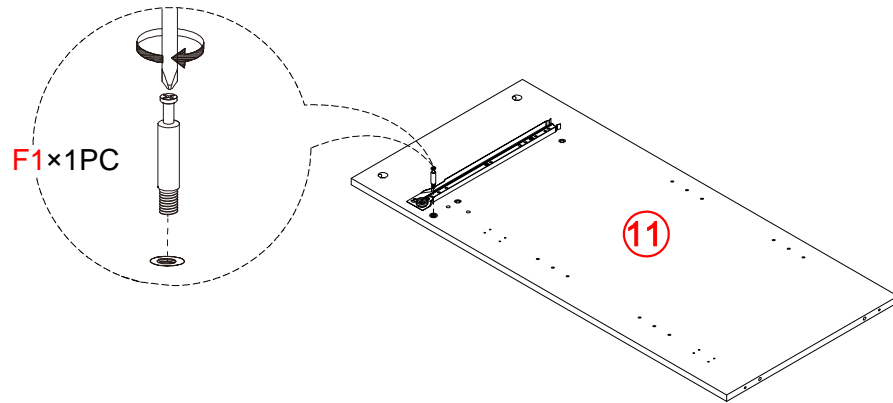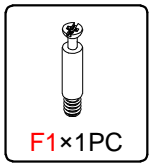

   
 
STEP 4

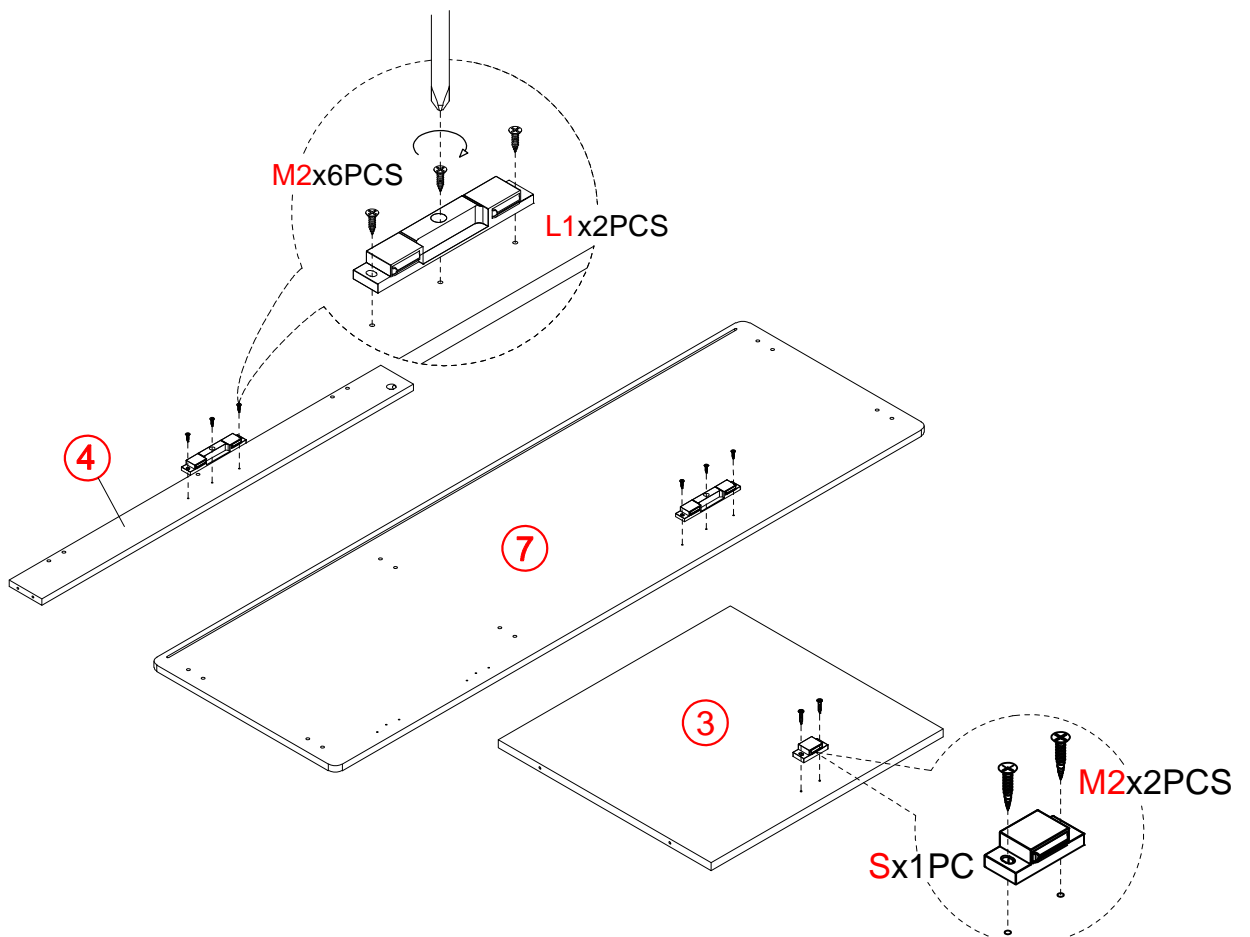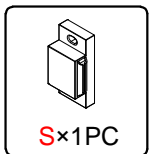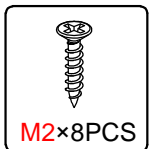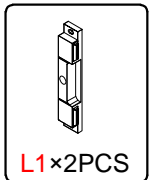

   
STEP 5

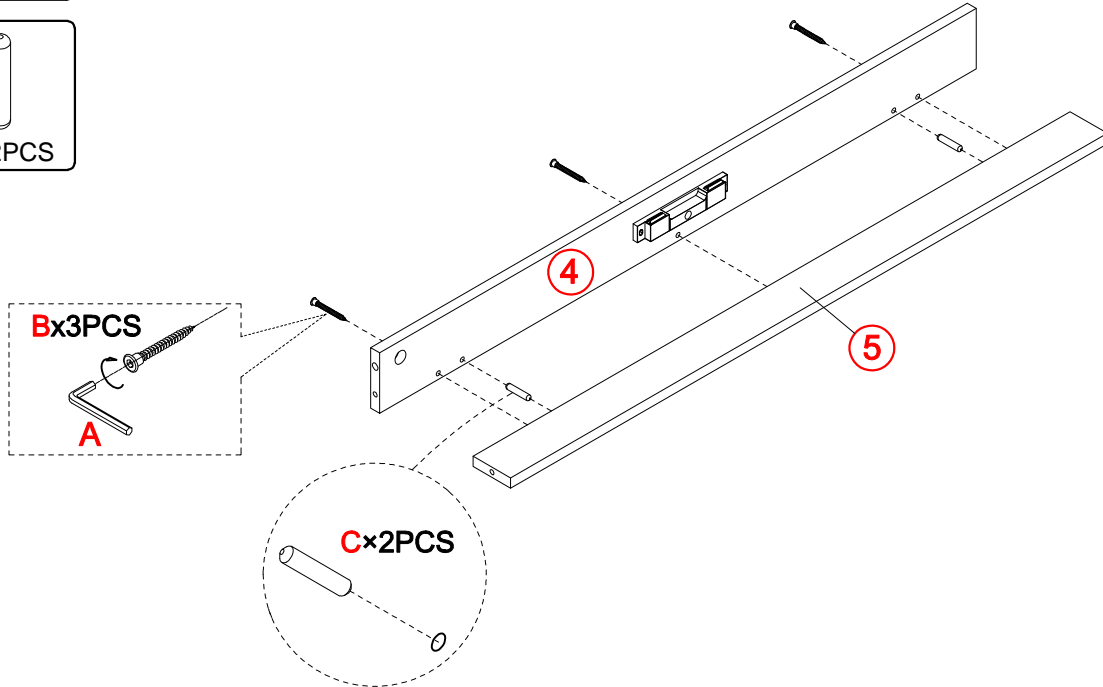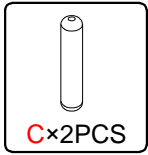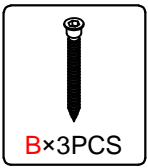

  
STEP 6

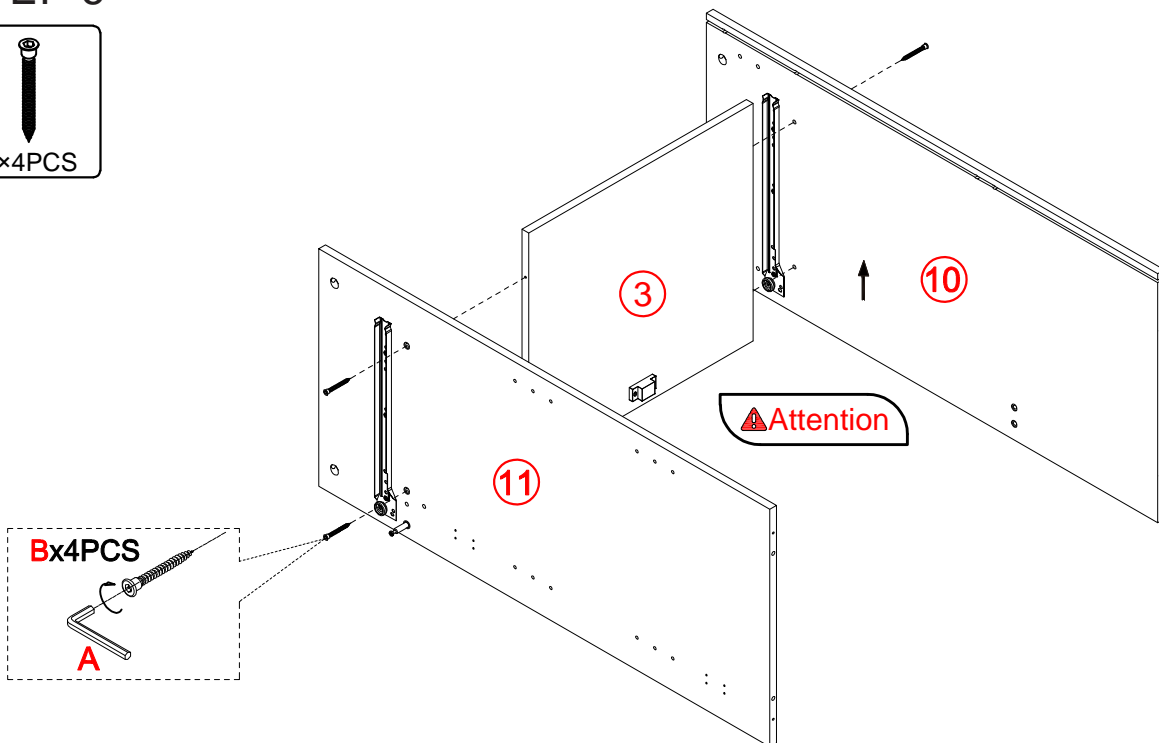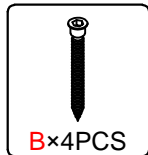


 
STEP 7

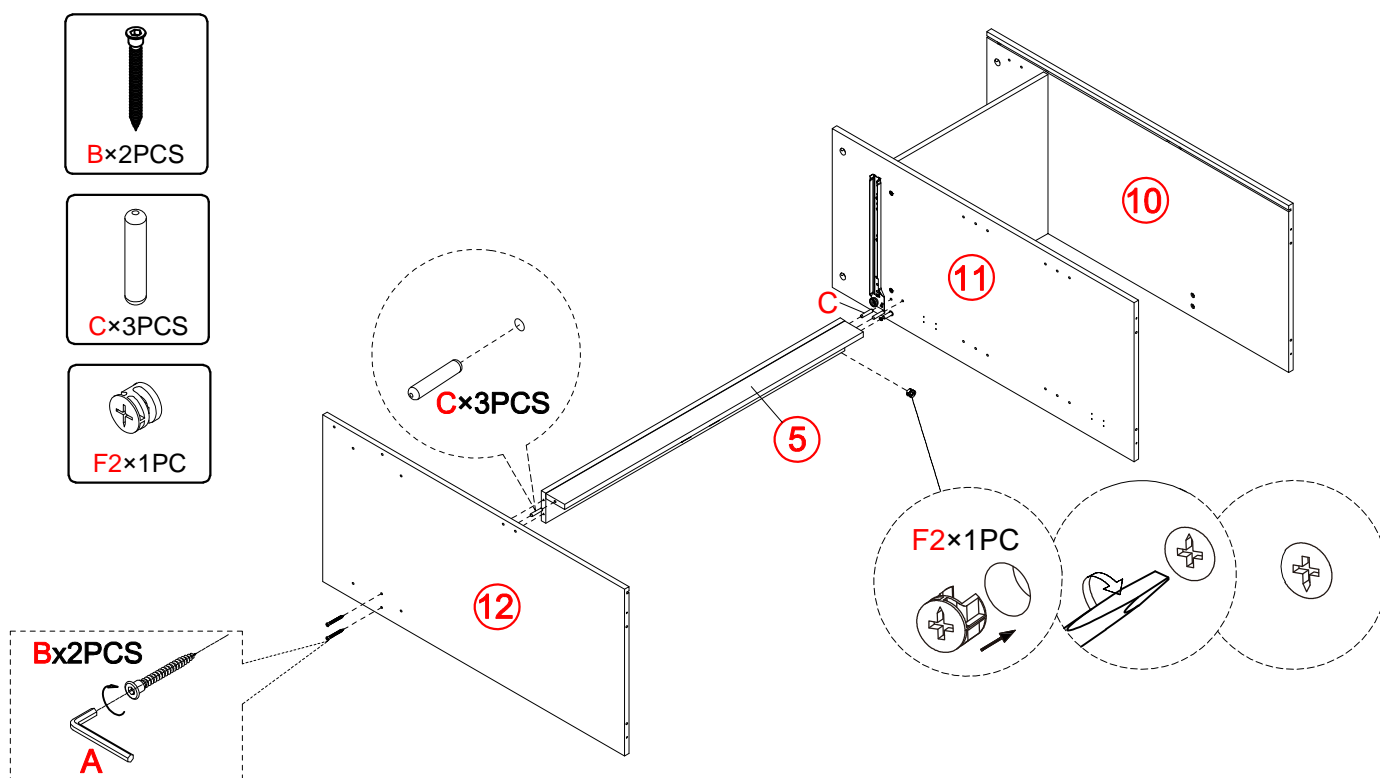


 
STEP 8

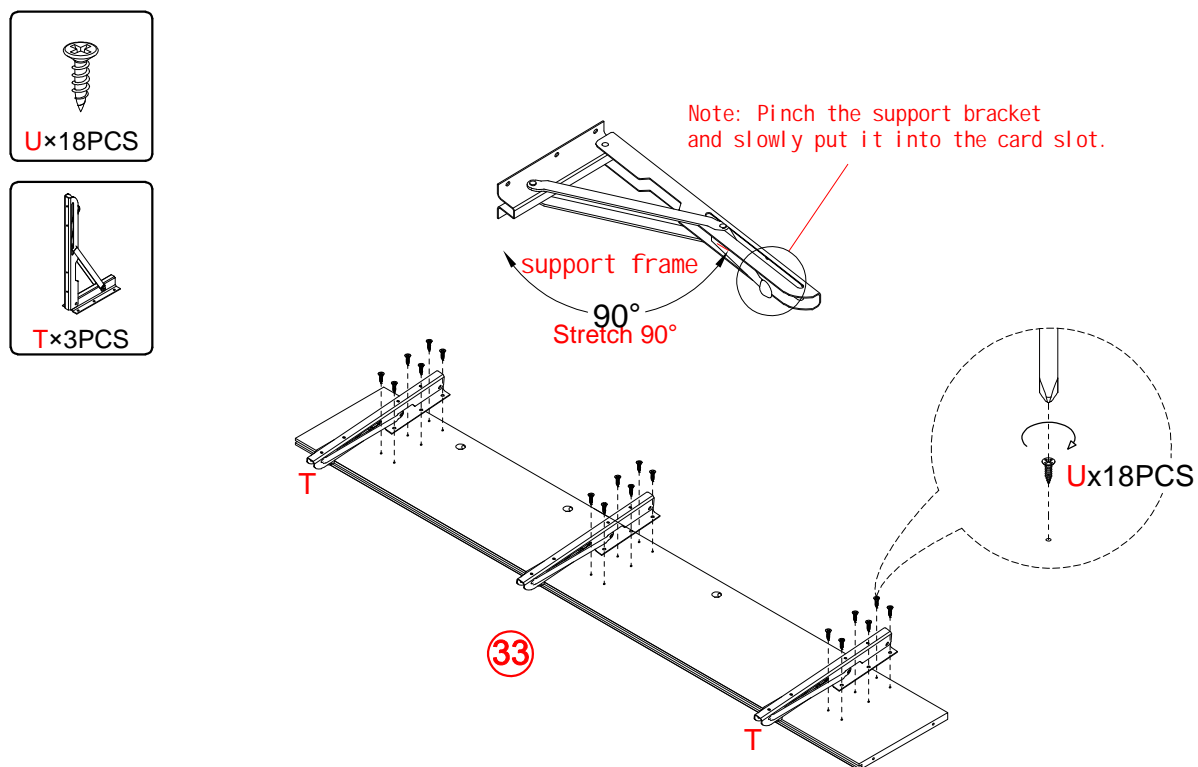


  STEP 9

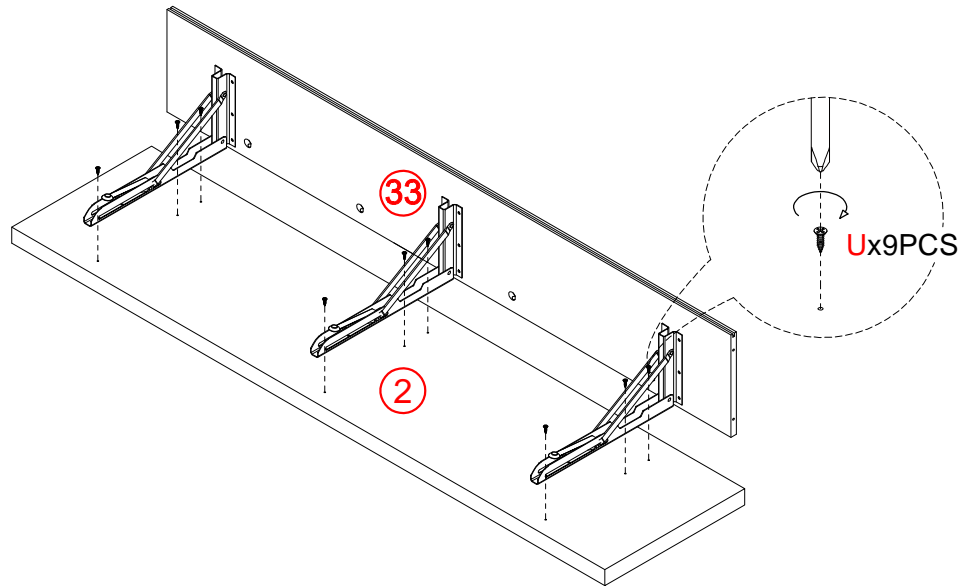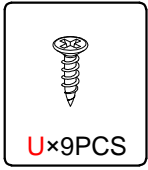


   STEP 10


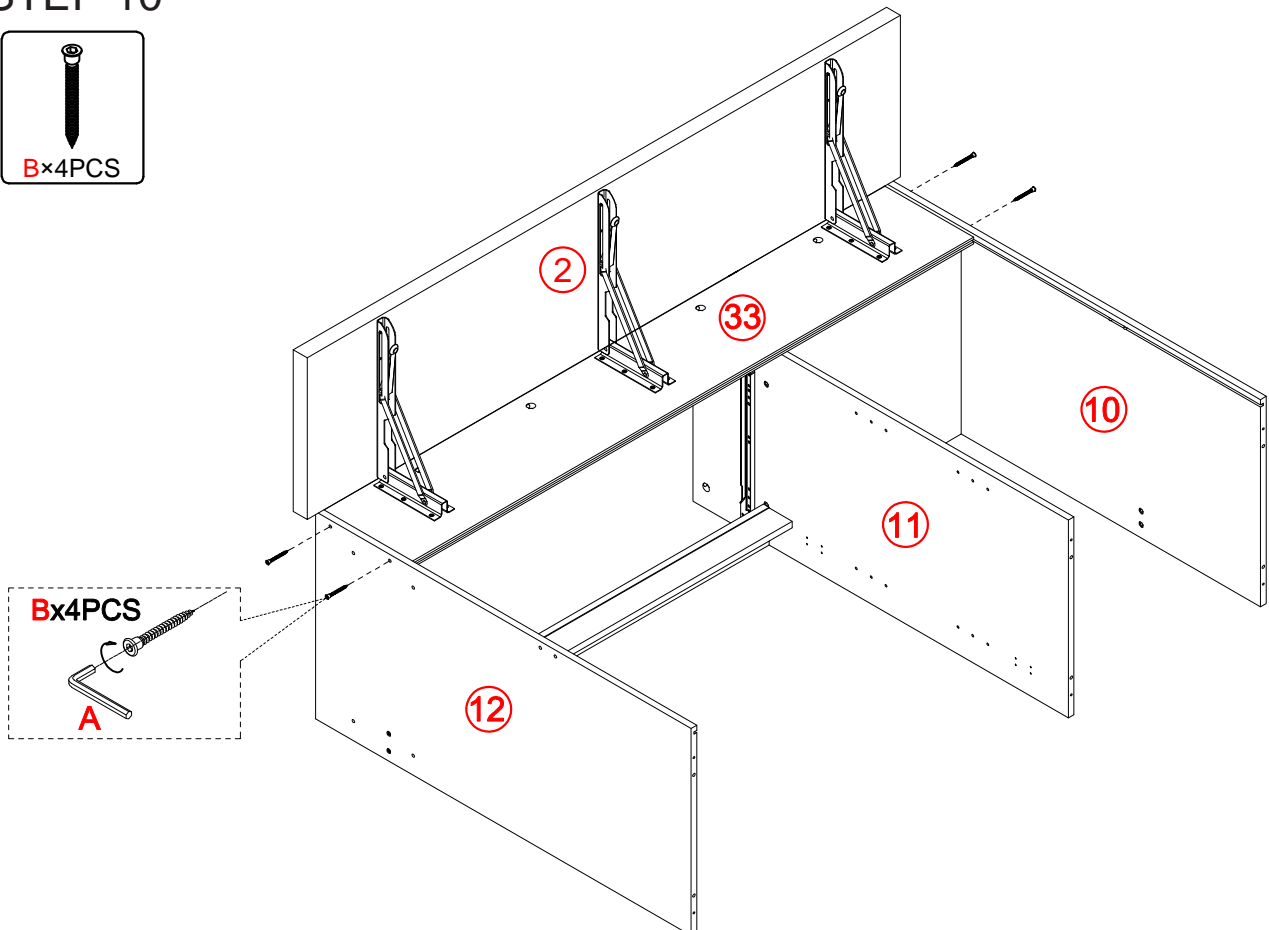
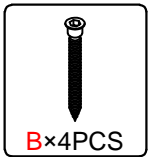


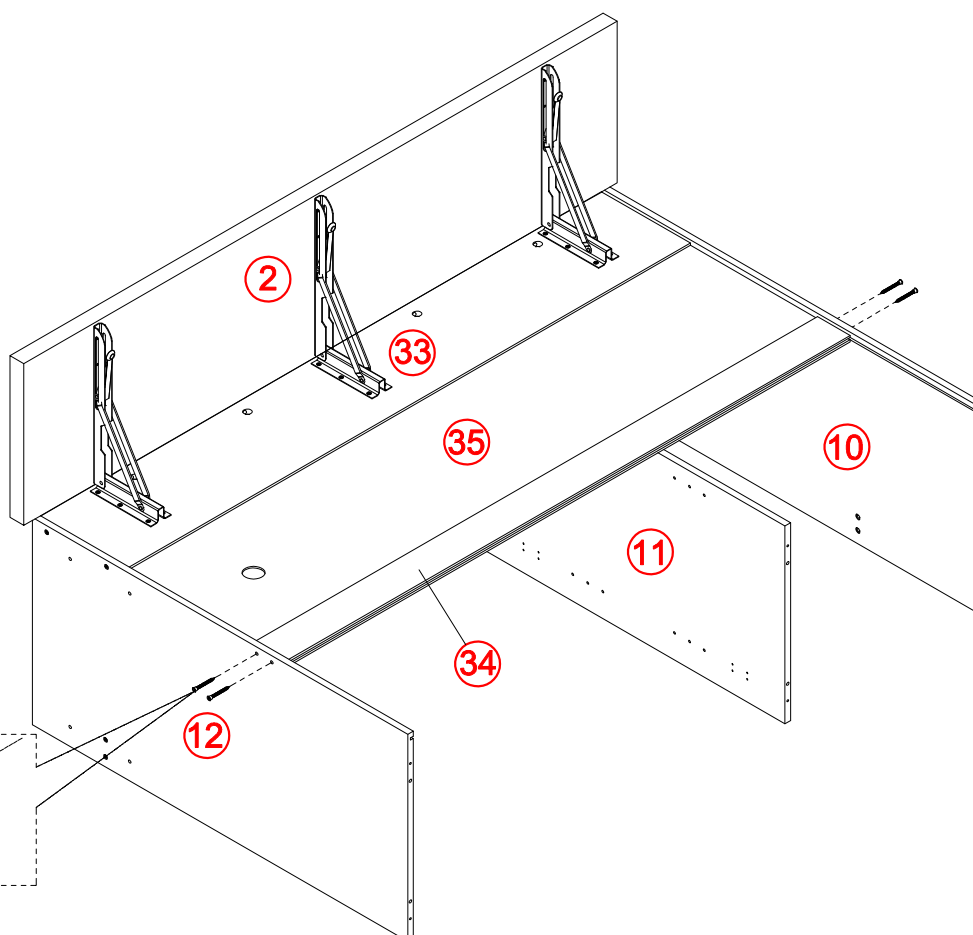



 
STEP 13

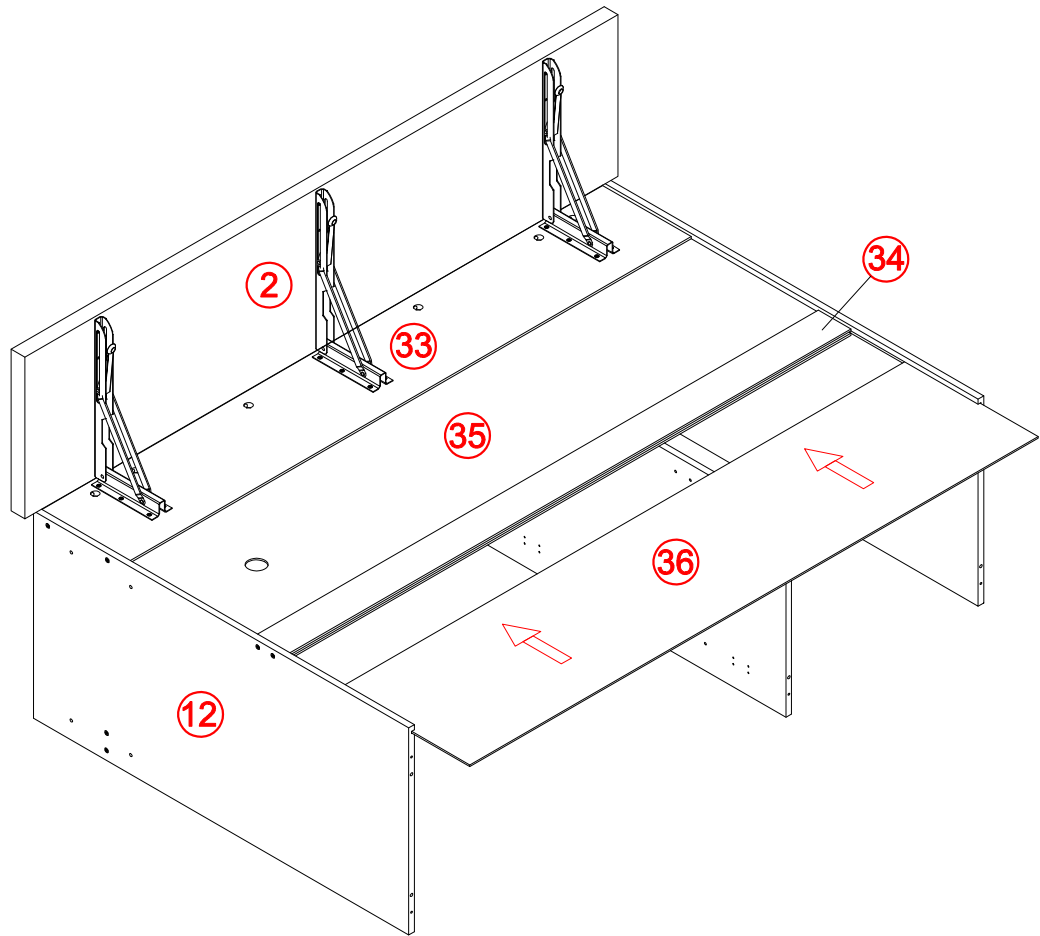

 
 
 
STEP 14

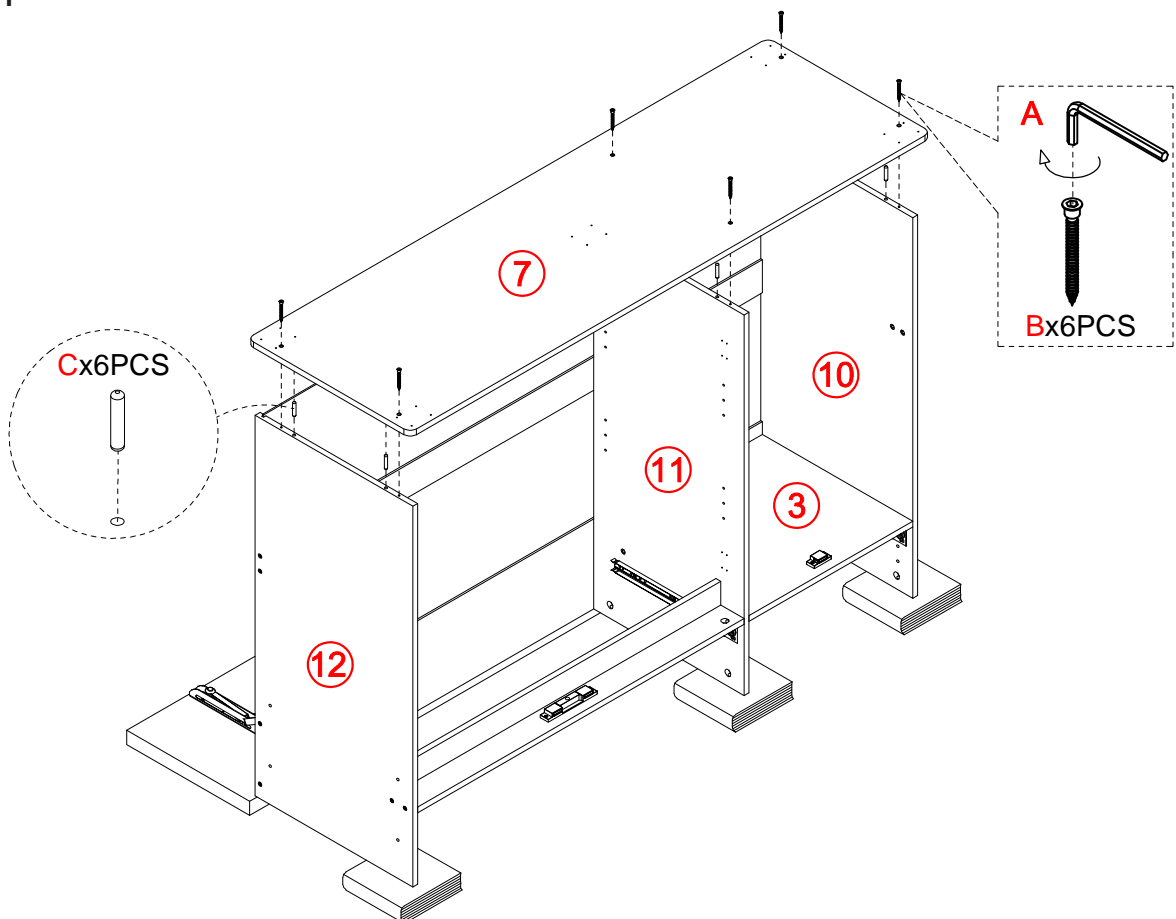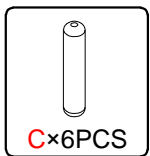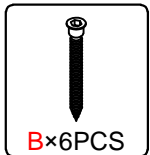

  
 
STEP 15

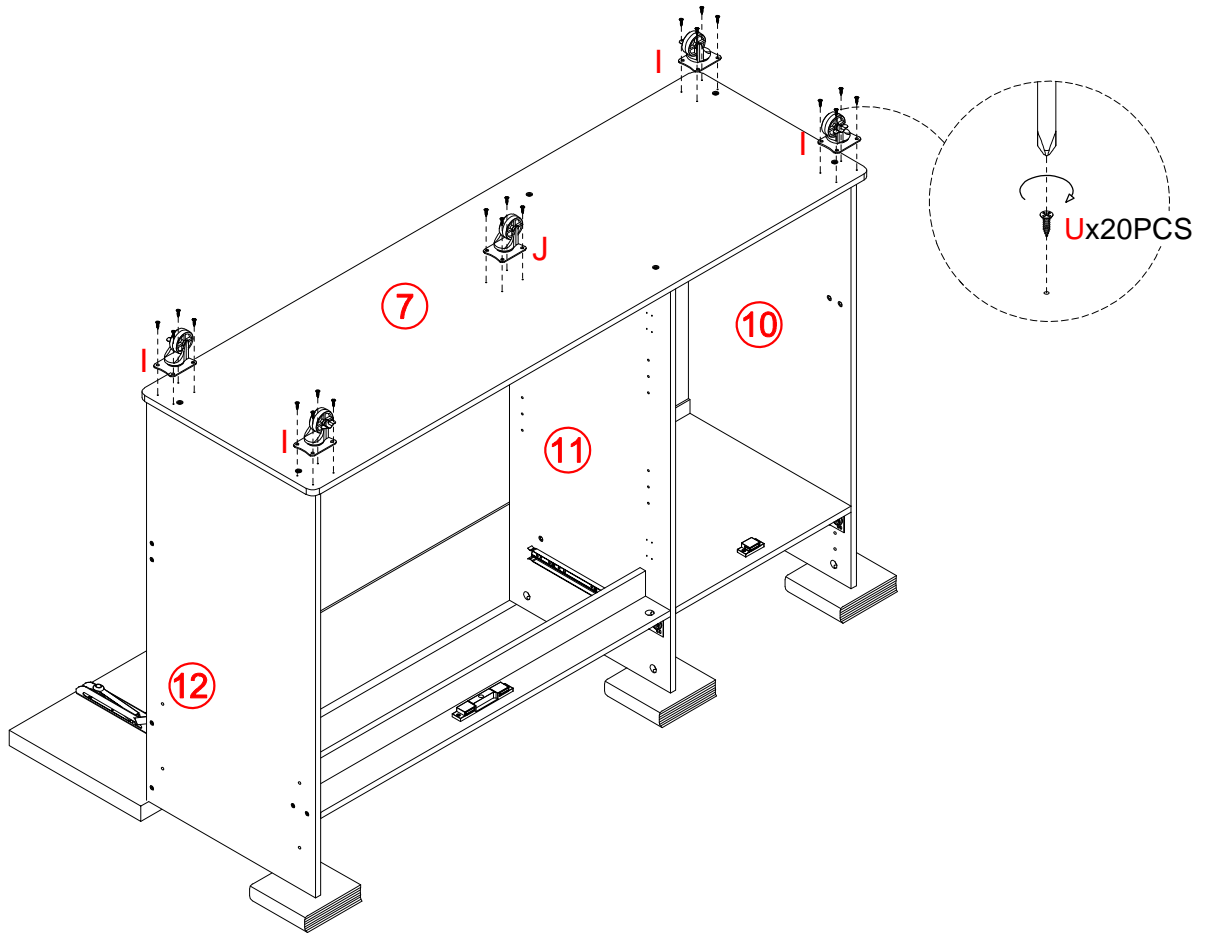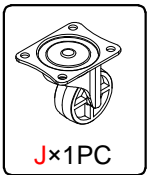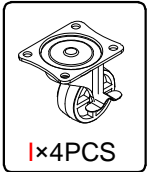

  
 
STEP 16

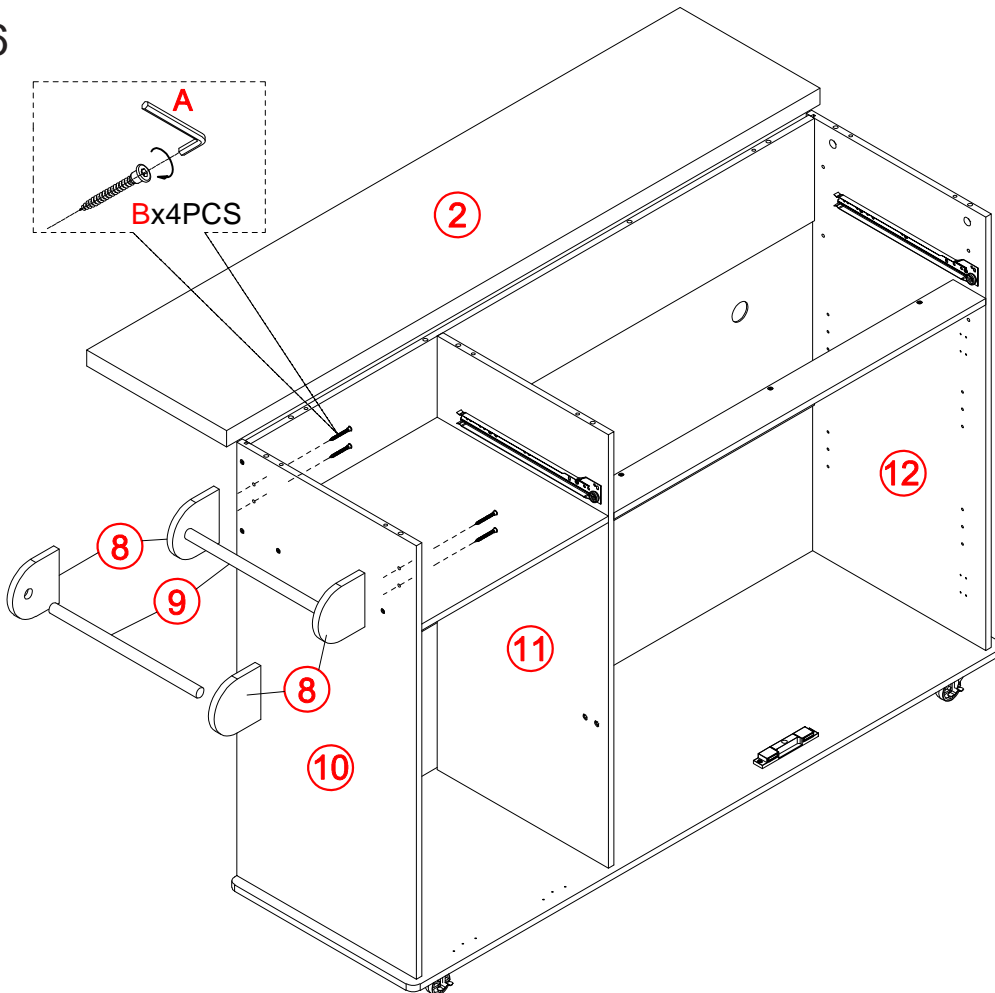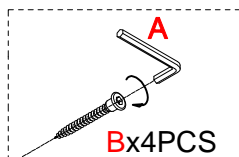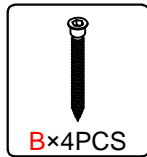

  
STEP 17

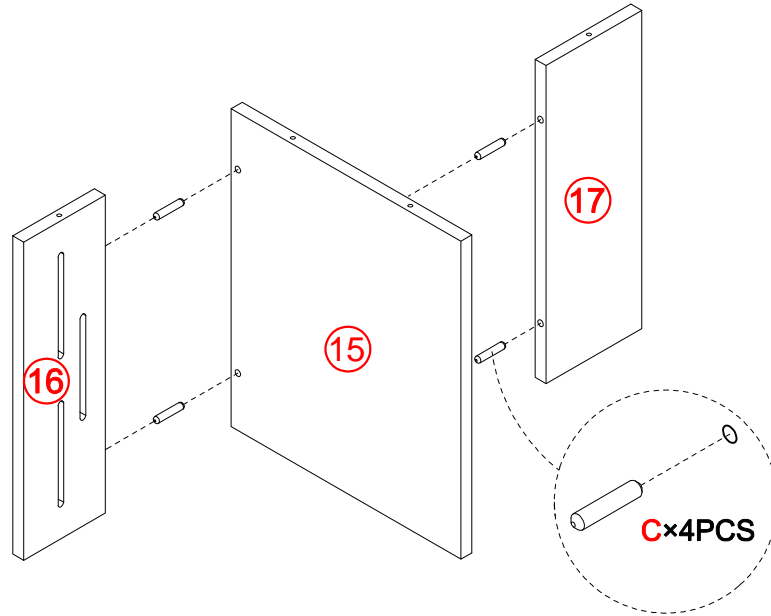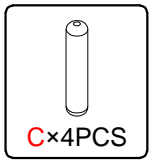

 
 
STEP 18

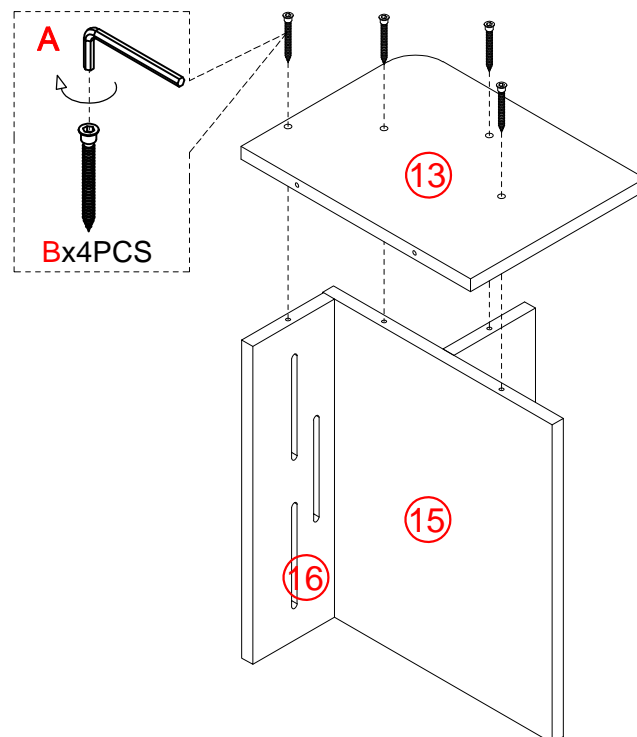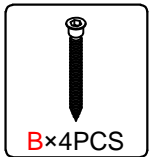


 
STEP 19

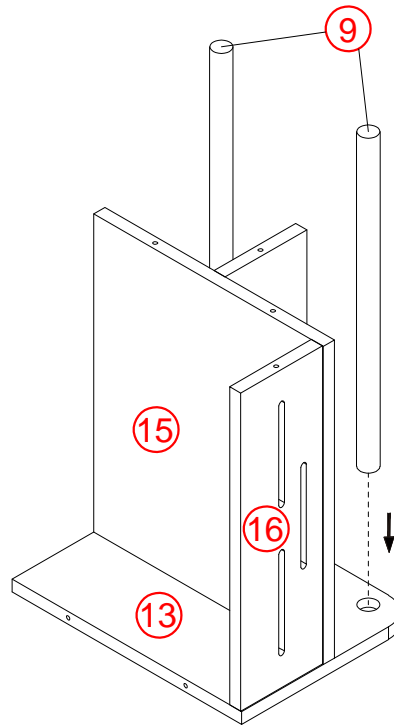

 
 
STEP 20

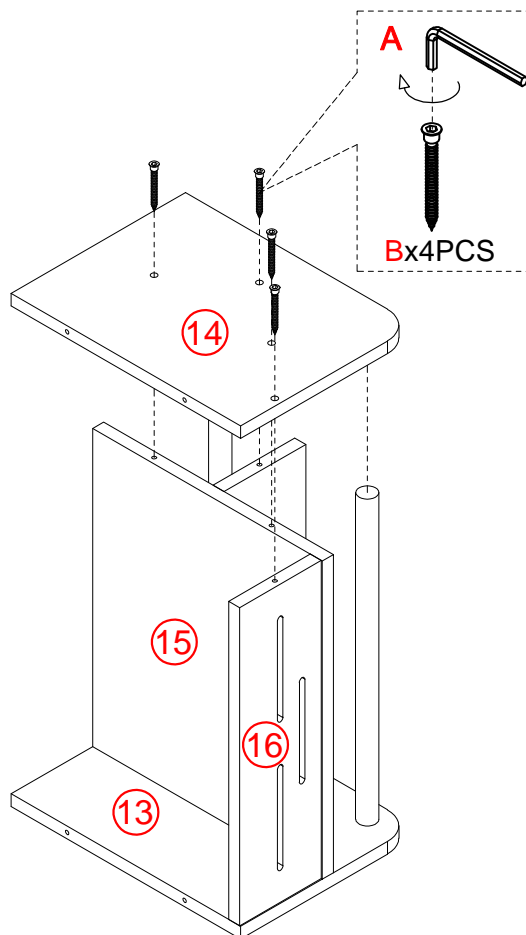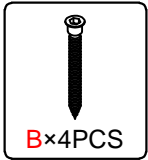



 
 
STEP 21

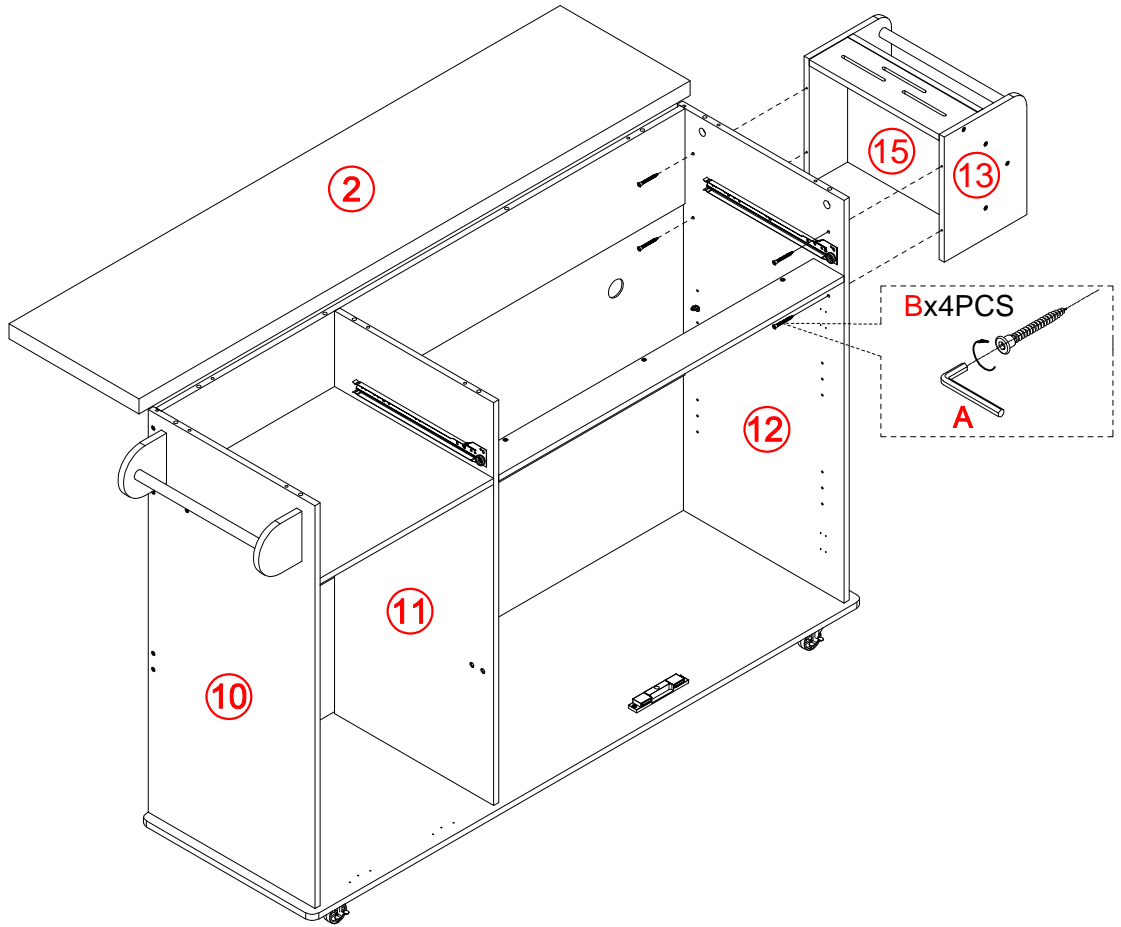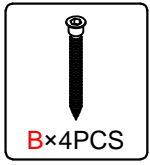



 
 
STEP 22

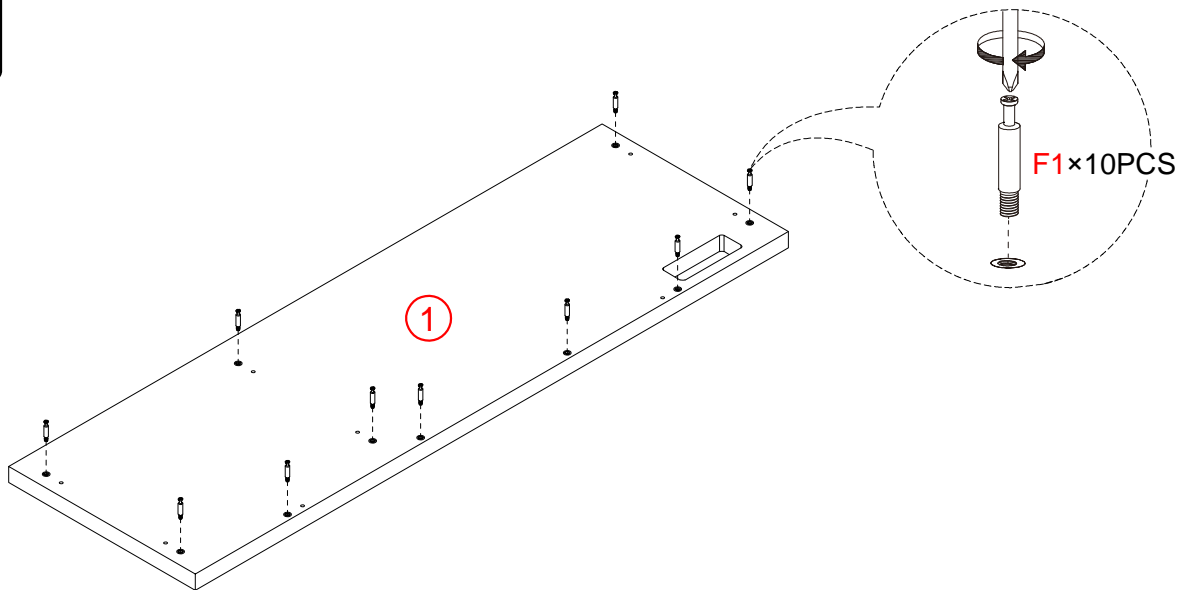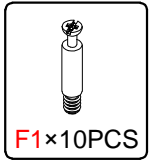

    
STEP 23

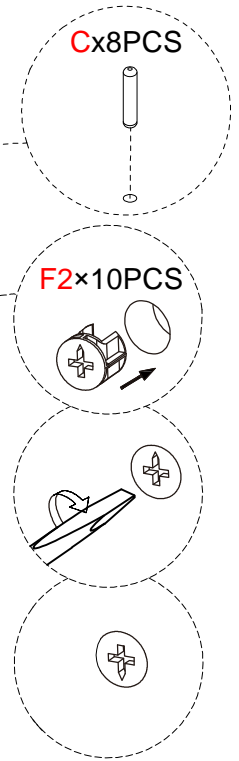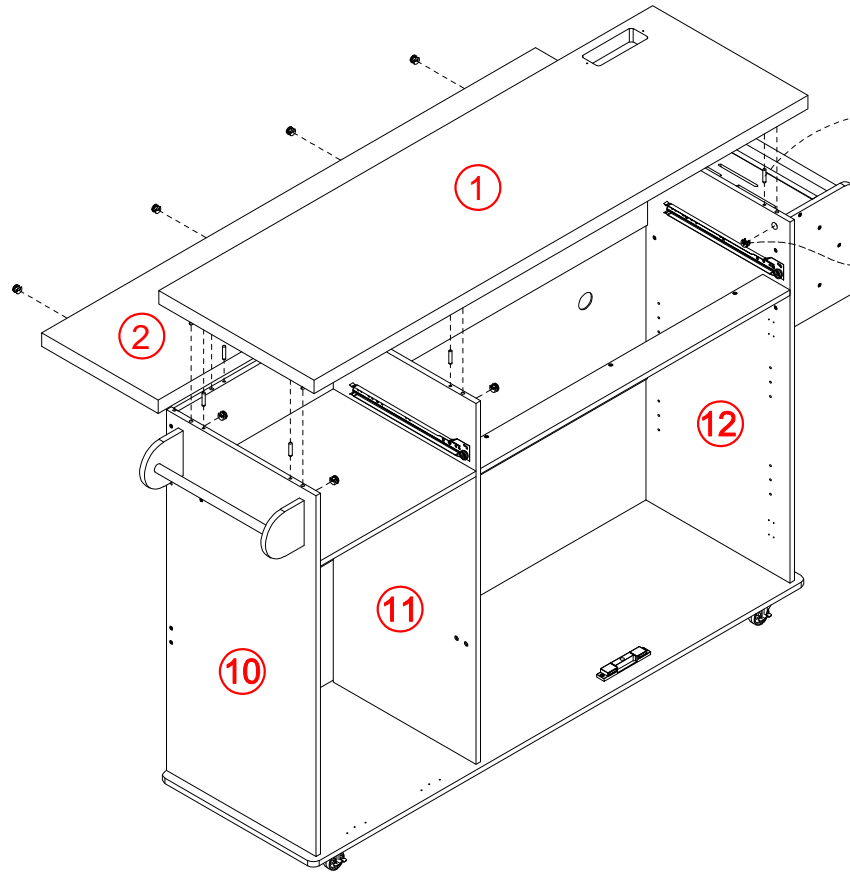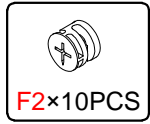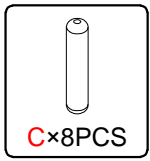

    
STEP 24

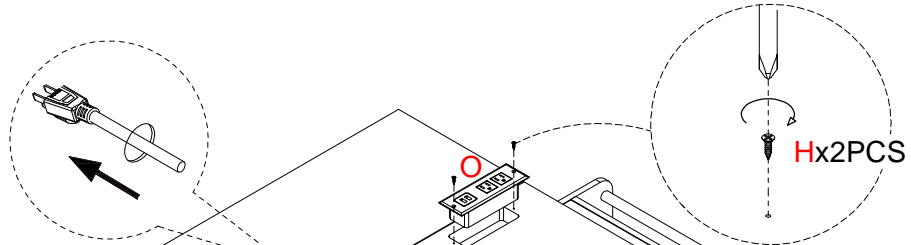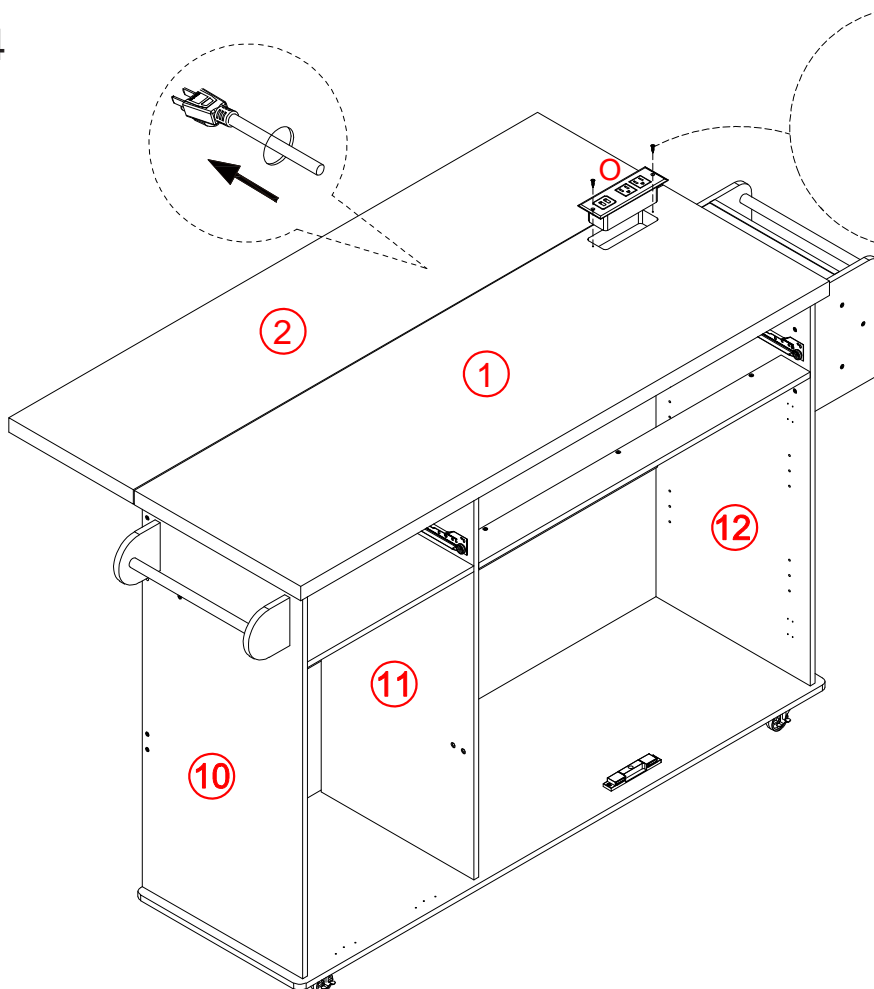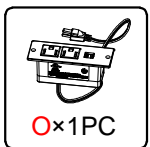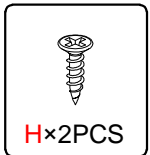






 
STEP 25

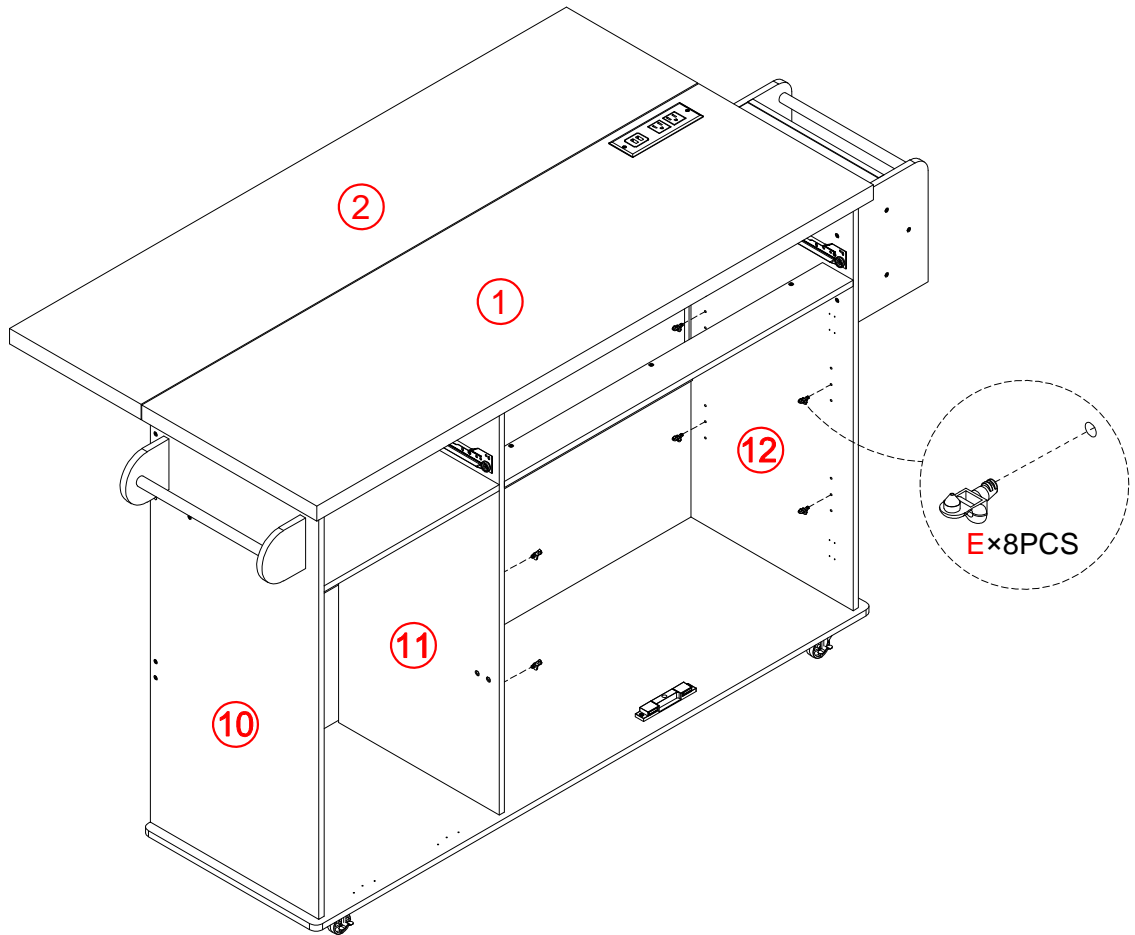


 
STEP 26

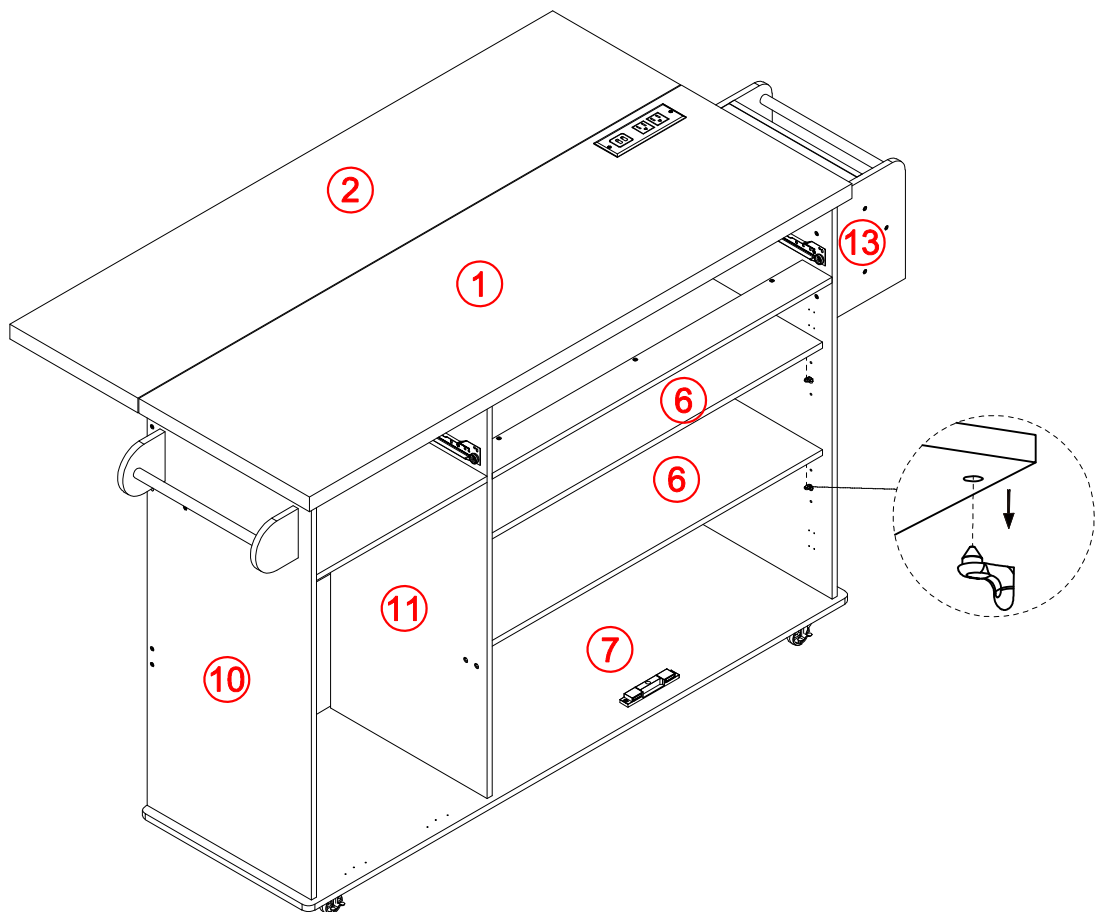

      
STEP 27

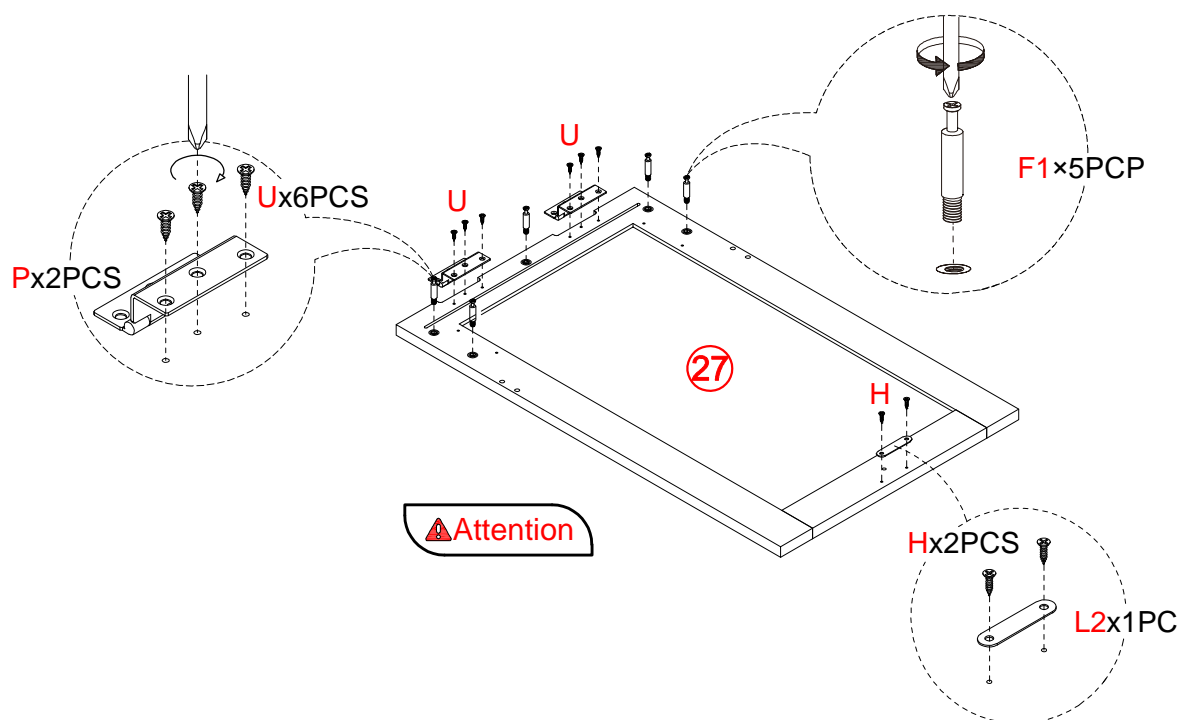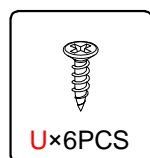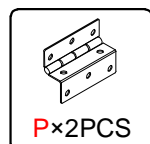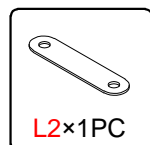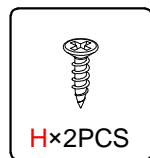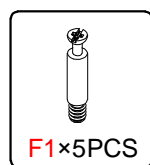

 
 
STEP 28

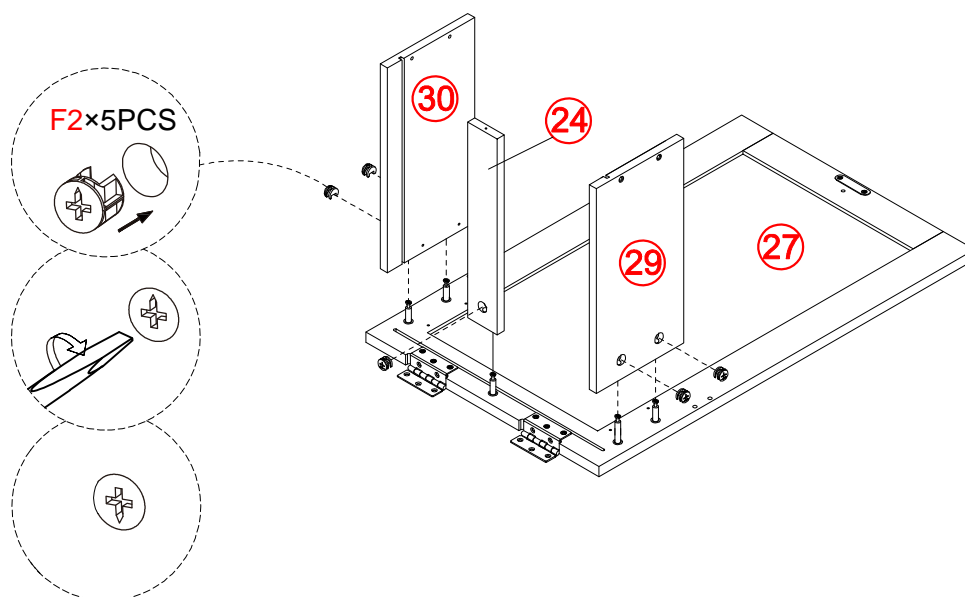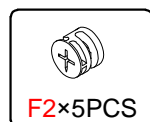

 
STEP 29

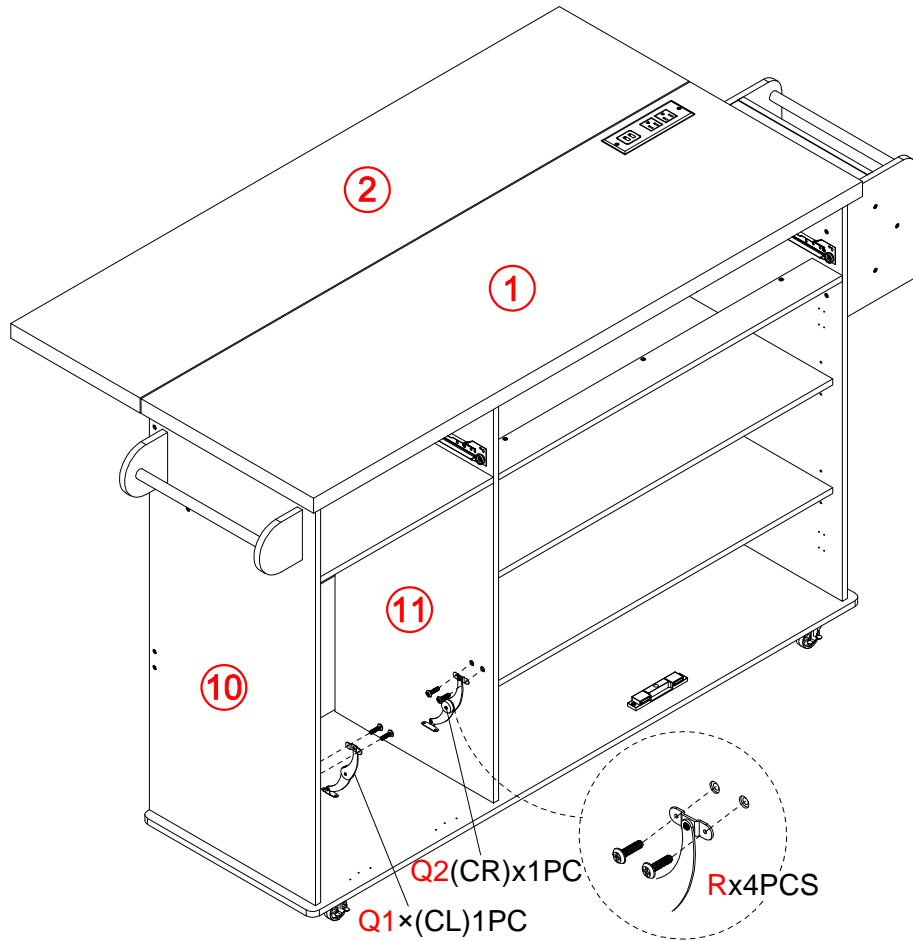

  
STEP 30

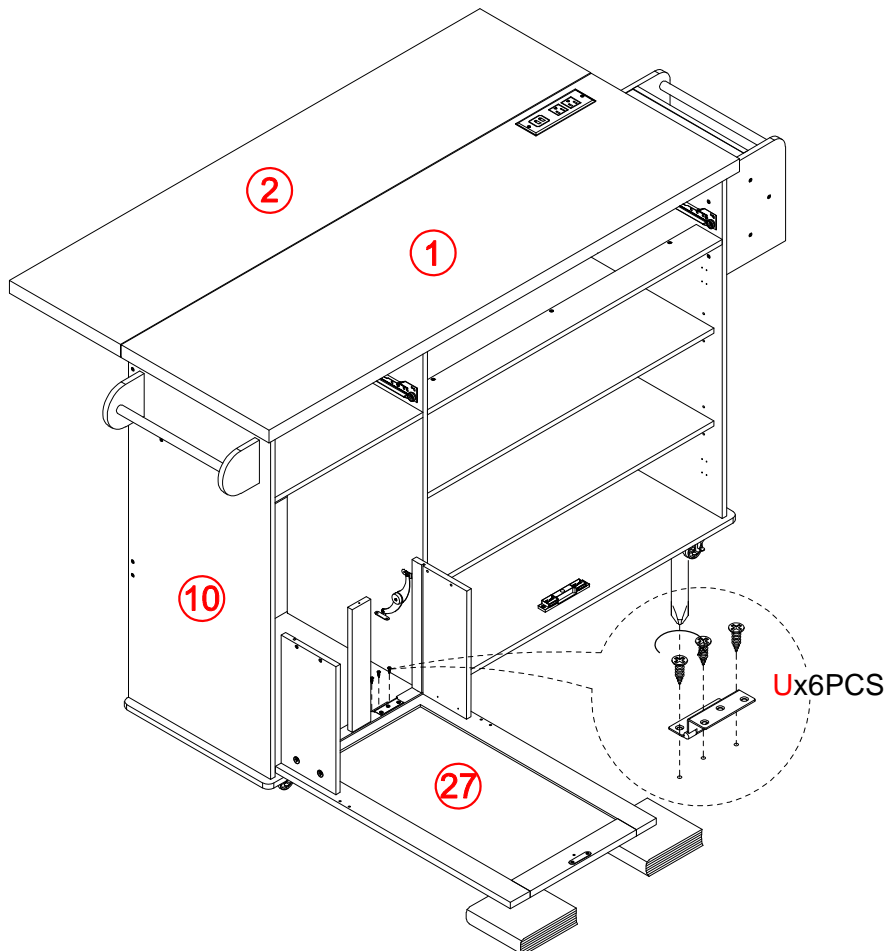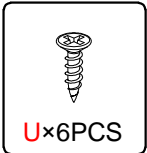

 
STEP 31

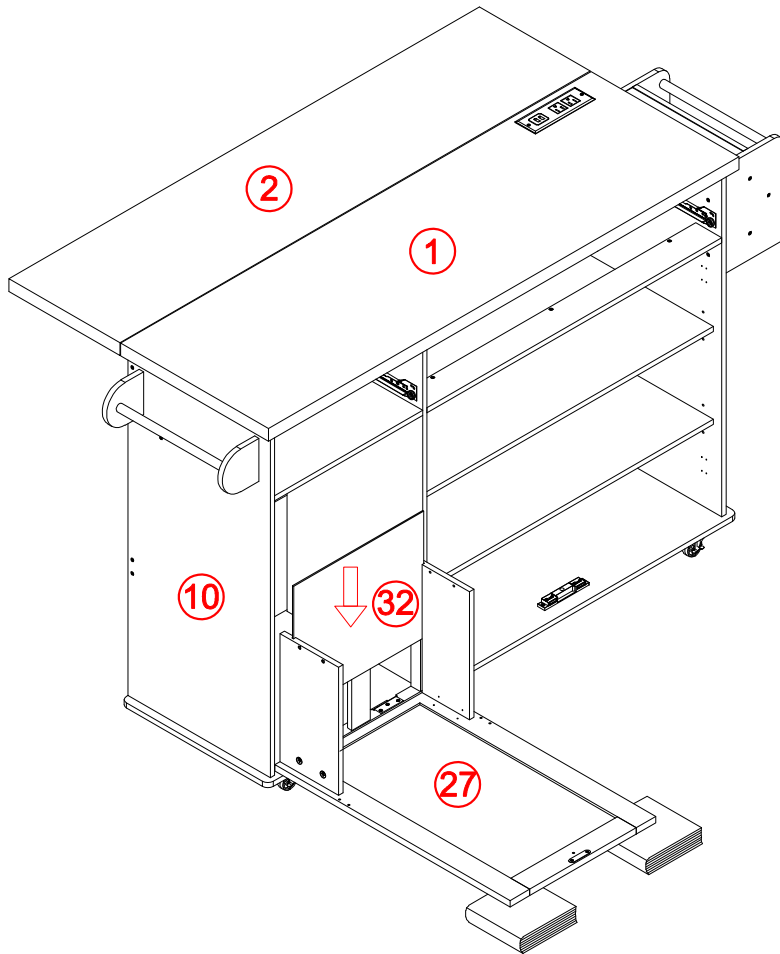

 
STEP 32

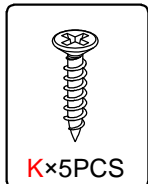


Kx5PCS

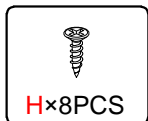 





Hx8PCS

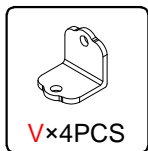 





Vx4PCS

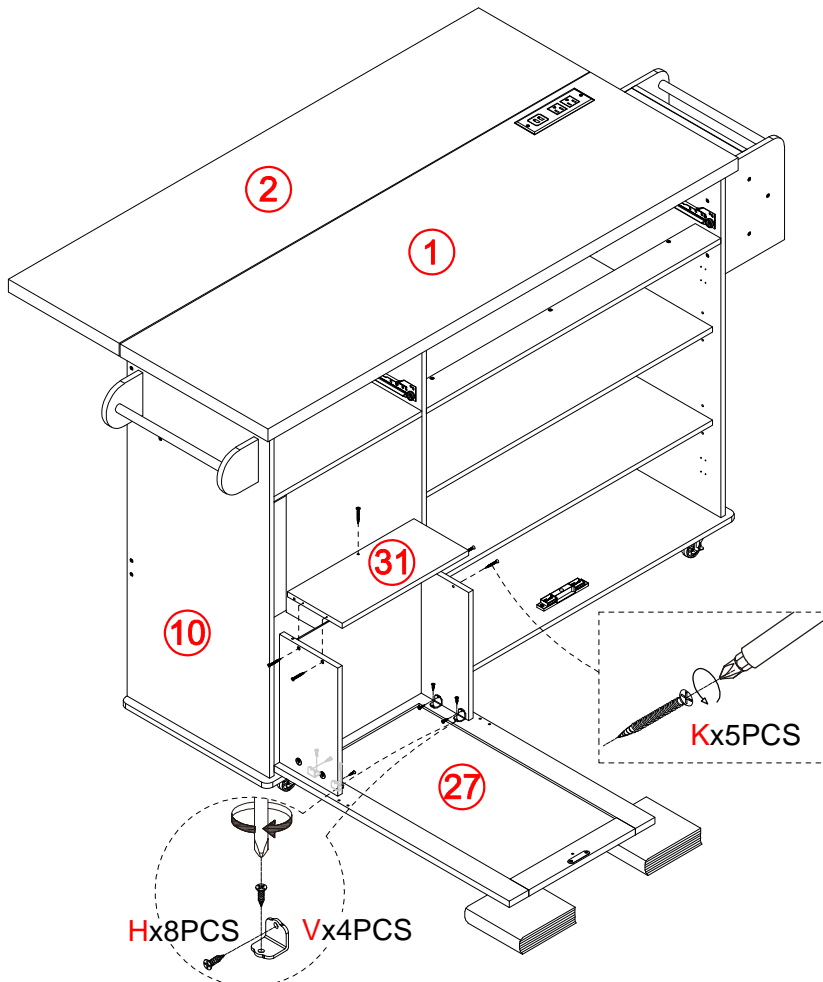 

   
 
STEP 33

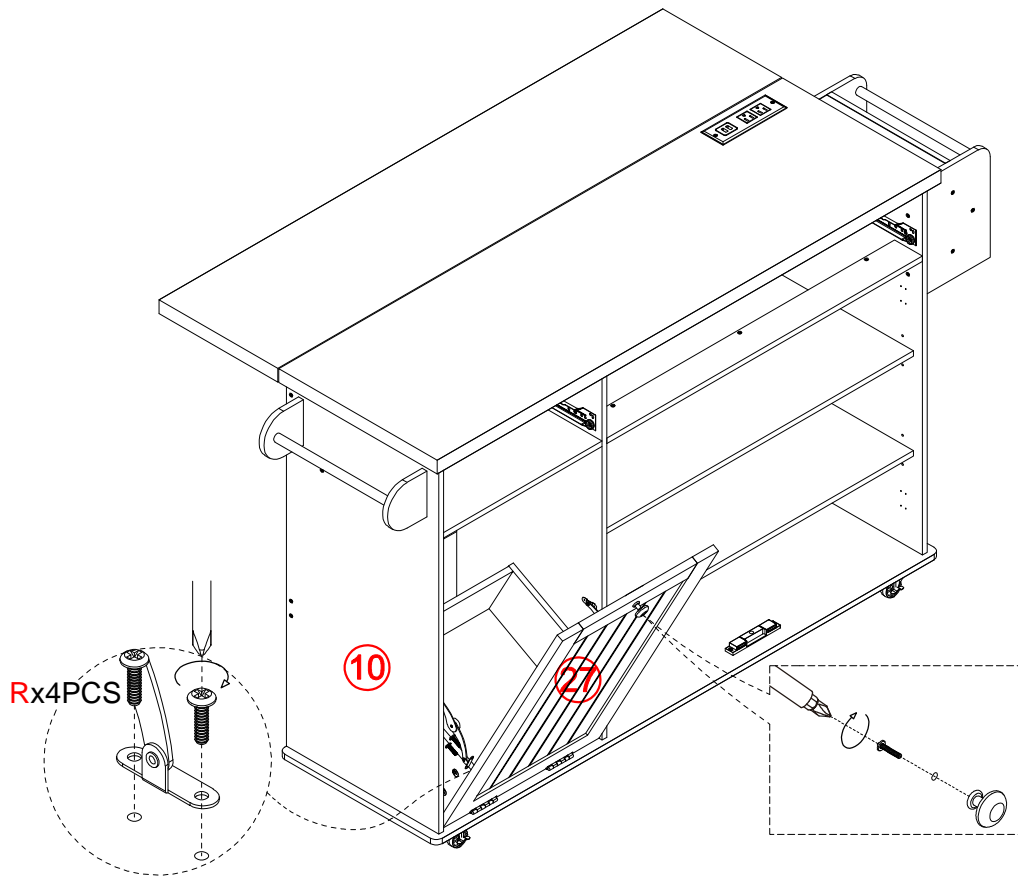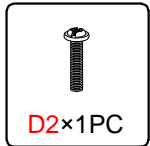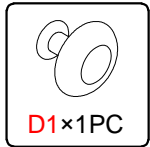

 
 
 
 
STEP 34

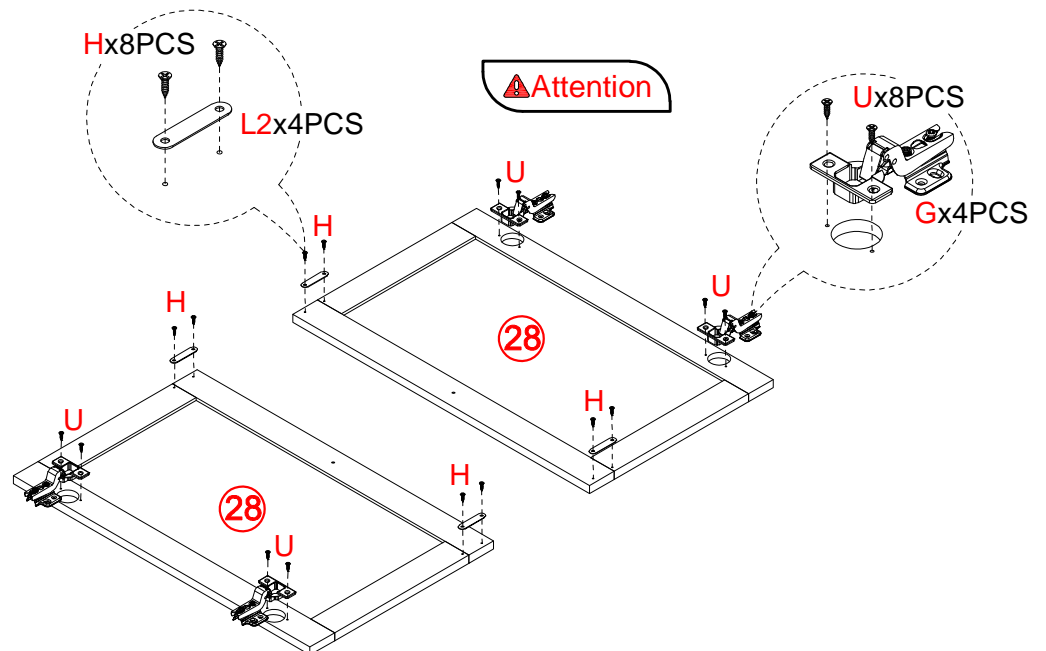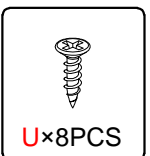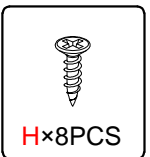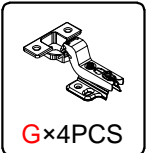

  STEP 35

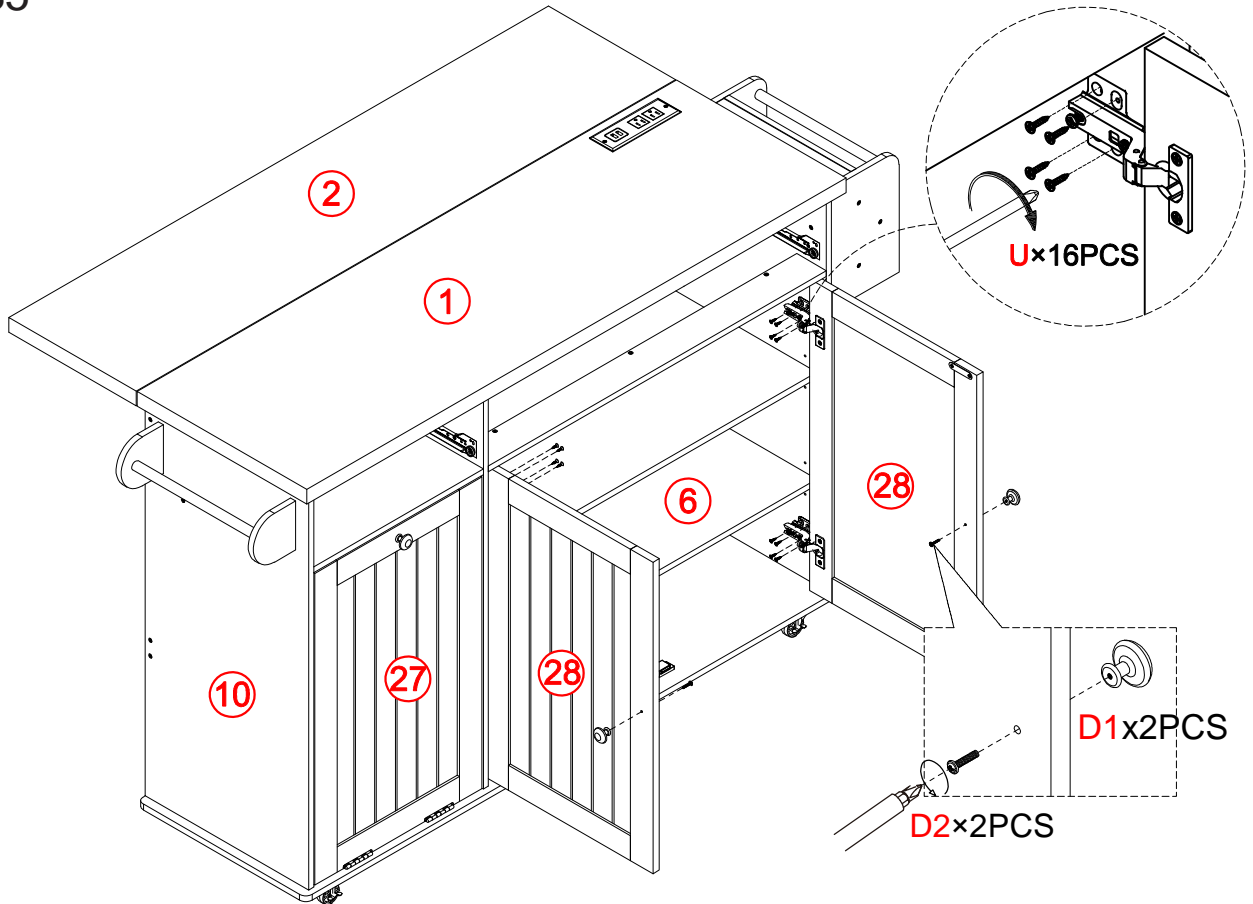
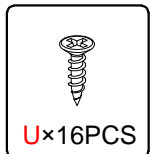


    This is used to adjust the door panel in the left and right direction.

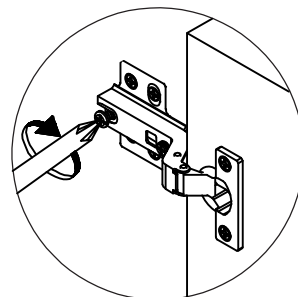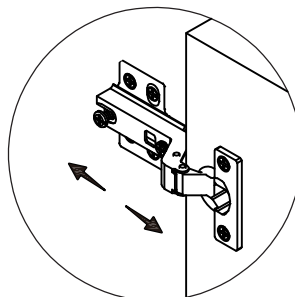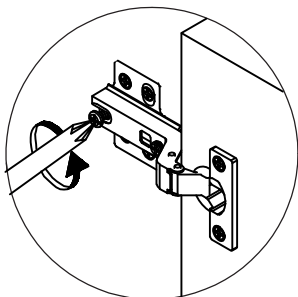
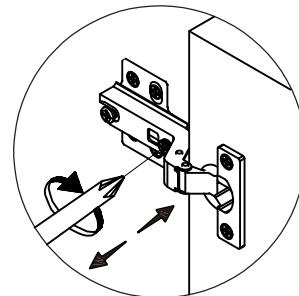


This is used to adjust the door panel in the front and back direction: Loosen screw D first, and then tighten screw D after adjusting the door panel to the proper position.

  
STEP 36

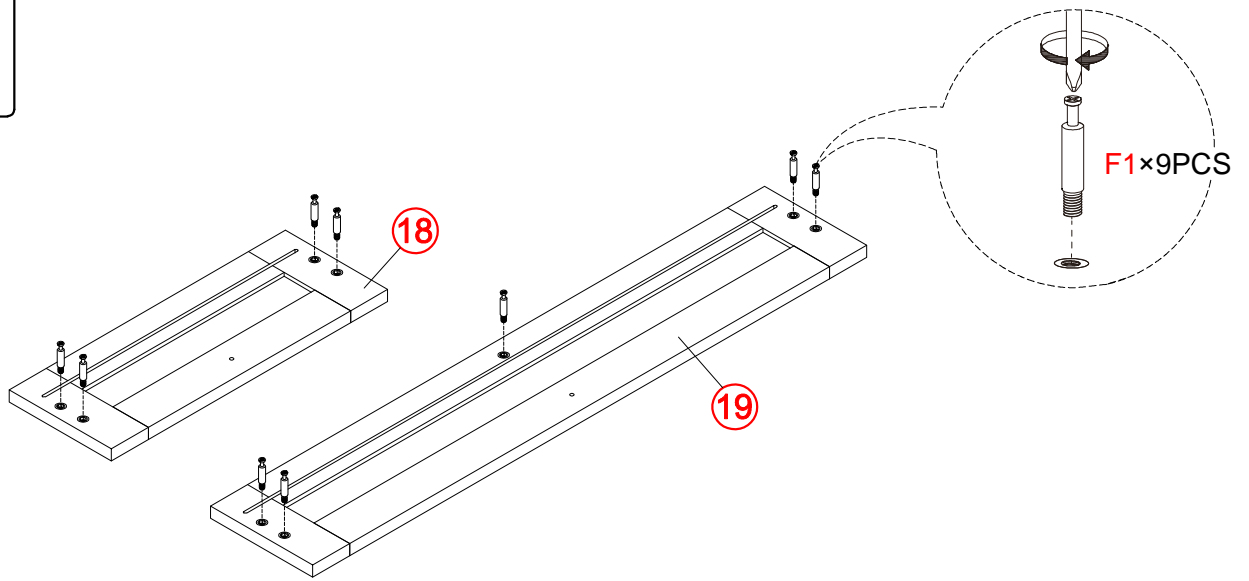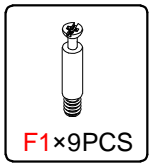

 
 
STEP 37

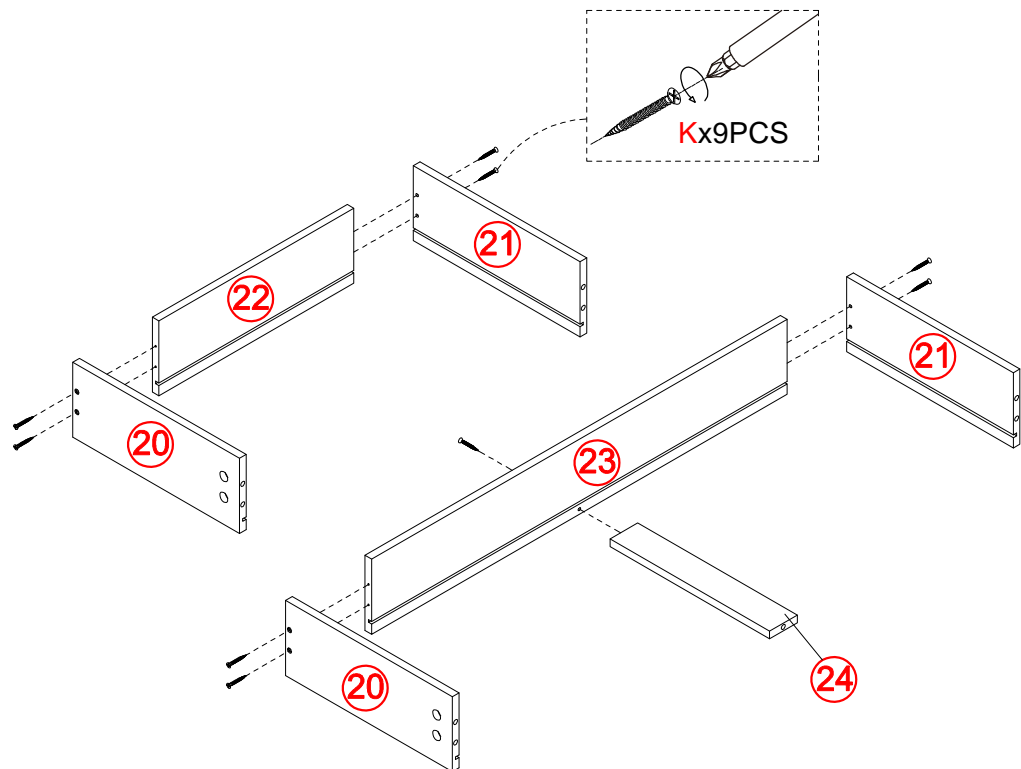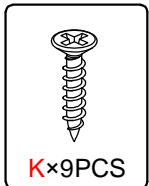



 
STEP 38

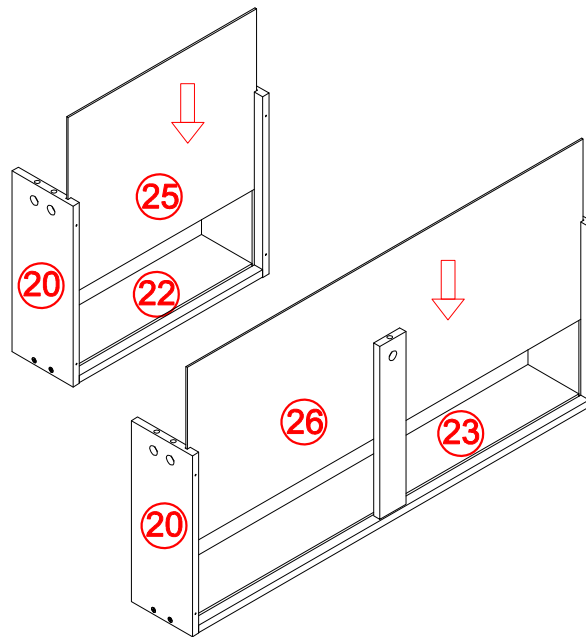

 
 
STEP 39

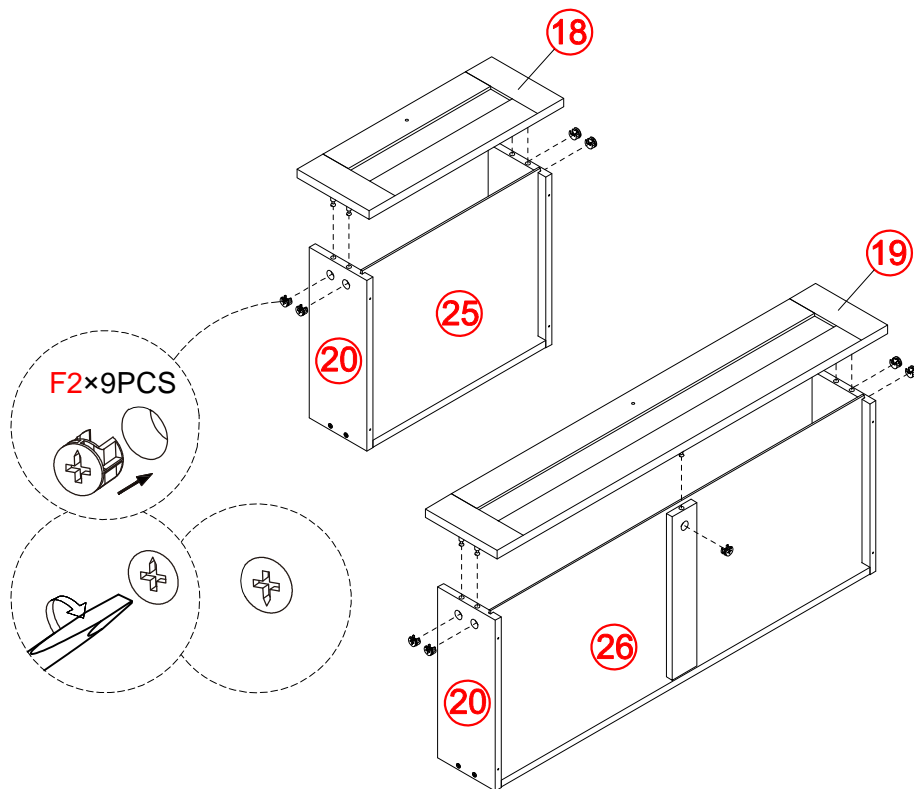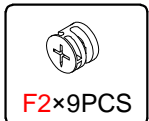

   
STEP 40

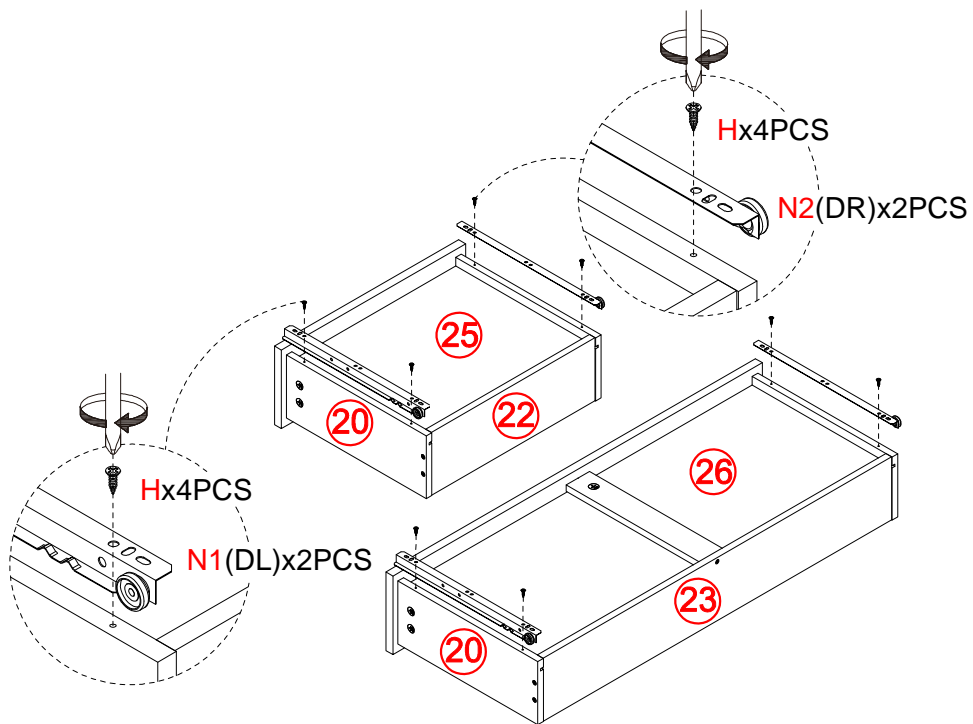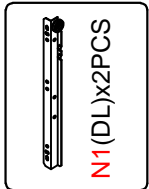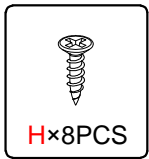


 
 
STEP 41

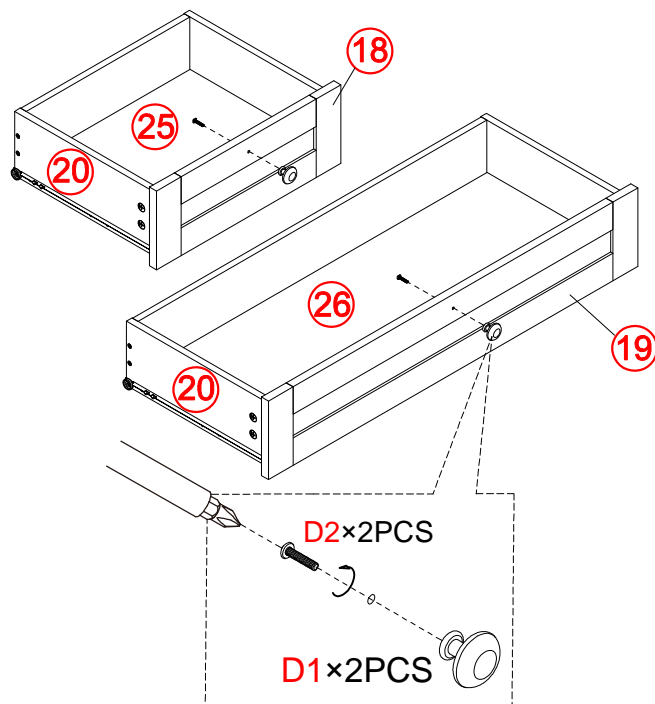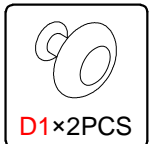

 
STEP 42

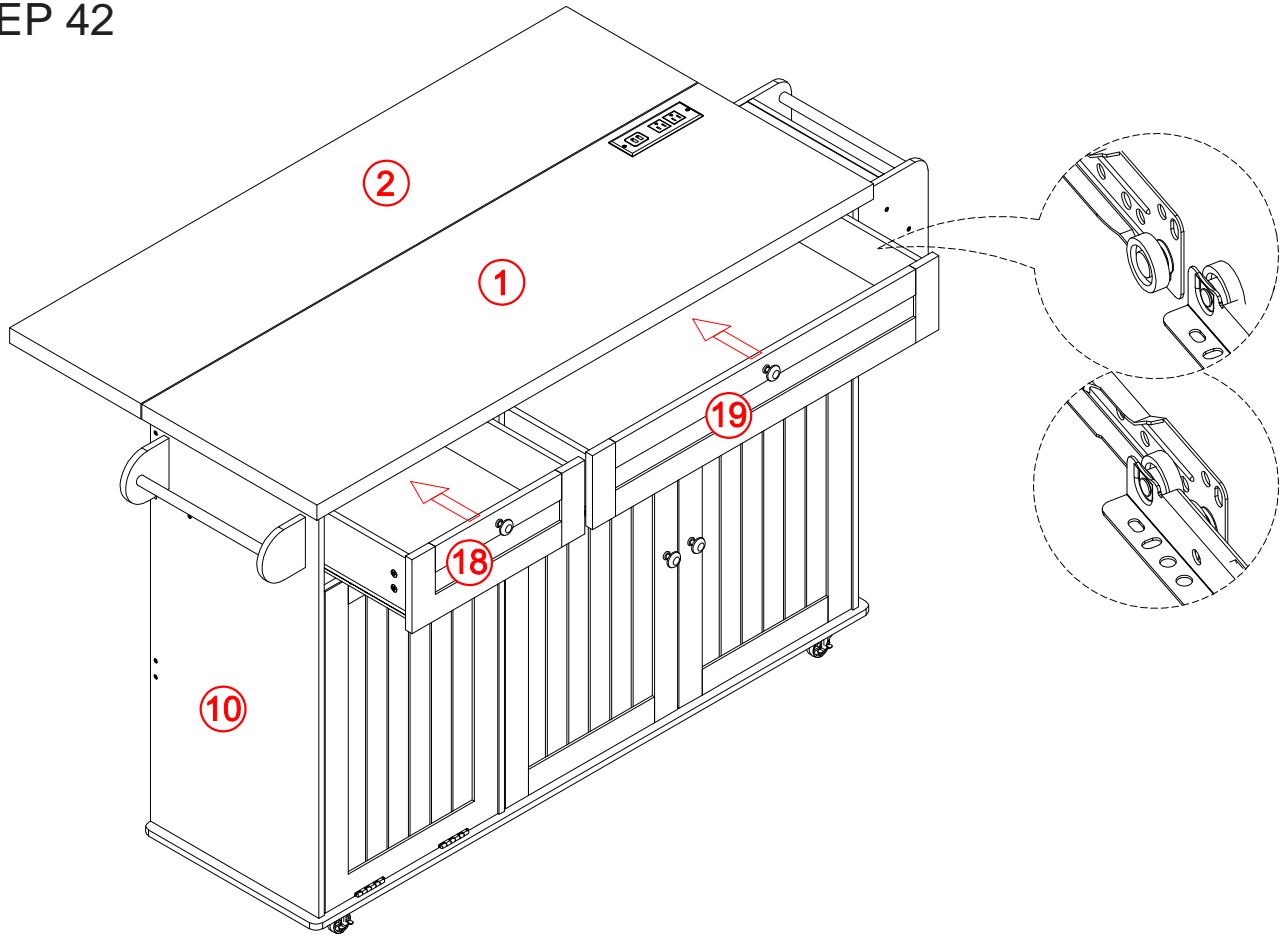

  
 
STEP 43

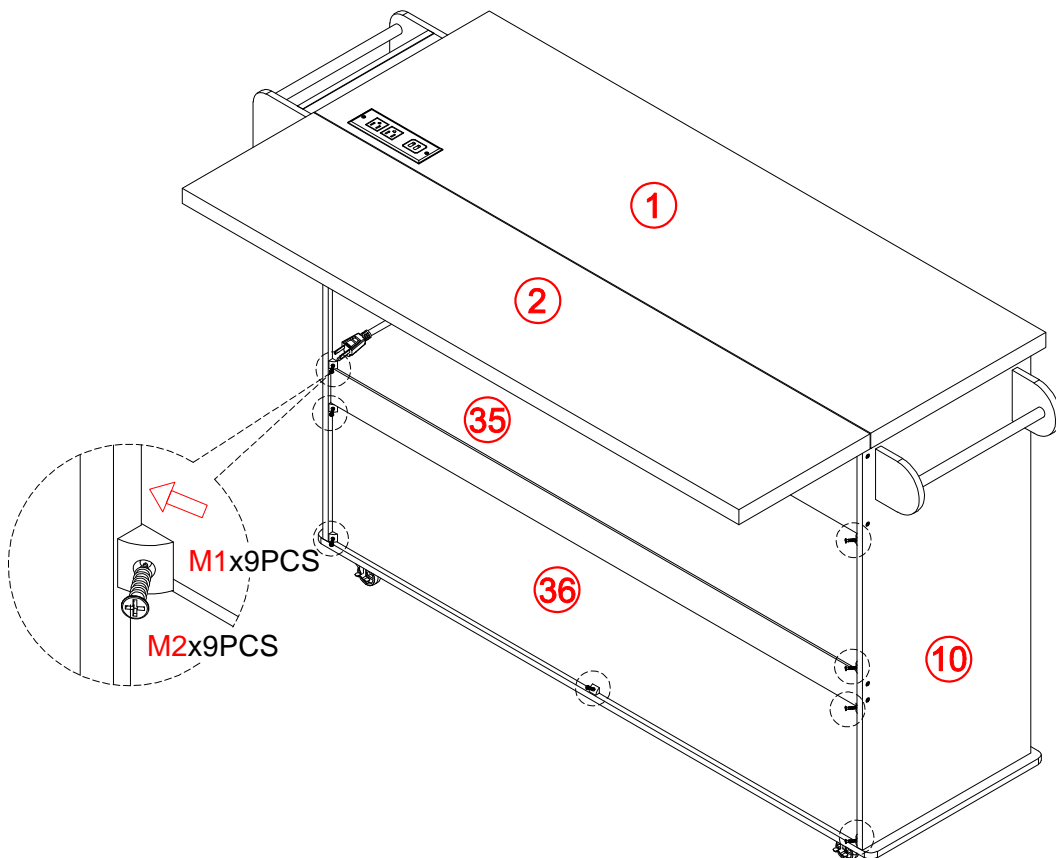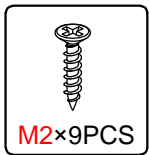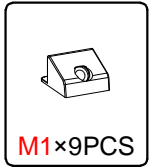

 STEP 44

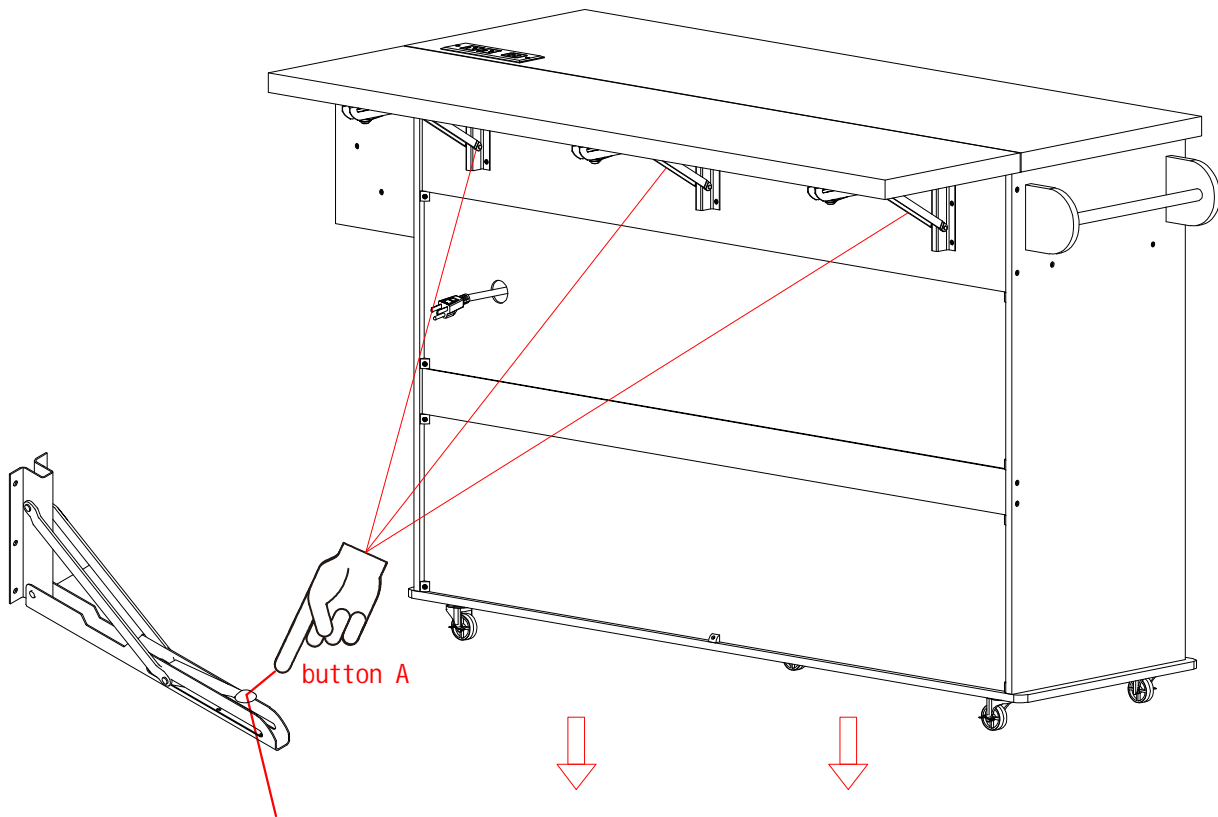

  
Note: 1. While holding down the A key, lift it slightly, then press it down to make the No. 2 board extend and retract

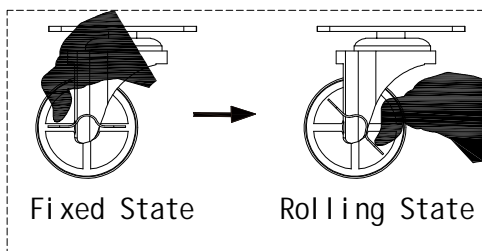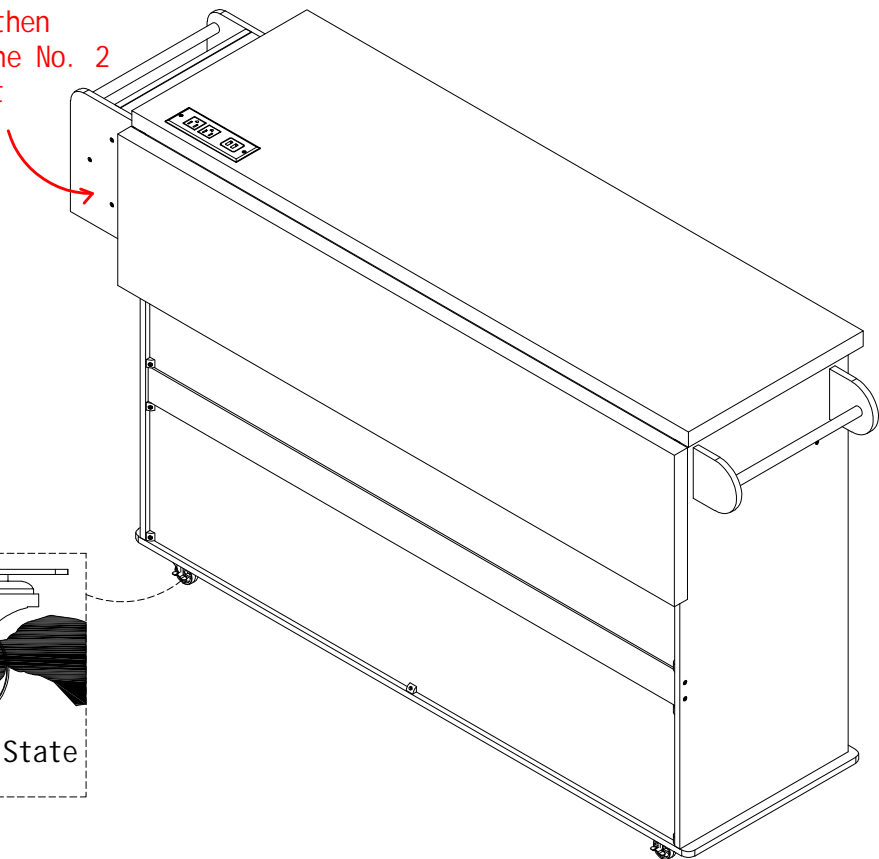


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people. one Person holds the door and the other one adjusts the screw.

 
Components Name

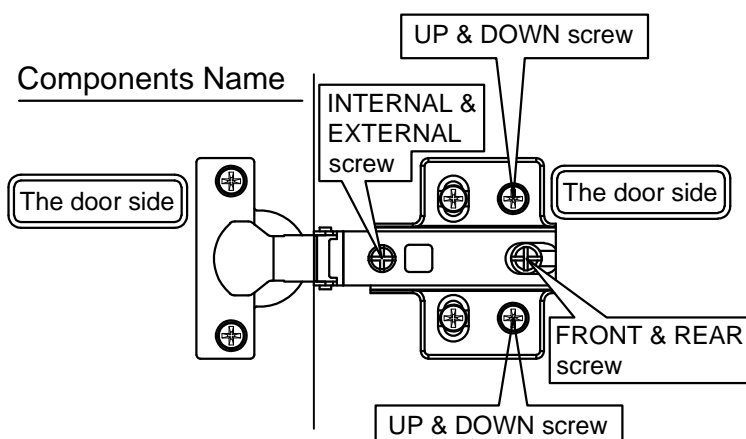

 Obvious gaps between doors or Doors don't look closed

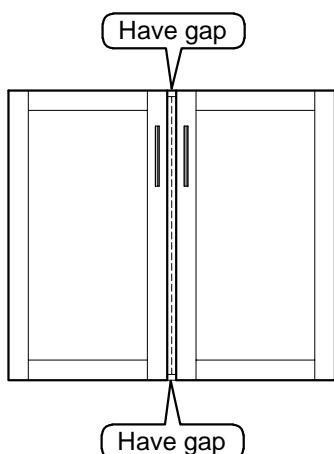


 - 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

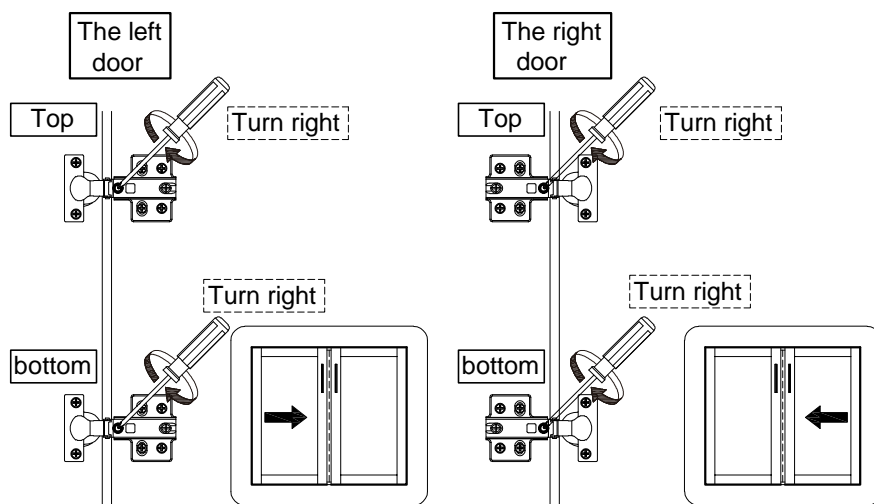


If the 2 doors are overlap, please turn the "internal & external screw" to the left.

 When door is crooked

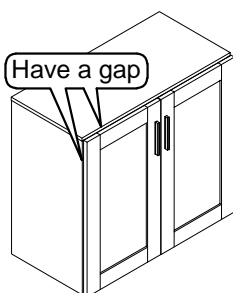


Please take the following steps to adjust first.

 - 1 Rotate the "front and rear screws" to the left

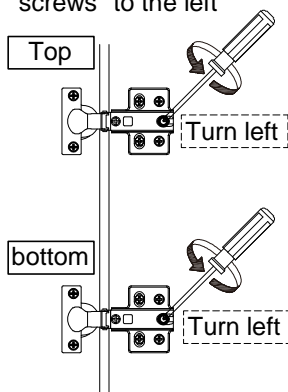


After adjusting the "front and rear screw". the door still does not change please turn the "internal & external screw" to the right slightly.

 
- 2 Push the door to the cabinet

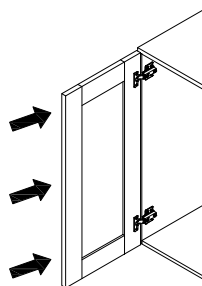

 
- 1 Rotate the "front and rear screws" to the right

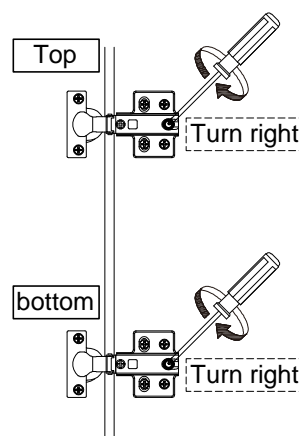


When door is leaning

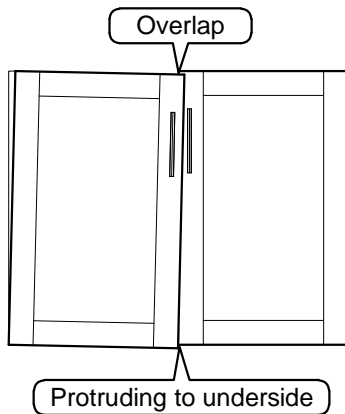 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

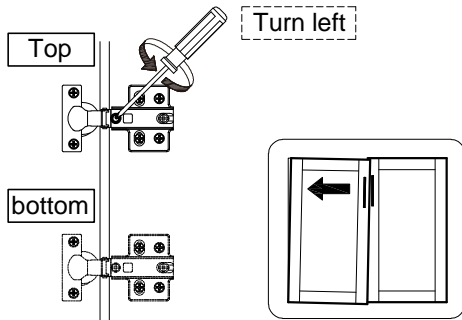


Protruding to underside

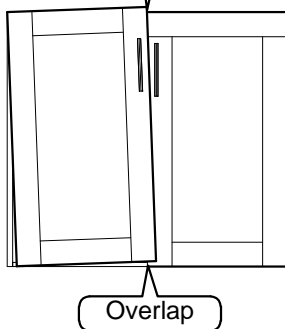 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

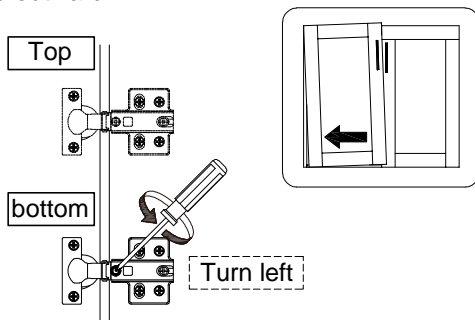


When the door is higher on top

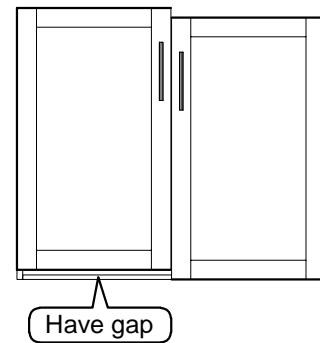 


- 1 Turn "up & down screw" to the left

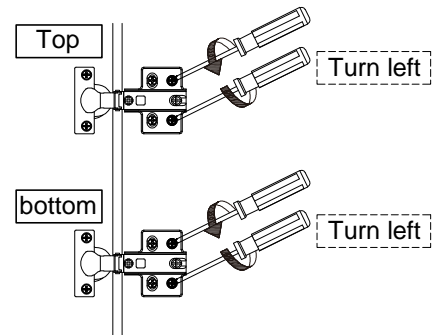 

 - 2 Lower the door's height so that 2 doors are of the same height.

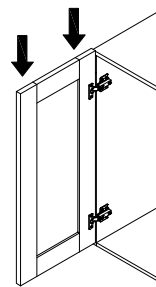

- 3 Turn "up & down screw" to the right

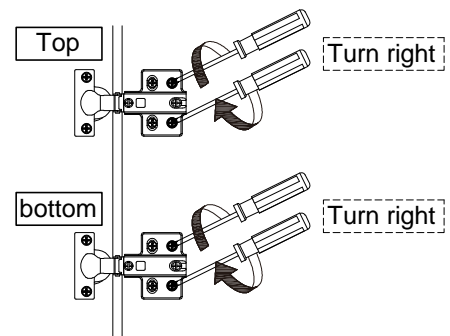 

If the door is lower on bottom, please lift up the left door slightly on step 2