 
 



INSTRUCTION MANUAL

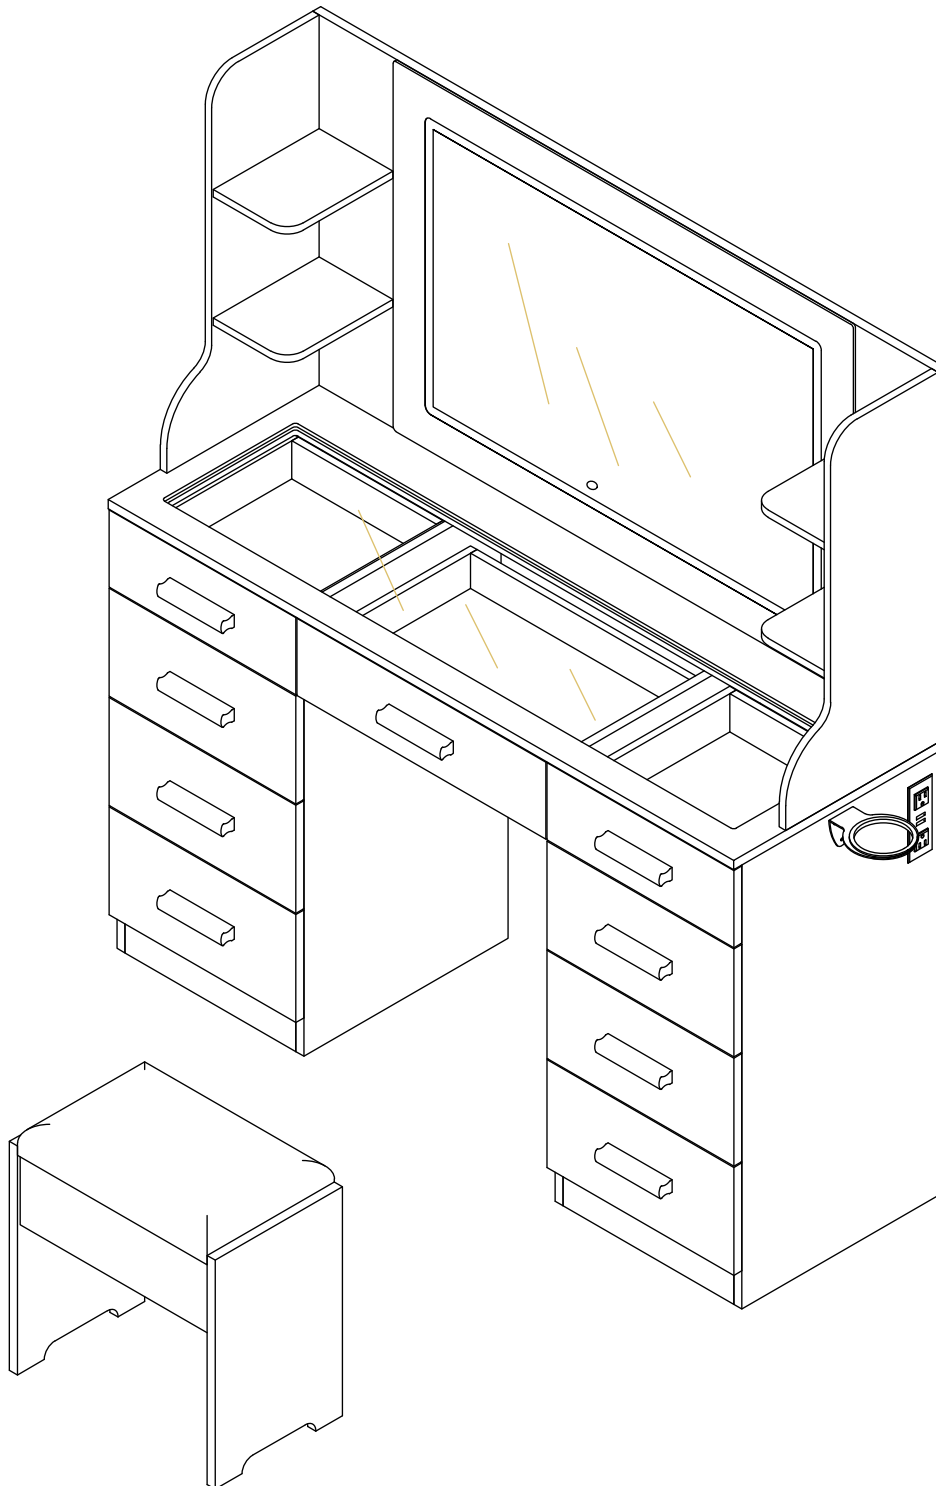

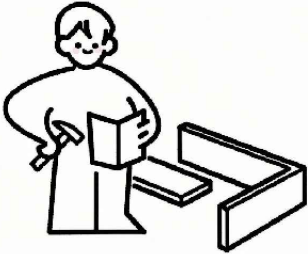

Please read this manual carefully before assembling or using this product. Follow the instructions thoroughly and keep this manual for future reference.

 For a faster and easier assembly, work with a partner.

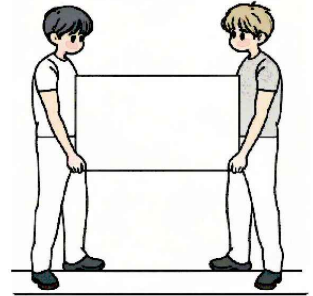

IMPORTANT INSTALLATION AND MAINTENANCE NOTES

- The furniture is large and heavy, please choose a good placement before installation. After the installation is completed, try not to move it widely. If necessary, more than one person should cooperate to carry it.
- Please note: After the installation is completed, avoid vigorous dragging or using brute force to carry the furniture, as this may cause irreversible damage to the connection points or plates, leading to cracks that affect the functionality and appearance of the product.
- Any product that is assembled using screws should be re-tightened 2 weeks after assembly, and once every 3 months thereafter, to ensure stability throughout the product's lifespan.
- For regular maintenance and cleaning of the product: For the frame, use a rag dipped in neutral detergent to wipe it thoroughly, then dry it with a clean rag. For glass materials, use a rag dampened with a water-based glass cleaner, and then dry it with a dry rag.
- Do not use an electric screwdriver, and avoid using excessive force during installation, as the board is easy to break.
- If you have any issues or questions, please feel free to contact our customer service team

ANTI-TOPPLE WARNING!

 
Overtured furniture can cause serious injury or even death.

To prevent tipping over, always secure the furniture to the wall using the provided wall attachment.

If the wall attachment is not included, purchase one that fits your wall type.

If you're unsure, seek professional assistance to ensure correct installation.

Carefully follow each step of the assembly instructions for safe and secure setup.

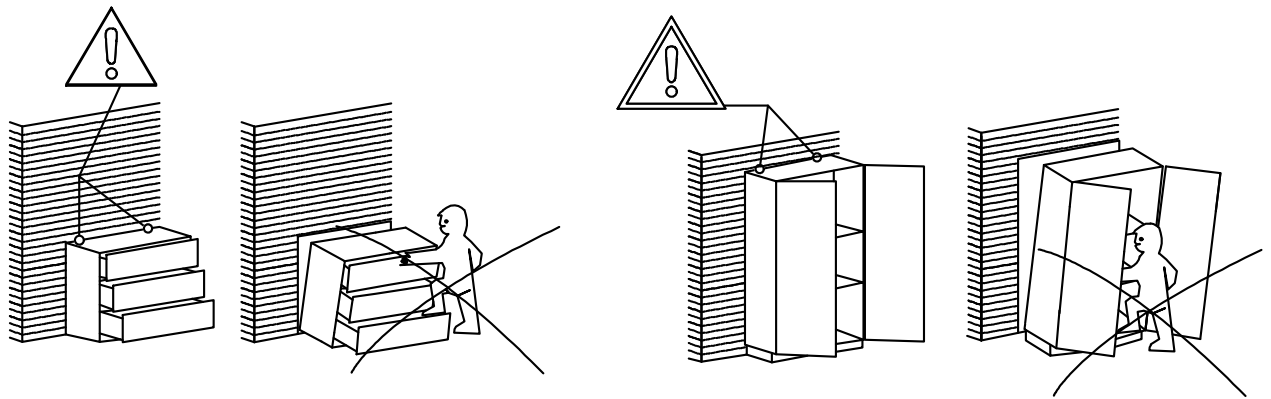

This product contains small parts, please keep out of reach of children.



 
Ce produit contient de petites pièces, s'il vous plaît. À conserver hors de portée des enfants.

Bitte halten Sie kleine Teile außerhalb der Reichweite von Kindern.




Este producto contiene piezas pequeñas. Mantener fuera del alcance de los niños.

Este produto contém peças pequenas. Por favor, mantenha fora do alcance das crianças.

Questo prodotto contiene piccole parti, si prega di tenere fuori dalla portata dei bambini.

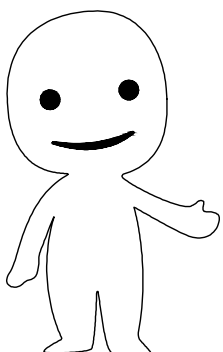

Please prepare the following tools

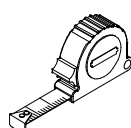   

In case of doubt, compare the hardware with the full-size images below.

 
 
En cas de doute, veuillez comparer la quincaillerie avec les images ci-dessous à taille réelle.

Vergleichen Sie im Zweifelsfall die Schrauben mit den Abbildungen in Originalgröße.





En caso de duda, compare los herrajes con las imágenes a continuación en tamaño real.


Em caso de dúvida, compare as ferragens com as imagens abaixo em tamanho real.

In caso di dubbio, confronta la ferramenta con le immagini sottostanti a grandezza reale.

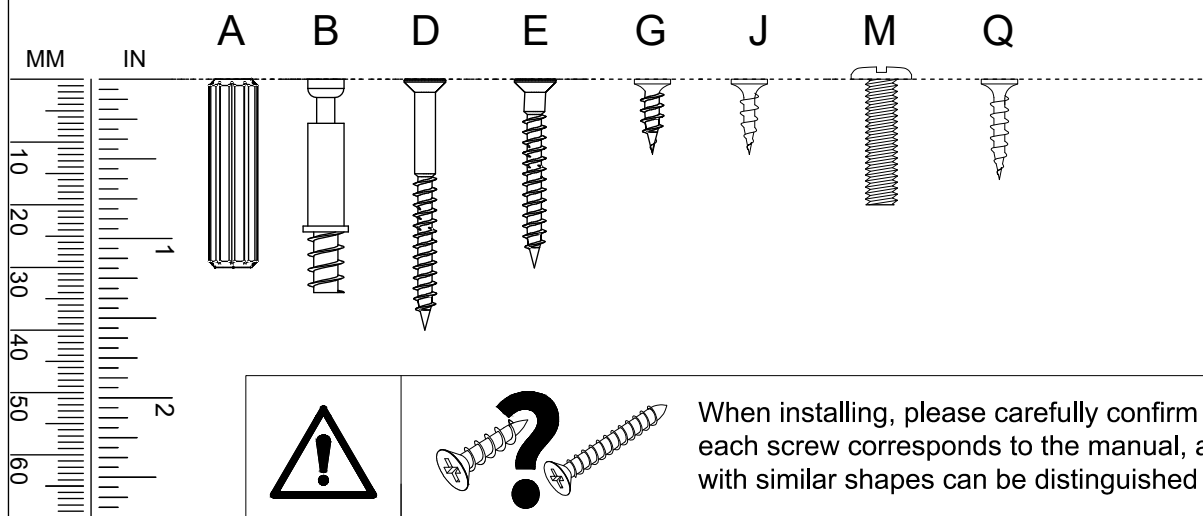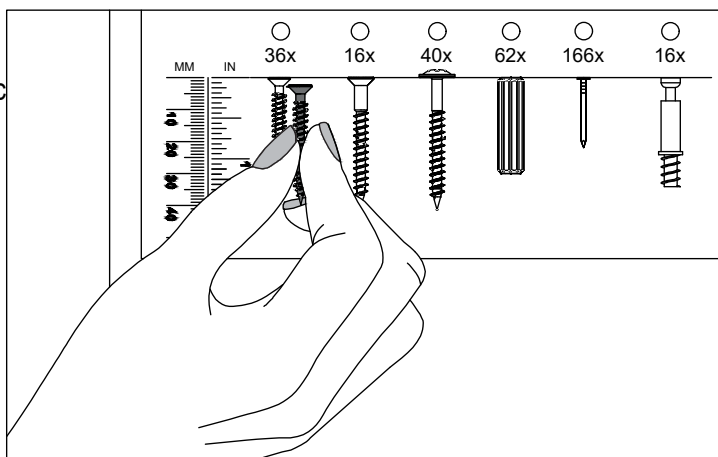

    When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

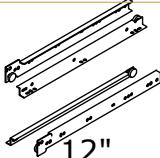A x 32	B x 88	C x 88	D x 22	E x 36
 Ø8 x 30mm	 Ø6 x 34mm	 Ø15 x 9.5mm	 Ø4x 40mm	 Ø4x 30mm
F x 9	G x 80	H x 1	J x 5	K x 1
 12"	 Ø3.5 x 12mm		 Ø3x 12mm	
L x 9	M x 18	N x 4	P x 8	Q x 8
	 M4x18mm	 19*19*16mm	 14 x 13 x 10 mm	 Ø3 x 16mm
S x 1				
				

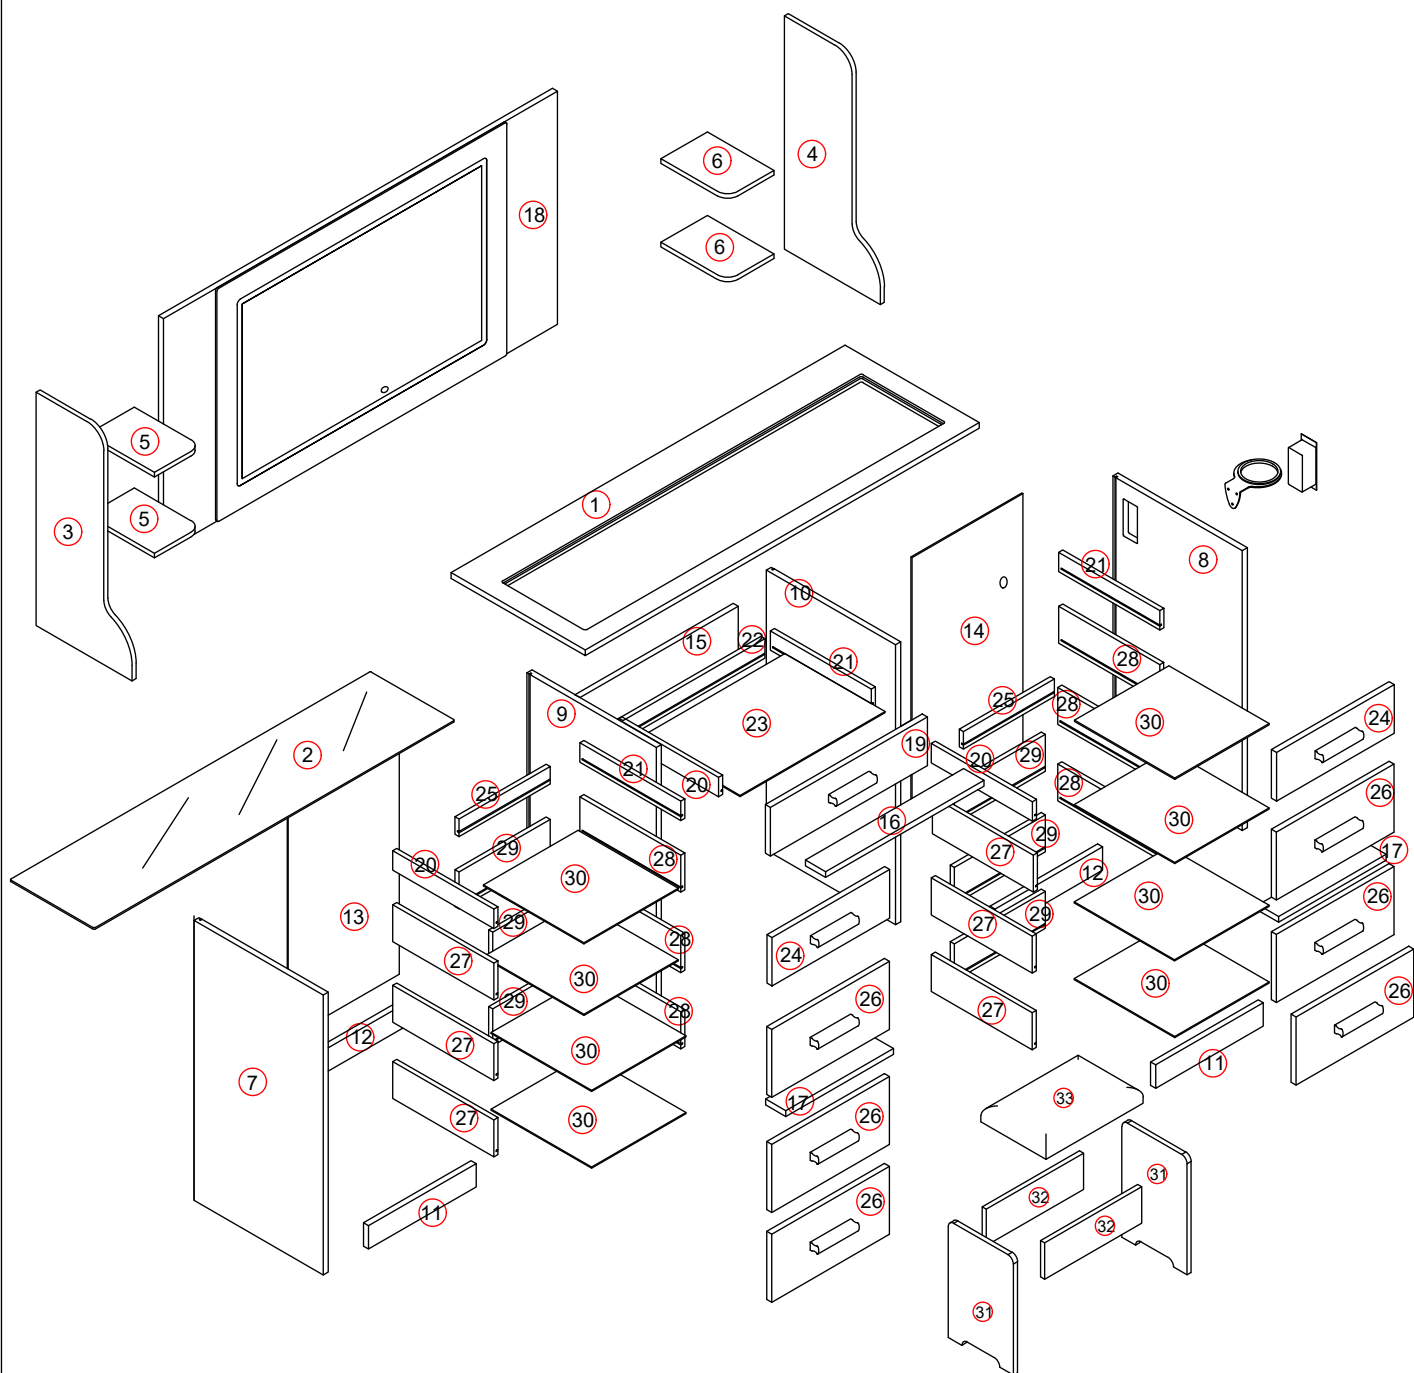 

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

ATTENTION - AVERTISSEMENT - ACHTUNG - ATENCIÓN - ATENÇÃO - ATTENZIONE

Assemble the furniture on a clean and flat surface and cover it with the cardboard of the packaging.

 
 
Assemblez le meuble sur une surface propre et plane et couvrez-le avec le carton de l'emballage du produit.

Um Beschädigungen zu vermeiden, montieren Sie den Artikel auf einer weichen, sauberen Unterlage. Tipp: Legen Sie den Artikel auf dem Verpackungskarton.


Montar el mueble sobre una superficie limpia y plana y cubrirlo con el cartón del embalaje del producto.

Montar o móvel sobre uma superfície limpa e plana e forrá-la com o papelão da embalagem do produto.


Montare il mobile su una superficie pulita e piana e rivestirla con il cartone d'imballaggio del prodotto.

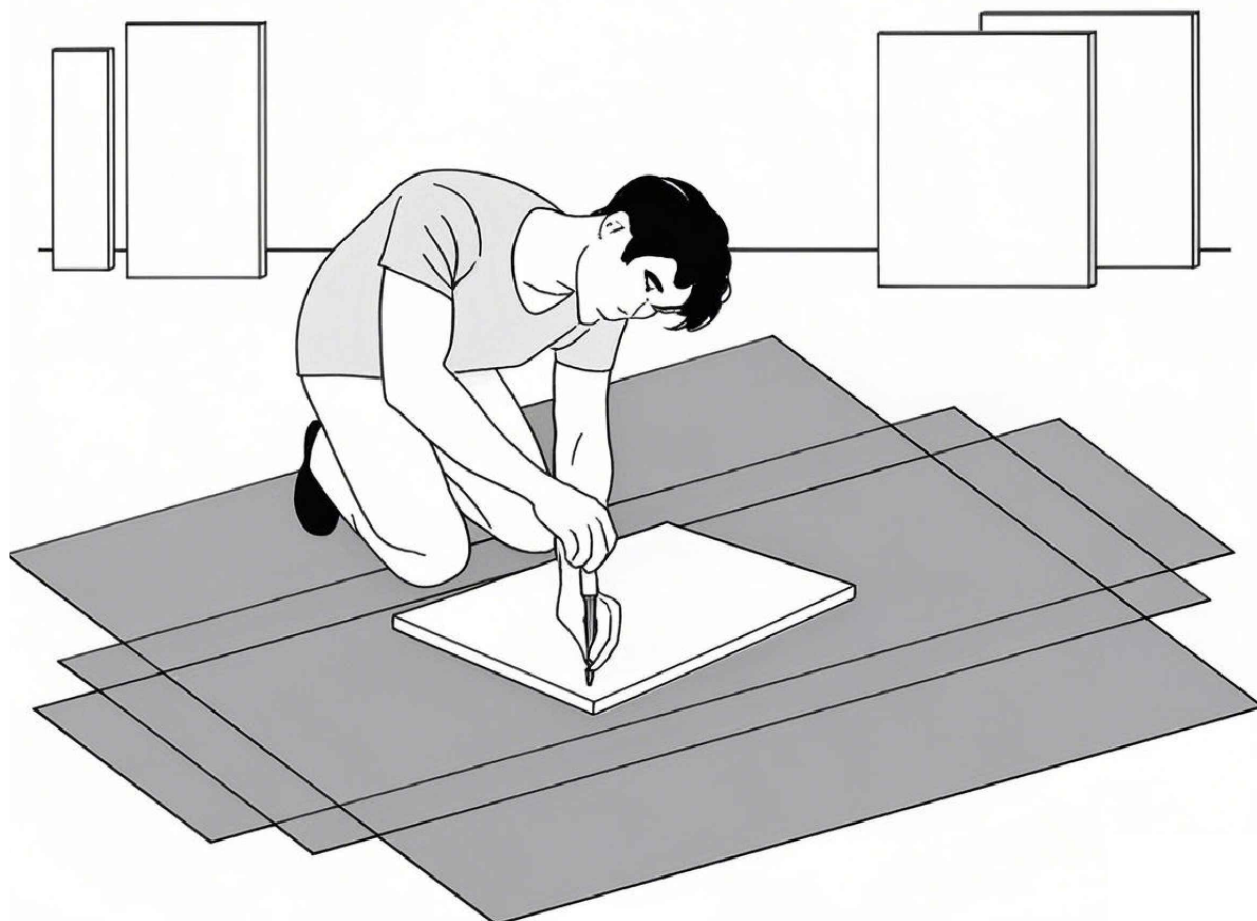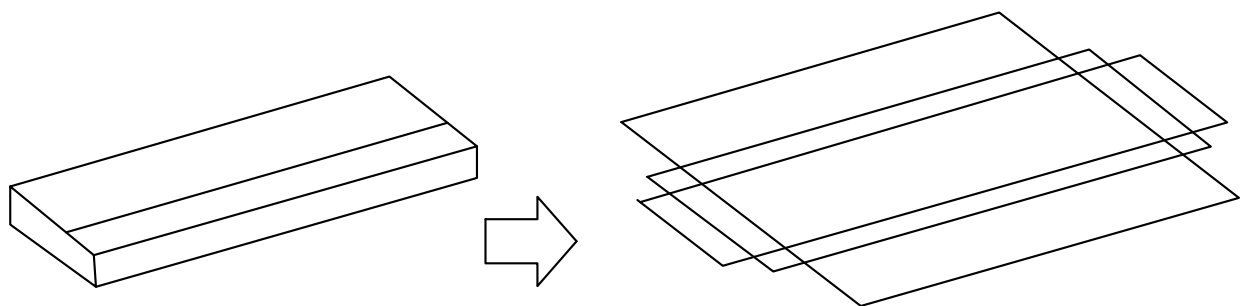


Use parts **B** and **C**

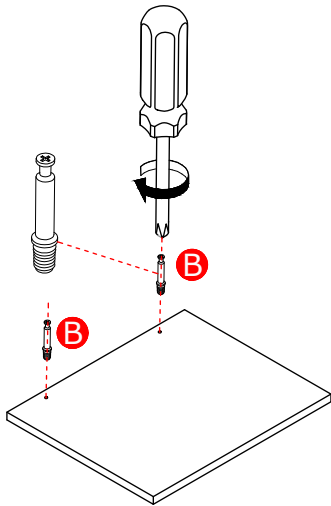 

 
Step1

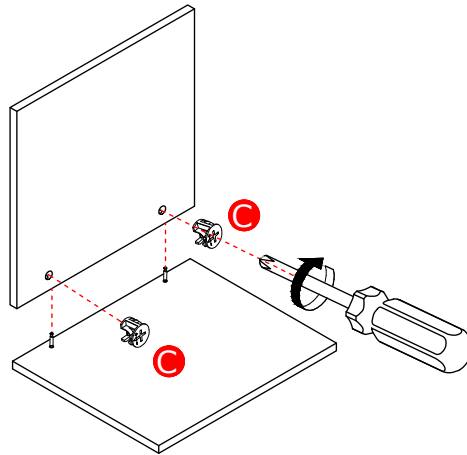

 
Step2

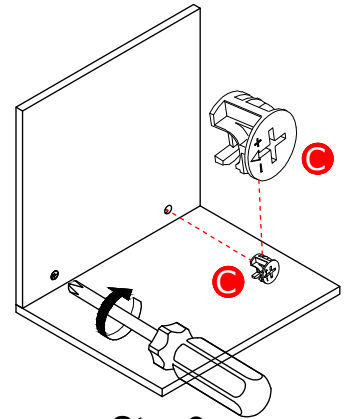

 Step3

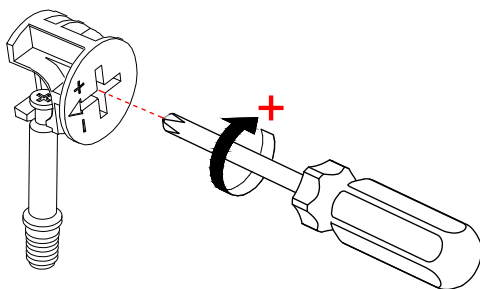

 
Use a screwdriver to lock in the direction of the "+" sign

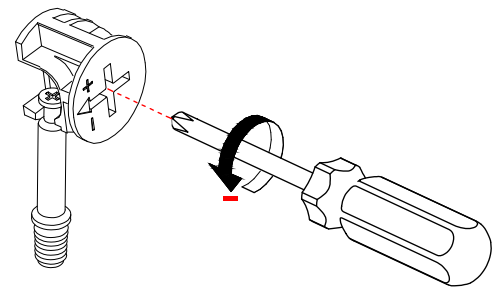

Disassemble along the direction of "-" sign





1

 B




x 8

    Tighten the screws(B) into the corresponding holes in parts 3 & 4, ensuring they are locked vertically.

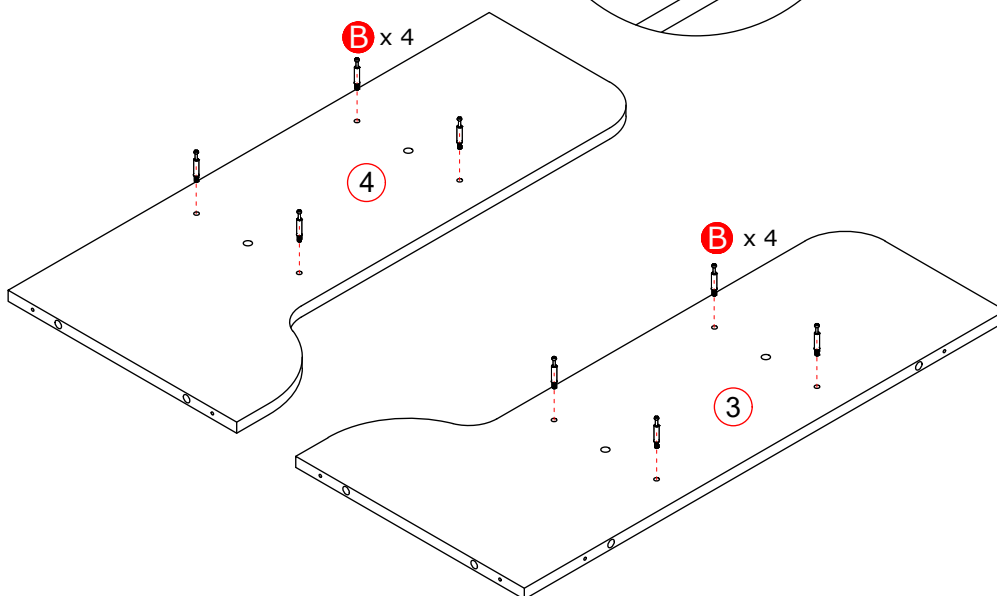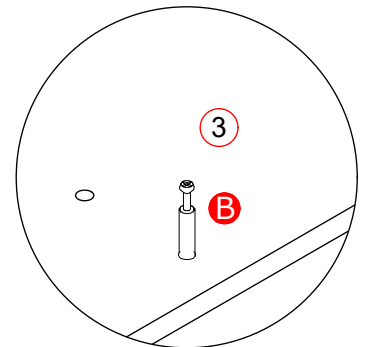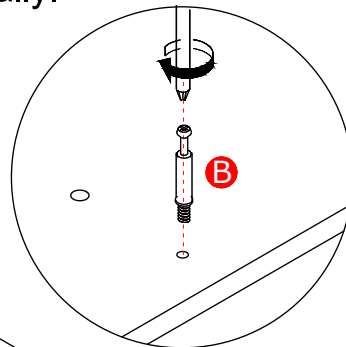

2



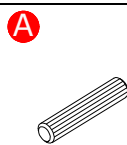 


x 2




x 4

   Insert the wooden dowel (A) into one side of plate 3. Connect plate 3 to plate 5, then insert the snap lock (C) into the hole on plate 5 and tighten by turning clockwise as shown.

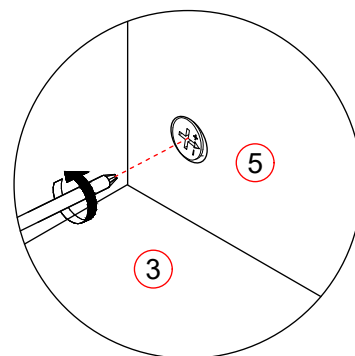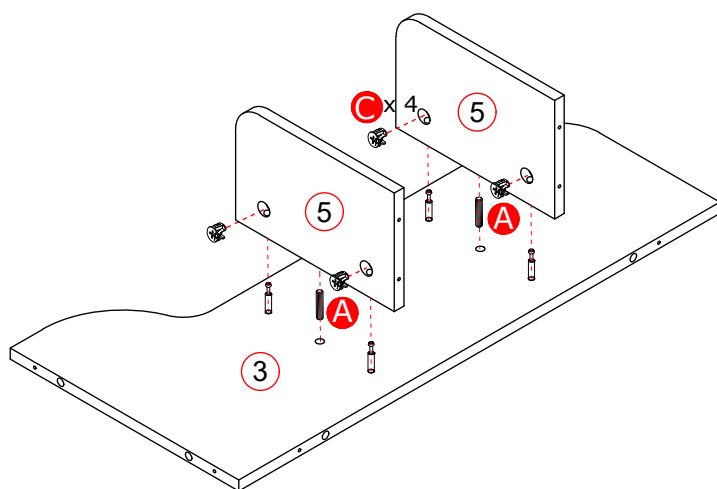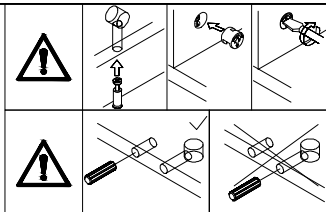

3



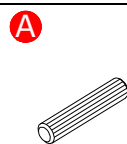 


x 2



x 4

   Insert the wooden dowel (A) into one side of plate 4. Connect plate 4 to plate 6, then insert the snap lock (C) into the hole on plate 6 and tighten by turning clockwise as shown.

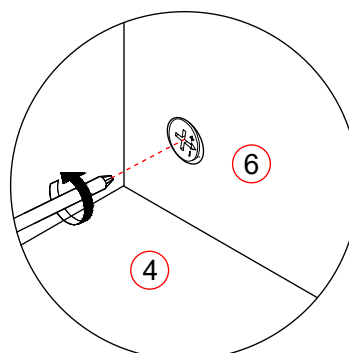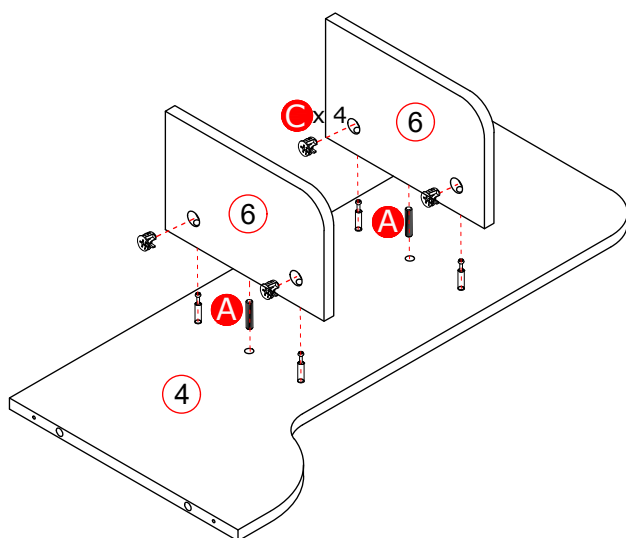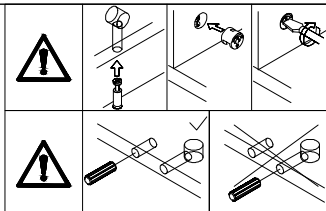

4

A




x 2

D



x 7

As shown in the picture, Insert the wooden dowel (A) into one side of plate 3. Connect plate 3 to plate 18, use screws (D) to connect parts 3 & 5 with part 18.

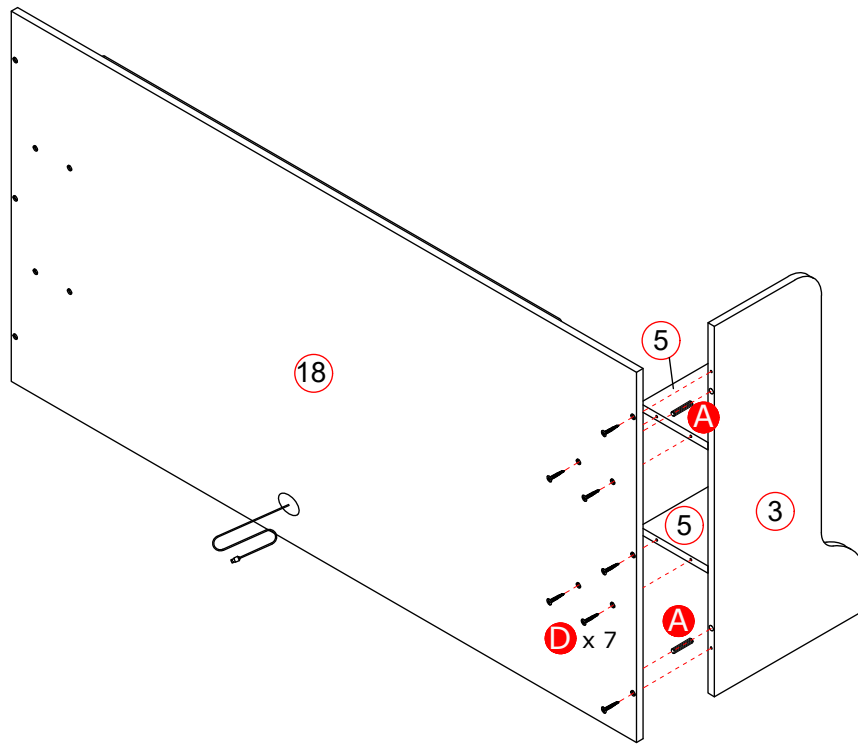 

5

A

 


x 2

D



x 7

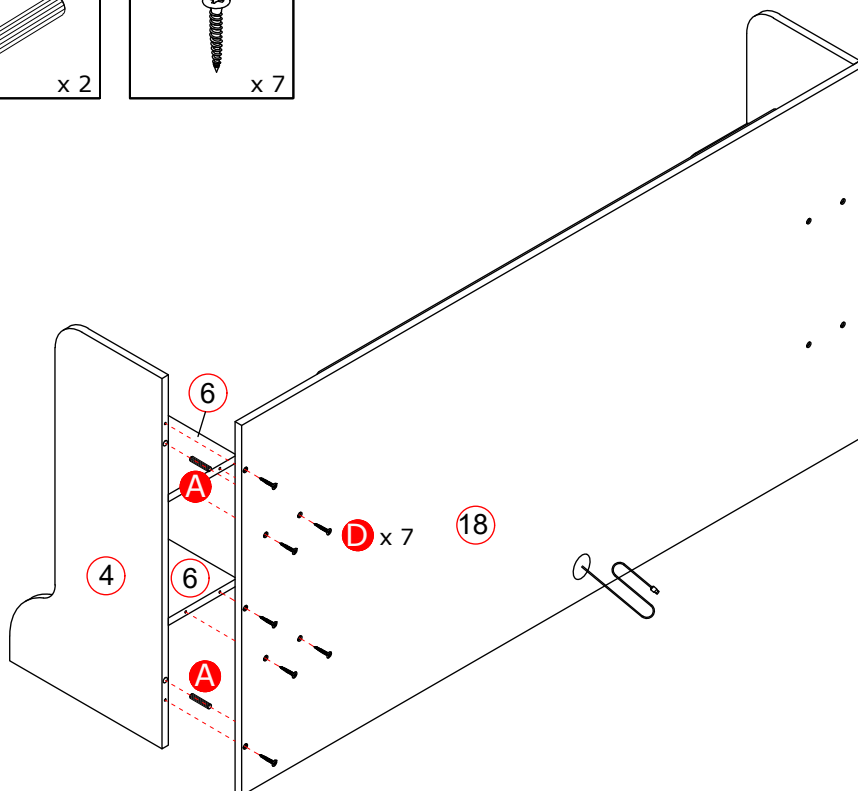

As shown in the picture, Insert the wooden dowel (A) into one side of plate 4. Connect plate 4 to plate 18, use screws (D) to connect parts 4 & 6 with part 18.

6

A




x 6

D



x 8

As shown in the picture, Insert the wooden dowel (A) into one side of plate 3 & 4 and 18. Connect plate 3 & 4 and 18 to plate 1, use screws (D) to connect parts 3 & 4 and 18 with part 1.

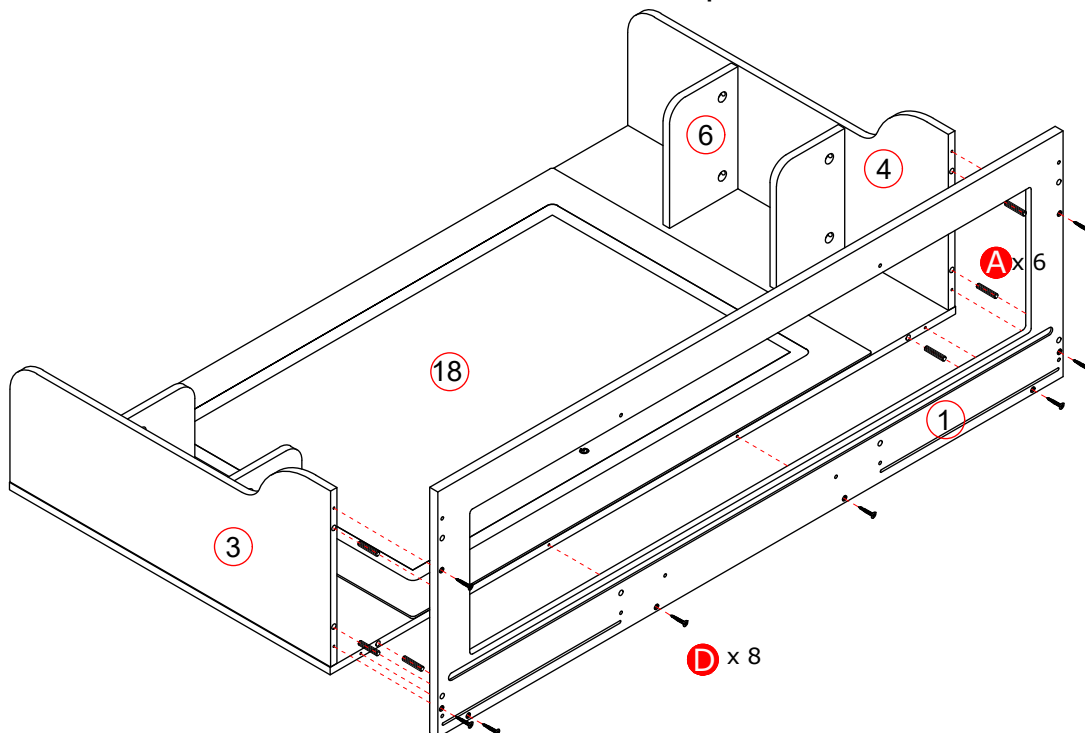 


7

B




x 10

 
S

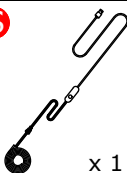

x 1

 


 Tighten the screws (B) into the corresponding holes in parts 1, ensuring they are locked vertically.

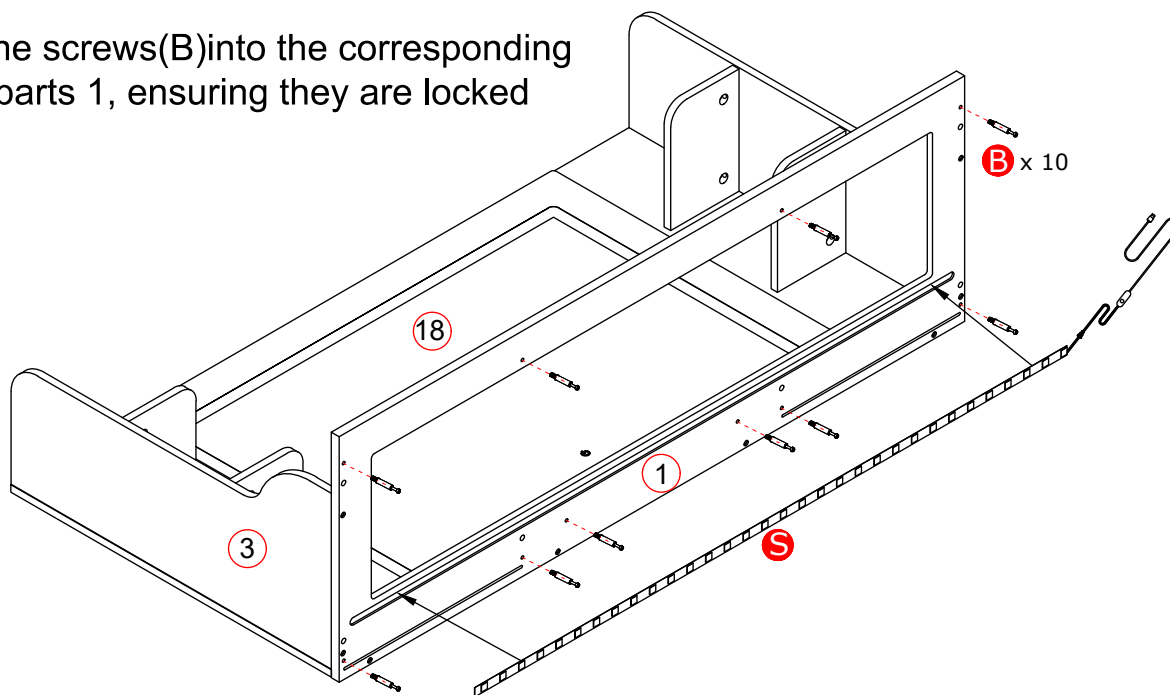



In stal the light strip as shown ,Tear off the adhesive sticker of the light strip and stick it on the Within the groove of part 1, boards with the adhesive surface

 8


B

x 10

  Tighten the screws(B)into the corresponding holes in parts 7 & 8, ensuring they are locked vertically.

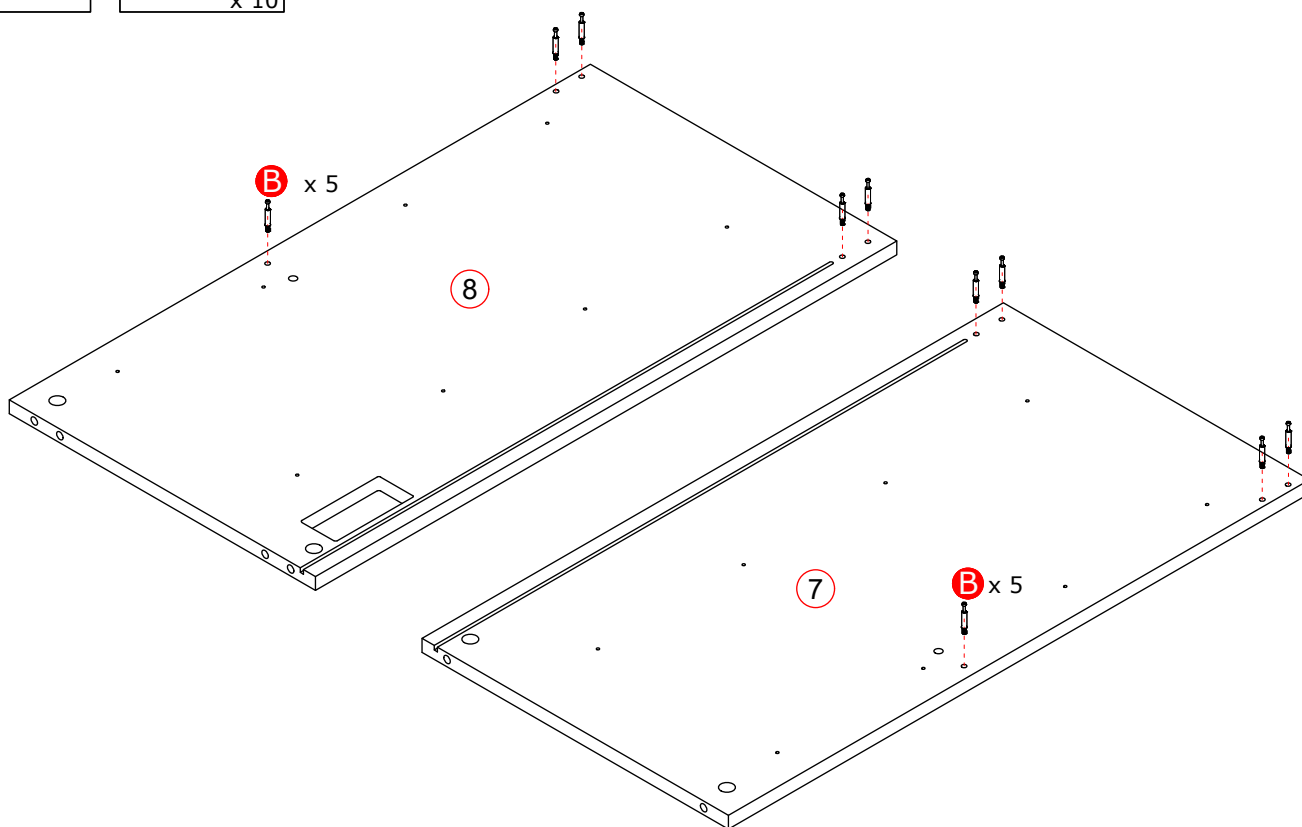

9

 
F

x 4


G

x 8

 
Referring to the illustration, install the drawer slide (F-CL) on part 7 and screw (G) into the corresponding holes of the slide (F-CL) according to the hole position example drawing; Check the corresponding part number holes in the illustration.

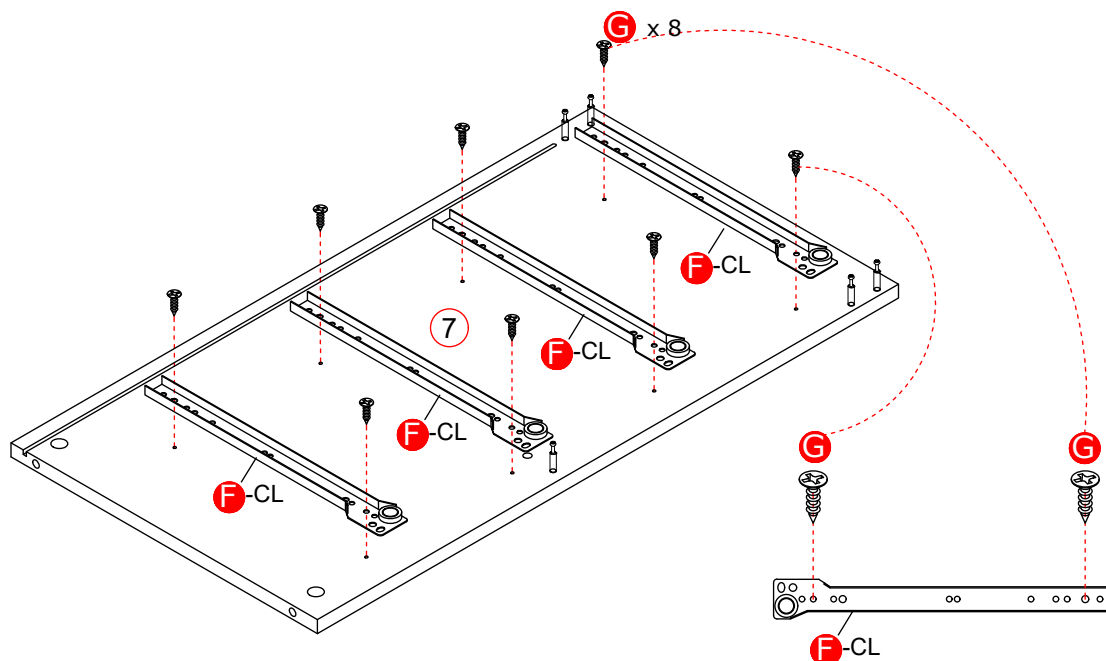




10

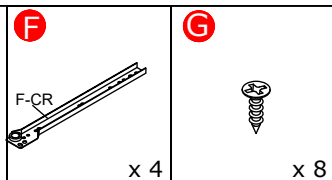 

 Referring to the illustration, install the drawer slide (F-CR) on part 8 and screw (G) into the corresponding holes of the slide (F-CR) according to the hole position example drawing; Check the corresponding part number holes in the illustration.

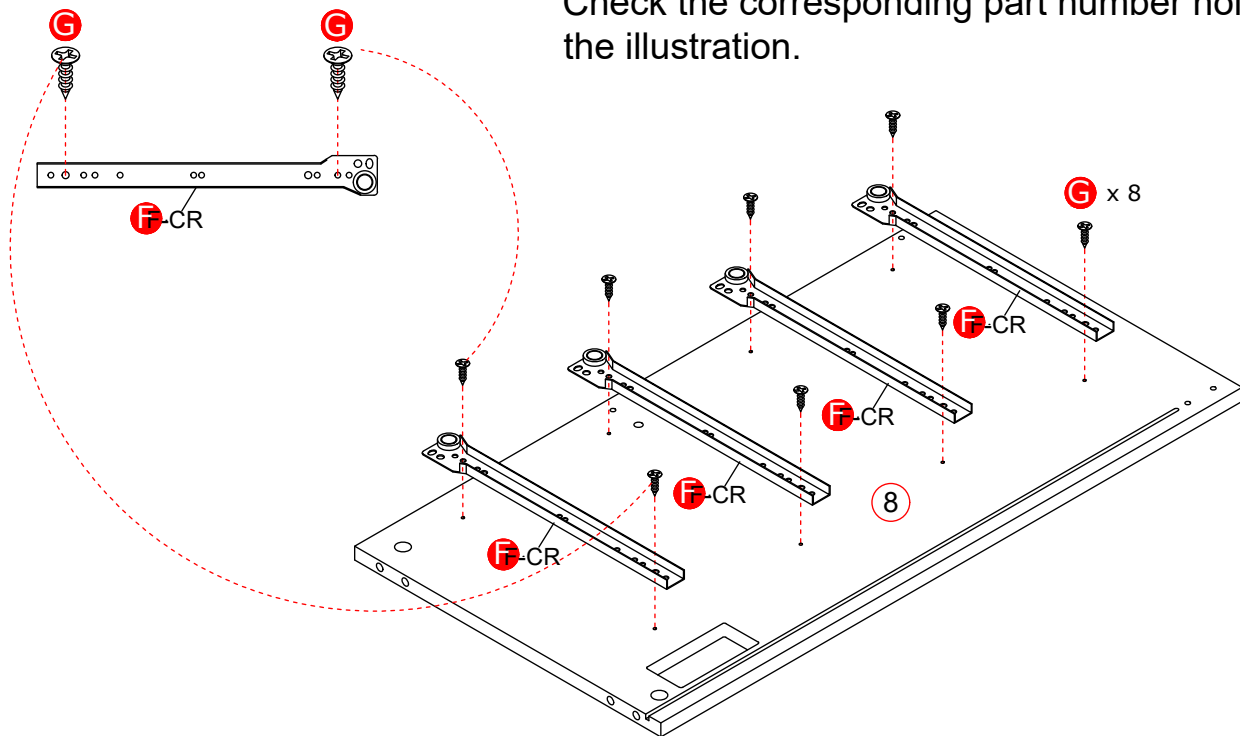





11

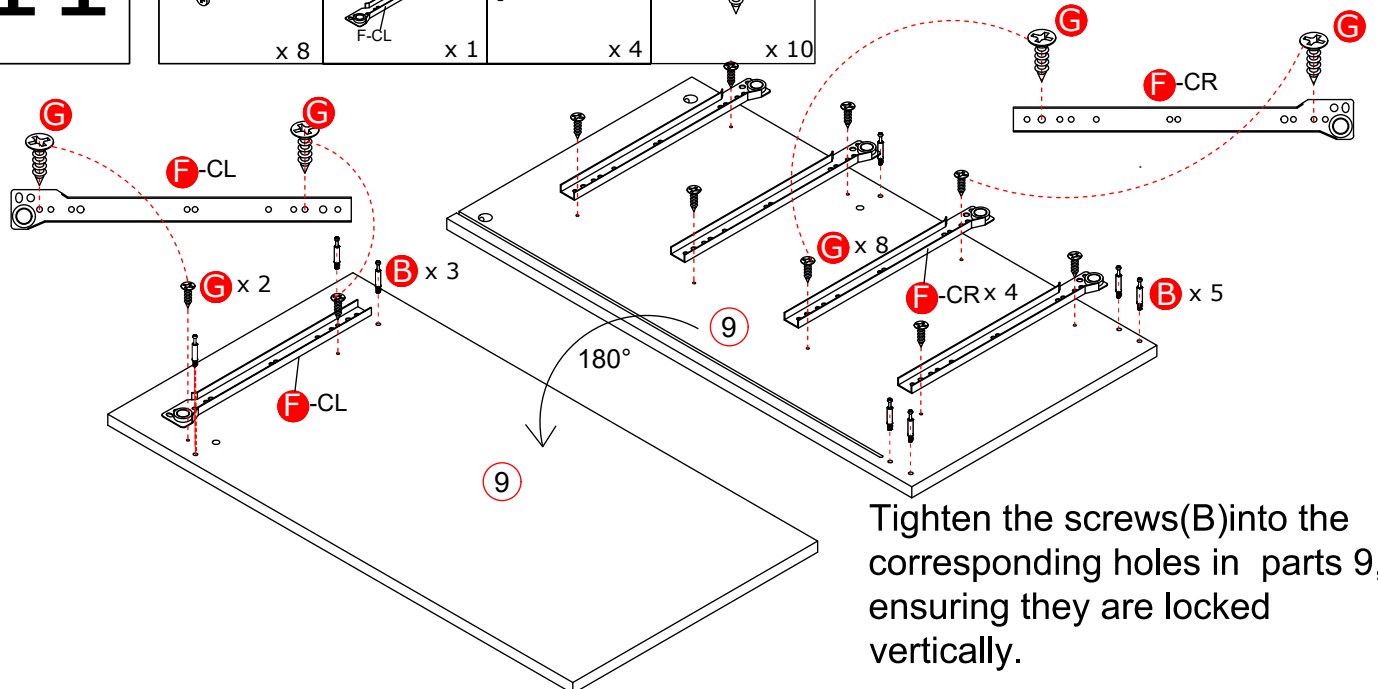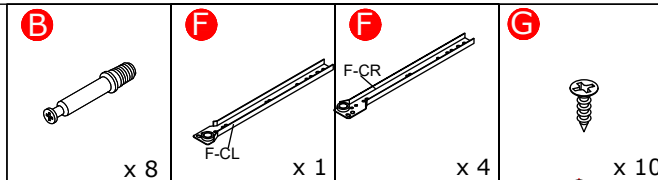   


Tighten the screws(B)into the corresponding holes in parts 9, ensuring they are locked vertically.

Referring to the illustration, install the drawer slide (F-CR) on part 9 and screw (G) into the corresponding holes of the slide (F-CR) according to the hole position example drawing; Then flip 180° install the drawer slide (F-CL) on part 9 and screw (G) into the corresponding holes of the slide (F-CL) according to the hole position example drawing. Check the corresponding part number holes in the illustration.

    12


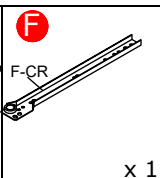
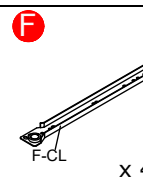
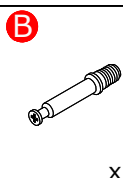


 Tighten the screws (B) into the corresponding holes in parts 10, ensuring they are locked vertically.

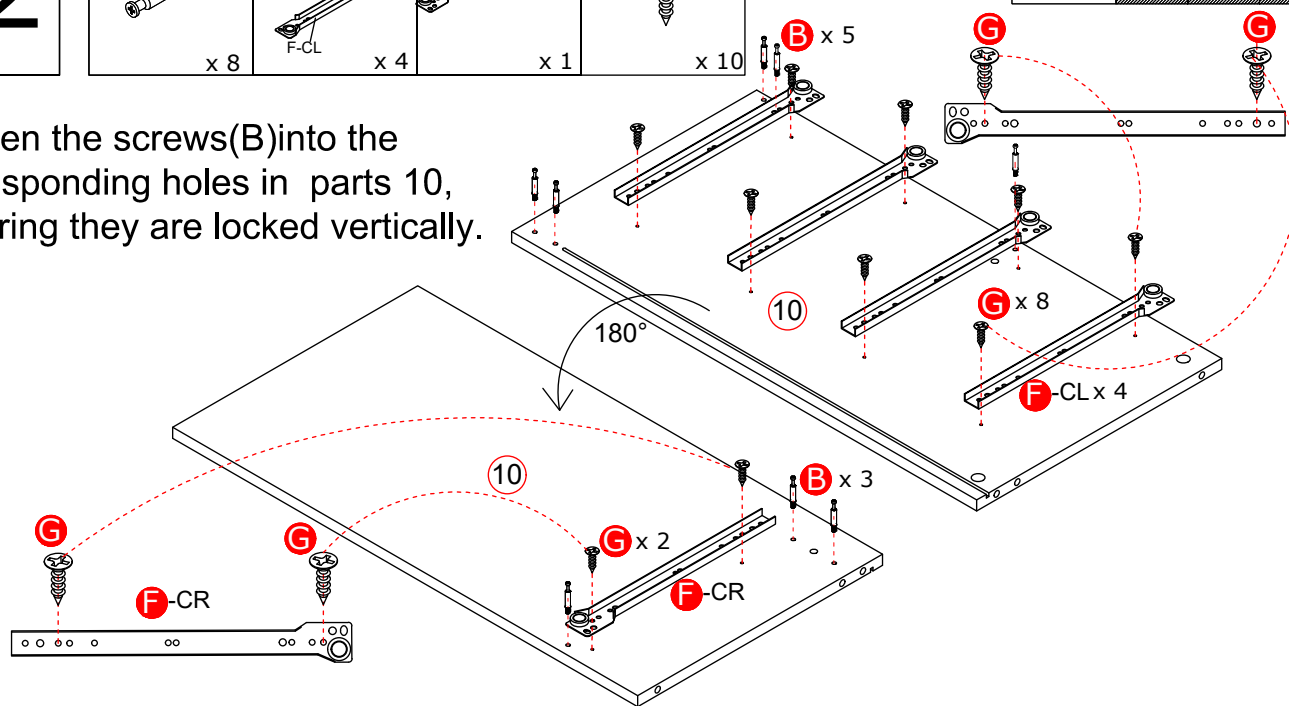




Referring to the illustration, install the drawer slide (F-CL) on part 10 and screw (G) into the corresponding holes of the slide (F-CL) according to the hole position example drawing; Then flip 180° install the drawer slide (F-CR) on part 10 and screw (G) into the corresponding holes of the slide (F-CR) according to the hole position example drawing. Check the corresponding part number holes in the illustration.

    13

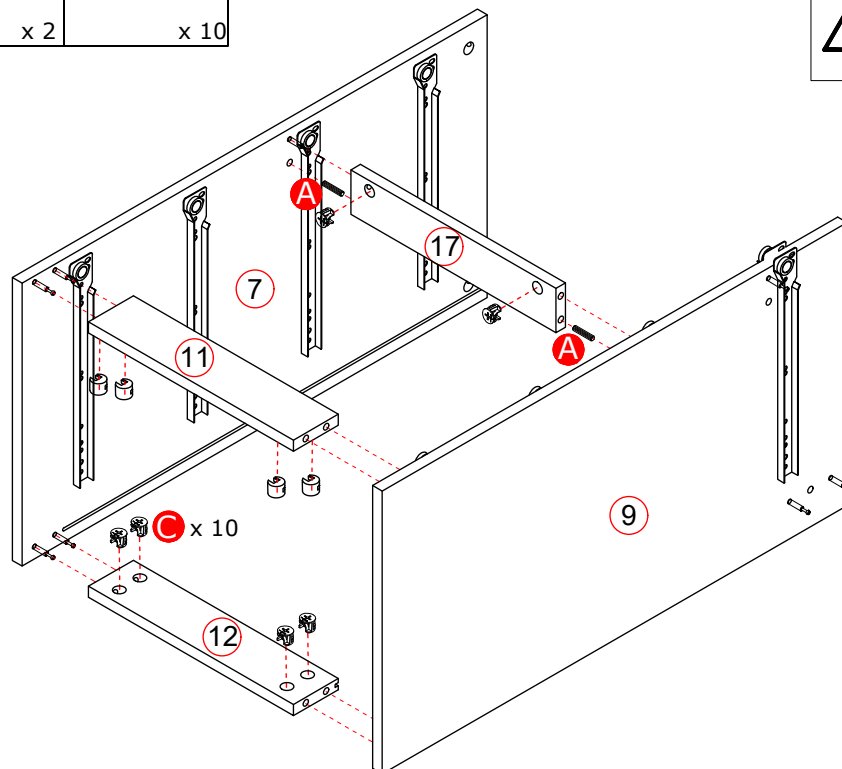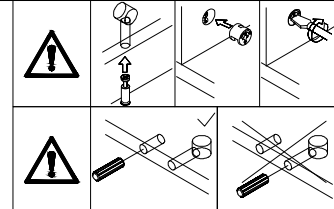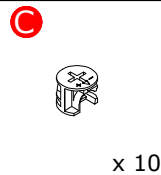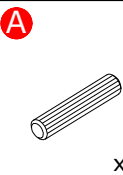




Insert the wooden dowel (A) into 2 side of plate 17. Connect plate 11 & 12 & 17 to plate 7 & 9, then insert the snap lock (C) into the hole on plate 11 & 12 and 17 and tighten by turning clockwise as shown.

   14

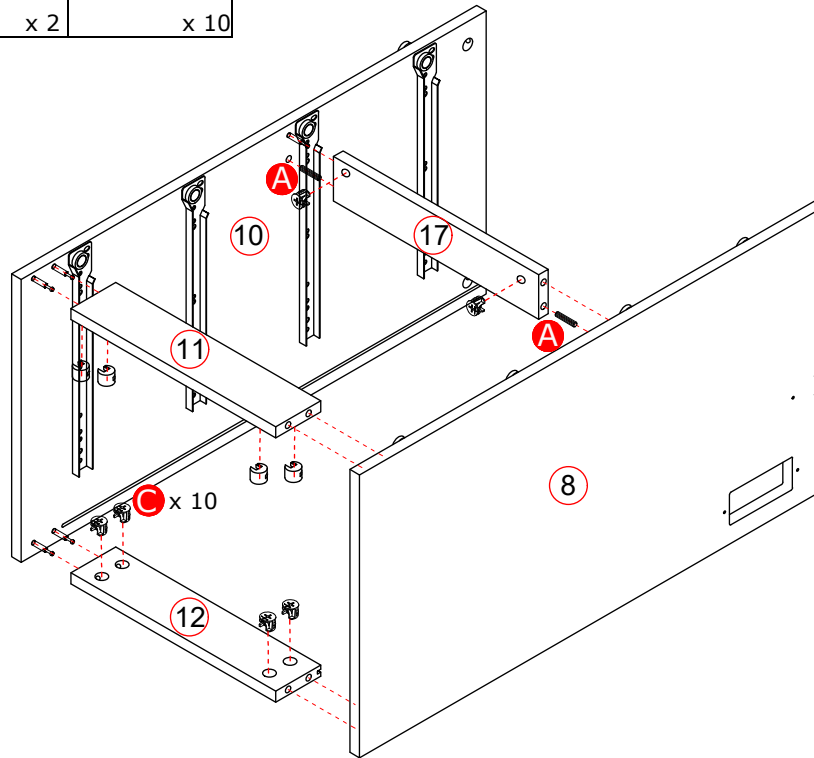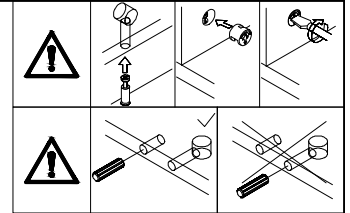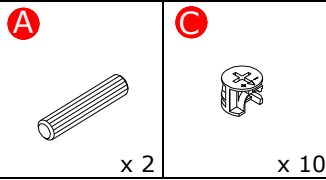

Insert the wooden dowel (A) into 2 side of plate 17. Connect plate 11 & 12 & 17 to plate 8 & 10, then insert the snap lock (C) into the hole on plate 11 & 12 and 17 and tighten by turning clockwise as shown.

   
15

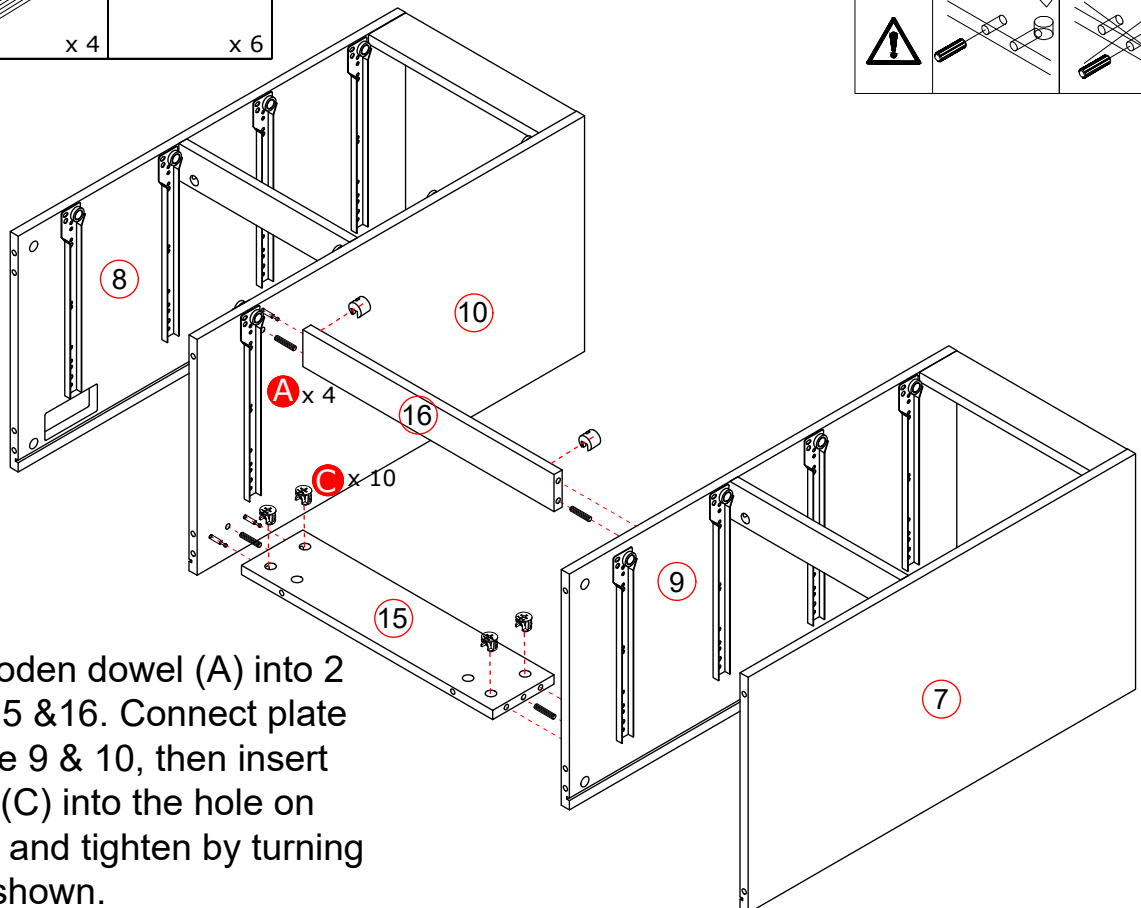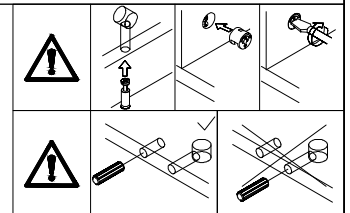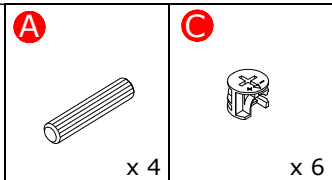


Insert the wooden dowel (A) into 2 side of plate 15 & 16. Connect plate 15 & 16 to plate 9 & 10, then insert the snap lock (C) into the hole on plate 15 & 16 and tighten by turning clockwise as shown.

16


 
As shown in the picture, Slide Back plate 13 & 14 along available grooves.

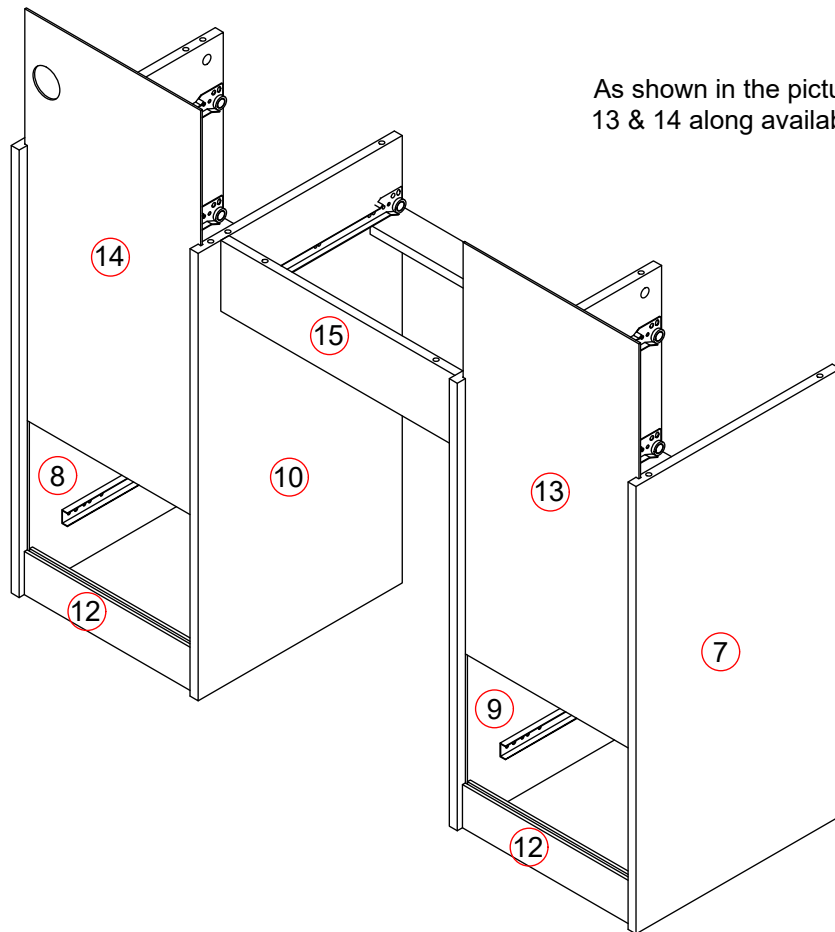


17

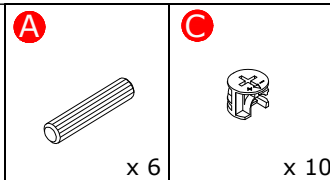 

 
 
Insert the wooden dowel (A) into one side of plate 7 & 8 & 9 & 10. Connect plate 1 to plate 7 & 8 & 9 & 10 and 15 then insert the snap lock (C) into the hole on plate 7 & 8 & 9 & 10 and 15 and tighten by turning clockwise as shown.

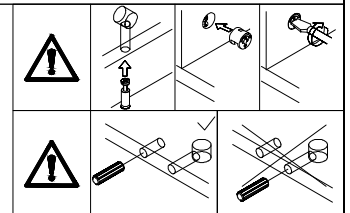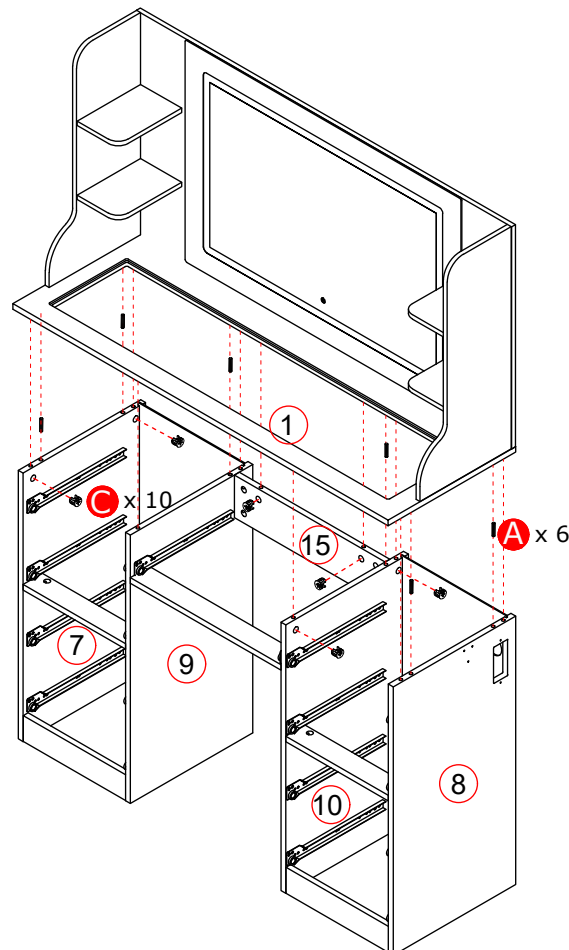


18

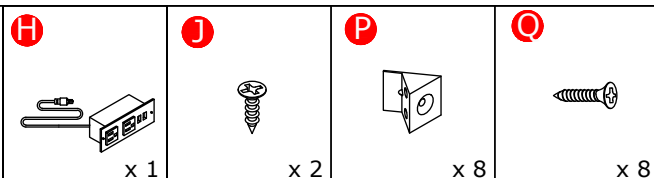 

 
 
As shown in the picture, fix the power socket (H) to part 8 with screws (J), and the power cord is threaded through the hole the backboard 13 & 14 to the outside of the cabinet.

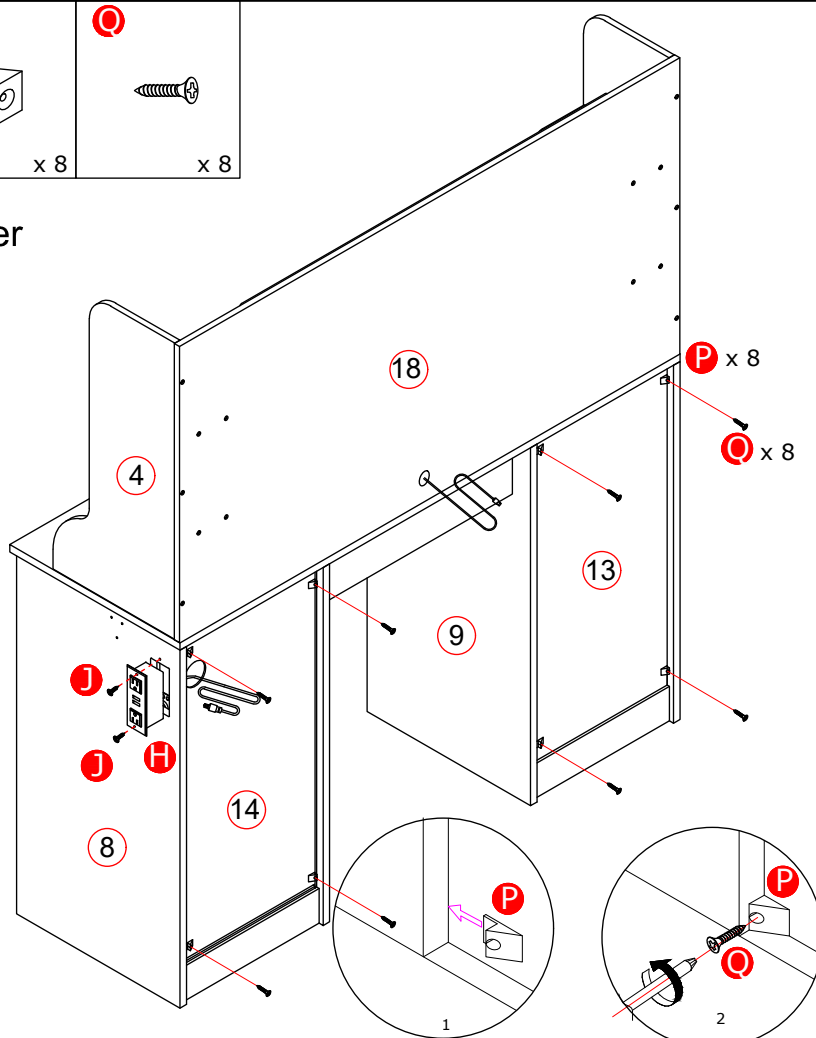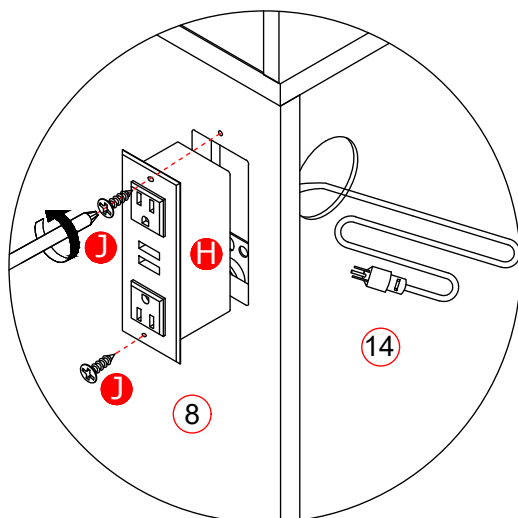

19

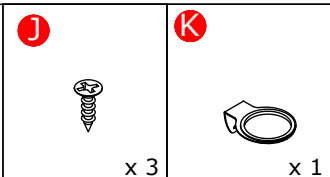 


  As shown in the figure, fix the hair dryer stand (K) to part 8 with screws (J).

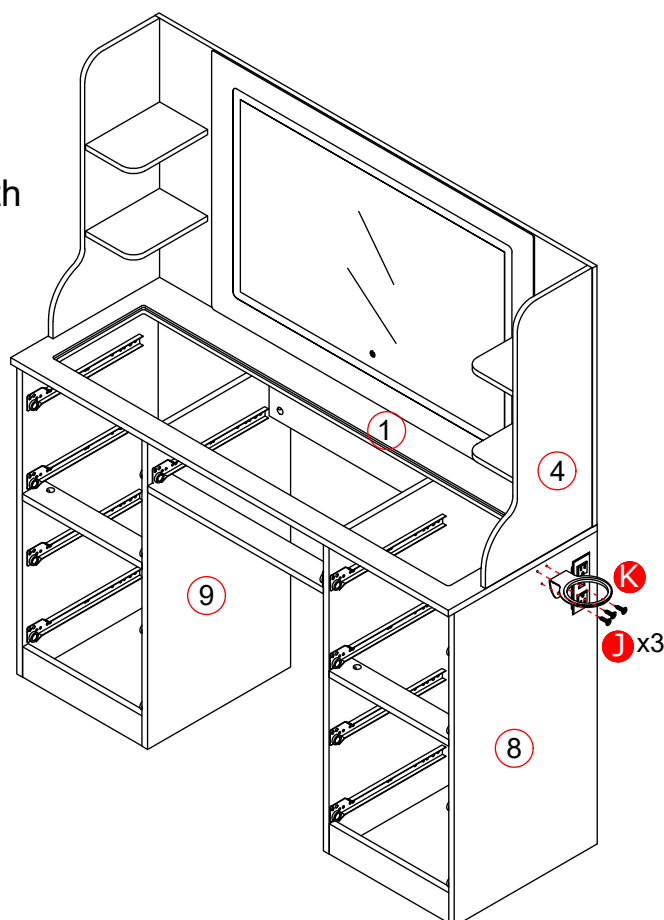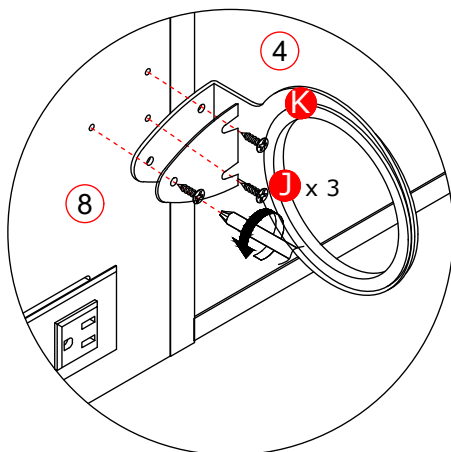



20

 B



x 36

  Tighten the screws(B)into the corresponding holes in parts 19 & 24 and 26, ensuring they are locked vertically.

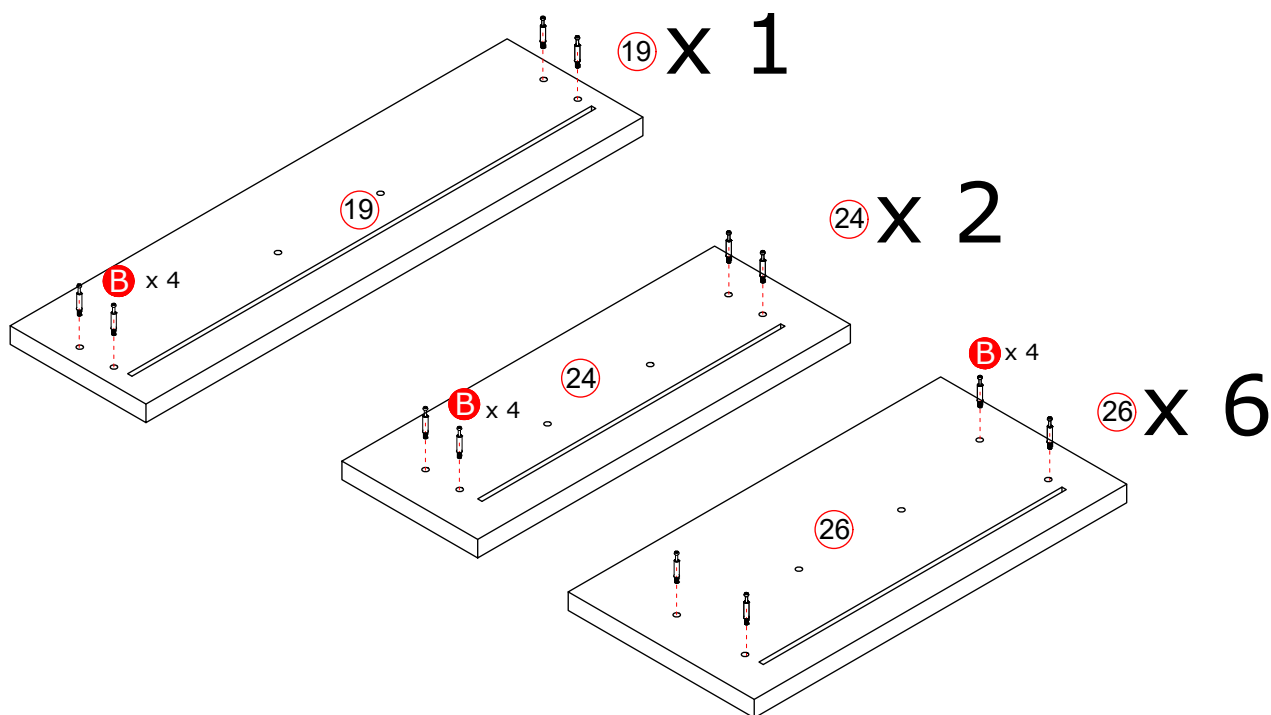


21

E




x 4

 
As shown in the picture, use screws (E) to connect parts 20 & 21 with part 22. Slide part 23 along available grooves.

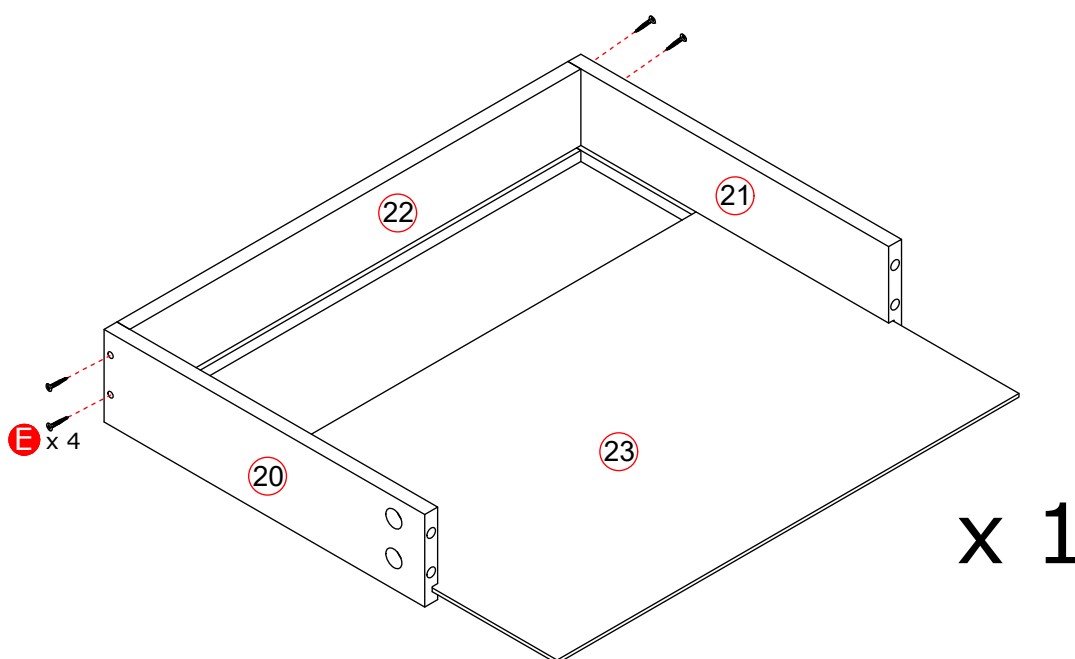

22

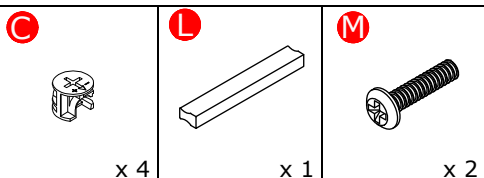 


 Connect part 19 to part 20 & 21, then insert the snap lock (C) into the hole on plate 20 & 21 and tighten by turning clockwise as shown. Attach the handle (L) to the part 19 with screws (M).

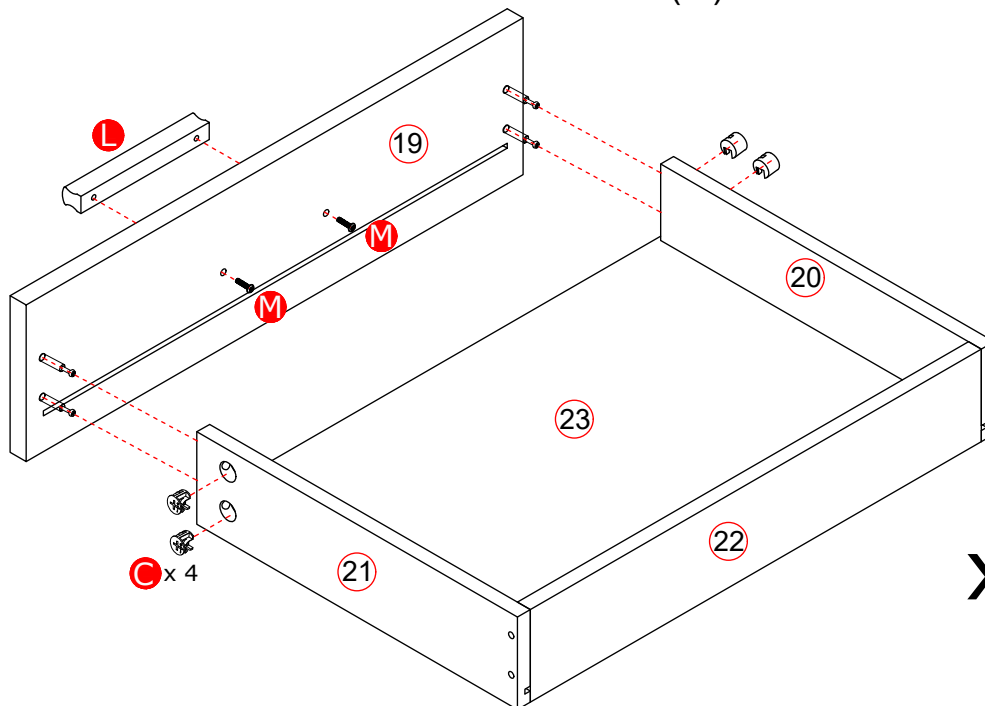


x 1

 23

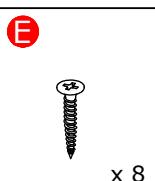

 As shown in the picture, use screws (E) to connect parts 20 & 21 with part 25. Slide part 30 along available grooves.

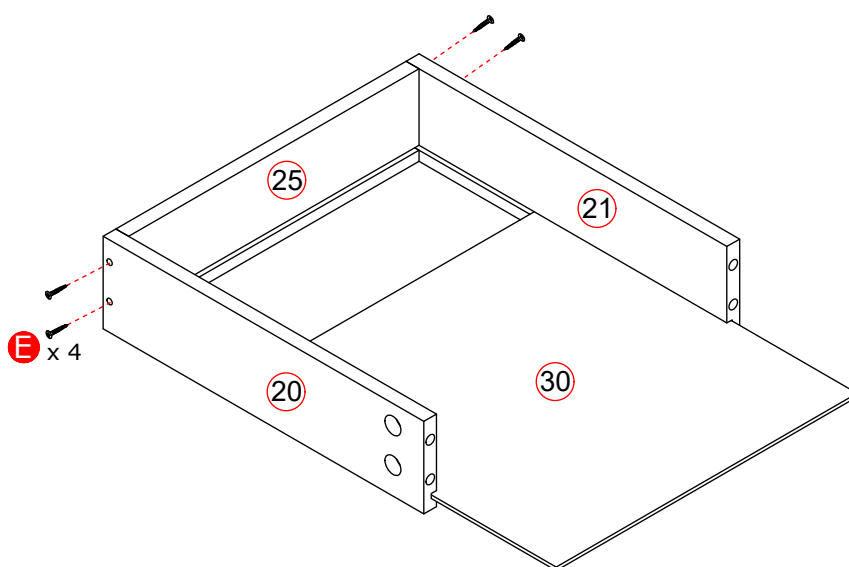

x 2

 
24

C



x 8

L




x 2

M



x 4

 Connect part 24 to part 20 & 21, then insert the snap lock (C) into the hole on plate 20 & 21 and tighten by turning clockwise as shown. Attach the handle (L) to the part 24 with screws (M).

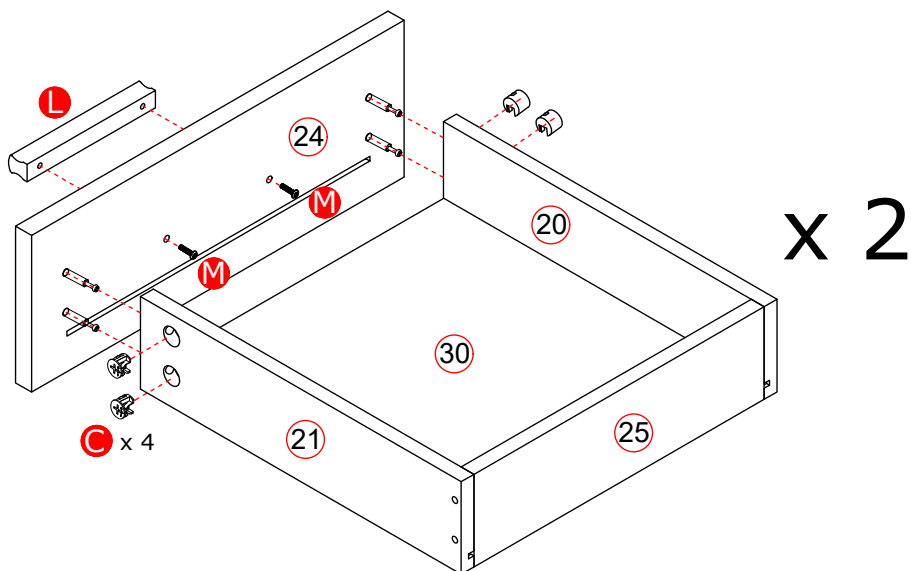


25

E



x 24

 As shown in the picture, use screws (E) to connect parts 27 & 28 with part 29. Slide part 30 along available grooves.

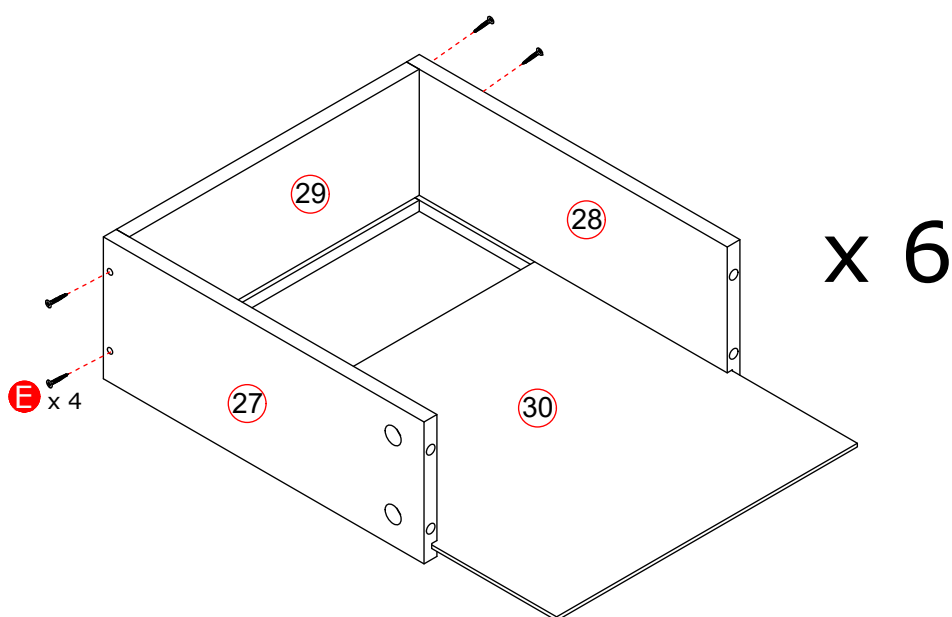


26

(C)



x 24

 (L)




x 6

(M)



x 12

 
Connect part 26 to part 27 & 28, then insert the snap lock (C) into the hole on plate 27 & 28 and tighten by turning clockwise as shown. Attach the handle (L) to the part 26 with screws (M).

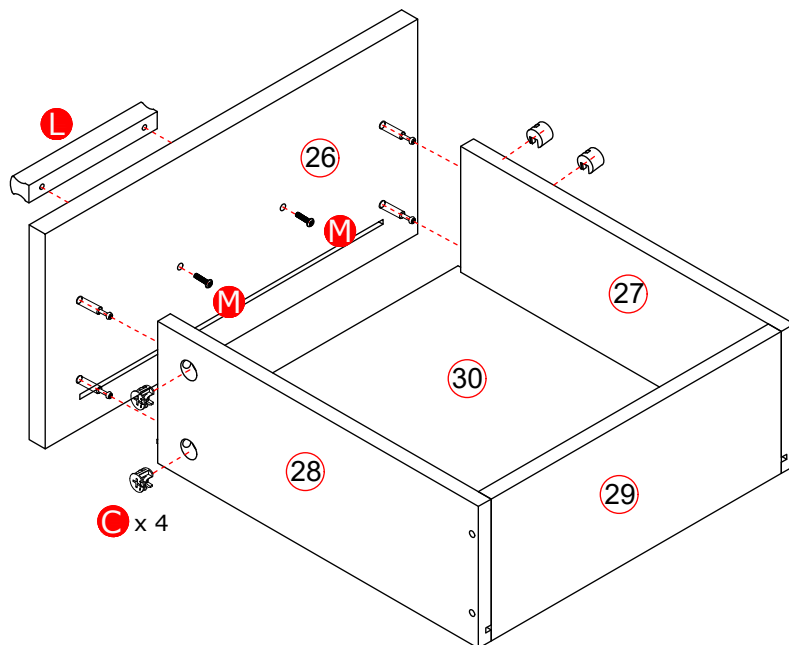

x 6

27

 (F)




F-DL x 9


(G)



x 36

  
Install the drawer slides (F-DL & F-DR) on the parts 20 & 21 and parts 27 & 28 at the bottom of the drawer with screws (G) as shown in the picture.

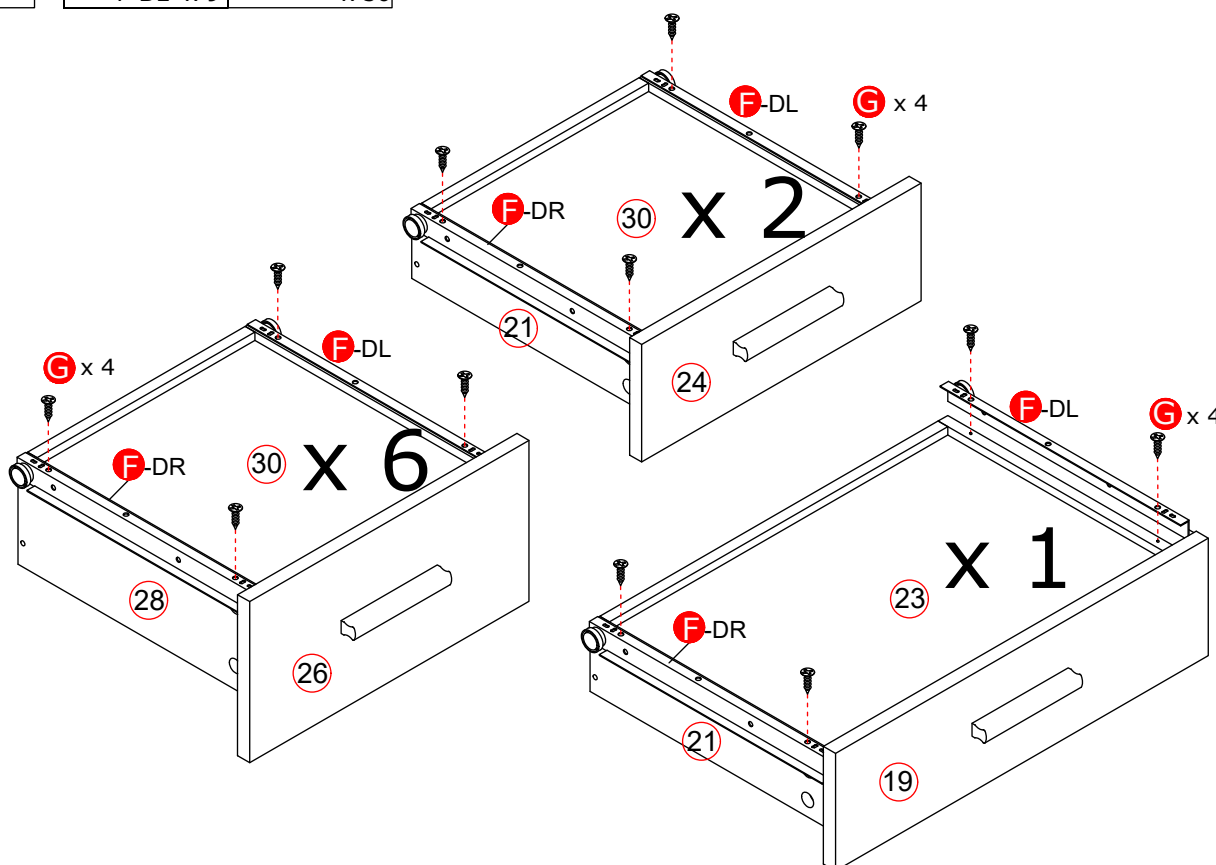

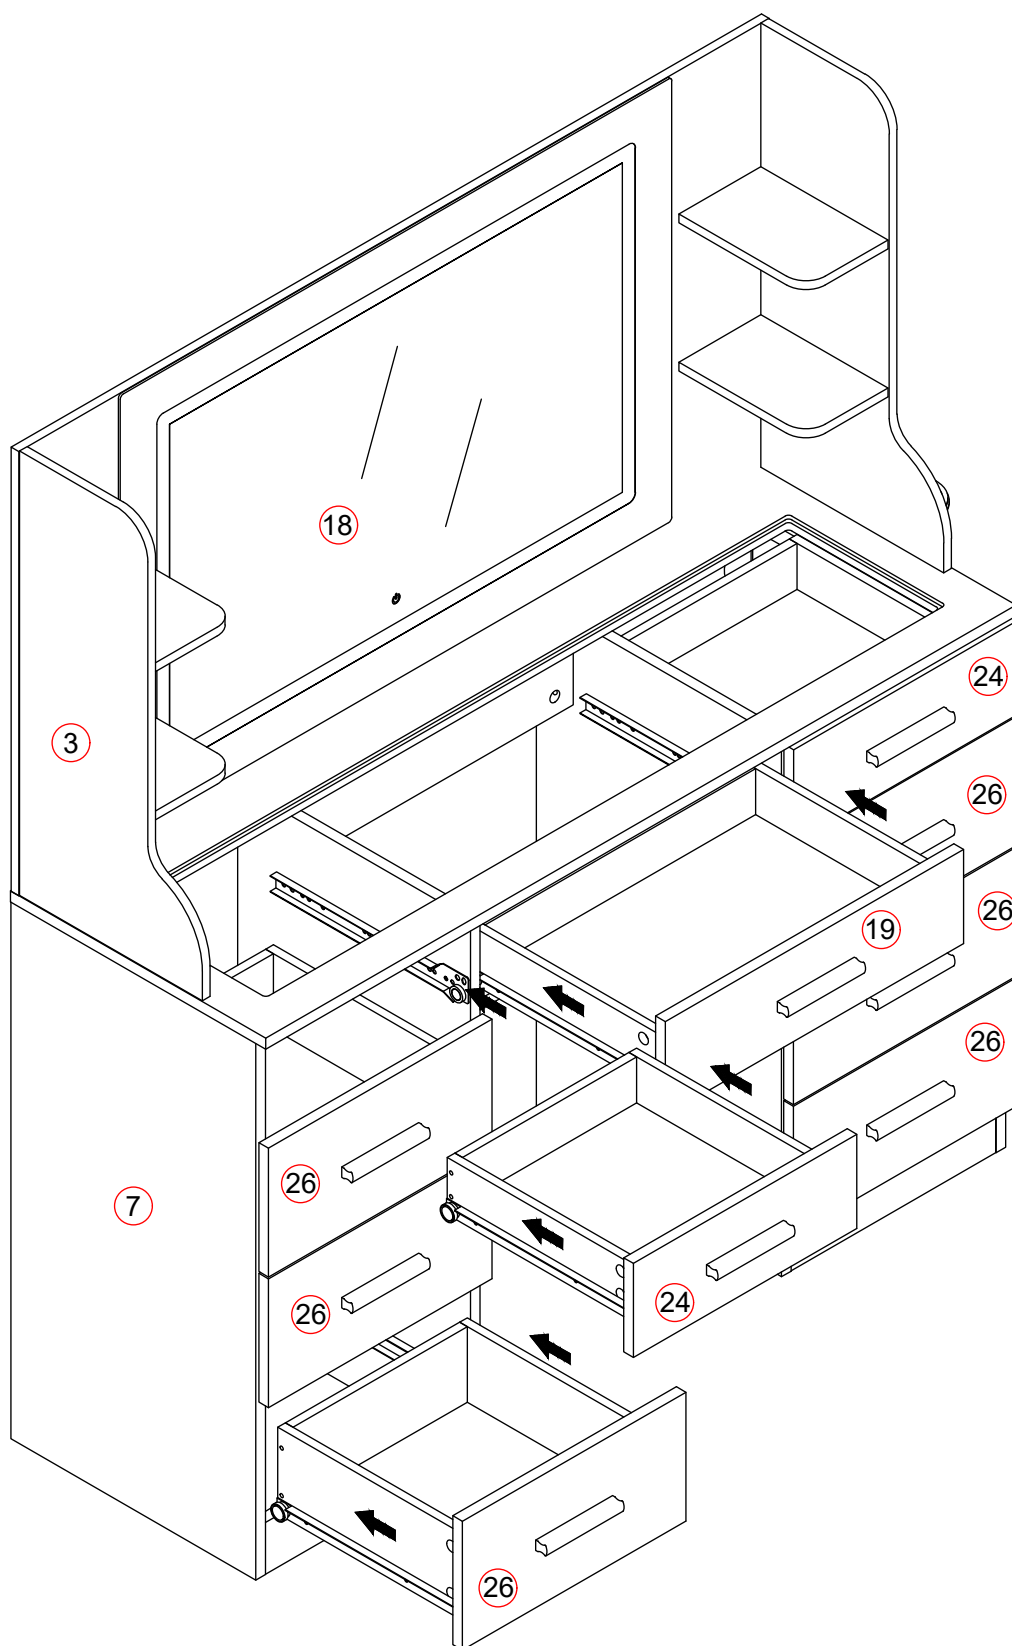





As shown in the figure, insert the slide rail (F-DL & F-DR) into the slide rail (F-CL & F-CR), and slide the Drawer into place along the direction

 29

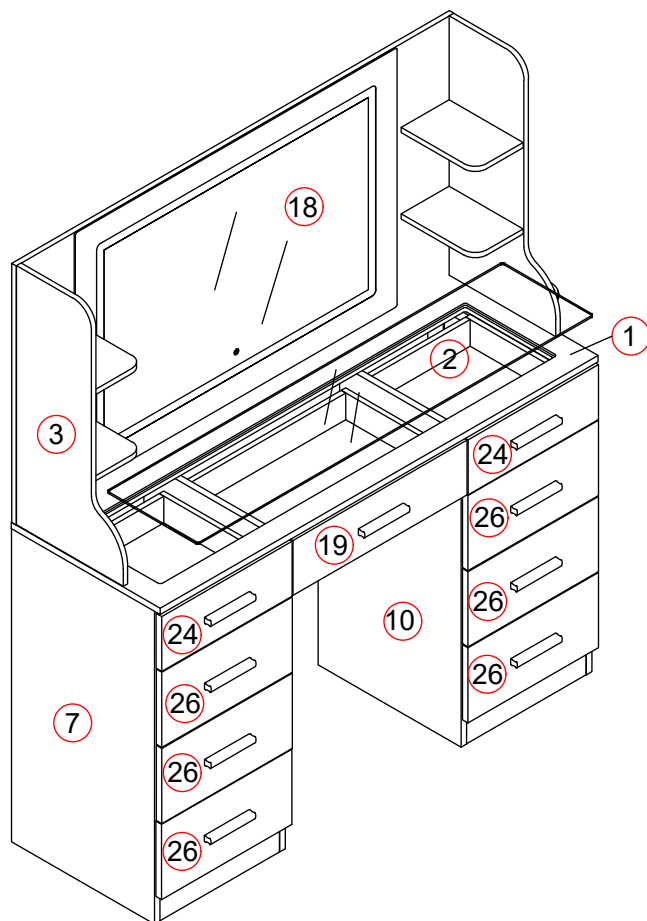

Place glass 2 into the groove of part 1

    30

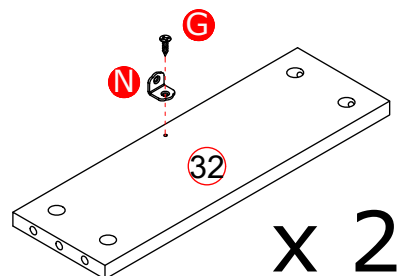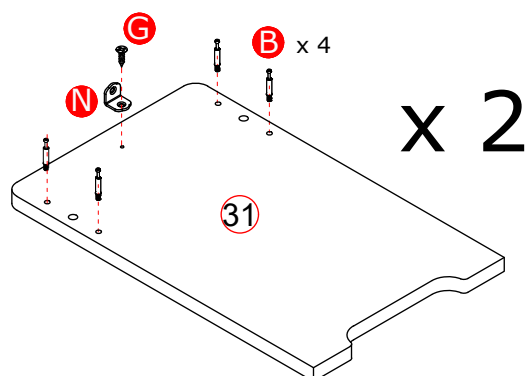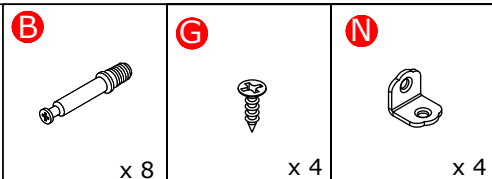


Tighten the screws(B)into the corresponding holes in parts 31, ensuring they are locked vertically.

As shown in the drawing, with the stool parts 31 and 32 with the angle iron (N) and screws (G).

31

 A






x 2

C




x 4

   Insert the wooden dowel (A) into one side of plate 31. Connect plate 31 to plate 32, then insert the snap lock (C) into the hole on plate 32 and tighten by turning clockwise as shown.

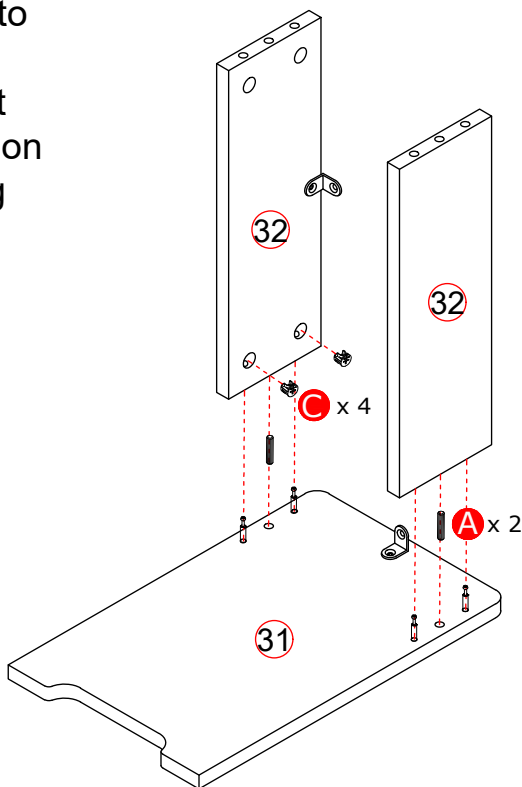

32

 A






x 2

C




x 4

   
Insert the wooden dowel (A) into one side of plate 31. Connect plate 31 to plate 32, then insert the snap lock (C) into the hole on plate 32 and tighten by turning clockwise as shown.

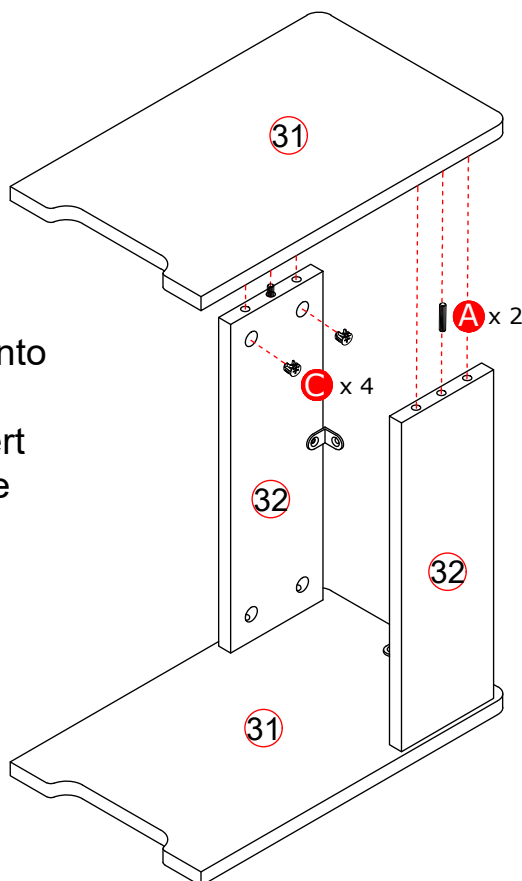

33

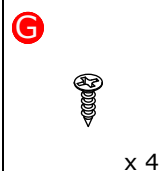 


 As shown in the drawing, connect the seat surface (33) with the stool parts 31 and 32 with the angle iron (N) and screws (G).

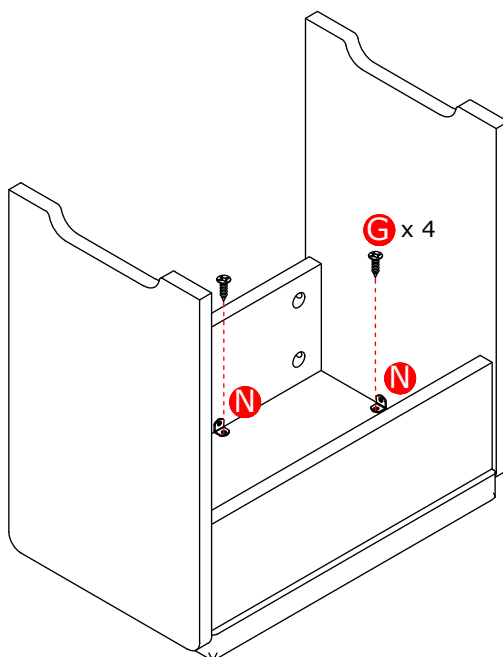

34

 Installation completed

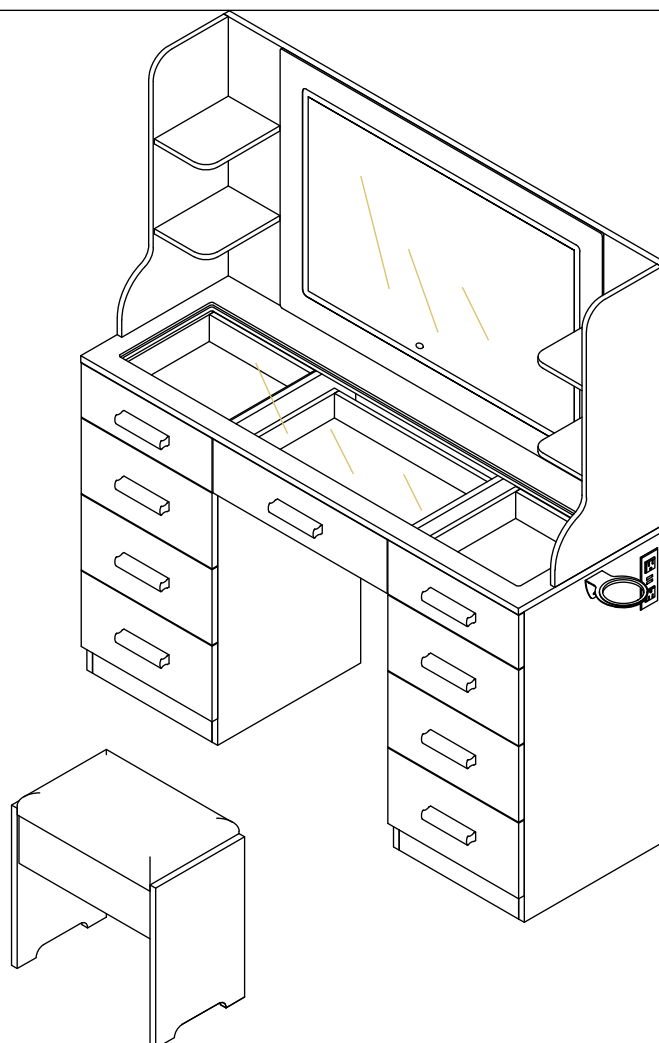

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that cause improper function. The warranty starts from the date of purchase and requires proof of purchase.
- The product must be used in accordance with the provided instructions.
- For other reasons, if the furniture needs to be returned, it must be cleaned, dried, and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Please note, the warranty does not cover damage during installation, but does cover damage incurred during transportation.

Scope of Responsibility

- We are not responsible for misuse, user damage, or loss of parts during the installation of the furniture. Additionally, any damage or scratches incurred after use are not covered by the warranty.

WARRANTY CLAIMS

- The warranty for products purchased in the U.S. covers the following areas:
- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

Changed your mind and need to return your item?

Please follow the instructions below:

- If you have purchased the item and simply changed your mind, please follow the retailer's return instructions.

DEFECTIVE ITEMS

- If your item is defective in any way, meaning it doesn't work but you cannot identify the cause, please first consult our FAQ section at, as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage, we suggest refusing the delivery. If the delivery has already been accepted and you later find shipping damage, please follow the specific instructions provided by the retailer.
- In all cases, please keep all packaging materials and paperwork related to the order.
- Please be aware that if you dispose of packaging materials or attempt to return the item without contacting the retailer, you may risk losing your chance to file a claim, and you may not receive credit for the return.