
 


Worktable


Installation & Assembly

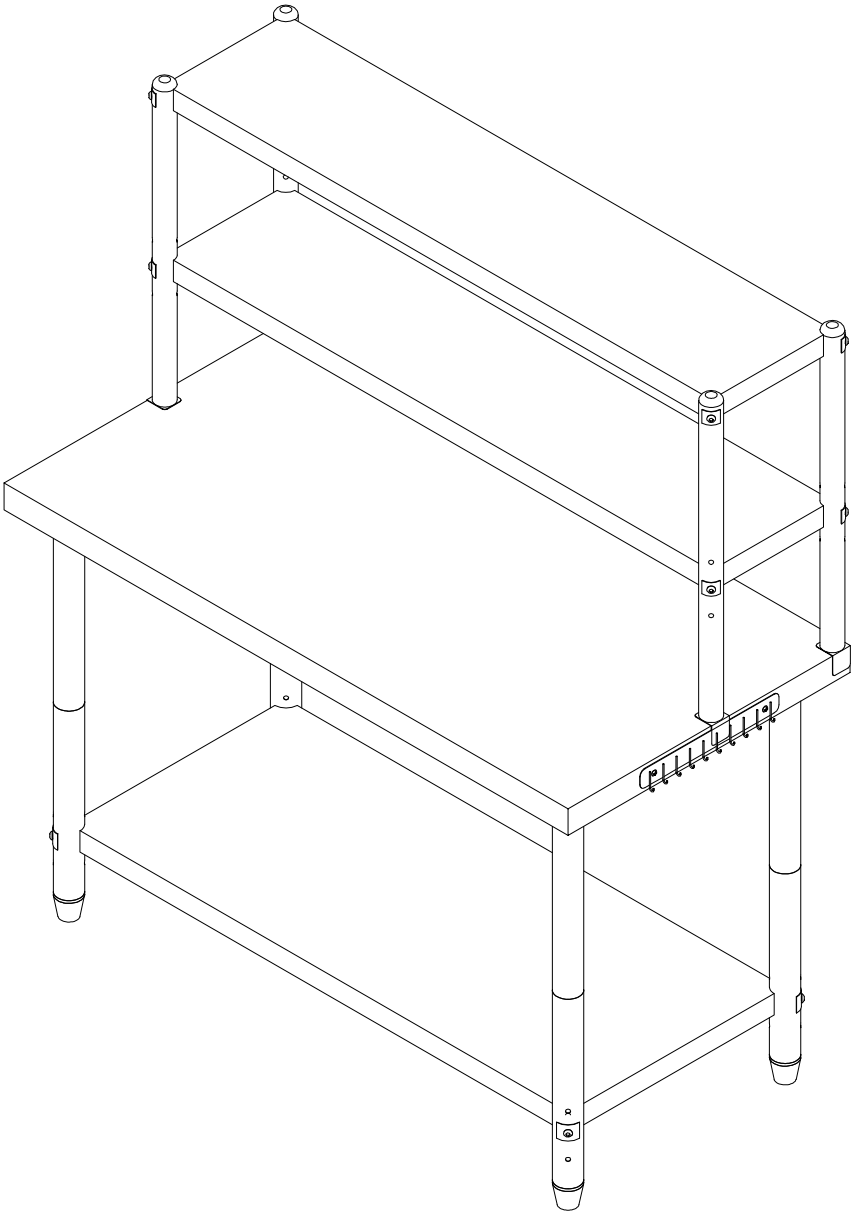




A		X1		G	 48arcs	X4		M		X4
B		X1		H		X13		N		X1
C		X4		I		X13		O		X4
D		X4		J		X13		P		X4
E		X4		K	 38arcs	X8		R		X3
F		X25		L		X1		Q		X2

①	A		C		E		H		F	
	X1		X4		X4		X12		X12	

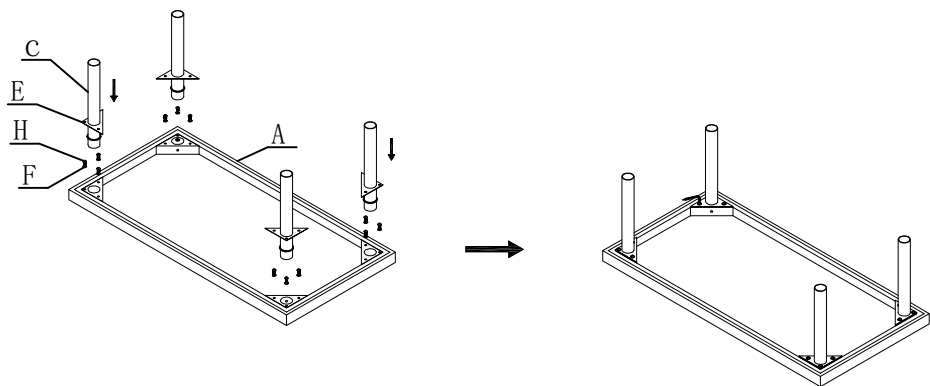



2

D		B		J		G		F		I	
	X4		X1		X4		X4		X4		X4

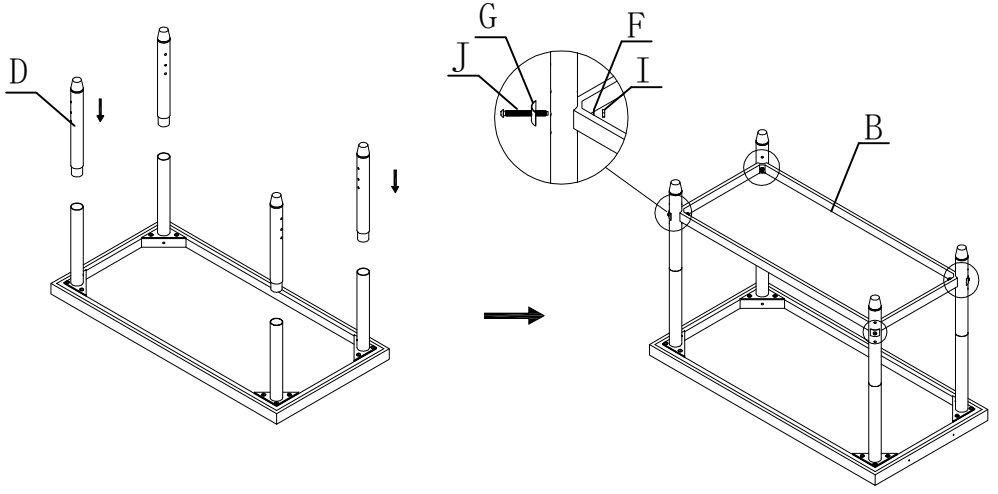

③

Q		M		J		K		F		I		P		O	
	X2		X1		X8		X4		X8		X8		X4		X4

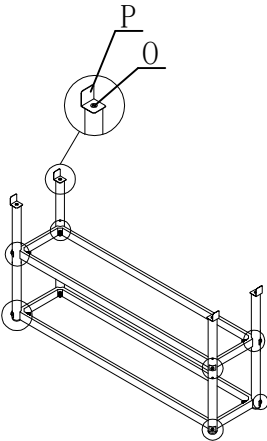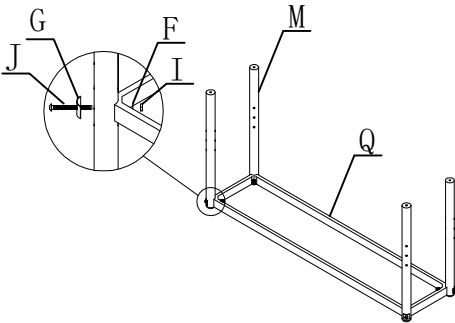

4	N		R	
		X1		X2

