 


ASSEMBLY INSTRUCTIONS

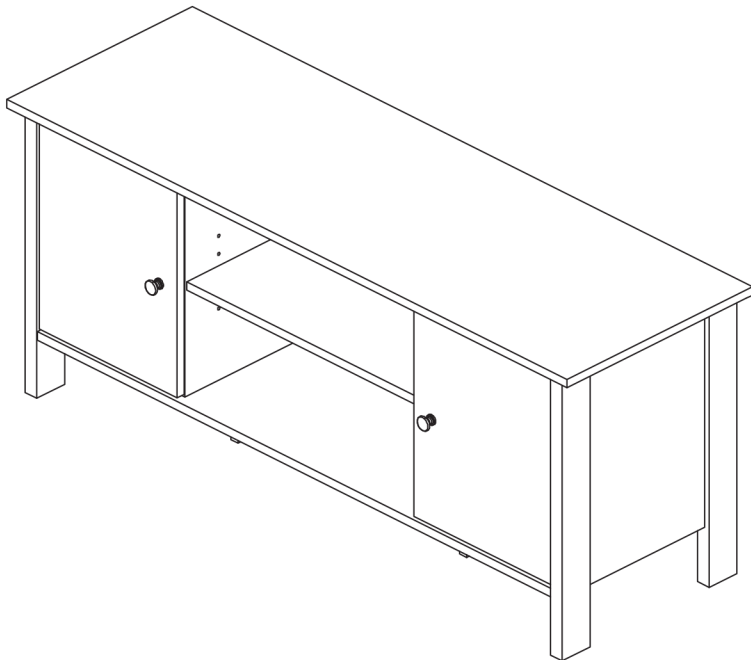

TOOLS REQUIRED



Hammer

(Not Included)



Philips Screwdriver

(Not Included)



**2 - Persons
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

 
PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

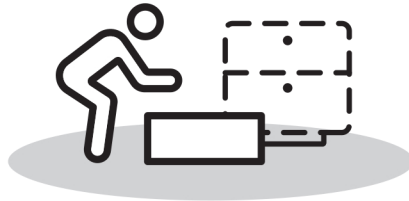

Suitable Location

Assembling near the area of the intended location is highly recommended.



 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

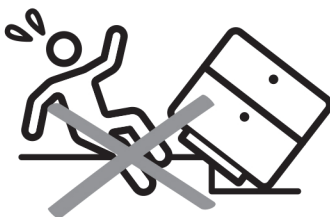

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

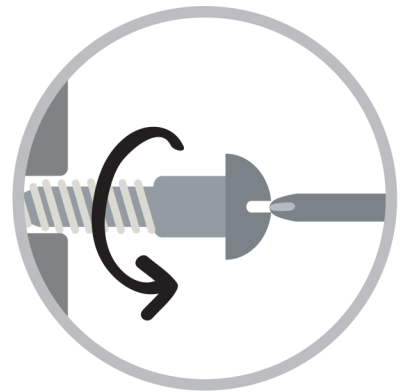


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

 Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

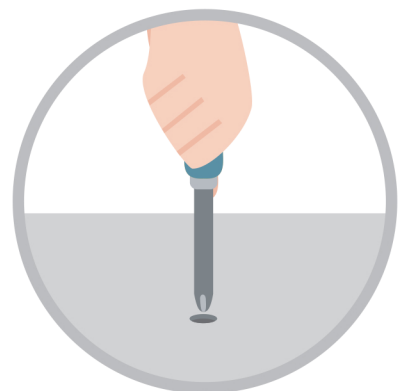


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :

 
Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam bolt



 cam lock

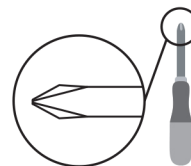


screwdriver

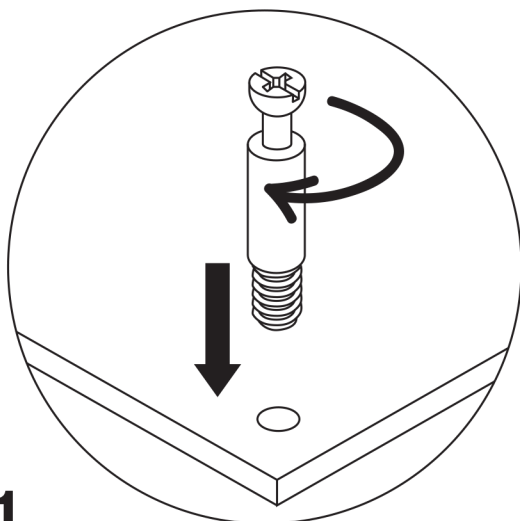 


1

 Screw the cam bolt into panel.

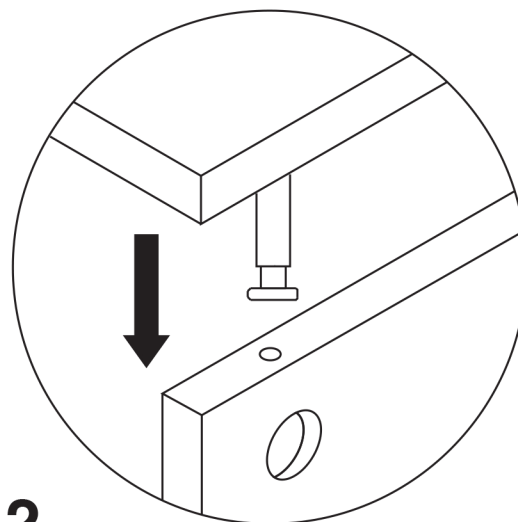


2

 Insert the cam bolt into the bolt hole of joint panel.

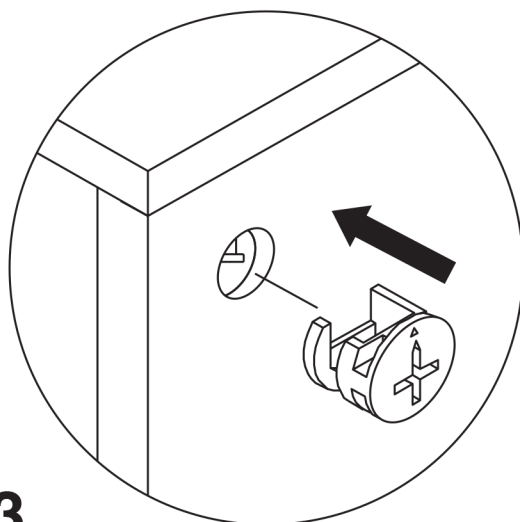

3

 Align the cam lock with its side opening (or arrow) pointing to cam bolt.

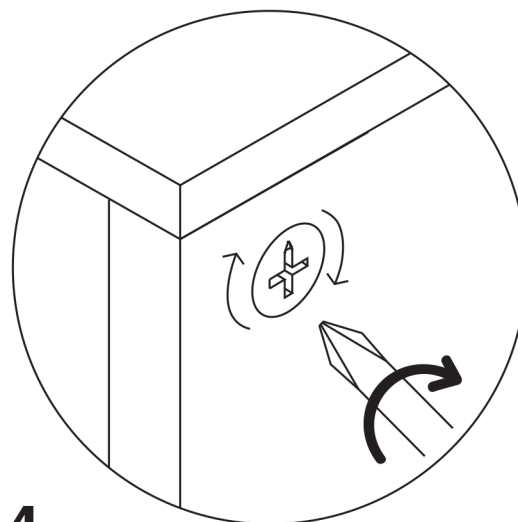


4

Turn the cam lock clockwise gently until it will not turn any more.

TV Stand



 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

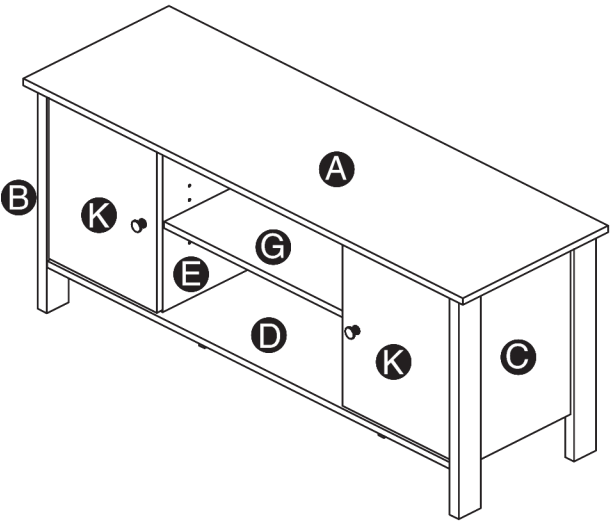


PARTS


A1PC



 B1PC




C1PC

 


D1PC



 E1PC



F1PC

 

G1PC



 
H2PCS




I2PCS




J1PC



K2PCS

 


L1PC

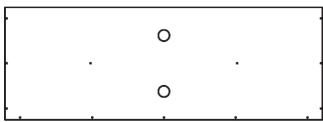 

HARDWARE

 ① 18PCS



② 18PCS
0.47"



③ 19PCS
0.78"



④ 4PCS
1.57"



⑤ 24PCS
0.59"



⑥ 13PCS
0.47"



⑦ 4PCS



⑧ 12PCS



ACCESSORIES

A1 2PCS



A2 2PCS



A3 1PC



A4 8PCS



GET READY

Please group boards as below.

 
I 2PCS




J 1PC




E 1PC




F 1PC

 


B 1PC

 


D 1PC

 

C 1PC

 

L 1PC

 

A 1PC



Body

 
G 1PC



H 2PCS



K 2PCS



Doors
/Shelf

 
 
ASSEMBLY INSTRUCTIONS

1

Hardware ① x16PCS

Hardware ③ x8PCS

Accessory A3 x 1PC

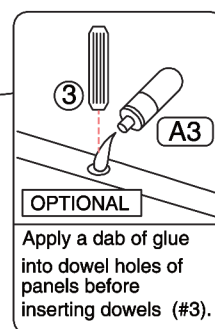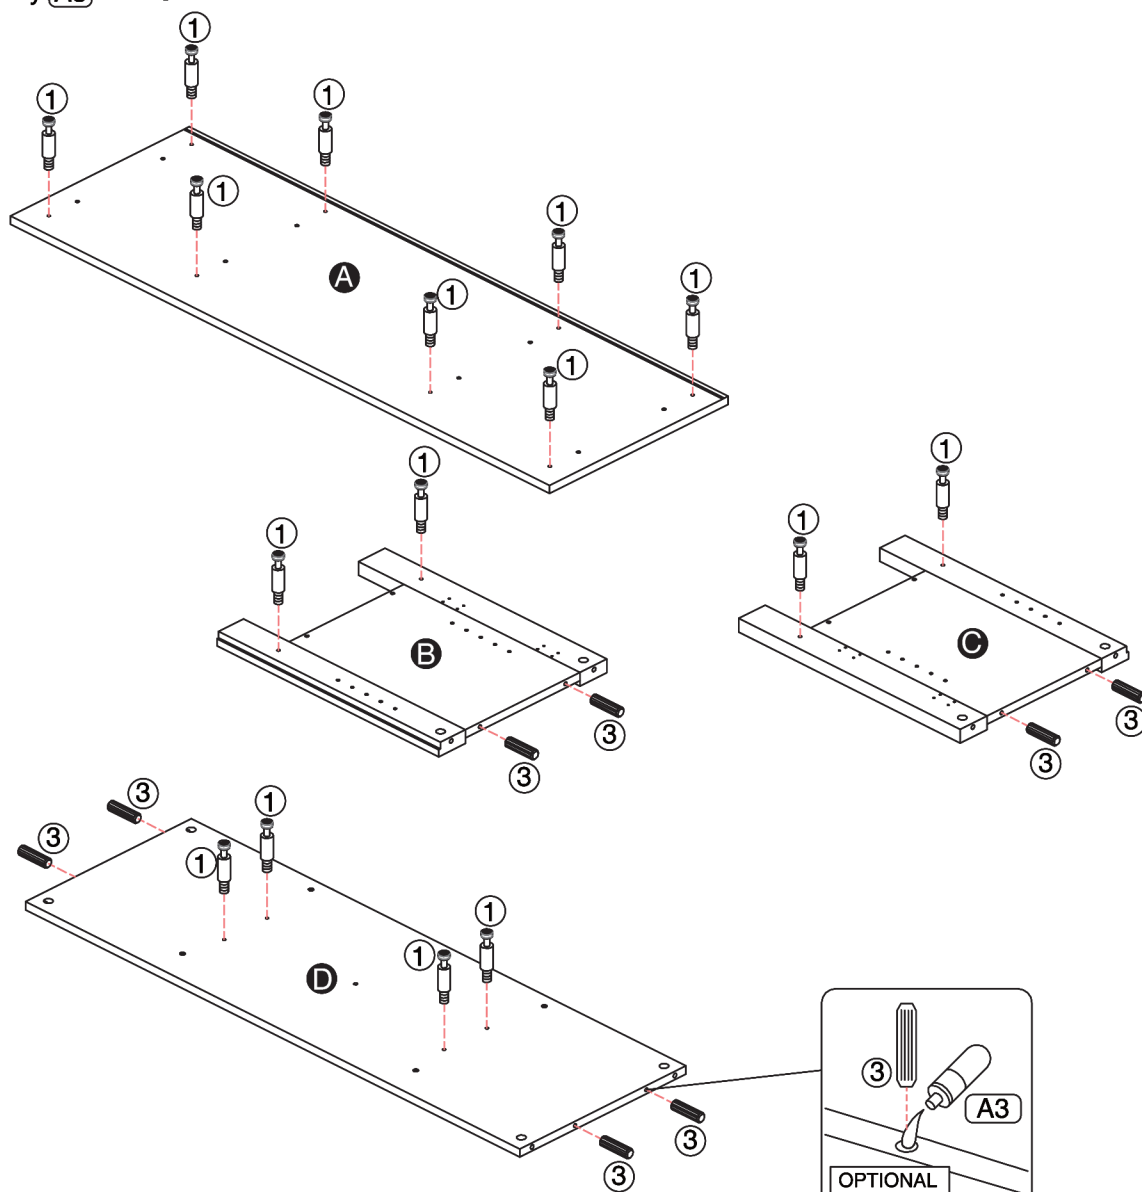

ASSEMBLY INSTRUCTIONS

2

 
Hardware ① x 2PCS

Hardware ③ x 11PCS

Hardware ⑤ x 8PCS

Hardware ⑦ x 4PCS

Accessory A3 x 1PC

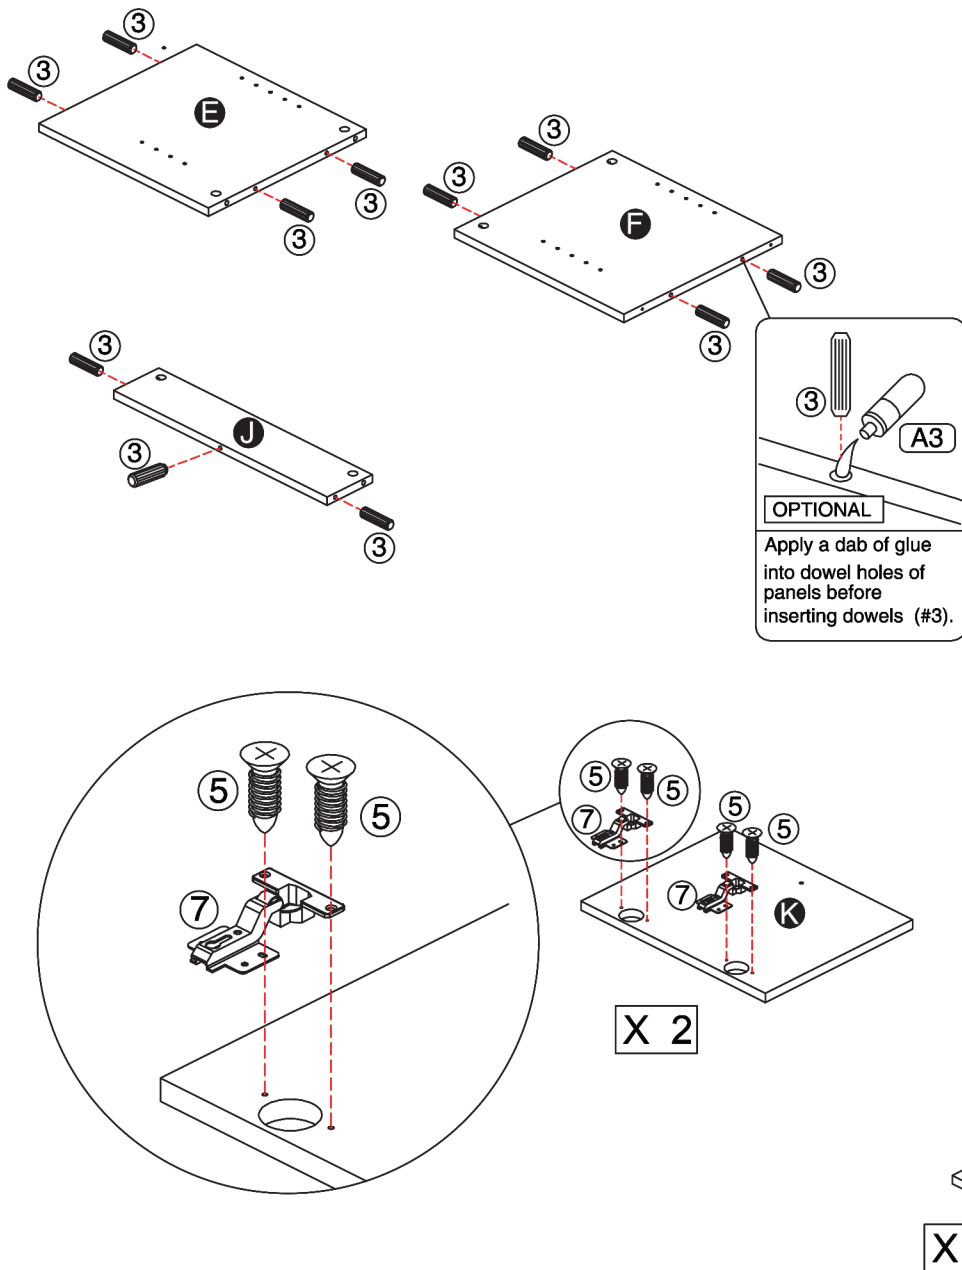




ASSEMBLY INSTRUCTIONS

3

Part ① x2PCS

Part ② x1PC

   Hardware ② x 2PCS

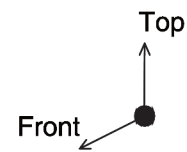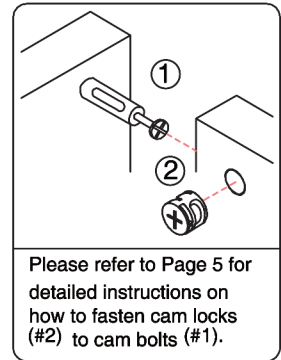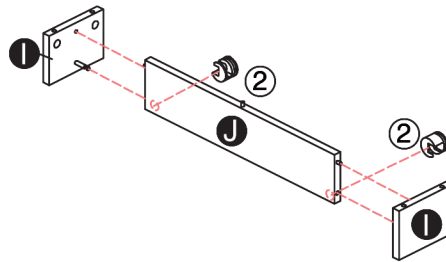




4

Part ④ x1PC

Part ⑤ x1PC

Part ⑥ x1PC

   Hardware ④ x 4PCS

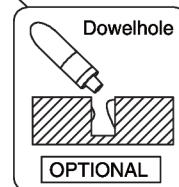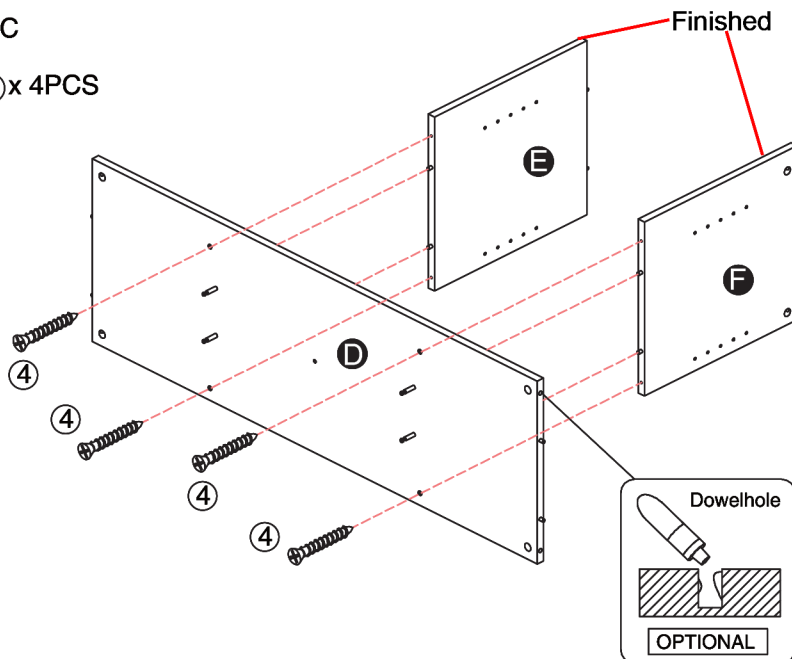


ASSEMBLY INSTRUCTIONS

5

Part **B** x1PC

 
Hardware **②** x 2PCS

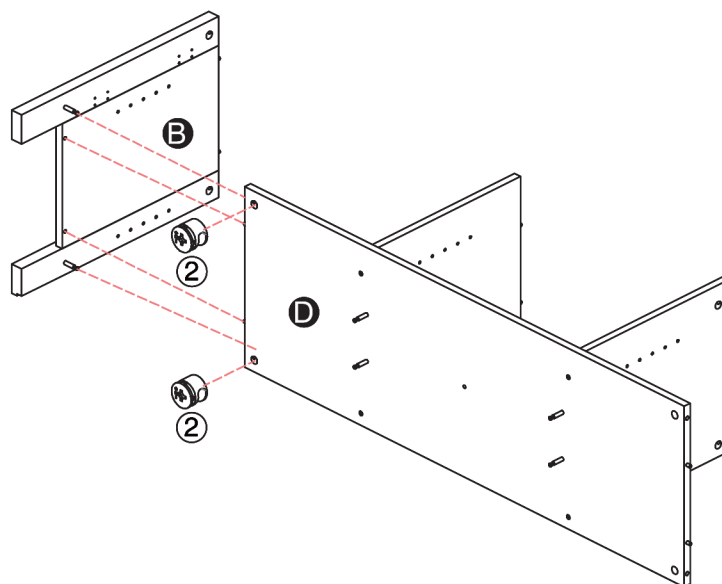

6

Part **C** x1PC

 Hardware **②** x 2PCS

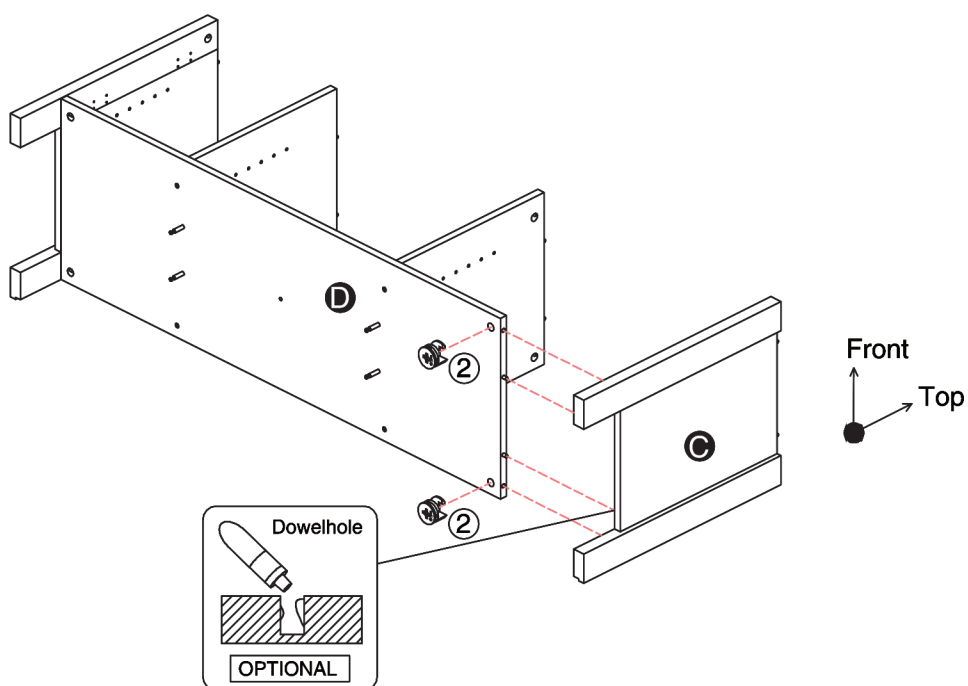


ASSEMBLY INSTRUCTIONS

7

Part **L** x1PC

 Hardware **⑥**x 13PCS

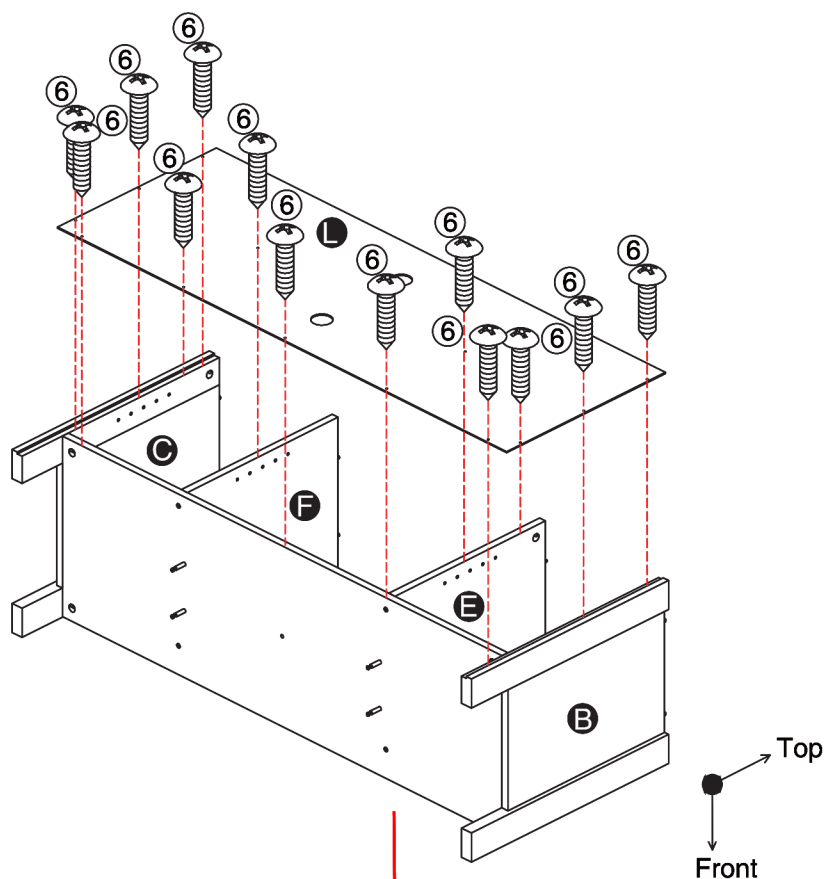


8

Part **A** x1PC

Hardware **②**x 8PCS


 
Accessory **A4**x 8PCS

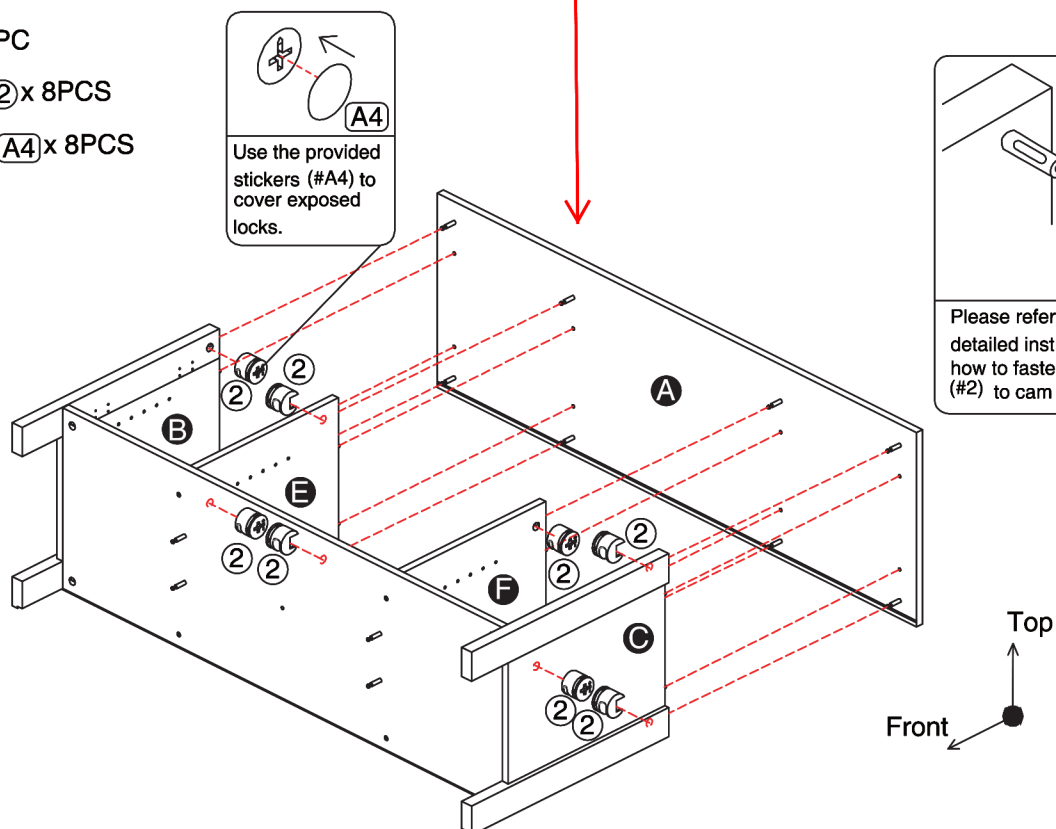

ASSEMBLY INSTRUCTIONS

9

  Hardware ② x 4PCS

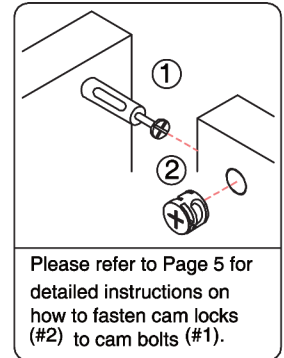
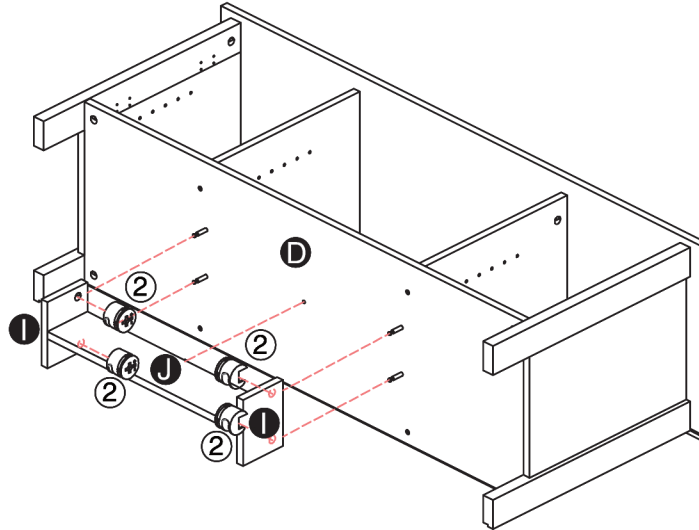


10

Part ⑥ x 1PC

Part ⑦ x 2PCS

  Hardware ⑧ x 12PCS

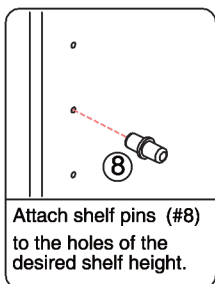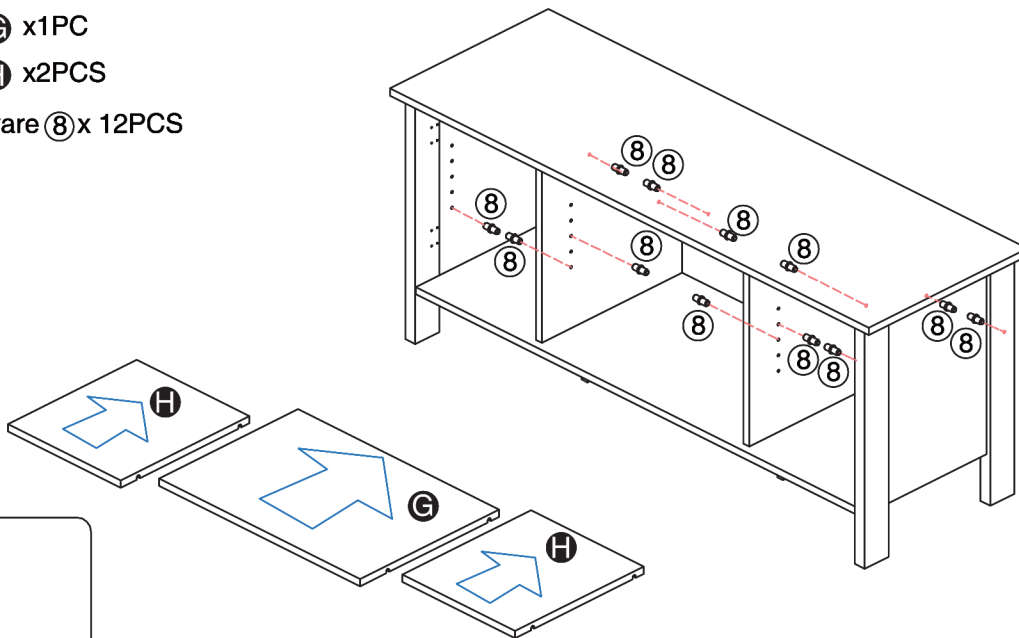

ASSEMBLY INSTRUCTIONS

 
 
11

Part **K** x2PCS

Hardware **5** x 16PCS

Accessory **A1** x 2PCS

Accessory **A2** x 2PCS

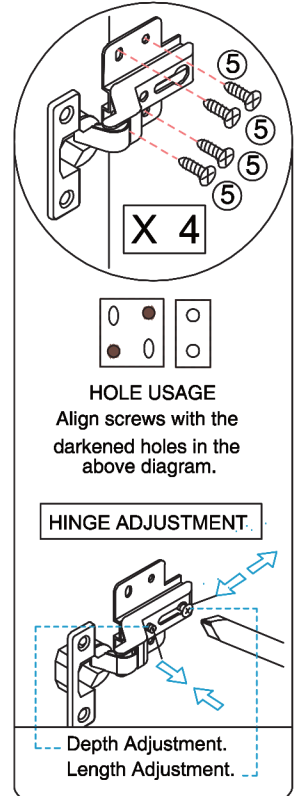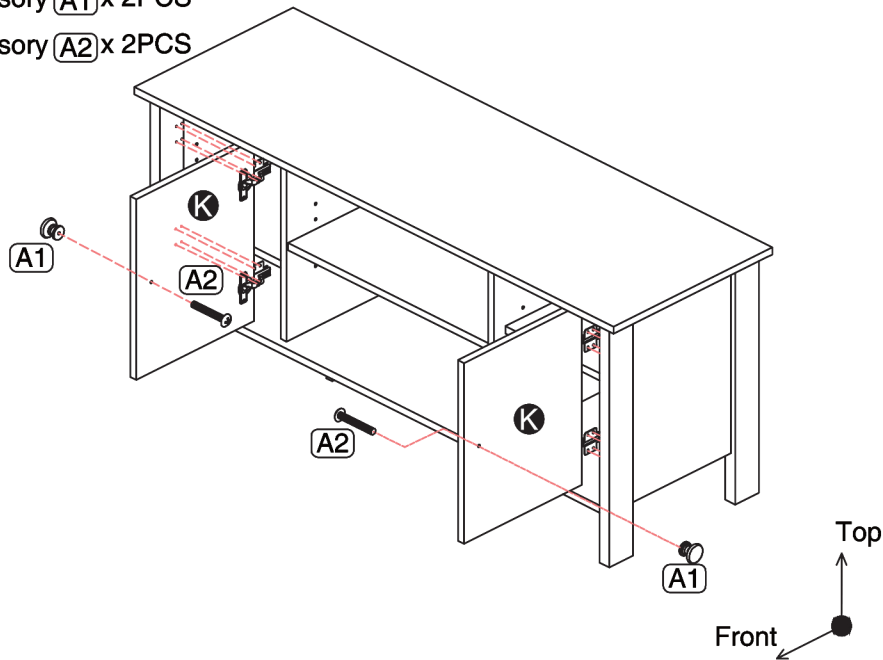

12

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

