






TV Stand 42.52

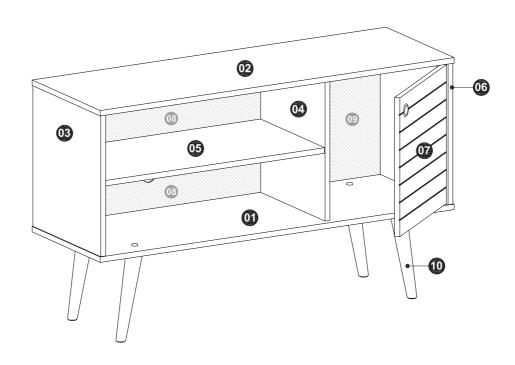

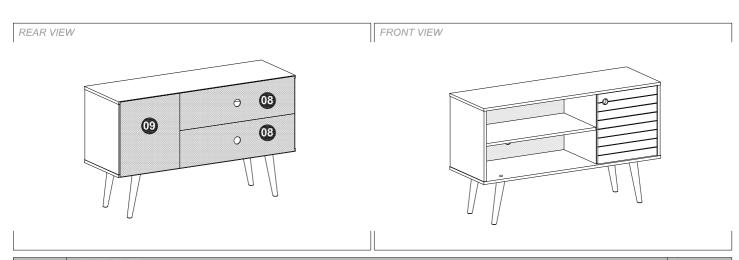


n.° ID	Parts Identification (Description)	Quantity
01	Base	1
02	Top Panel	1
03	Left Side Panel	1
04	Partition	1
05	Shelf	1
06	Right Side Panel	1
07	Door	1
80	Left Back Panel	2
09	Right Back Panel	1
10	Wood Feet	4


TOOLS NEEDED

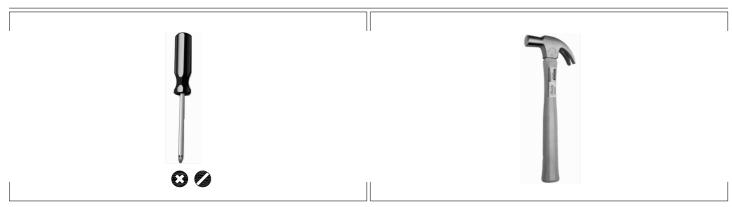

INCLUDED IN THE PACKAGE

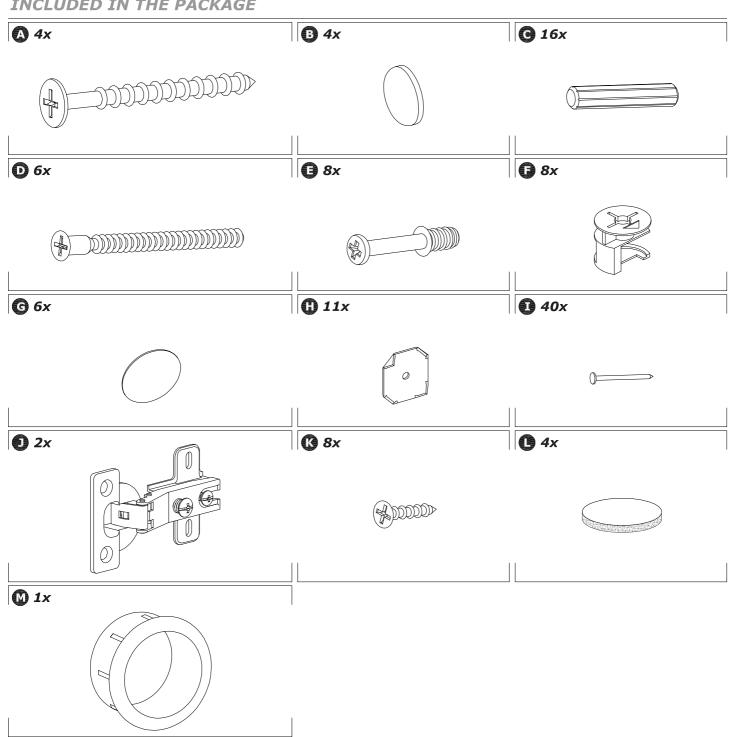


STEP 1

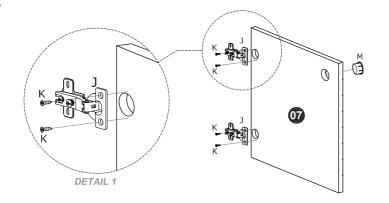

Preparing the door:


- Fix the hinges (J) in the Door (07) with bolts (K).
- Insert the plastic handle ring (M) in the Door (07).

STEP 2

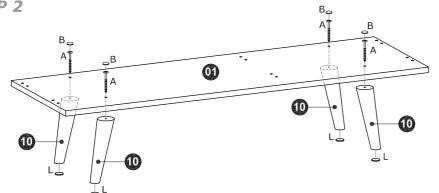


- Fix the feet (10) under the Base (01) with bolts (A).
- Apply the protective felt covers (L) on the bottom of the feet (10).
- Apply the plastic covers (B) on top of the bolts (A).

STEP 3

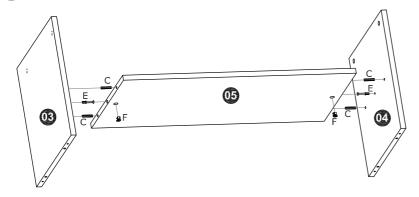


• Connect the Shelf (05) into the Left Side Panel (03) and Partition (04) using dowels (C) and the Minifix hardware (E + F).

STEP 4

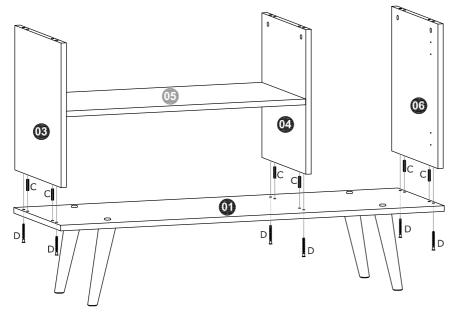


• Connect Side Panels (03) and (06) and Partition (04) into the Base (01) with dowels (C) and bolts (D).

STEP 5

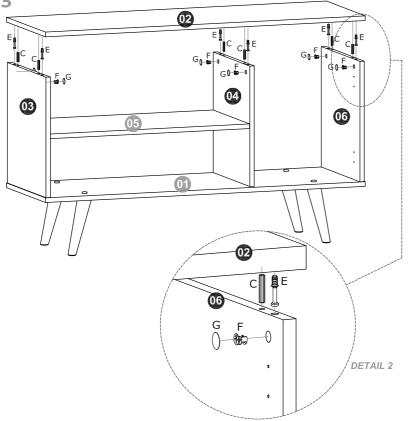


- Connect the Top Panel (02) onto Side Panels and Partitions (03), (04) and (06) using dowels (C) and the Minifix hardware (E + F).
- Apply adhesive covers (G) on the minifix hardware (F).

STEP 6

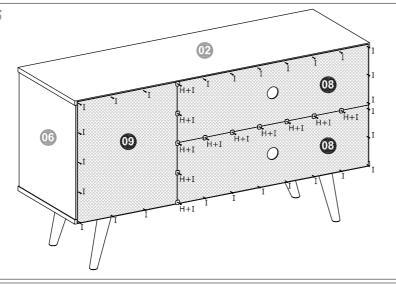

• Connect Back Panels (08) and (09) with nails (I). At the joining surfaces, use metallic plates (H) and nails (I).

STEP 7

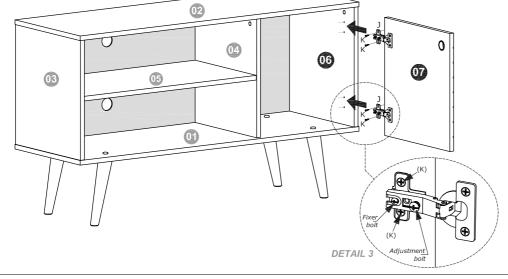

Installing the Door (07):

• Fix the hinge connectors (J) of the Door (07) on the Right Side Panel (06) with bolts 3.5 x 14mm (K), taking the markings on the panel (06) as a reference for correct positioning.

The hinge connector includes two bolts, shown in DETAIL 3. Use the fixer bolt and the adjustment bolt to tighten, adjust and align the door.