



READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY & INSTRUCTION MANUAL



1. Do not modify the stroller.
2. Always check all parts of the stroller are secure, tight and properly connected.
3. Do not lift the stroller up when the pet is inside.
4. Check the air pressure before every trip.
5. Do not pass anything over the handlebar, as they may drop and harm your pet inside.
6. The brakes must be used when the stroller is kept stationary.
7. Never use the stroller on uneven ground.
8. Never park the stroller near dangerous and busy roads.
9. Do not store or use this stroller in areas exposed to high or low temperatures or humidity for prolonged periods.

**PART
LIST**

① x 1



② x 2



③ x 2



④ x 1



Slide back wheel on axle as shown in figure b. push in axle until it clicks. Pull on wheel to make sure the wheel is engaged. Repeat on other side. When finished it should look like figure c.

Back Wheels

Outside



Inside




Lock/ Release Button

a

*Note: To remove wheel push the lock/release button and pull wheel off.



1. Position stroller frame as shown in figure d.
2. Place front wheels on stroller by clicking them into the 6" posts on the bottom of the stroller shown in figure d. Pull up to make sure wheels are locked.
3. Take rear wheels (on axle with brakes) and lock them into the 2" posts by placing leg tube over the posts and pressing down until they click (shown in figure d). Pull up to make sure wheels are locked.

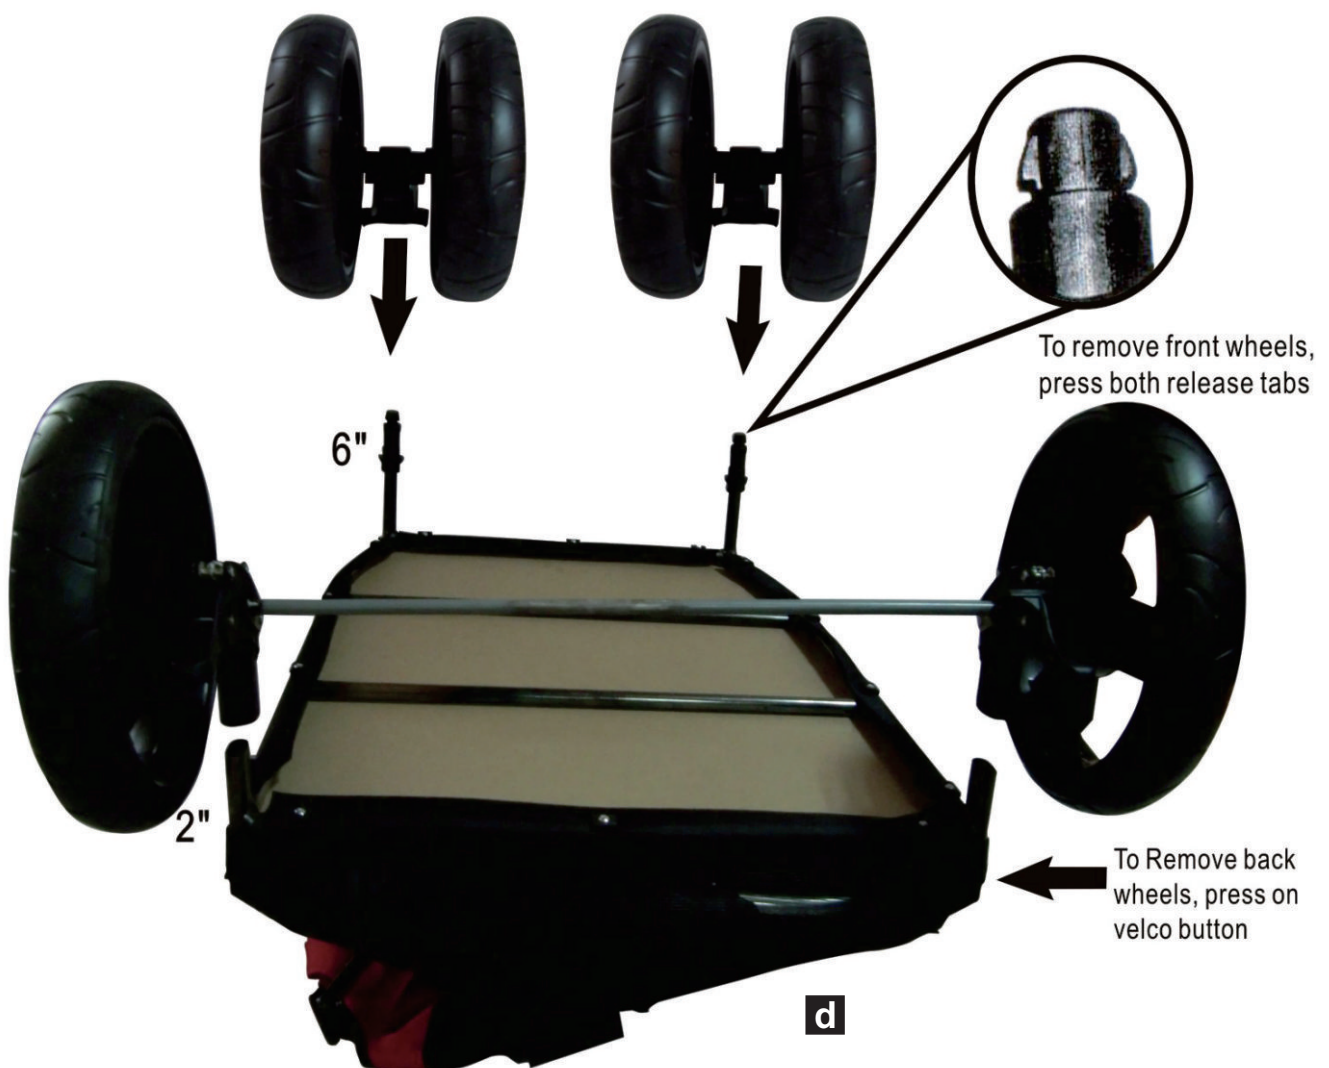

1. Place stroller so wheels are on the ground and back wheels are facing you (shown in figure e).

2. Lift right and left side of stroller up.
Secure the support bar that goes from the left and latches down on the right side.



e

Trigger-Like Buttons

Put on the handle by pulling both trigger-like buttons on each inside of the handle and by placing handle-ends into the handle locking mechanism on each side of stroller. Choose height level (1 or 2), let go of trigger-like buttons. Pull up on handle to make sure it is securely locked. This is shown in figure f.



f

Handle Locking Mechanisms

TO USE FRONT WHEEL LOCKING MECHANISM

1. To engage front wheel locking mechanism so that the front wheel does not swivel (best when stroller is used for fast walking or running) make sure wheel is facing forward (so red tab is at the front of stroller) and pull the red tab up.

2. To disengage locking mechanism so that the front wheel swivels (for easy steering) push tab down.

