 


# Assembly Instructions

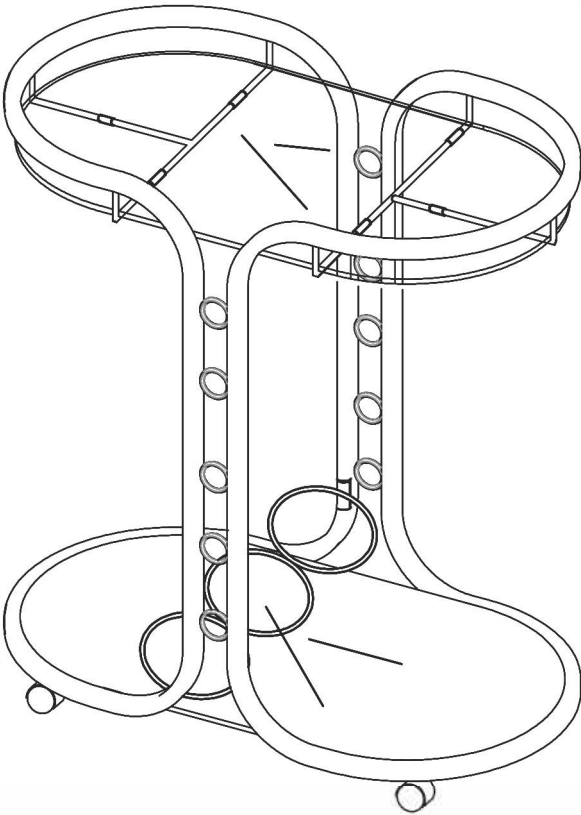 


## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

## Tools Required For Assembly:

Allen Wrench



Wrench



EASY



DIFFICULT




2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

 FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

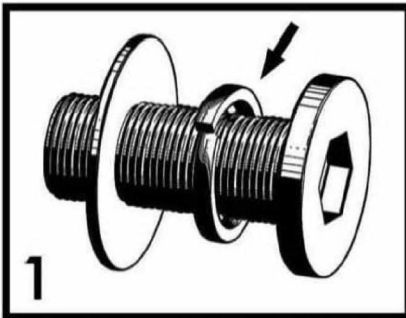

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

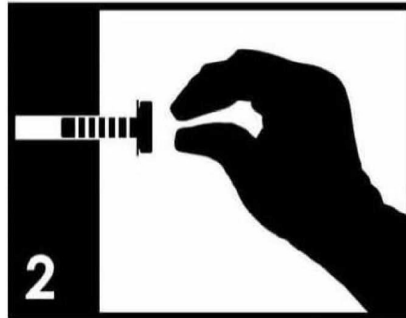

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

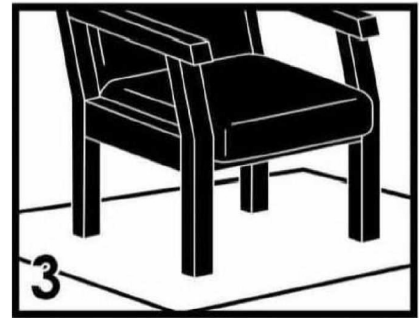

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

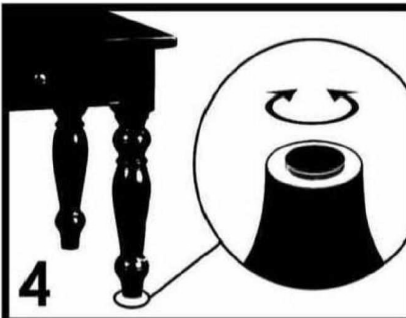

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

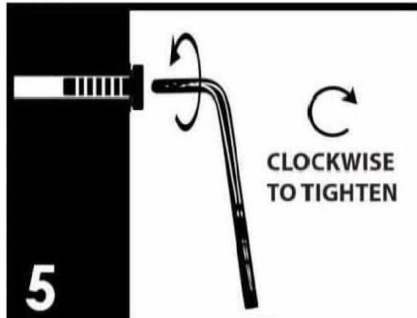

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

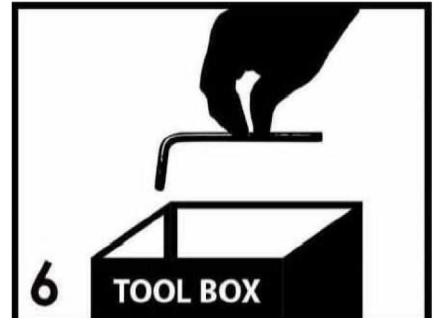


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.






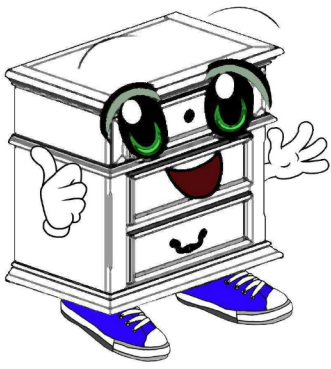


**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



    
 
 

 
Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

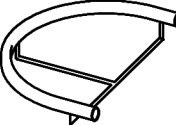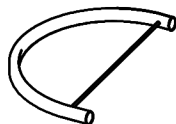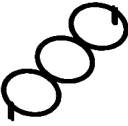
### Parts List

 -  #1 x 2pcs  
Side Panel
-  #2 x 2pcs  
Top Frame
-  #3 x 2pcs  
Bottom Frame
-  #4 x 1pc  
Wine Rack
-  #5 x 1pc  
Glass Top
-  #6 x 1pc  
Mirror Shelf

### Hardware List


-  #A x 18pcs  
Bolt 1/4"x 1/2"
-  #B x 10pcs  
Glass Pad
-  #C x 4pcs  
Caster
-  #D x 1pc  
Allen Wrench
-  #E x 1pc  
Open Wrench

# Exploded View

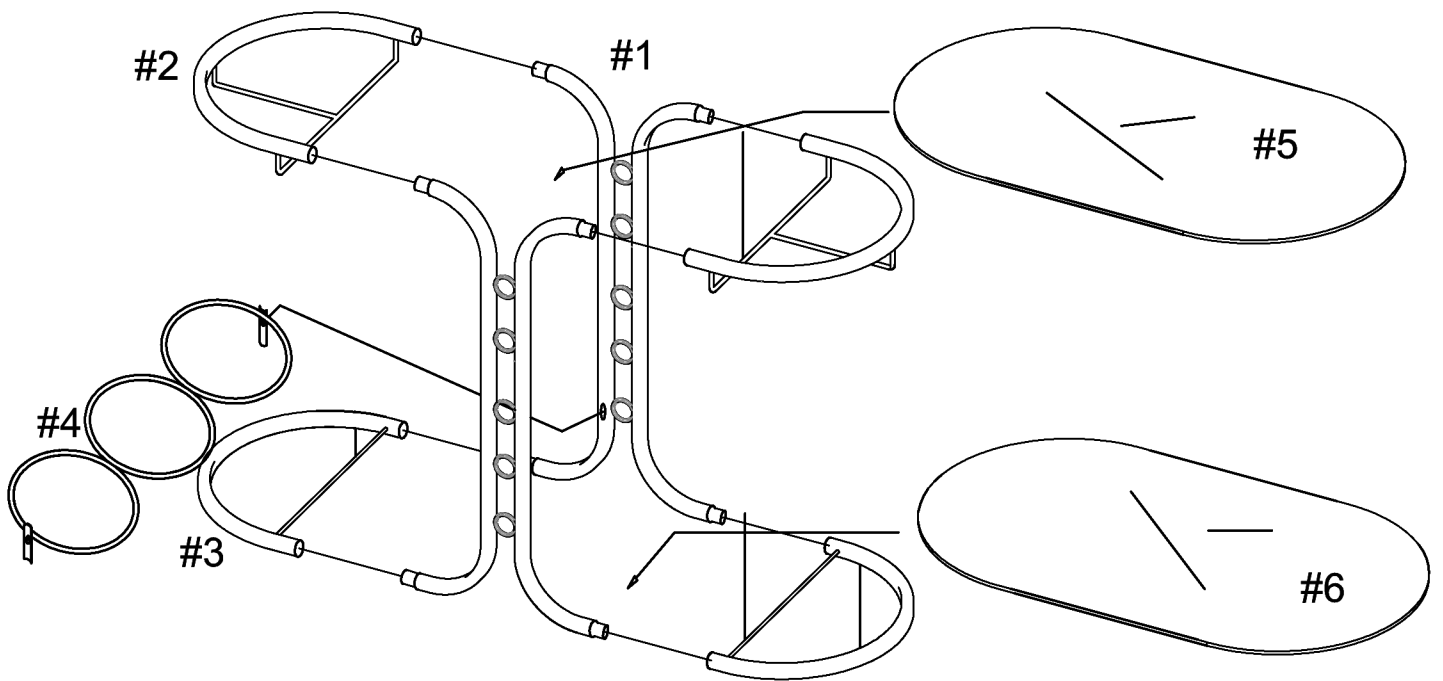



#A x 16pcs

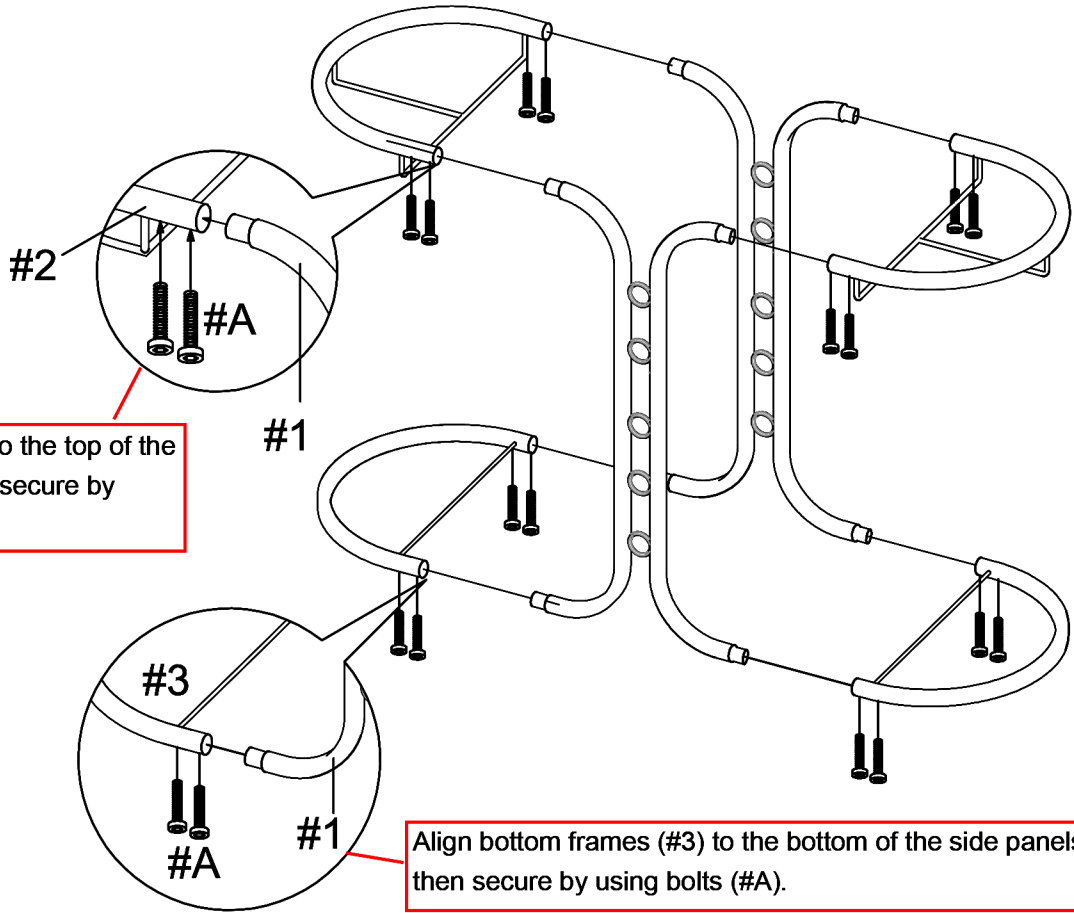 


Align top frames (#2) to the top of the side panels (#1), then secure by using bolts (#A).

Align bottom frames (#3) to the bottom of the side panels (#1), then secure by using bolts (#A).



#B x 10pcs  
#C x 4pcs

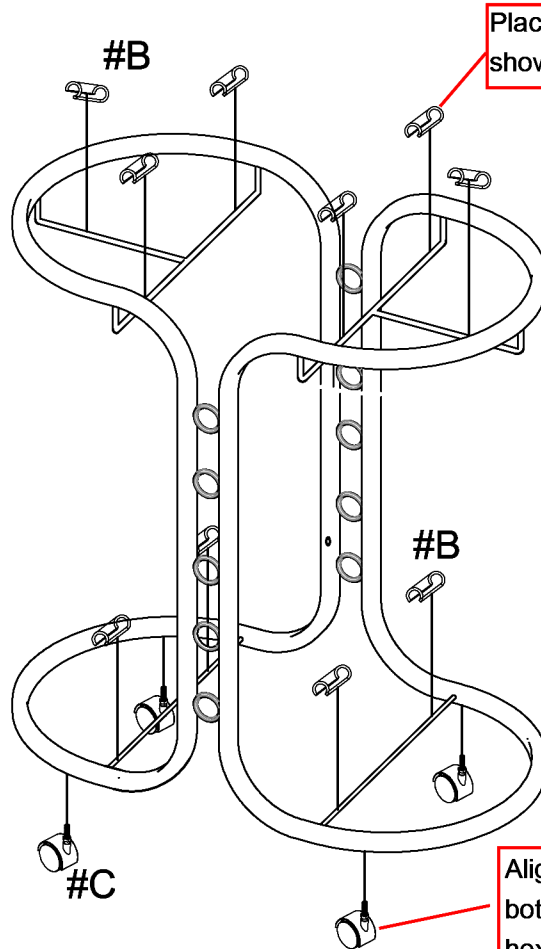 


Place glass pads (#B) onto the frames as shown in the diagram.

Align casters (#C) to the holes of the bottom frame, then secure by turning the hex nut of the caster with an open wrench.



#A x 2pcs

 Align wine rack (#4) to the holes of the side panels, then secure by using bolts (#A).

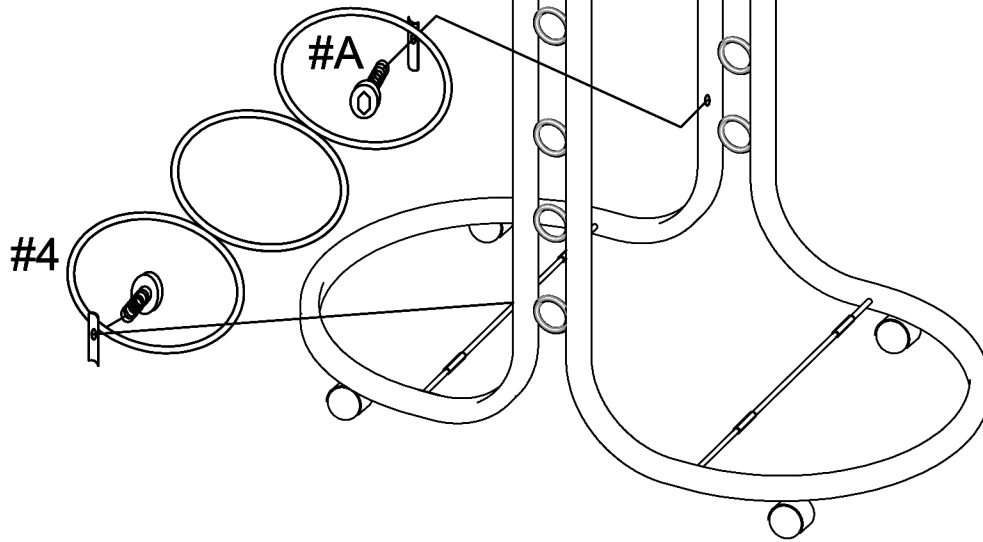

Carefully place the glass and mirror (#5,6) onto frame.

