

### **ASSEMBLY INSTRUCTIONS FOR WARM WHITE LED LIGHTS 8 FUNCTIONS**

Carefully unpack all tree components from the carton. Your tree should include the following:

1 Folding metal tree stand with 3 eyebolts

**6.5'-7.5' tree- 3 tree sections and stand.**

**9' tree- 4 tree sections and stand.**

**12' tree- 5 tree sections and stand.**

**CAUTION: Be sure not to cut any of the light set wires.**

#### **ASSEMBLY OF THE TREE STAND**


- 1) Remove the tree stand from the storage bag and open the tree stand to form an "X." (see Figure A)
- 2) The bottom tree section has 72" power cord attached. Plug this cord into either an outlet or power strip.
- 3) Do not unplug or remove the adapter attached to the electrical plug.
- 4) Align the holes in your stand for the insertion of the 3 eyebolts.
- 5) Insert each eyebolt and begin threading in a clock-wise motion for a couple of rotations only. Leave enough room for the tree pole to be inserted into the stand.
- 6) Place the tree stand in the desired location for your tree. Once the tree is fully assembled, it may be too difficult to move.

FIGURE A



## ASSEMBLY OF THE TREE

- 1) Locate the bottom section of the tree
- 2) Remove the protective plastic cap from the end of the pole and place that end into the tree stand.
- 3) Tighten the eyebolts on the tree stand until the pole is secure
- 4) Carefully untie the white nylon strap holding the branches together.  
**CAUTION: Be sure not to cut any of the light set wires.**
- 5) Gently guide the branches downward into place to create desired look.
- 6) Locate the next section of the tree
- 7) Remove the protective plastic cap from the end of the pole and insert that end into the pole from bottom section until it is fully seated. This will engage the power of 2nd section and the tree will instantly light the second section.
- 8) *Connect each section by inserting the poles straight into the previous piece. Bending the tree to accommodate height, may lead to a missed connection or bent pole.*
- 9) *Carefully cut white nylon strap holding the branches together. CAUTION: Be sure not to cut any of the light set wires.*
- 10) *Gently guide the branches downward into place.*
- 11) *Depending on the height of the tree you have purchased, you will continue to build your tree upward section by section in this fashion until it is completed.*
- 12) *Check your tree for any loose, unlit or damaged bulbs. Although the tree will still operate, the bulbs must be replaced promptly to ensure the performance and life expectancy of your tree.*

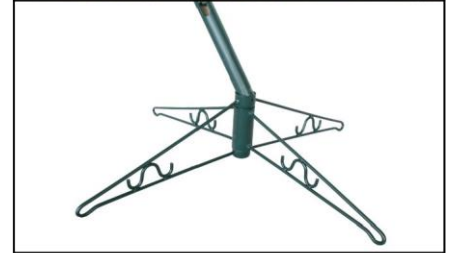

ull  
the  
bott  
om  
sect  
ion

Store the tree in a cool, dry location protected from sunlight.

**For Indoor Use Only**

**Made in China**

**Printed in China**

**This is not a toy, for decorative use only.**

**NOTE:** DO NOT USE A DIMMER SWITCH OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. THIS ACTION WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

CONTROLLER  
1. COMBINATION  
2. IN WAVES  
3. SEQUENTIAL  
4. SLO-GLO  
5. CHASING/FLASH  
6. SLOW FADE  
7. TWINKLE/FLASH  
8.5 STEADY ON



- **To Activate Lights:** There are 8 function operations BUTTOM ON transformer
- 1-COMBINATION 2-IN WAVES 3-SEQUENTIAL 4-SLO-GLO 5-CHASING/FLASH 6-SLOW FADE 7- TWINKLE/FLASH 8-STEADY ON
- RF REMOTE OF 8 FUNCTION WARM WHITE USE
- TIMER: 6HRS ON AND 18 HRS OFF
- Every time the power is turned on and off, the light sets will be in the same light setting as the one it was previously set it.
- When the light on transformer or RF remote flash twice it means that function is on timer

• **\*\*ADD ONS BELOW\*\***

- Press button slowly and cleanly to change functions. Rapid pushing overloads the chip and will require several minutes to reset.

○ **Activating Timer:**

- After using the Function Buttons to choose desired light setting, push the Timer Button and choose the time-period you want it to begin. Tree will come on at same time every day.

• **5. Deactivating Timer:**

- Push Timer button again or unplug the tree, which will clear all settings.

- **Basic Disassembly Steps:**

- Unplug the extension cord plugs the wall. Take off all of your ornaments and tree decorations before packing your tree back into its storage boxes.
  - Starting from the top, gently lift off each section. Each section should be packed away in the carton that it came in. Each tree section should be turned upside down and then carefully press branches toward center pole for easier placement into the storage box. Carefully place the tree in its box and tape it shut.
  - **DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F.**
- This is for decorative use only - do not immerse in water or expose to heat. Keep away from fire.
  - When not in use, store neatly in a cool, dry location protected from sun light.