 


OWNER'S MANUAL

31" WOOD SIDEBOARD

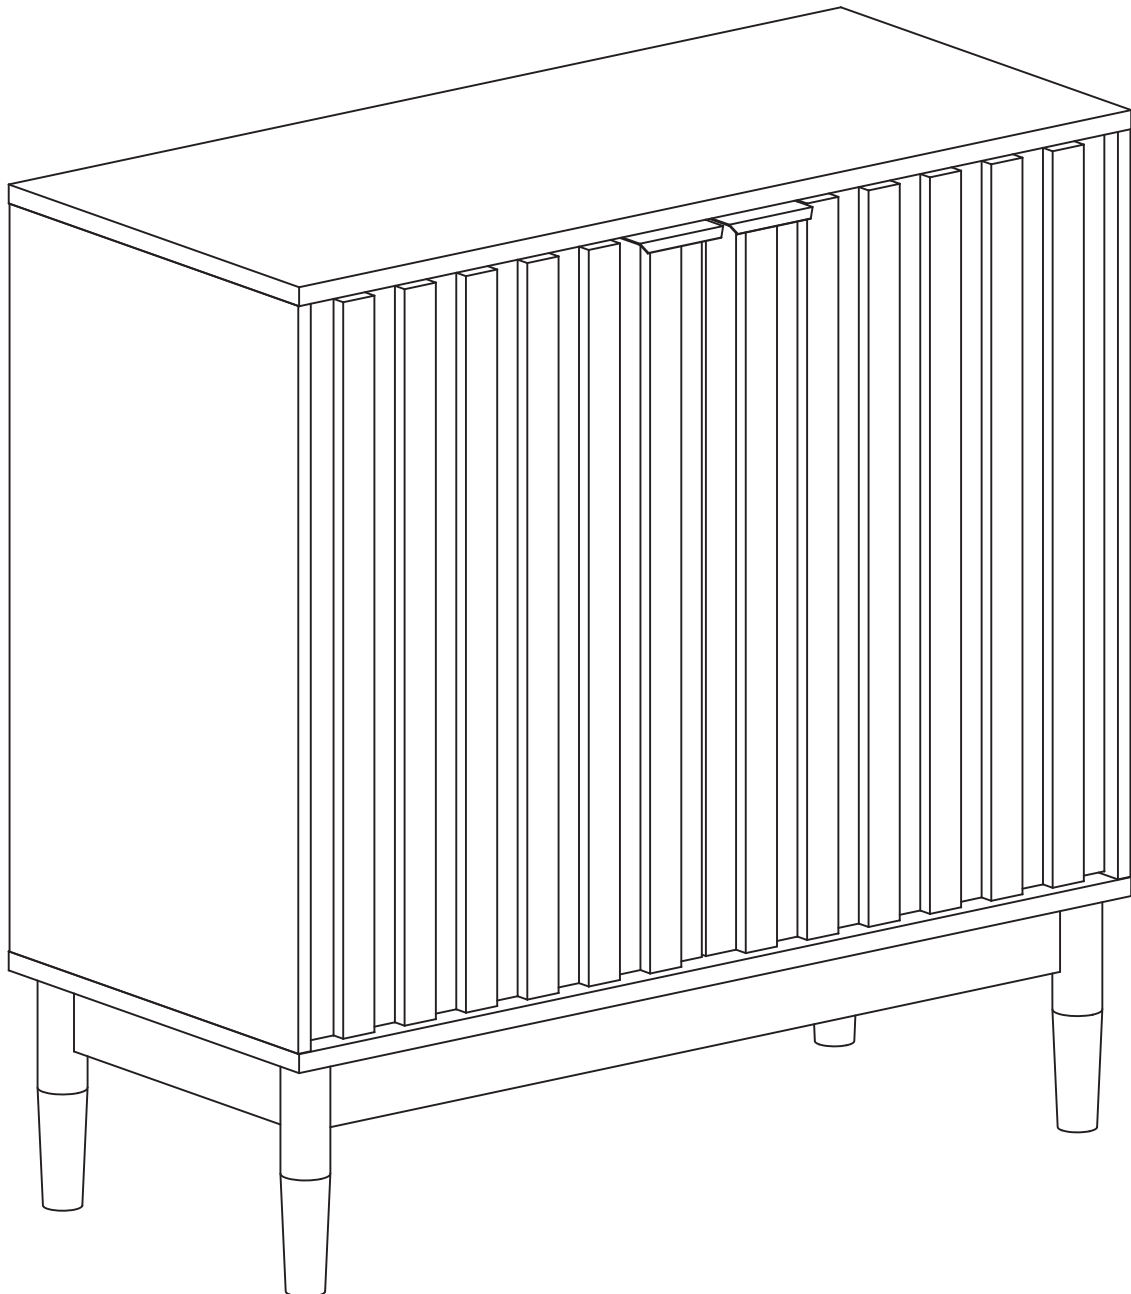

Contact Us

If you have any questions,
Please contact customer service.

 
 
 
 
Email: service@cozfurn.com

Scan the QR code to watch the installation video.



SAFETY PRECAUTIONS

Assembly Checklist

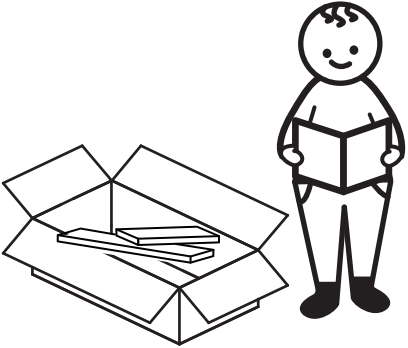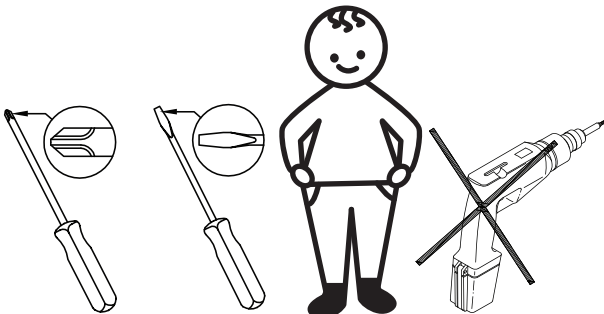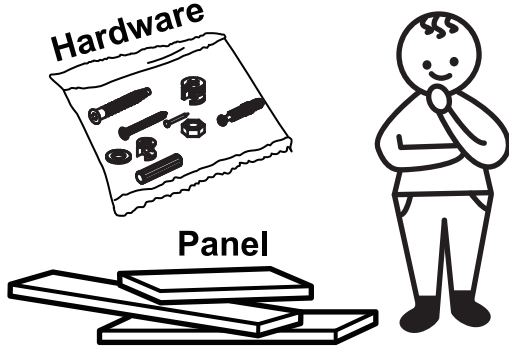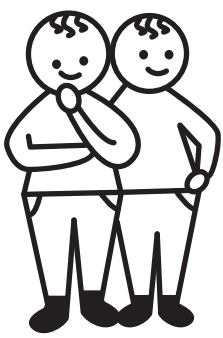
 <p>Read through the instructions carefully before you begin.</p>	 <p>Make sure you have all the required tools. Never use power tools unless instructed.</p>
 <p>Identify and lay out all of the components before you begin assembly.</p>	 <p>Two people are required to assemble.</p>

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please email us.


SAFETY PRECAUTIONS

 QUICKFIT

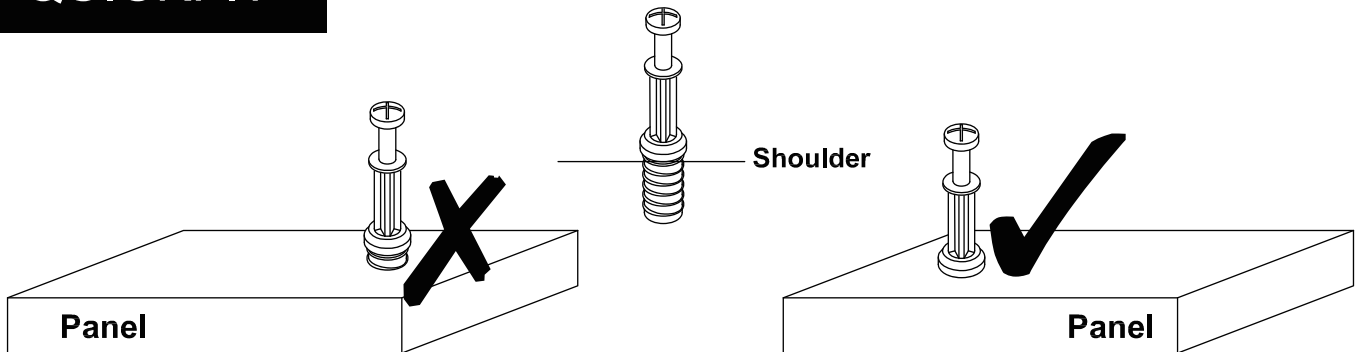


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

 CAM LOCK

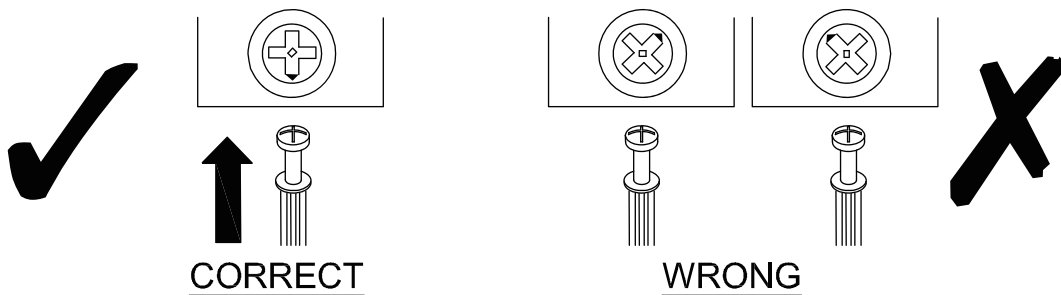

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

 Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

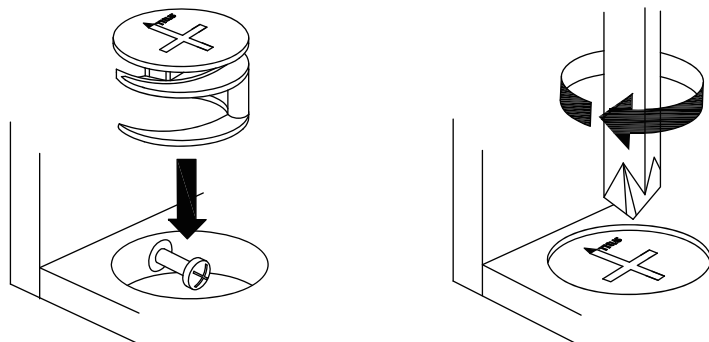

PRODUCT WARRANTY INSTRUCTION



Free Warranty Period:

The free warranty period starts from the product receipt date and lasts one year.



Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged due to non-human-induced reasons natural wear and tear excluded corresponding new parts will be replaced free of charge.

2. If the entire purchased product is damaged due to non-human-induced reasons natural wear and tear excluded and cannot be further used, corresponding parts or a brand-new product will be replaced free of charge.



Coverage after the Free Warranty Period:

After the warranty period expires, replacement components will be provided to customers at cost price for continued service.



 
Additional Services:

After purchasing the product, customers can consult our staff for any product-related inquiries.

 
 

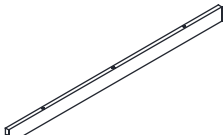 
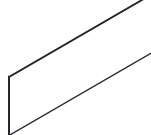 
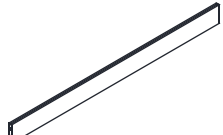 
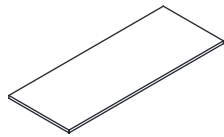 
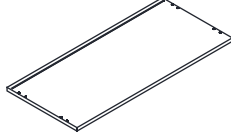 


 
 



 


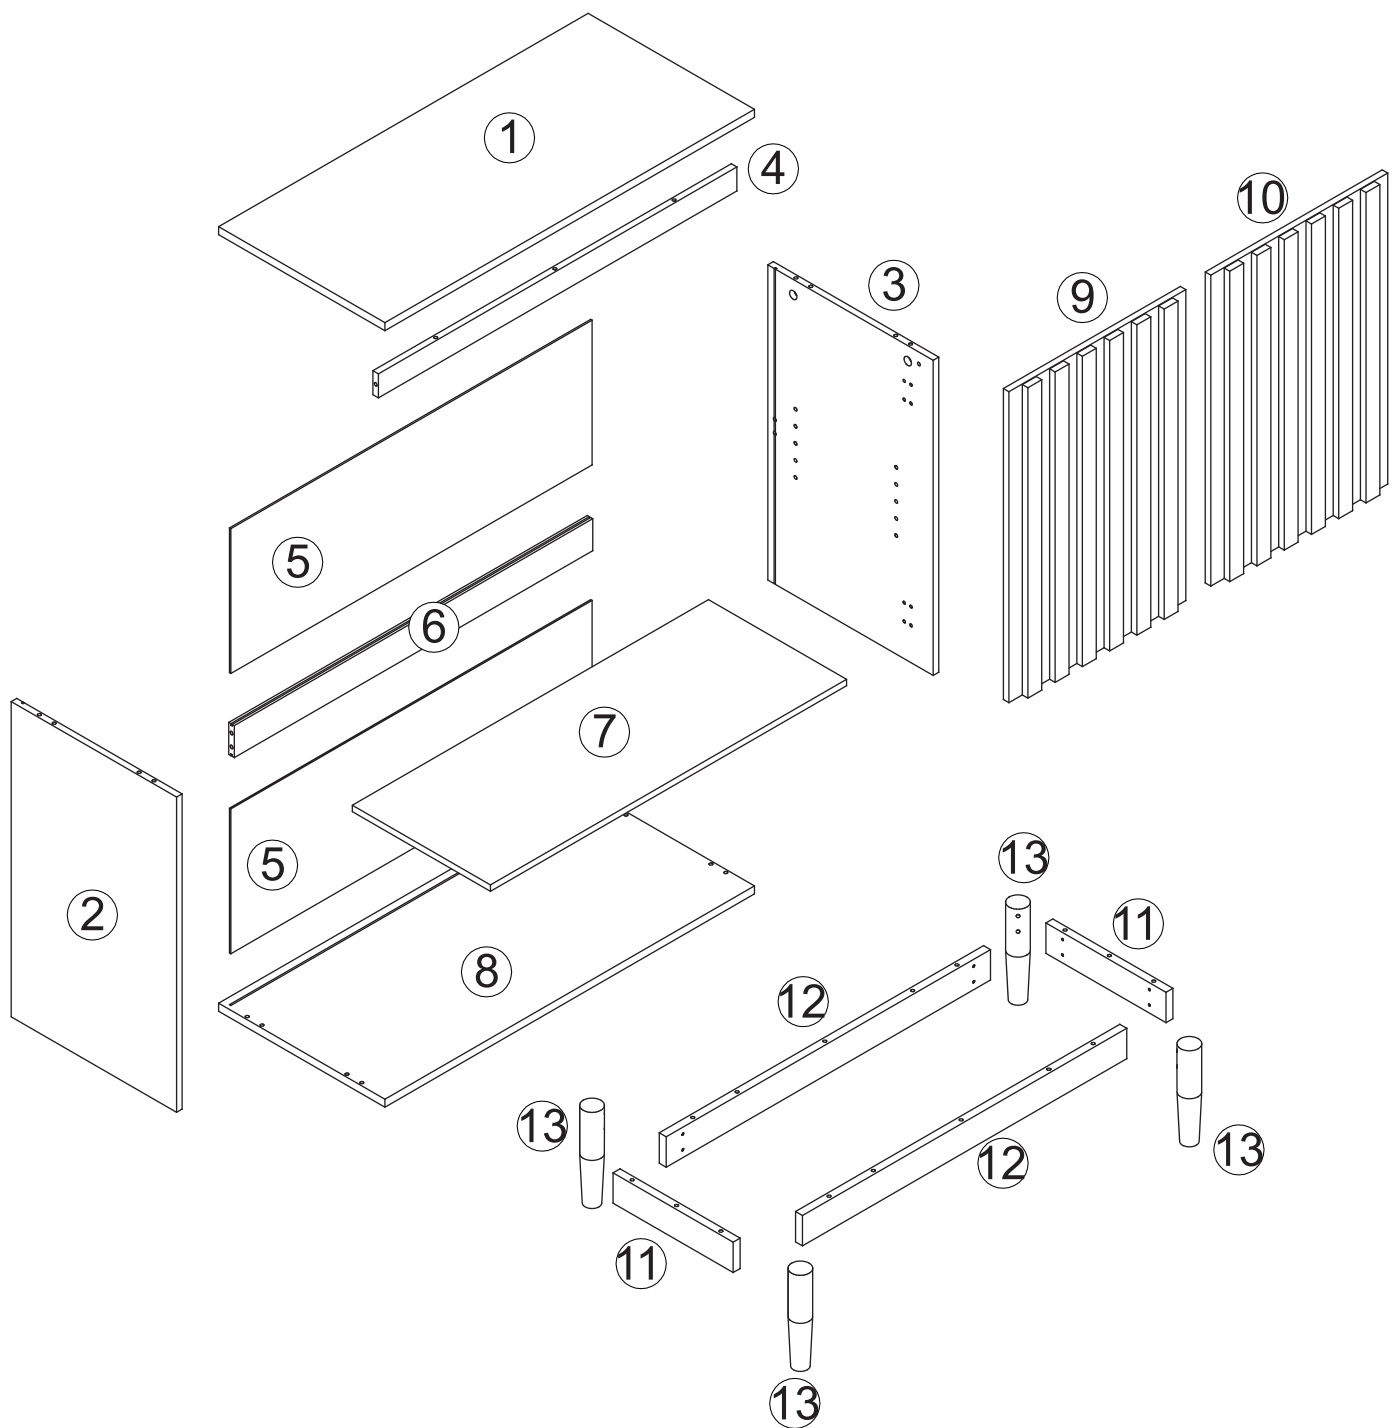 

 
 
 

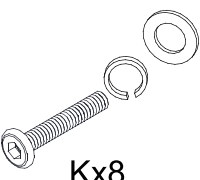 
 
 



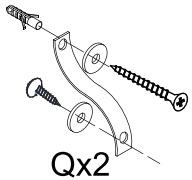 
Contact Email : Service@cozfurn.com

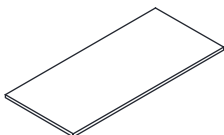ACCESSORIES DISPLAY

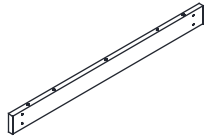


ACCESSORIES DISPLAY



 ① x1	 ② x1	 ③ x1	 ④ x1	 ⑤ x2	 ⑥ x1
 ⑦ x1	 ⑧ x1	 ⑨ x1	 ⑩ x1	 ⑪ x2	 ⑫ x2
 ⑬ x4					

 Ax10	 Bx10	 Cx17	 Dx14	 Ex28	 Fx2
 Gx4	 lx4	 Jx16	 Kx8	 Lx1	 Mx4
 Nx2	 Ox4	 Px8	 Qx2		



PRODUCT ASSEMBLY

 
 
Step 1

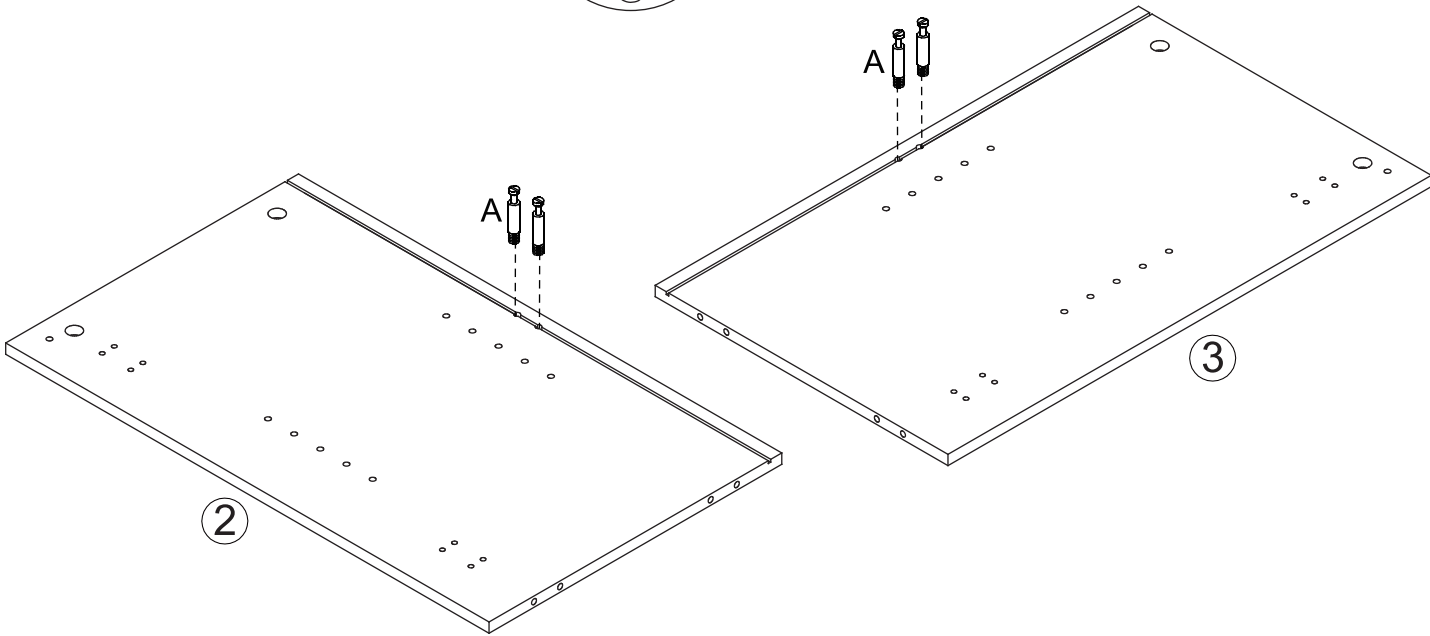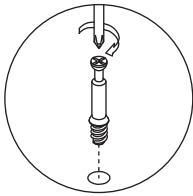4xA	
-----	---




Step 2

4xB	
2xC	

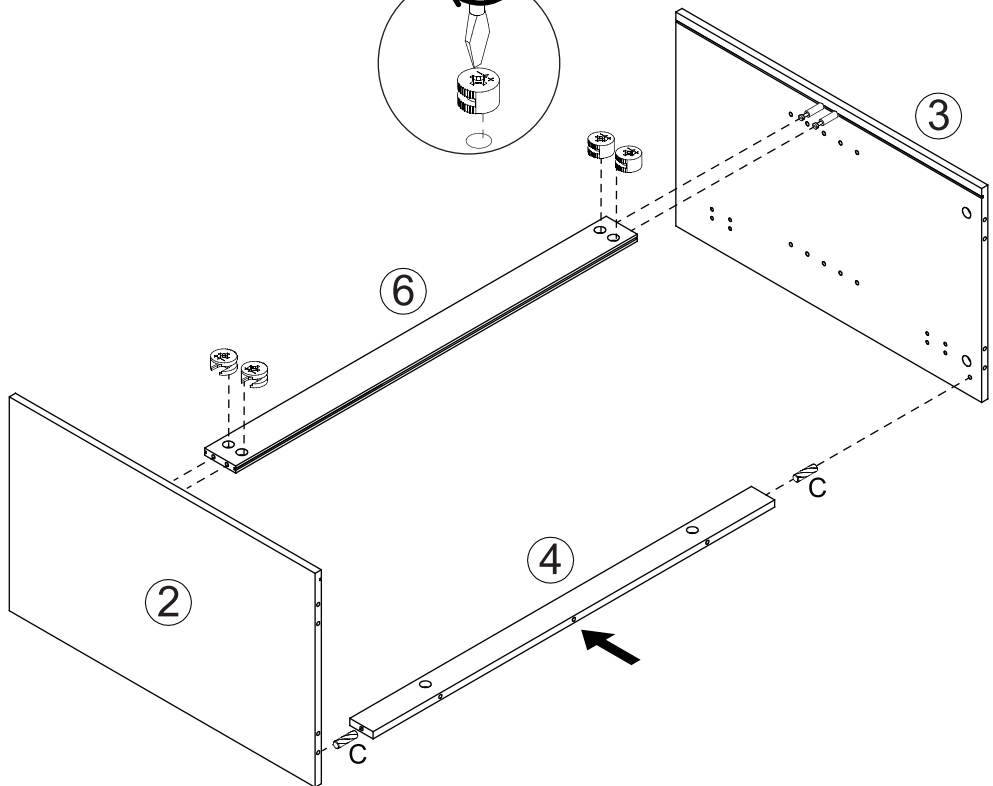 
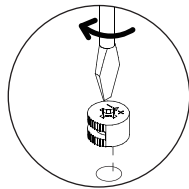 



PRODUCT ASSEMBLY

 Step 3

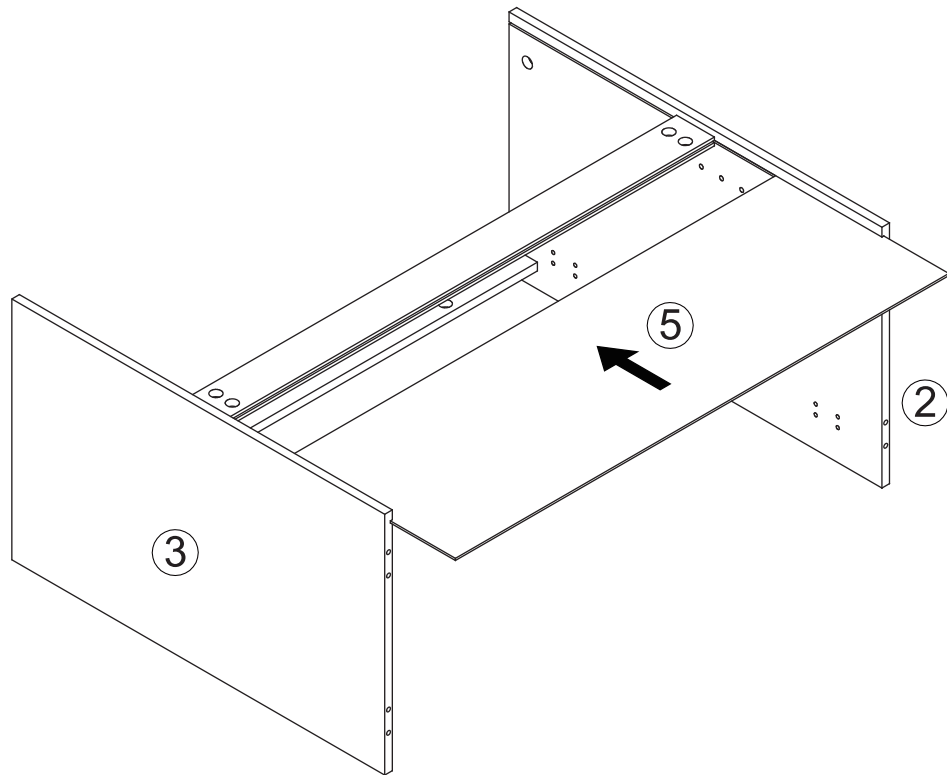

  Step 4



4xC	
4xD	

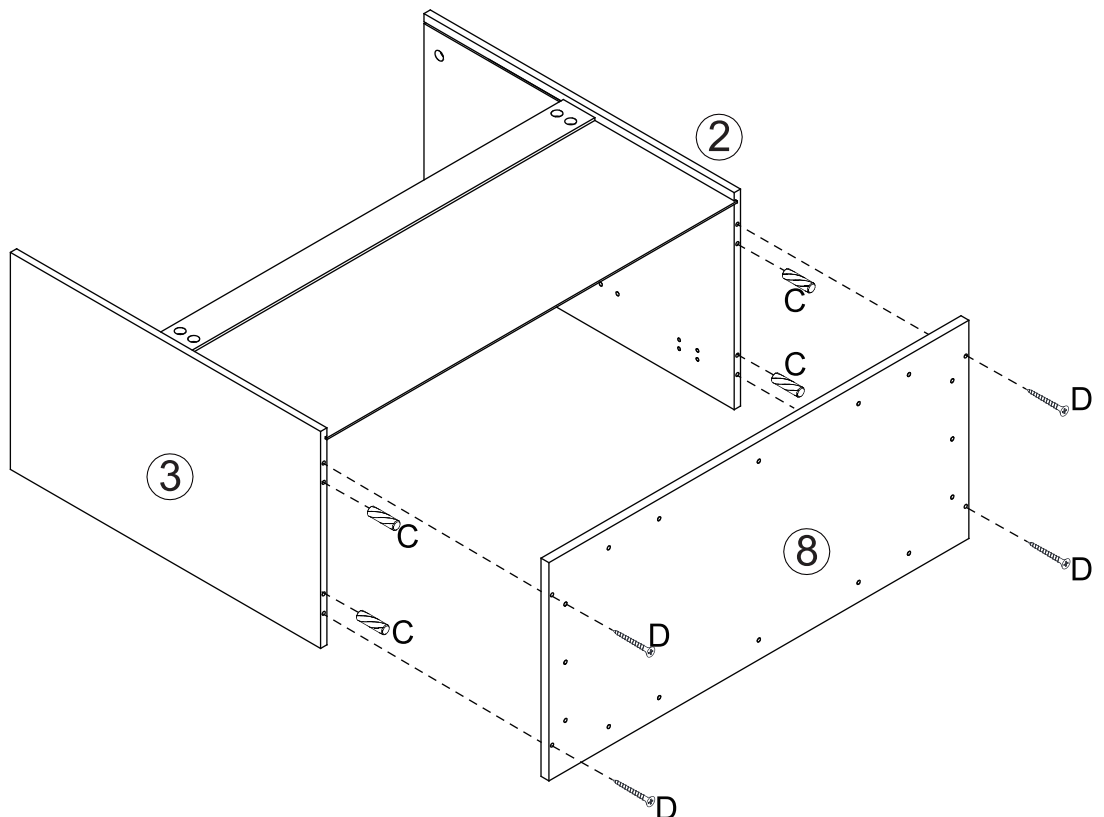 


Email: Service@cozfurn.com



  PRODUCT ASSEMBLY

 
Step 5

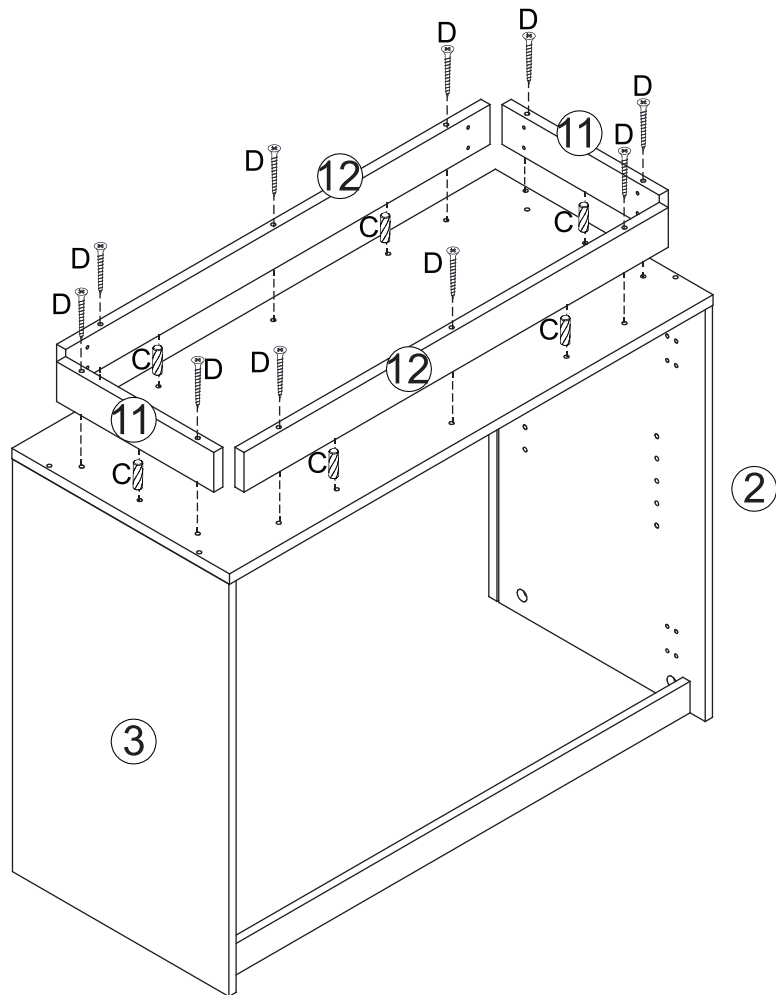6xC	
10xD	



Step 6



4xI	
16xJ	

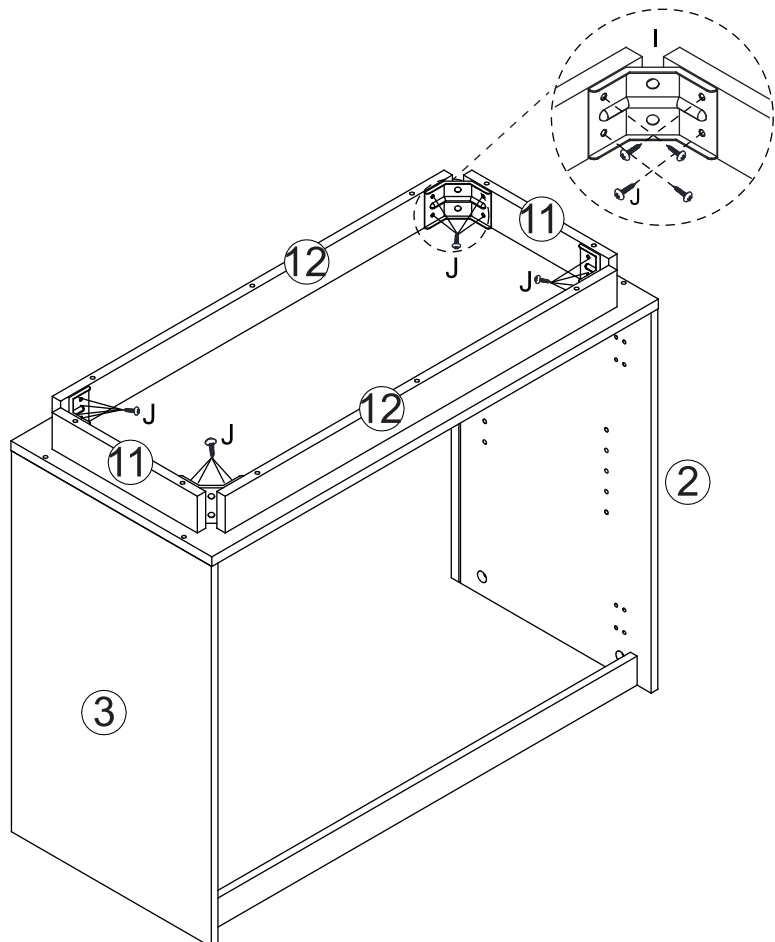 


Email:Service@cozfurn.com


PRODUCT ASSEMBLY

 
Step 7

8xK	
4xO	

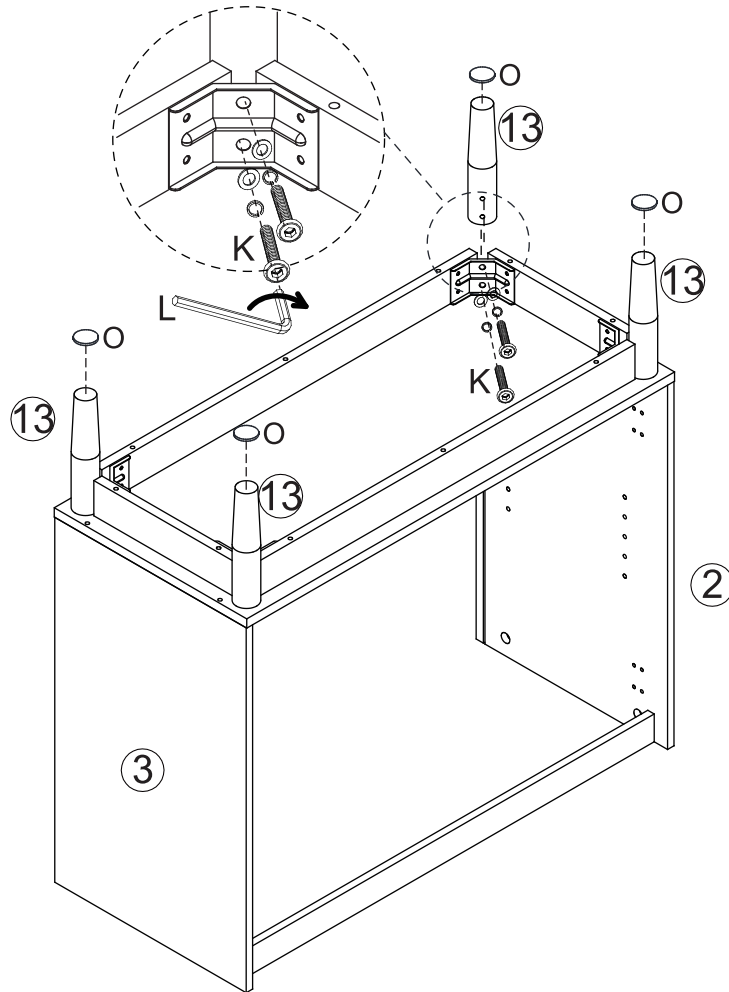 

Step 8


5xC	
-----	---

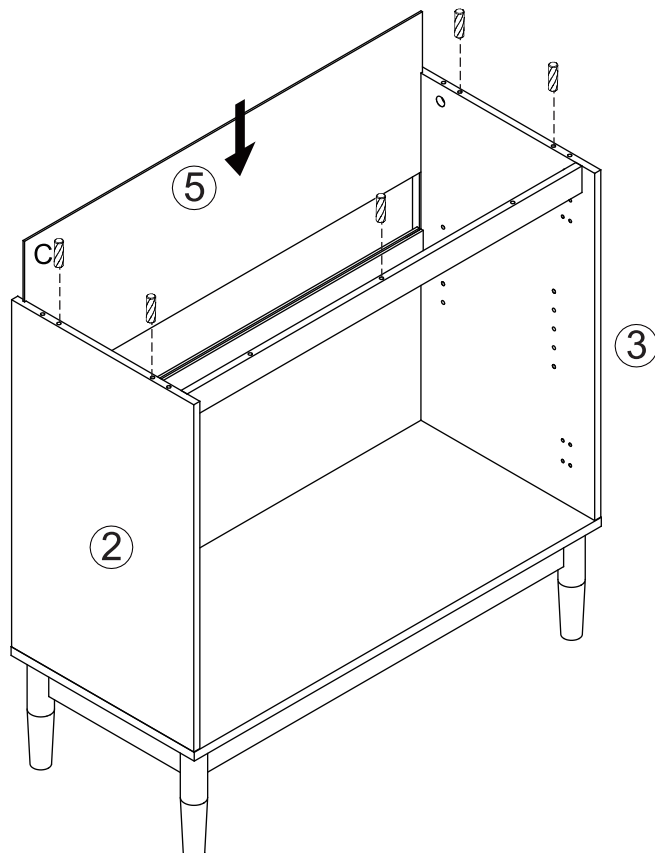 


Email: Service@cozfurn.com

PRODUCT ASSEMBLY

 Step 9

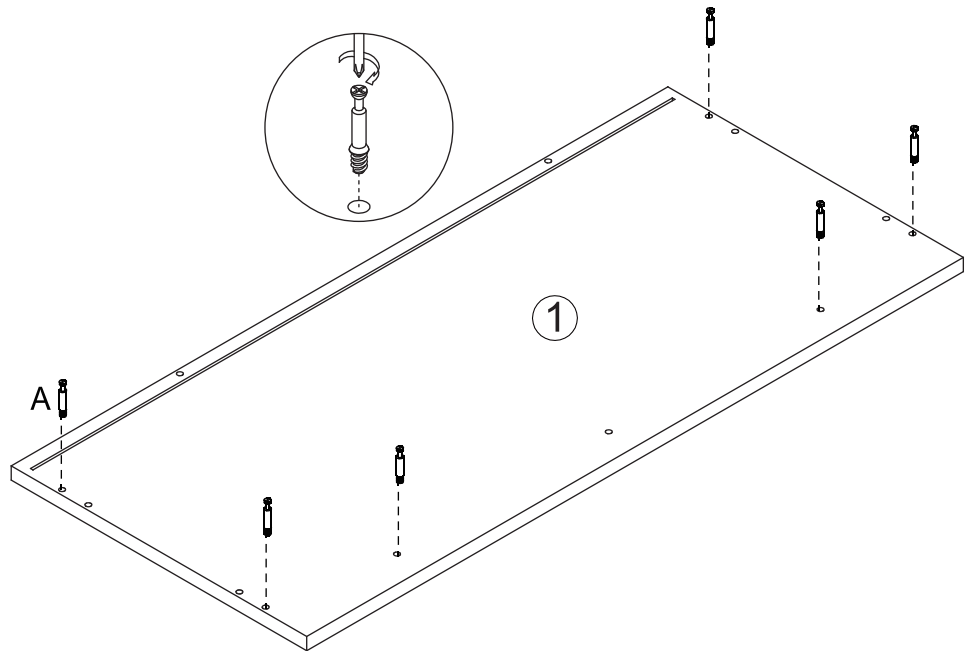

 Step 10

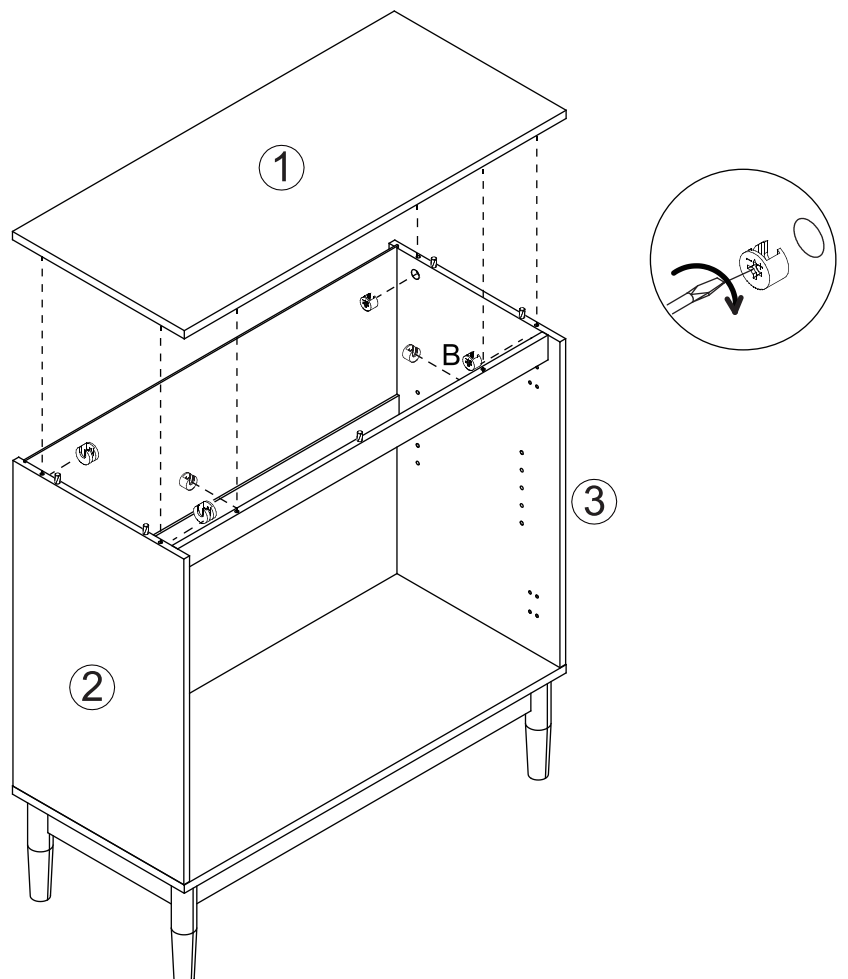


Email: Service@cozfurn.com


PRODUCT ASSEMBLY

Step 11

  4xM

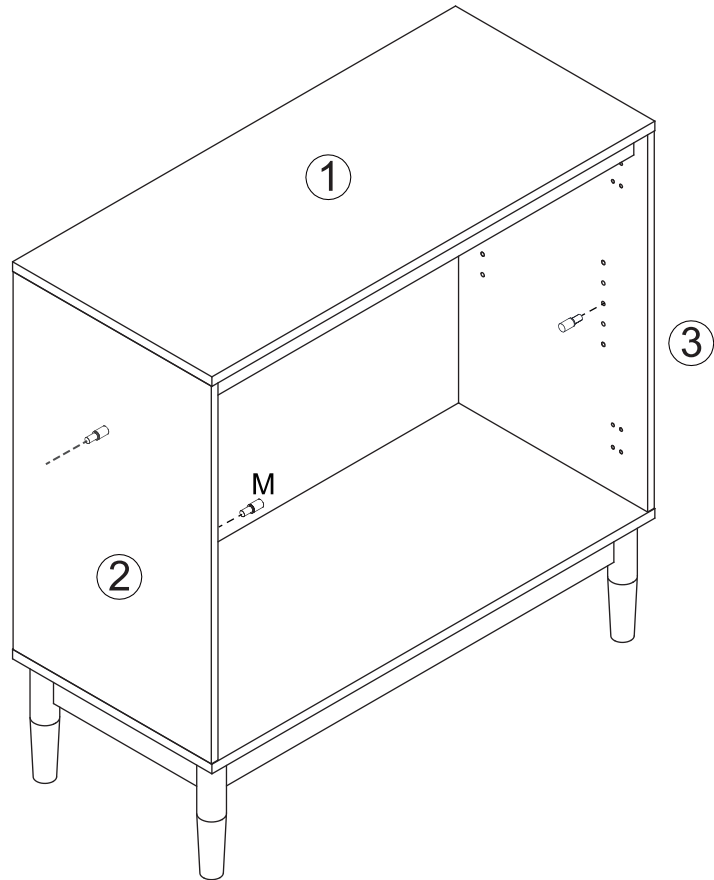


 
Step 12

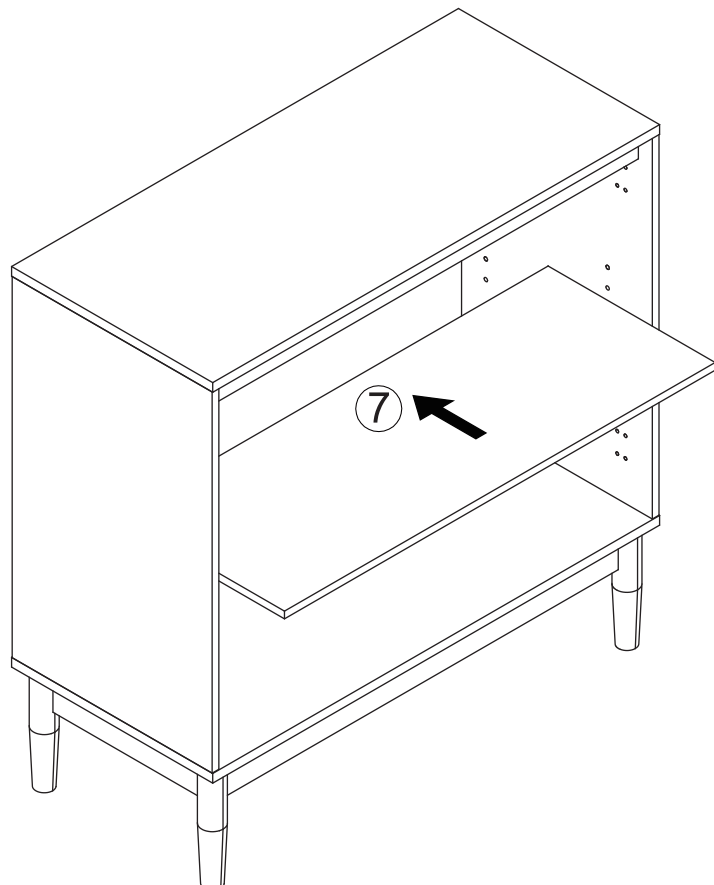


Email:Service@cozfurn.com



PRODUCT ASSEMBLY

 
Step 13

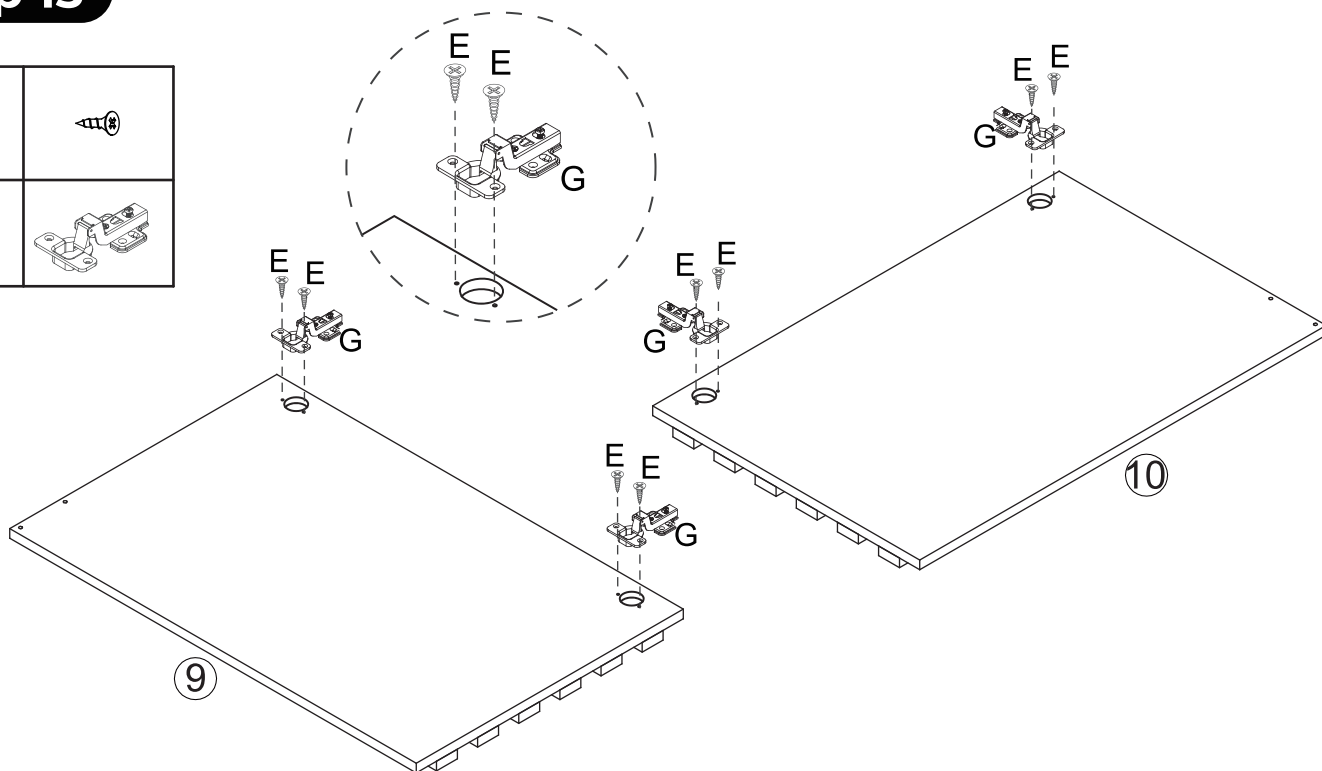8xE	
4xG	





Step 14



4xE	
2xF	

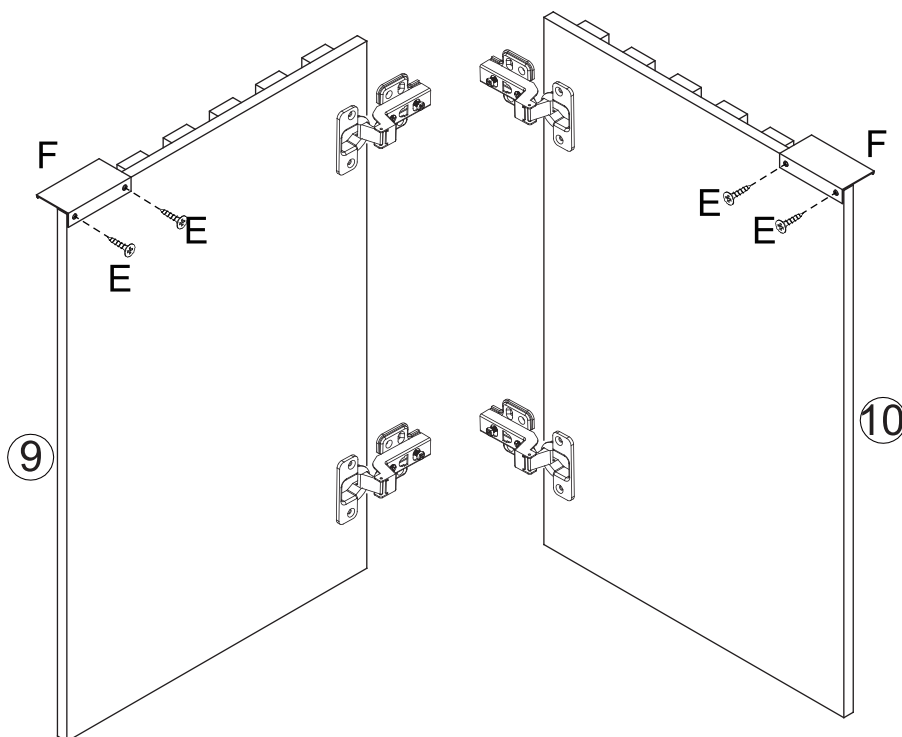 



PRODUCT ASSEMBLY

  
 
Step 15

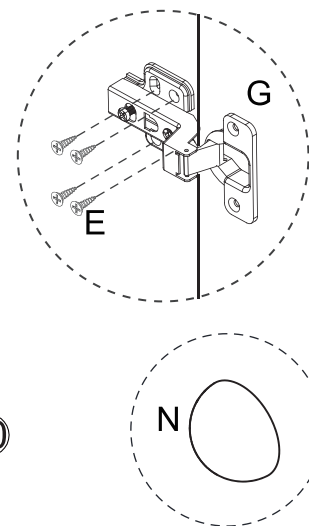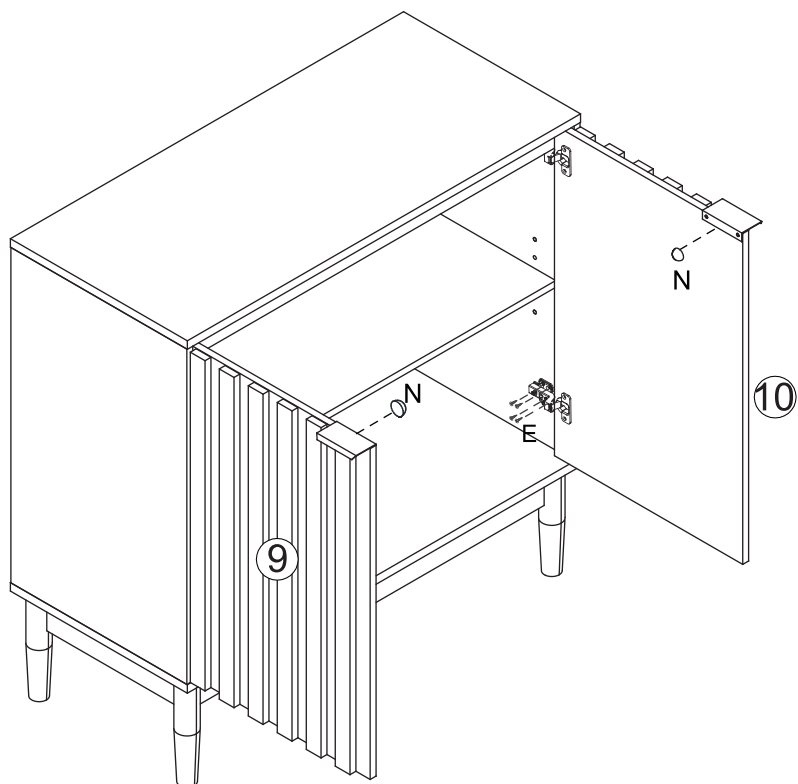16xE	
2xN	



Step 16

8xP	
2xQ	

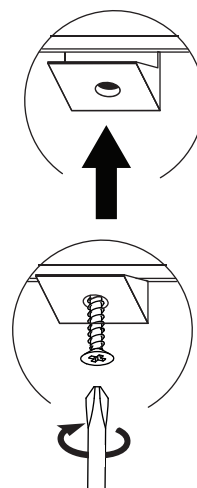 
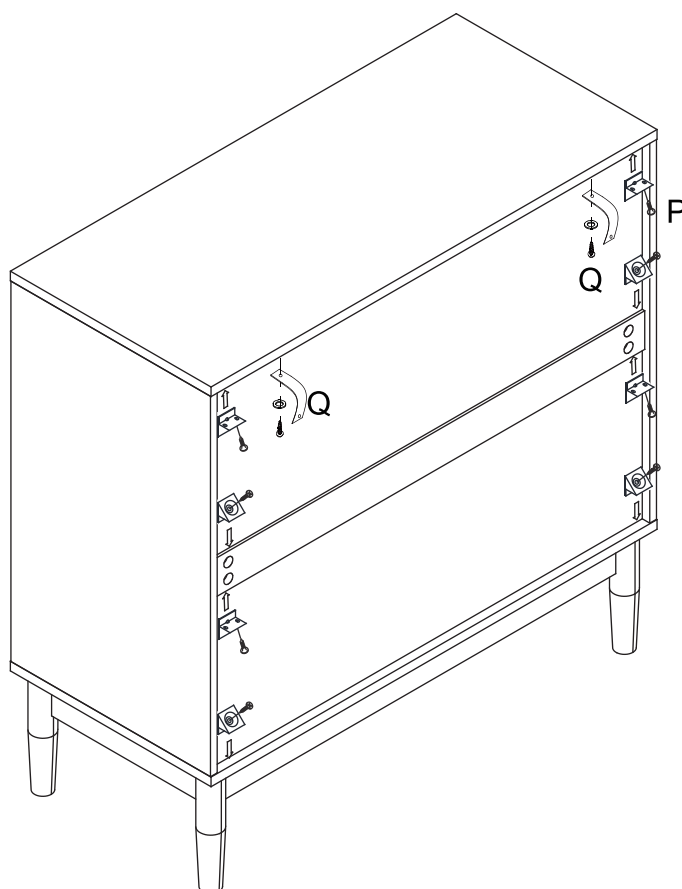 


Email: Service@cozfurn.com


PRODUCT ASSEMBLY

Step 17

  
2xQ

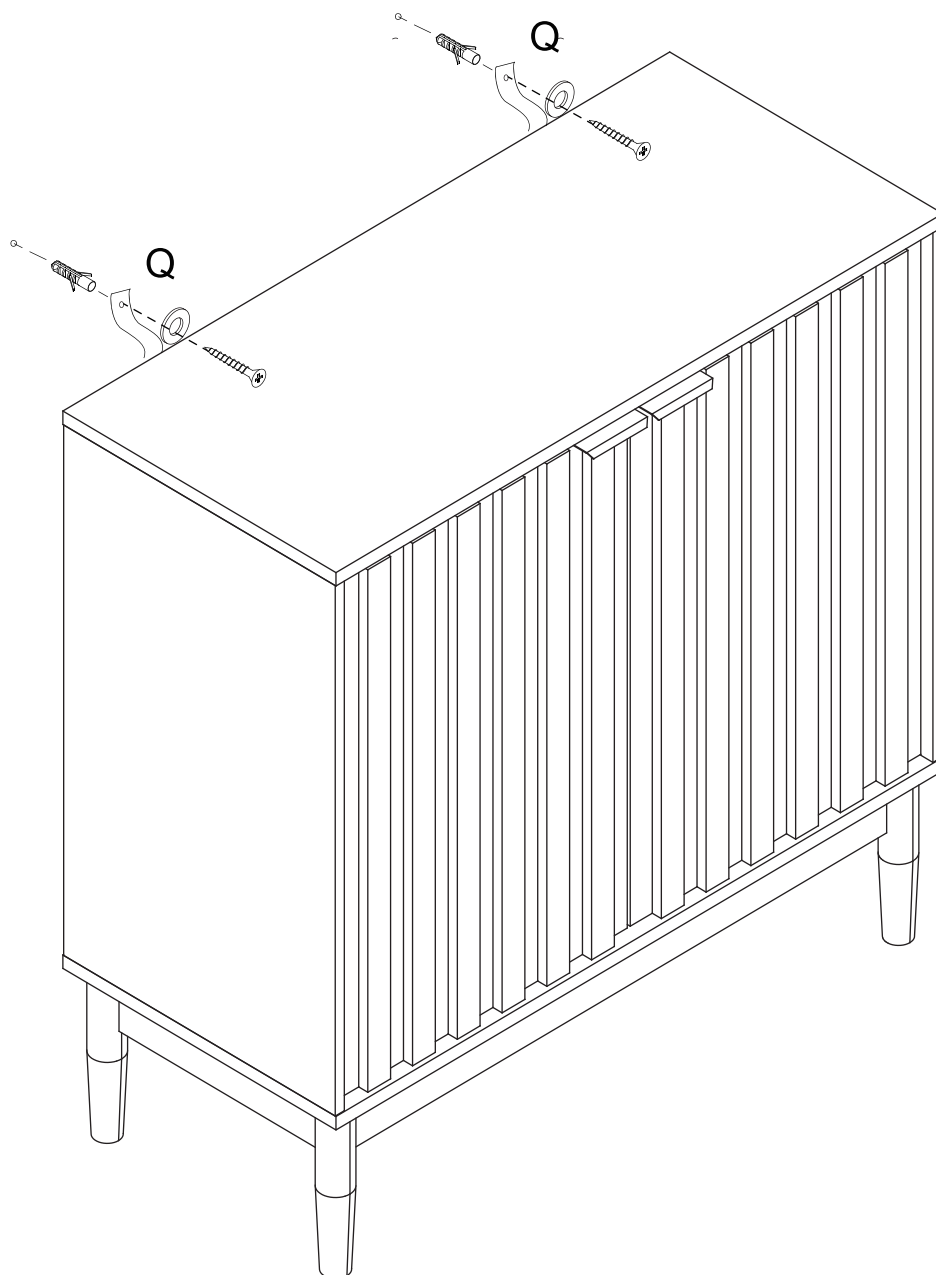

PRODUCT ASSEMBLY

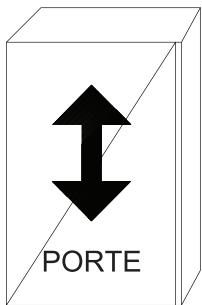 


 Cet ajustement est utilisé si vos portes présentent un grand espace en haut ou en bas, ou si une porte est droite mais plus basse que l'autre.

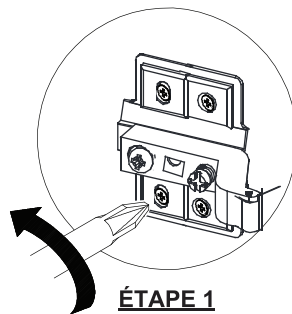


ÉTAPE 1

 Desserrez la vis pour ajuster la porte.

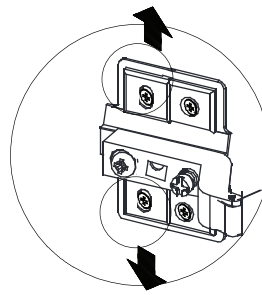


ÉTAPE 2

 Ajustez la porte.

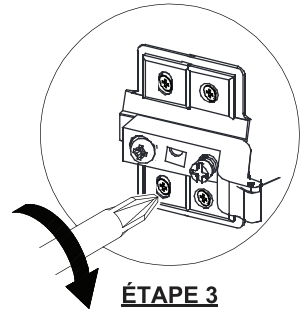


ÉTAPE 3

 Après l'ajustement, resserrez la vis.

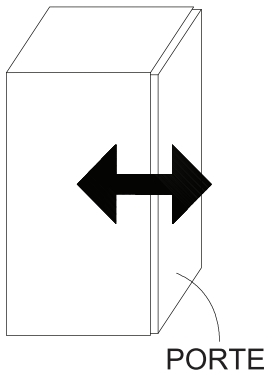


 Cet ajustement est utilisé si vos portes sont trop proches de la cavité principale. Vous pouvez desserrer la vis, puis déplacer la charnière de la porte plus près ou plus loin en fonction du résultat souhaité.

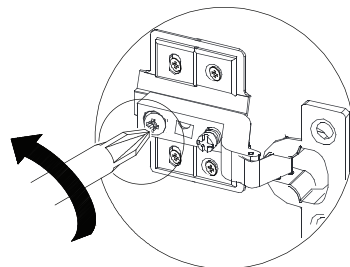


ÉTAPE 1

 Desserrez la vis pour ajuster la porte.

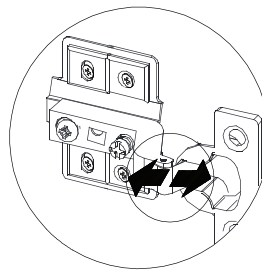


ÉTAPE 2

 Ajustez la porte.

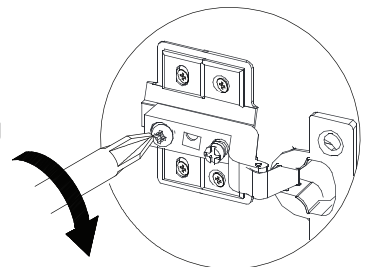


ÉTAPE 3

 Après l'ajustement, resserrez la vis.

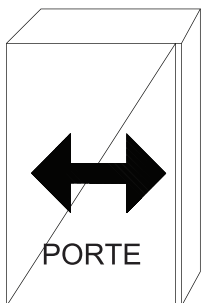


 Cet ajustement est utilisé si vos portes se chevauchent au milieu ou s'il y a un écart plus important au milieu ou sur les côtés.

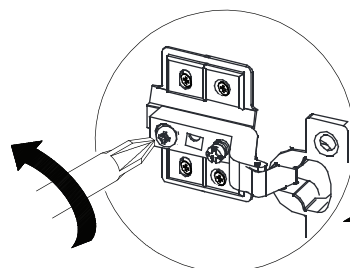


ÉTAPE 1

 Desserrez la vis pour ajuster la porte.

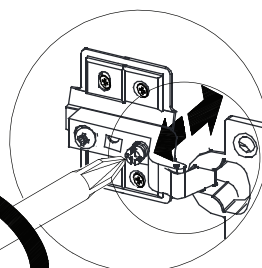

ÉTAPE 2

 Ajustez la porte.

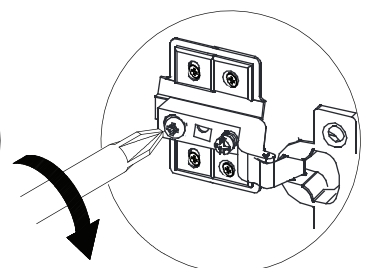

ÉTAPE 3

Après l'ajustement, resserrez la vis.

PRODUCT ASSEMBLY

Wall Mounting & Fixing Guide

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

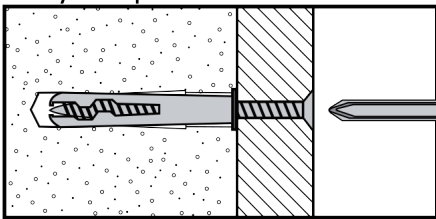


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

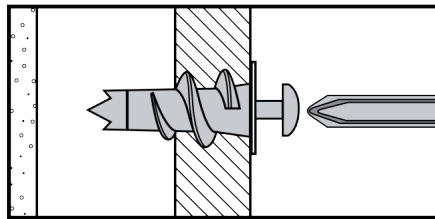


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

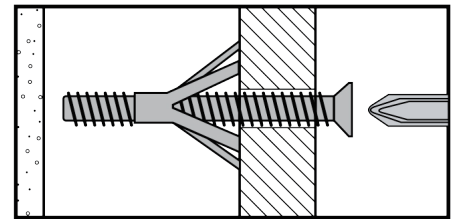


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

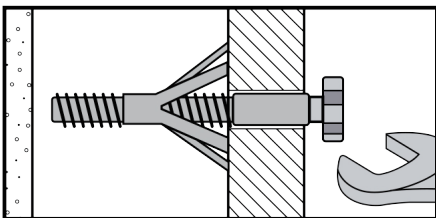


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

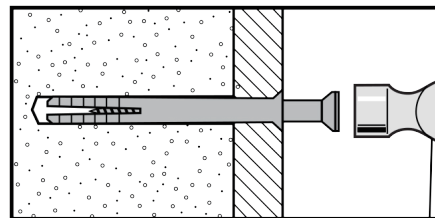

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

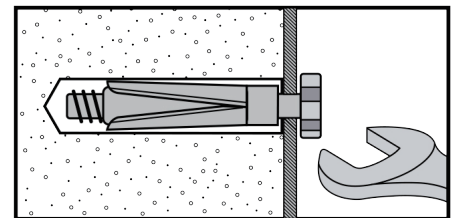

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

Email:Service@cozfurn.com