


Assembly Instructions

DINING TABLE

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

Caution: Please read the instructions thoroughly before assembly.

- 1.We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2.Please do not over tighten screws or bolts until the assembly is completed.
- 3.Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and effcently.

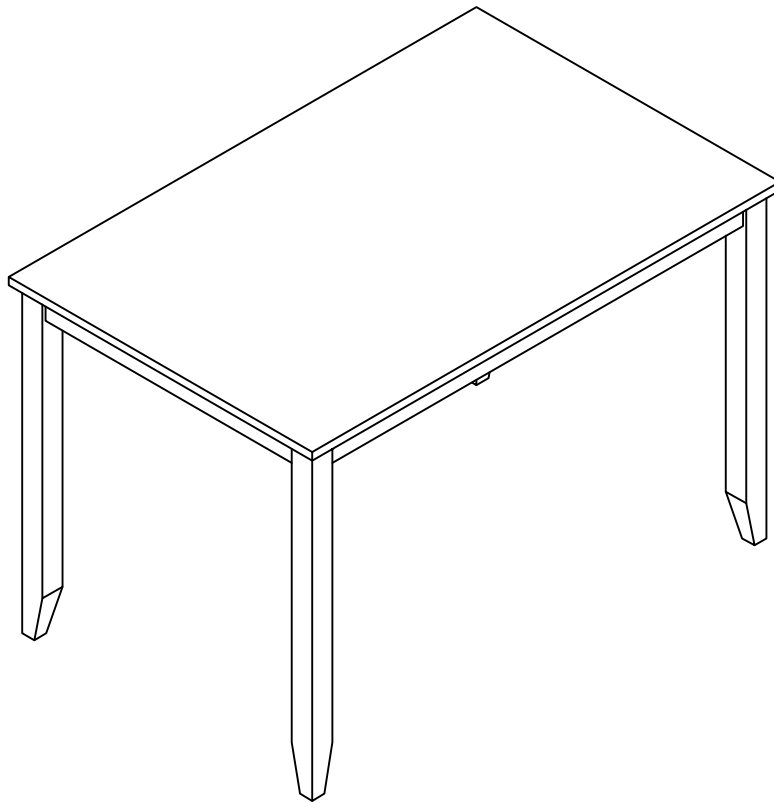

CARTONS ONLY ONE/ CARTONS SEULEMENT UN

PART LISTS				HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	Q'TY	NO.	DESCRIPTION	SKETCH	Q'TY
1	TABLE TOP		1 PC	A	BOLT Ø5/16" x 65mm		8PCS
				B	SPRING WASHER Ø5/16" x 13mm		8PCS
2	LEGS		4 PCS	C	FLAT WASHER Ø5/16" x 22mm		8PCS
				D	ALLEN KEY		1PC

Assembly Instructions

DINING TABLE




ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS!


STEP 1: Use the ALLEN KEY to take off 4 screws of the table corner to assembly the legs

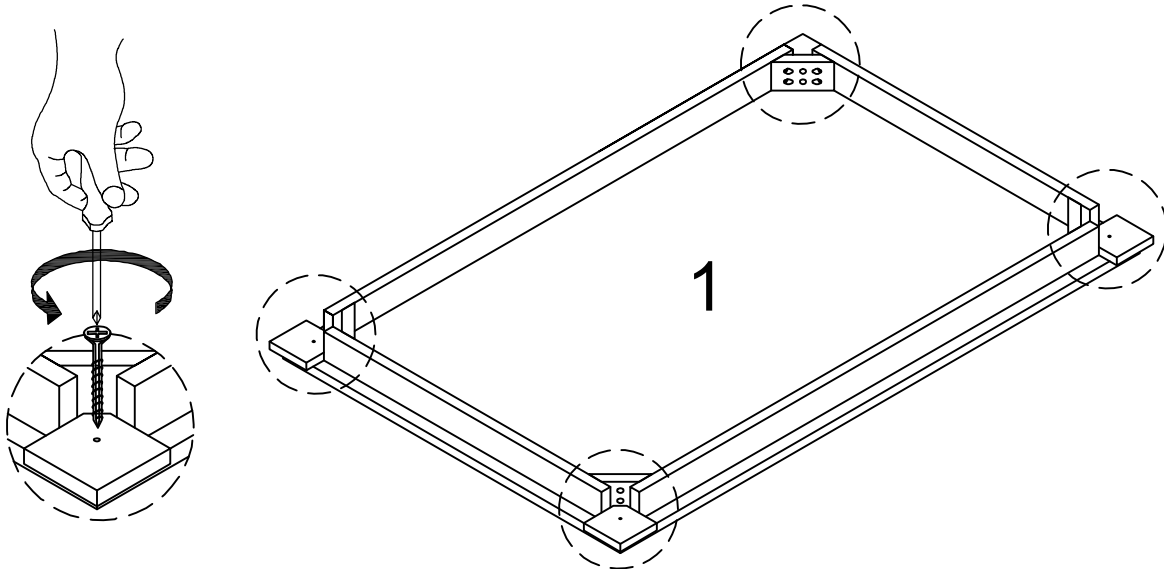

STEP 2:

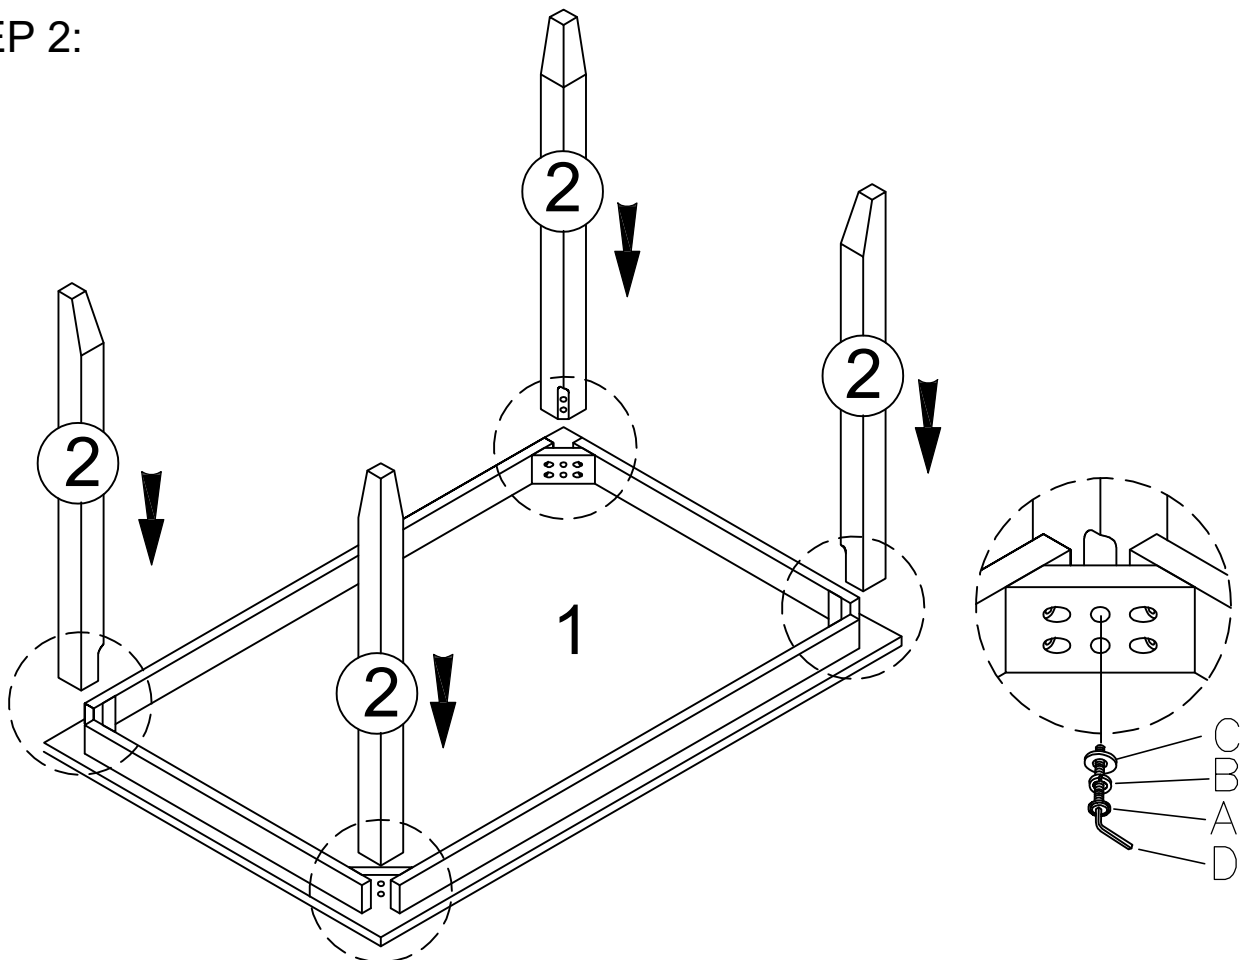

FINISHED

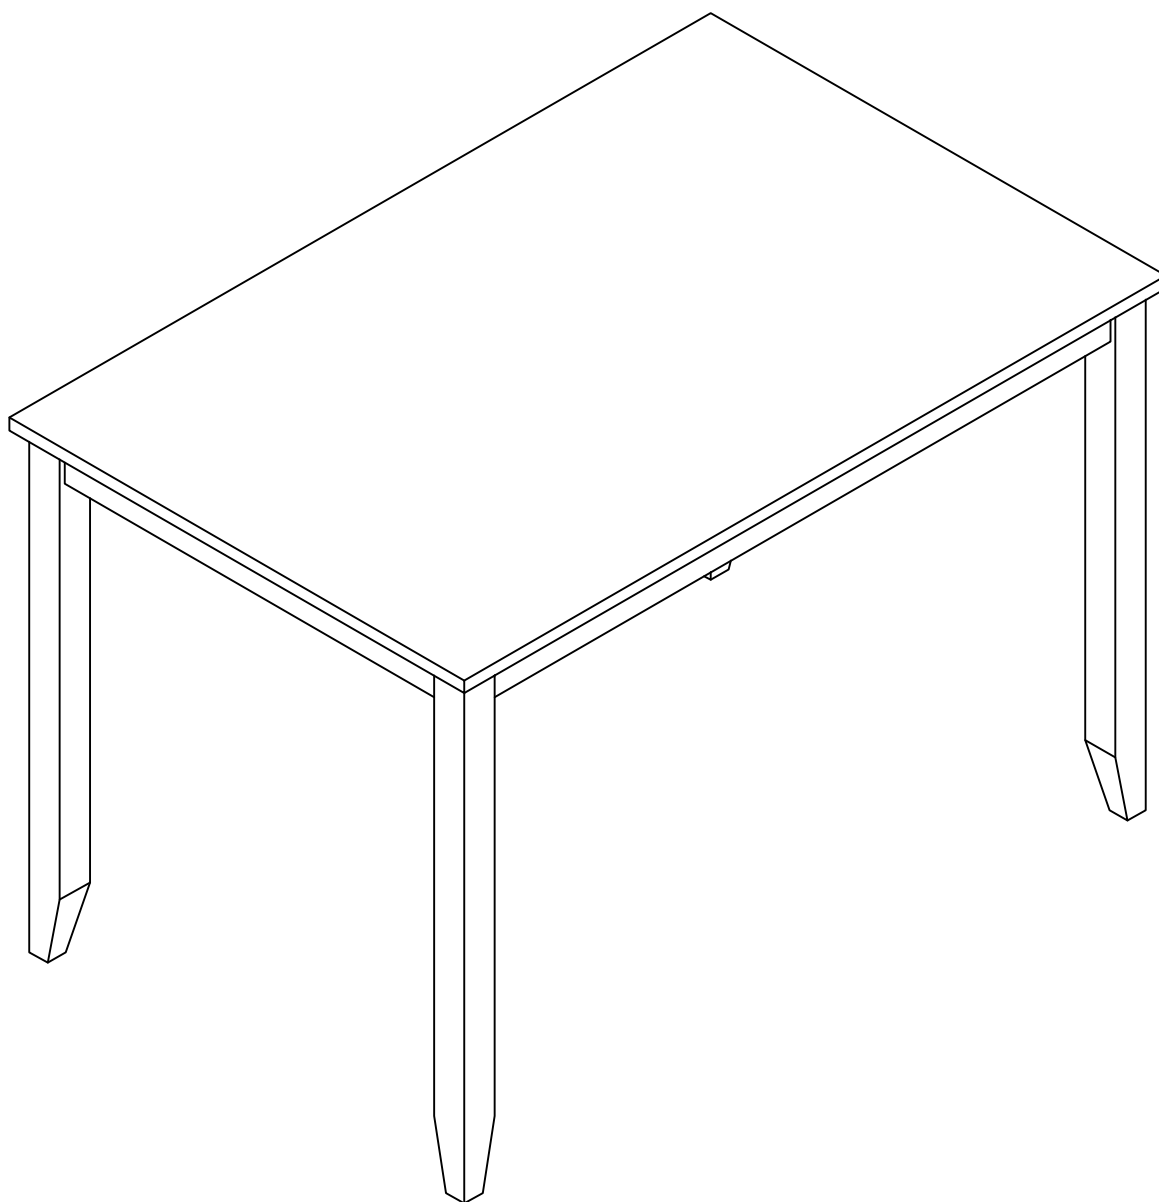


Assembly Instructions

DINING Chair

 

 

 




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

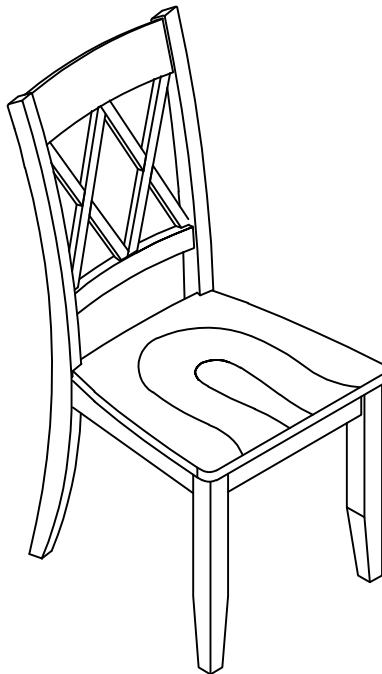Caution: Please read the instructions thoroughly before assembly.

1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



CARTONS ONLY ONE/ CARTONS SEULEMENT UN

PART LISTS				HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	Q'TY	NO.	DESCRIPTION	SKETCH	Q'TY
1	CHAIR BACK		1 PC	A	BOLT Ø1/4" x 75mm		4PCS
				B	BOLT Ø1/4" x 60mm		4PCS
2	SEAR		1 PC	C	BOLT Ø1/4" x 40mm		2PCS
				D	SPRING WASHER Ø1/4" x 13mm		10PCS
3	FRONT LEGS		2 PCS	E	FLAT WASHER Ø1/4" x 19mm		10PCS
				F	ALLEN KEY		1PC

Assembly Instructions

DINING Chair




ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS!

STEP 1:

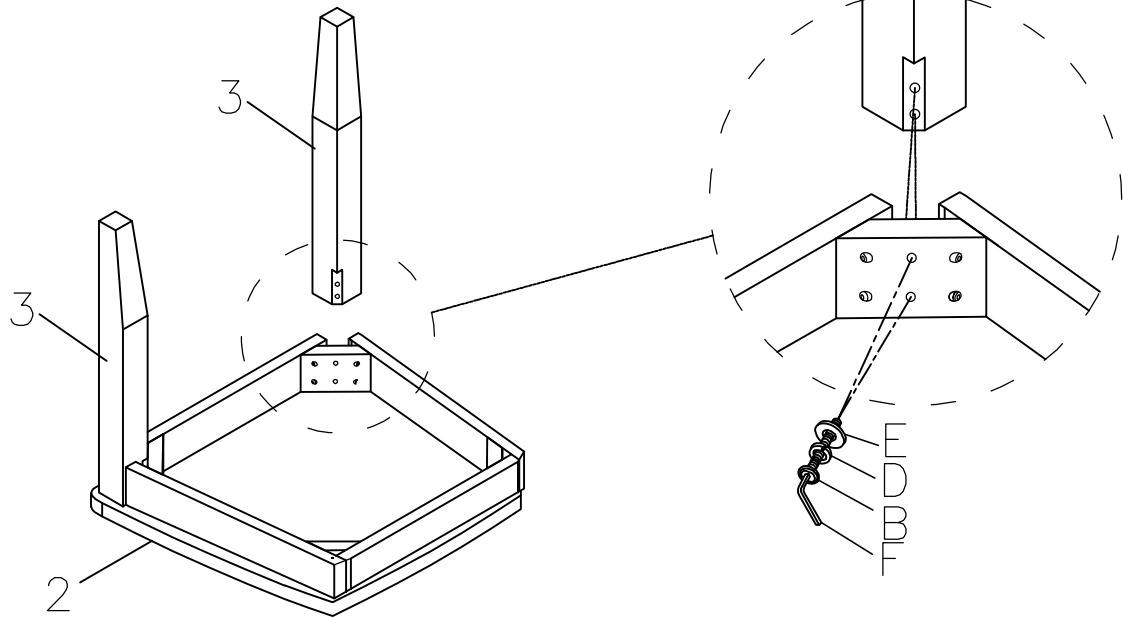

STEP 2:

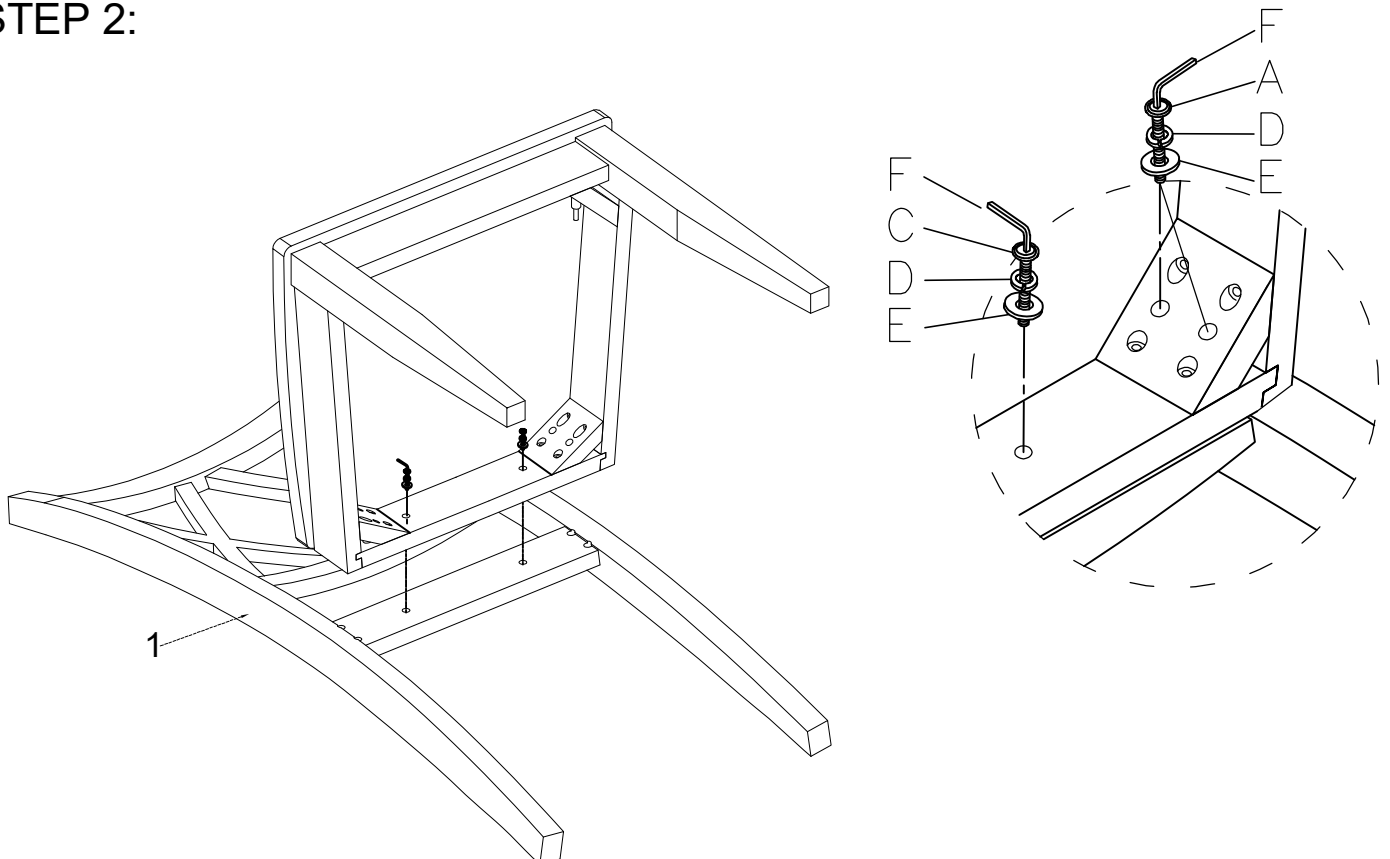

FINISHED

