

Greenstovehori 5 Stove Instruction




Scan QR code to watch instruction videos



Window Glass Assembly




Take out the two screws
on right side

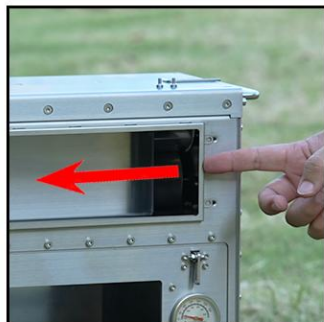

Push the frame to left




Take out the glass frame of
firebox

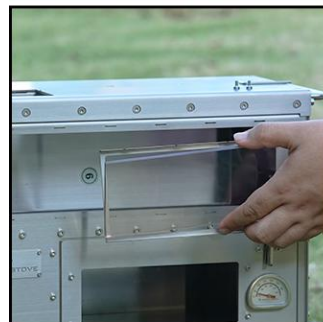

Put glass inside the frame



Put back the glass frame

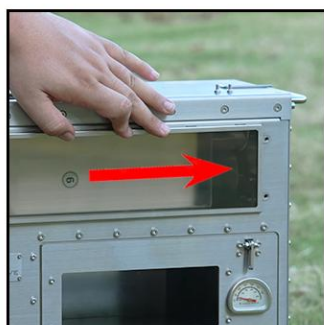

Push the frame to the right



Tight the two screws



Take out the two screws
on left side of oven



Take out one of the
retainer plates



Slide in the glass




Install back the retainer
plate



Tight the two screws

Pellet Mode Assembly

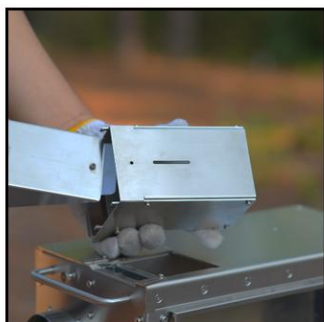


Insert the firepower
adjustment casing pipe
into pellet tube




Screw in power
adjustment nob




Insert pellet cage into
pellet tube

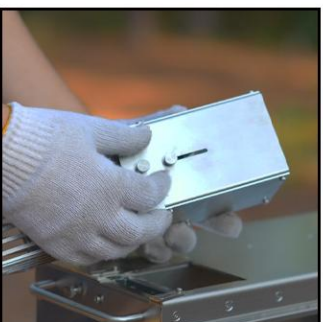


Fix with hand screw

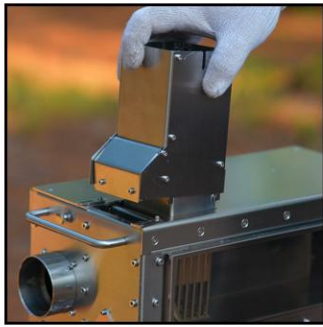


Insert pellet tube into firebox

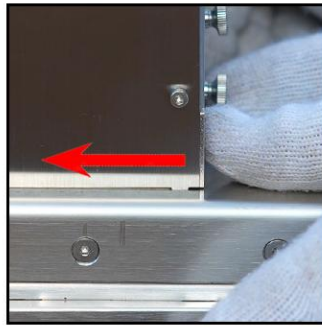

Push left, let the hook on pellet tube to hook on to the stove body

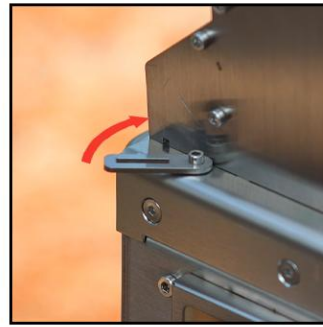

Push in the buckles on both sides to fasten the pellet tube

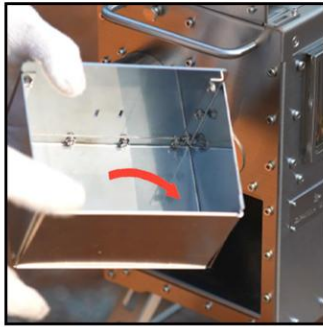

Fold up ash box vertical board



Put back ash box



Loose hand screw



install chimney locking plate



Insert 90 elbow




Install regulating chimney tube



Install spark arrester and fixed ring




Install extended storage rack

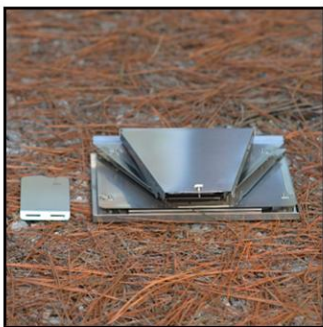



Take out pellet hopper components




The blocking pin can be used as a wrench

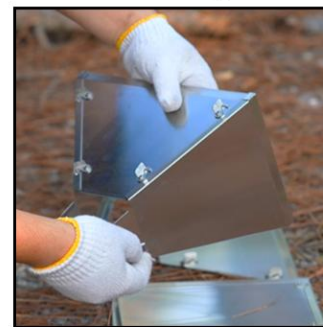


Assemble lower section

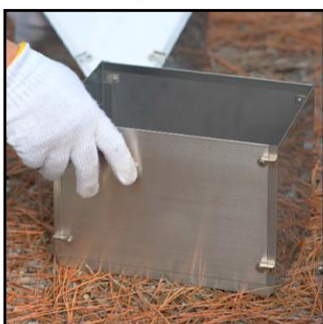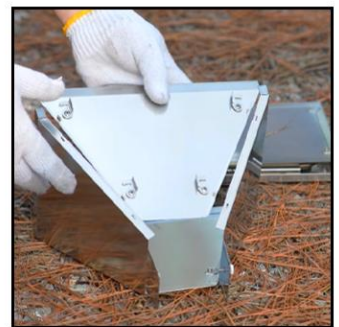

Assemble upper section

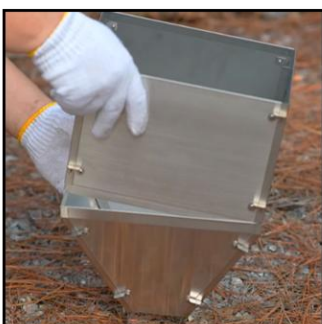

Combine two sections

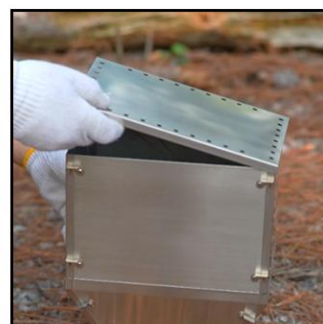

Cover the lid



Insert pellet hopper into pellet tube




Tighten the screw



Fully close lower damper



Unfold ash rake

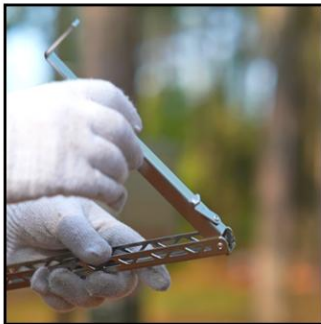

Lock buckle



Ready for burning pellet


Ignition




Fully open chimney damper



Add pellet into the hopper

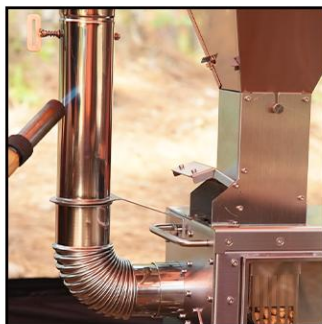

Preheat chimney

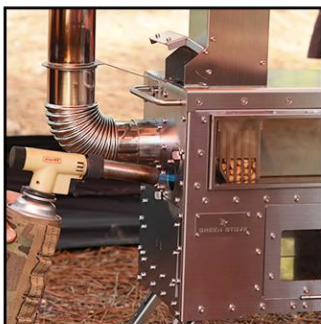

Use torch to ignite pellet through ignition port



Keep heating until flame fully filled the window



Shut the ignition port

Power Adjustment

Use Power adjustment knob and Chimney damper in coordination to adjust the power.

Important Notice

If the knob setting does not match the damper position, it may cause incomplete burning, thick smoke, coking, blockage of the pellet cage, backfire, or smoke leakage from the hopper.



Minimum Power Setting

Power adjustment knob at **MIN**
Chimney damper fully **CLOSED**




Medium Low Power Setting

Power adjustment knob at **MIN**
Chimney damper at some point between **CLOSED** and **OPEN**



Medium Power Setting

Power adjustment knob at **MIN**
Chimney damper fully **OPEN**

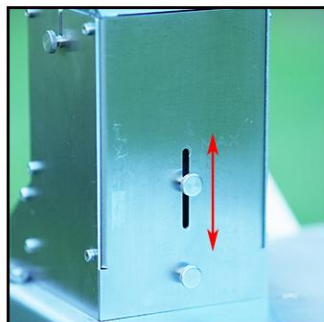

Medium High Power Setting

Power adjustment knob at some point between **MIN** and **MAX**
Chimney damper fully **OPEN**



Maximum Power Setting

Power adjustment knob at **MAX**
Chimney damper fully **OPEN**

Extinguish and Clearing



Insert the blocking pin to the gap between the fuel tank and pellet tube




Hori5 will naturally turn off in 15 to 20 minutes



Use the multifunctional ash rake to remove the ash box for easy cleaning

Wood Mode

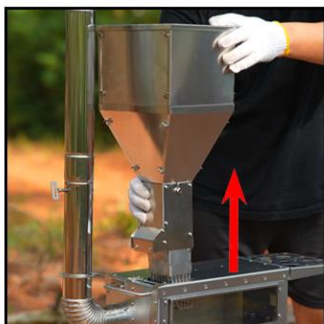

Remove pellet burner



Install the cover plate



Fold down ash box vertical board



The oven door is used as the door of firebox



The lower air damper on the right side of the oven can be used to adjust the firepower or used as an ignition port.

Please note: To extend the service life of the oven thermometer, it is recommended to remove the thermometer on wood mode.

Maintenance

After being subjected to high flame temperatures, the molecular structure of stainless steel may change, weakening its rust prevention ability. Therefore, do not expose the stove to rain or leave at wet area after burning. If long-term storage is required, please spray anti rust oil outside and inside the stove and store in a dry space.