

Installation steps


JFG-001BES-1

STEP 1



1. Take out the tent and spread it on the ground. Secure the four corners with ground nails.


STEP 2

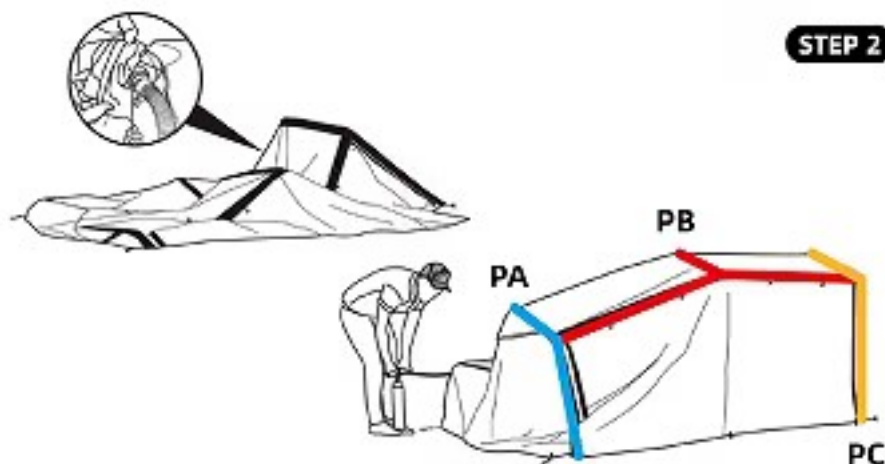

2. Open the cover of the first air valve and connect the air pump to it. Inflate until near saturation. There are three inflatable valves that need to be inflated.

* The inflatable column can be identified through the air valve.

STEP 3

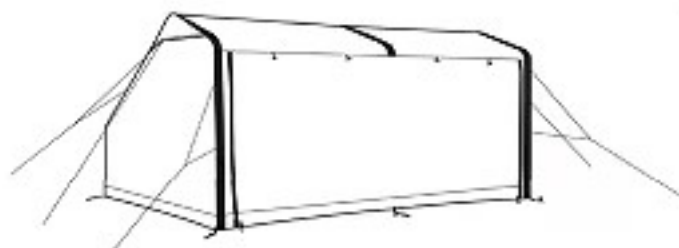

3. Secure the tent with the rest ground nails and wind break ropes.

STEP 4



4. Use three support rods and wind ropes to support the canopy. Please close the curtains in rainy or windy weather.