
ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

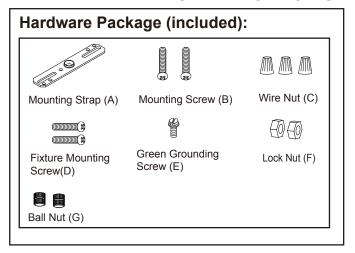


Installation Steps

Turn off the power at fuse or circuit box

- 1. Secure rods into the couplings of the light.
- 2. Attach two fixture mounting screws to the mounting strap, and then secure it with two lock nuts. Adjust the length of the fixture mounting screws if necessary.
- Attach the mounting strap to the outlet box using two mounting screws.
- 4. Rod Connections:
 - a. Thread the fixture wires from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wires through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wires through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.
 - d. Thread the fixture wires through the fixture canopy, and then secure fixture canopy onto the upper rod using the threaded pipe.


Note: Height adjustable from 23-1/4" to 65-1/4". Use fewer rods if shorter length is desired.

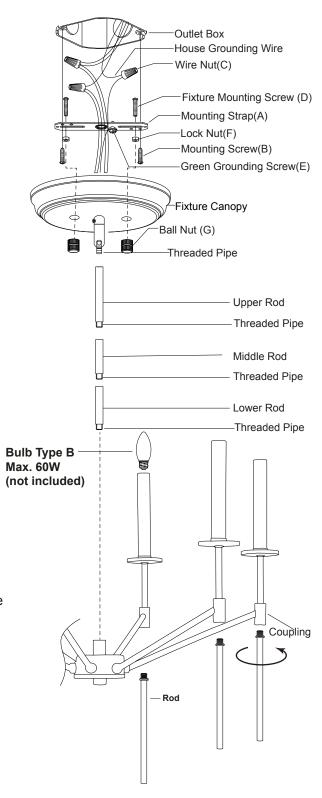

- 5. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - ---Attach the fixture grounding wire to the mounting strap with the green grounding screw, and then connect it to the house grounding wire with a wire nut.


Carefully put the wires back into the outlet box.


- 6. Attach the fixture canopy to the mounting strap by inserting the fixture mounting screws, and then secure it with two ball nuts.
- 7. Install bulbs (not included). Check relamping label at socket area or packaging for maximum allowed wattage.
- 8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

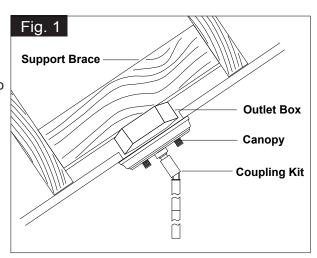

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

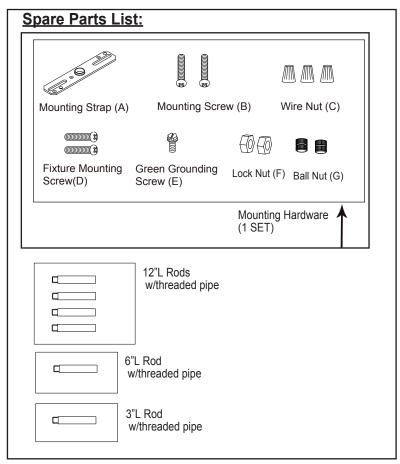

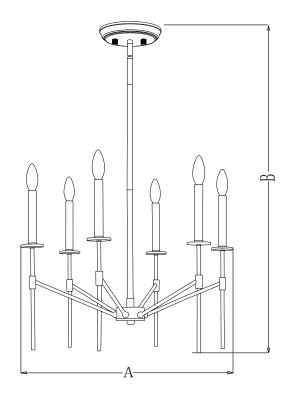

A: 24"

B: 23-1/4"~65-1/4"