


Smart Toilet User Manual

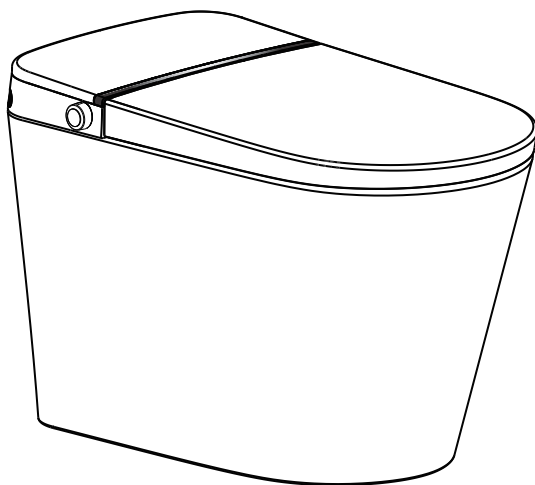

Thank you for purchasing our product
Please read the manual carefully and use the product properly

Installation manual

Packing list	01
Safety precautions	02
Installation precautions	04
Installation dimensions	05
Preparation before installation	06
Installation Instructions	07
Remote control installation	09




User 's manual

Product parts and functions(smart button model)	10
Product parts and functions(smart knob model)	13
Product parts and functions (general)	16
Product functions list	20
Specifications	21
Using Attentions	22
Cleaning Attentions	23
Trouble shooting	24
Requirements for energy efficiency and water efficiency grade	26
Environmental protection service life	26
Electronic and electrical hazardous substance limit indicator	27
Warranty card	28
Qualification certificate	28

Packing list

Dear user:

 Please check whether the items in the box are complete after you open the packing box of this machine. The product packaging box contains the following items:

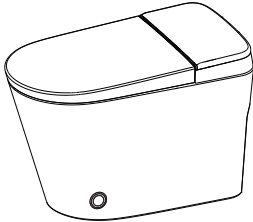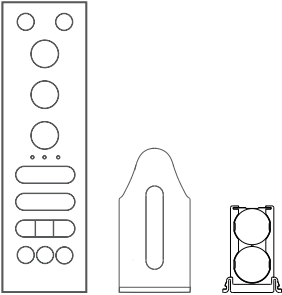	seat cover and WC × 1
	remote controll ×1 remote control bracket ×1 battery compartment ×1
	Filter angle valve ×1
	toilet sealing ring ×1
	User Installation Manual x 1 User's Manual (including warranty card) x 1

Safety Precautions



WARNING May cause electric shock, fire, injury, property damage.

Earthing is required before using and plugged into an (AC120V ,60Hz) power outlet.

*Otherwise it may cause fire or electric shock.

Do not use a damaged power cord, plug or loose electric outlet.

*Otherwise it may cause fire or electric shock.

Do not insert or disconnect the power plug with wet hands.

*Otherwise it may cause electric shock.

Do not strike ,yank, twist, excessively bend, damage, alter, or heat the power cord.

*Otherwise it may cause fire or electric shock.

Never immerse the product into the water.

*Otherwise it may cause fire or electric shock.

Keeping cigarettes and other open flames away from the product.

*Otherwise it may cause fire ,electric shock, heat or short circuit.

Please make sure connect product with cold water

*Otherwise it may result in scalding or product damage.

Never disassemble, repair through unauthorised service person.

*Otherwise it may cause fire ,electric shock, heat, short circuit or mechanical damage.

Prevent children from throwing substances or inserting their hands into the dryer outlet or onto the nozzle.

*Otherwise it may cause electric shock.

Please do not plug in the electrical until installation is finished completely.

*Otherwise it may cause electric shock.

Children, elderly, patients and those who are with physically limited ability should be accompanied to use it.

*Long time use may cause low temperature scalding.

The power cord and power plug must not be damaged. If damaged, it must be replaced by professionals from the manufacturer's maintenance department or similar departments.

*Otherwise it may cause electric shock, fire, and personal injury

Safety Precautions

Grounding should be done in order to prevent short circuit or electric shock. Please consult with licensed electrician in case a grounded outlet is available.

*Otherwise it may cause fire or electric shock.

Do not continue to use the product when the following failures occur. Please unplug the power plug and close the water inlet valve: Water inlet pipe, the product leaks from the inside, the product is cracked or damaged, there is an abnormal sound or smell, the product is smoking, the product is abnormally hot, the toilet is blocked.

*If you continue to use it after the failure, it may cause fire, electric shock or indoor water seepage problems.

This product is an electrical product, so please do not install it in a place that is easily splashed by water or high humidity. The plug is recommended to be more than 30cm above the ground. When using it in the bathroom, please install a ventilation fan or ventilation hole to keep the bathroom good air circulation.

*Otherwise it may cause fire or electric shock

Precautions for using battery

The battery and product contact shall be kept clean. If necessary, it can be wiped with a damp cloth.

After drying, it shall be correctly installed according to the polarity identification.

Please replace all batteries in a group of batteries at the same time.

The old and new batteries cannot be mixed.

Do not mix batteries of different electrochemical types or brands, which may cause the batteries in use to be in an over discharged state and increase the possibility of liquid leakage

Do not regenerate the disposable battery by heating or charging, which may cause explosion.

Do not short-circuit, heat, put into fire or attempt to disassemble the battery.

Do not place the battery on a high temperature surface or expose it to extreme environments such as direct sunlight, which may cause leakage.

Do not discard the waste battery randomly. Please dispose it according to the relevant national regulations.

Be sure to use alkaline battery to avoid damage to the remote control due to battery leakage.

If the battery is not used for a long time, please remove the battery to avoid damage to the remote control due to battery leakage.

Reminder!

■ The product has been tested for water before delivery, and a small amount of residual water drops may flow out when the product is taken out, which is a normal phenomenon

Installation Attentions

Make sure the space is suitable for the size of this product

* Please refer to specifications

Do clear up the buried water pipe and the ground with impurity and mud before installation

*Or it will cause damage to product

Check power supply: Power: 120V~ ,60Hz; Socket current: 10A

*Or it may cause damage to this product

Check water supplies: the position of angle valve, outlet connector and water pressure

*Or it may cause installation failed

Please do not take this product by carrying seat or cover only

* Or the main body may fall off and hurt people

Please screw the water inlet pipe tightly

*Or it will cause water leaking

When installation, please replace with new hose. The old hose is not allowed to use again

*Or it may cause water leaking

Before finishing installation, please do not set up electricity or water

*Or it will cause damage to product

It is suggestive to install a angle valve in the washroom where this product is installed, in order to cut off water supply when in emergency


*Or it may cause accident and loss to users

When transporting and installing this product, do not touch the flushing nozzle on the inner edge of the ceramic. If you do, please adjust it according to the actual flushing state (the flushing nozzle will be adjusted to the best flushing angle before leaving the factory)

*Otherwise it may cause the product to flush. not effectively


Installation dimensions

Company: mm

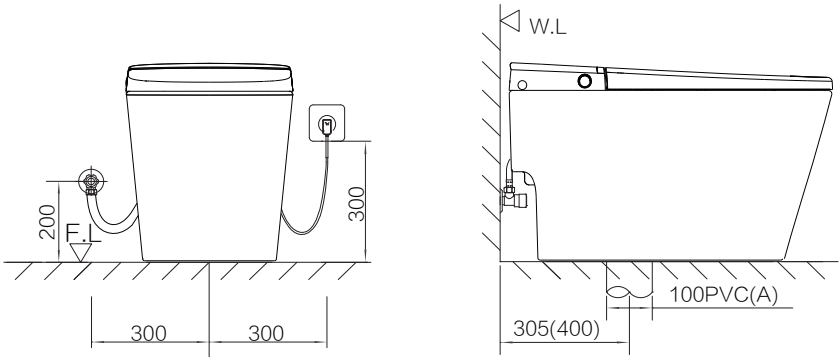

Preparation before installation

1. Please ensure that floor tiles and wall tiles have been laid, and pit pipes and water supply pipes are reserved.
2. Please make sure to reserve the installation position according to the following figure (* represents the recommended size), so as not to affect the normal use of the water inlet pipe and power cord.
3. According to the length of the power cord in the user's manual, please determine the position of the socket first, and the power socket should be close to the installation position of the product.
4. Confirm that the distance from the center of the pit pipe to the wall (pit distance) matches the selected product.
5. Before installation, be sure to open the water inlet switch to drain water, so as to clear the impurities and sludge in the embedded water pipe, so as to avoid blockage Plug, affecting product function.

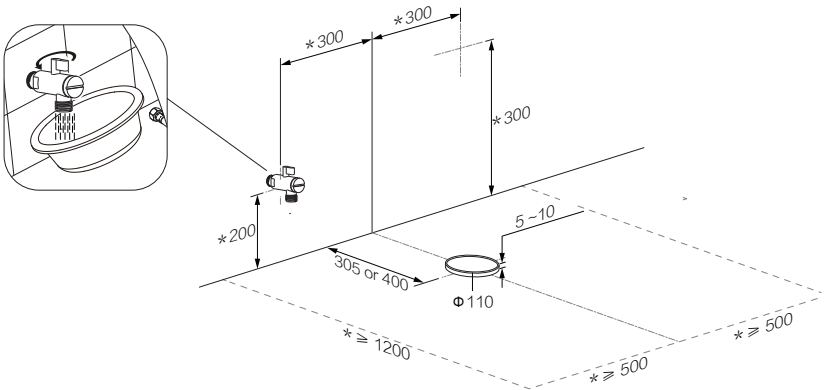


Installation Instructions

- 1 A: Close the main water valve, replace it with the filter angle valve, clean the ground and wipe the water dry at the same time;
B: Move the toilet near the drain hole, stick the adhesive part of the sealing sludge towards the ceramic direction, and then move the toilet so that the small hole of the sealing sludge is aligned with the drain hole.


Note:

1. If the special angle valve configured for the product is not used, the normal operation or service life of the product may be affected;
2. The cleanliness and dryness of the ground will affect the firmness of the subsequent products.

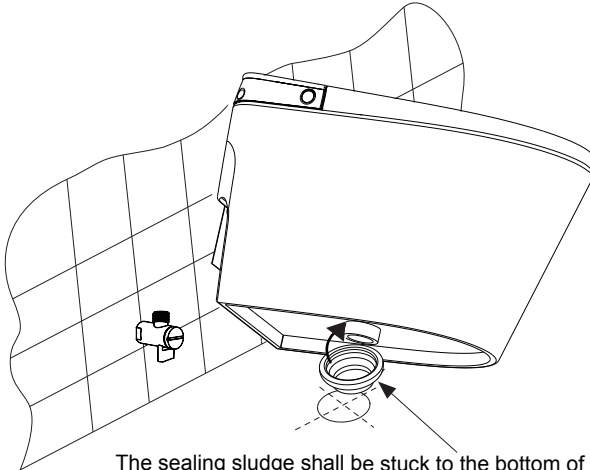


The sealing sludge shall be stuck to the bottom of the ceramic first, and the small mouth shall be downward

- 2 Adjust the toilet to make it close to the sealing ring.
※ After installation, do not shake left or right, otherwise poor sealing will be caused

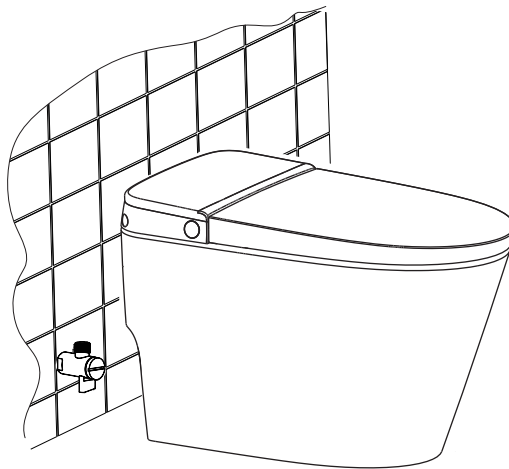


Installation Instructions

- 3** Install the water inlet hose
Draw the water inlet braided pipe out of the toilet and tighten it with the filter angle valve.

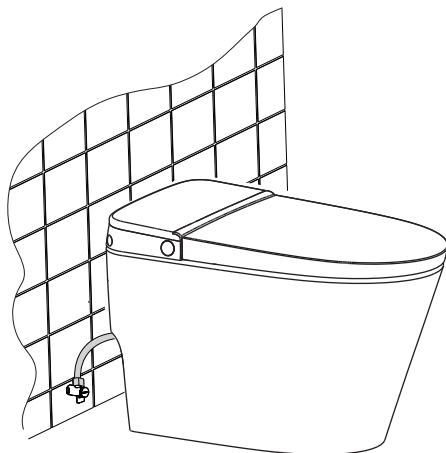

- 4** Connect the water inlet pipe, plug in the leakage protection plug, and conduct normal function test.

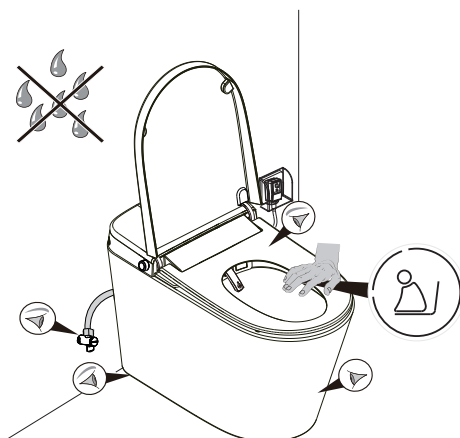

ON




ON

1. Open the angle valve and check whether each part of the connecting pipe leaks;
2. Connect the power supply and start the self inspection mode of the product;
3. Press the flushing button to realize automatic flushing;
4. Press and hold the seat sensor, and select hip wash or women wash after hearing the drip sound to check whether the cleaning function is available;
(To prevent water from splashing, aim the water cup at the water outlet)
5. Recheck whether each part of the connecting pipe leaks. If it is confirmed that there is no problem, the product test is completed.

Installation Instructions


- 5 Apply a circle of glass glue around the ceramic and wait for 24h before using.
be careful:
- 1. Before gluing, ensure that the ceramics are upright and stably fixed on the ground;
 - 2. The glue should be used carefully during the curing period to prevent the ceramic from swinging and damaging the sealing effect.

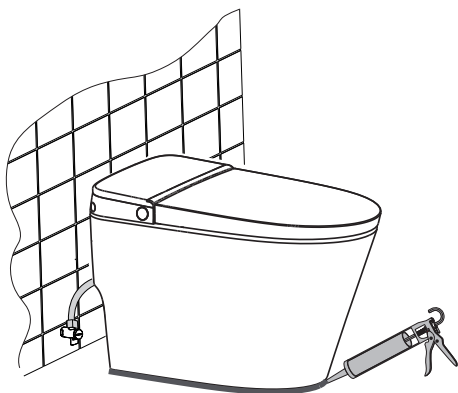

reminder


- *The above pictures are for reference only, please refer to the real object
- *Do not hit the ceramics during installation, otherwise it may cause personal injury, water leakage and other consequences
- *Installation must be carried out according to the installation instructions, otherwise it may cause failure or water leakage

Remote control installation

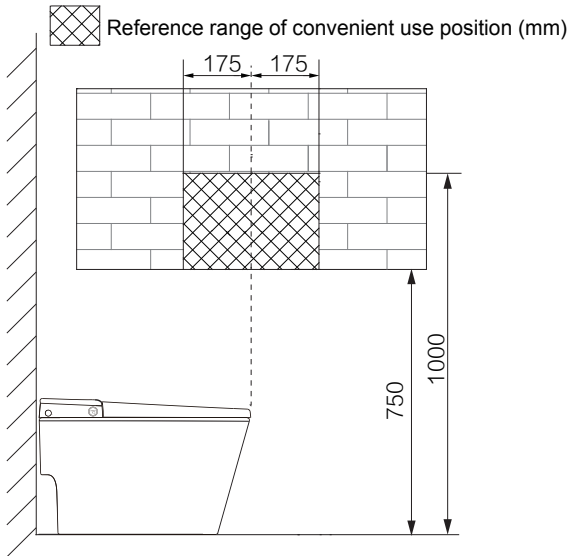


Remote control installation


1. Install the battery.

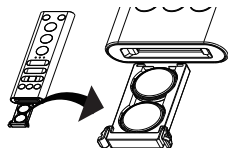



2. Paste silicon sealant around the back of the bracket.

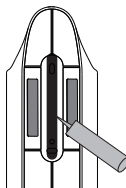

3. Before attaching the bracket, please make sure the wall is clean and smooth. Must wait for 24 hours before setting the remote control.

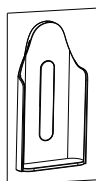


■ Replacing the battery:

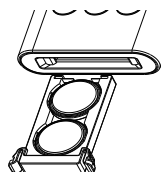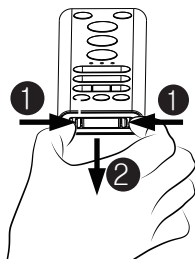

Warnings:


- Prohibited to install in moisture environment or on a wall with water leakage.
- Please confirm the "+" "-" pole while inserting the batteries.

Product parts and functions(smart button model)

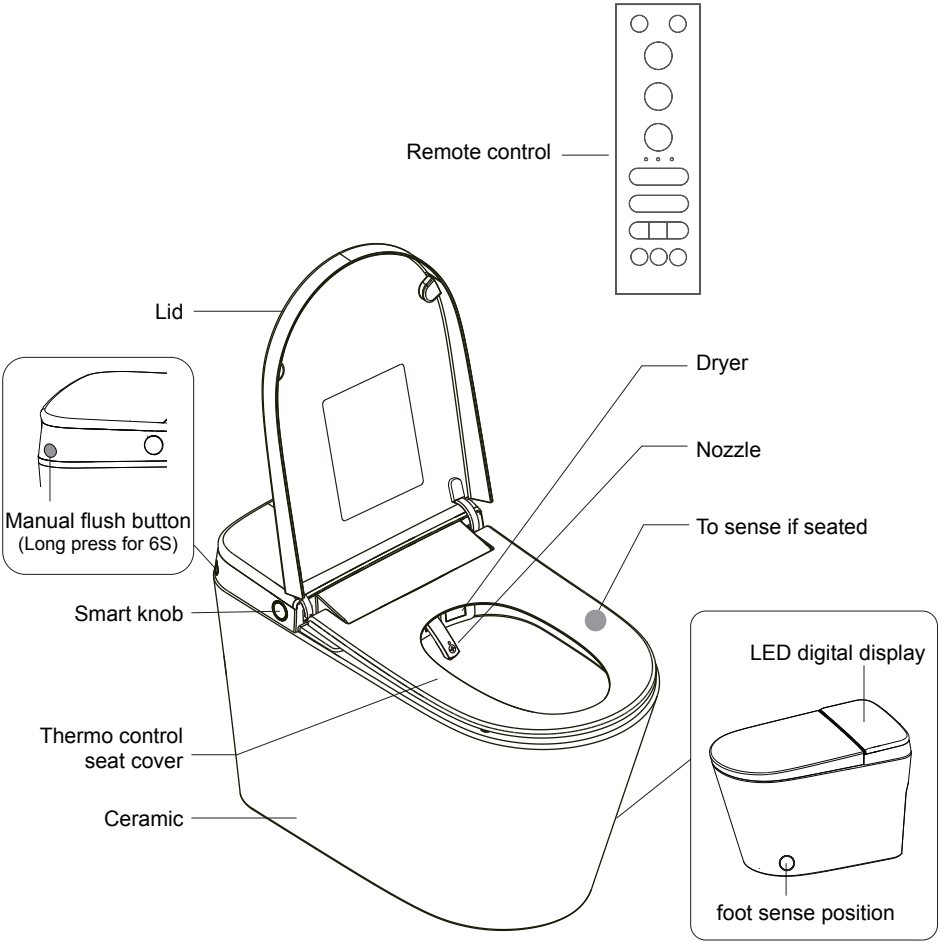

Product parts and functions(smart button model)

Indicator light

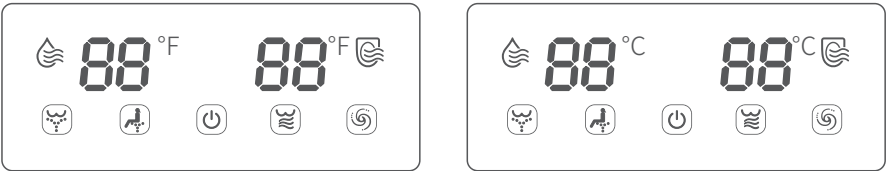

Rear wash



Front wash



Power indication



Dryer



Flush

Standby mode:

1.only the "  "is displayed

When the machine is powered on for the first time, the default water temperature is displayed at 96.8°F (36 °C) , and the seat temperature is displayed at 93.2°F (34 °C) ,

When there is no operation within 15min, the display will enter standby mode

Active state:

1.The icon is displayed when the machine is active

If you press the button on the remote control to "  ", "  ", "  ", "  " or "  ", the corresponding button icon will be directly executed,

When the corresponding function is completed, the corresponding display will be off.


2.When the remote controll adjusts the seat temperature, the display screen displays the corresponding seat temperature: off, 86°F (30 °C) , 93.2°F (34 °C) , 98.6°F (37 °C)


Levels shift sequence: off-1-2-3-2-1-off ,

3.When the remote controll adjusts the water temperature, the display screen displays the corresponding water temperature level: 82.4°F (28 °C) , 93.2°F (34 °C) ,96.8°F (36 °C) , 100.4°F (38 °C)


Note: the startup water temperature initially displays 96.8°F (36 °C) , and then the water temperature is displayed according to the temperature adjusted for the last time.

Product parts and functions(smart button model)

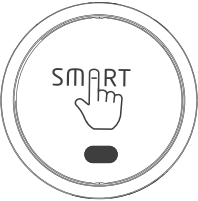Smart Clean Button Functions	
	when seated : 1.short press button: A、start automatic spray and air drying (at factory default settings) (anal spray 60s- massage anal spray 30s-drying 30s-stop) B、stop toilet's current work 2.long press button: toilet full flush
	when unseated : 1.short press button: toilet full flush 2. long press button: start energy saving function . A.turning off night light B.seat temp.down to level 1


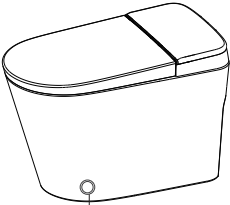
No touch foot sense flush instructions	
 Infrared sense window (only for sense,not for touch)	Foot sense flush instructions: 1. One time of foot sense for 3s, one time of half flush. 2. If foot sense for more than 3s and not take away from the sense window, it still only activates one time of half flush. 3. If you want to activate foot sense flush once more, please take away your foot and approach the sense window again. 4. If your shoe's color too dark, you need to approach sense window closer (dark color absorbs light ,that affects functional of infrared)

Product parts and functions(smart knob model)

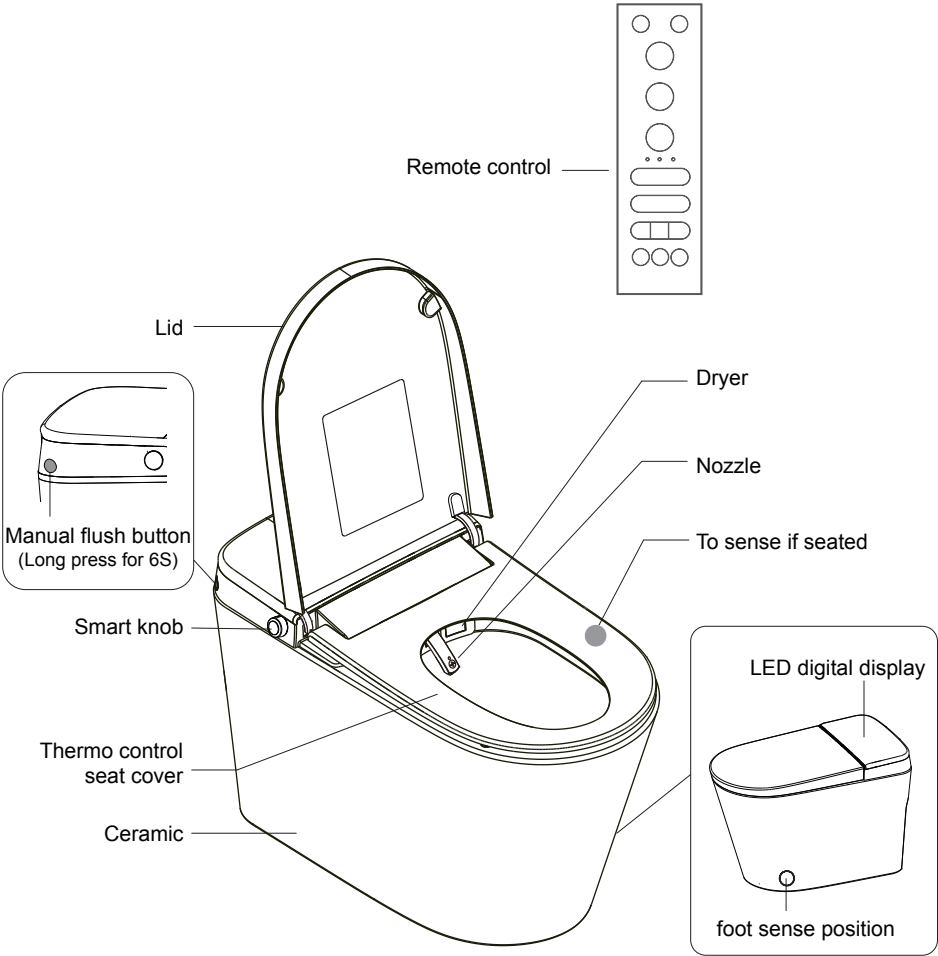

Product parts and functions(smart knob model)

Indicator light

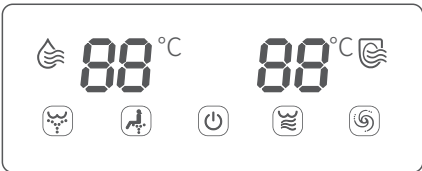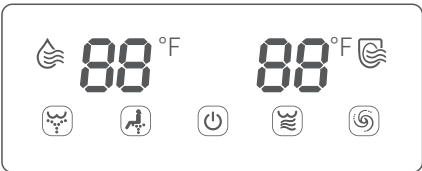

Rear wash



Front wash



Power indication



Dryer



Flush

Standby mode:

1. only the "  " is displayed

When the machine is powered on for the first time, the default water temperature is displayed at 96.8°F (36 °C) , and the seat temperature is displayed at 93.2°F (34 °C) ,

When there is no operation within 15min, the display will enter standby mode

Active state:

1. The icon is displayed when the machine is active

If you press the button on the remote control to "  ", "  ", "  ", "  ", "  " or "  ", the corresponding button icon will be directly executed,

When the corresponding function is completed, the corresponding display will be off.

2. When the remote controll adjusts the seat temperature, the display screen displays the corresponding seat temperature: off, 86°F (30 °C) , 93.2°F (34 °C) , 98.6°F (37 °C)


Levels shift sequence: off-1-2-3-2-1-off

3. When the remote controll adjusts the water temperature, the display screen displays the corresponding water temperature level: 82.4°F (28 °C) , 93.2°F (34 °C) , 96.8°F (36 °C) , 100.4°F (38 °C)


Note: the startup water temperature initially displays 96.8°F (36 °C) , and then the water temperature is displayed according to the temperature adjusted for the last time.

Product parts and functions(smart knob model)


Turn front for WASH  When seated: 1.Start front wash by rotating in clock direction 2.Enter front wash massage mode by rotating again When unseated 1.Rotate the controlling knob clock or anti-clock direction, the spray is out with slim water for nozzle self clean. 2.Press any button or operate the controlling knob, the spray will re-self clean and start operating.	Turn rear for WASH  When seated: Start rear wash by rotating in anti-clock direction Enter rear wash massage mode by rotating again	Press the smart button  When seated: 1. Stop the wash mode/ massage wash mode / bidet wash mode /bidet massage wash mode while wash mode is working. 2. Start dry or stop dry while wash mode is not working. 3. Press the button within 3 seconds, it is flushing. When unseated : 1. long press button: start energy saving function .
--	---	--

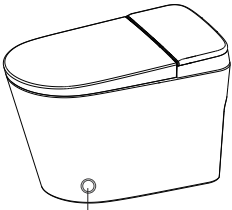No touch foot sense flush instructions	
 Infrared sense window (only for sense,not for touch)	Foot sense flush instructions: 1. One time of foot sense for 3s, one time of half flush. 2. If foot sense for more than 3s and not take away from the sense window, it still only activates one time of half flush. 3. If you want to activate foot sense flush once more, please take away your foot and approach the sense window again. 4. If your shoe's color too dark, you need to approach sense window closer (dark color absorbs light ,that affects functional of infrared)

Product parts and functions introduction

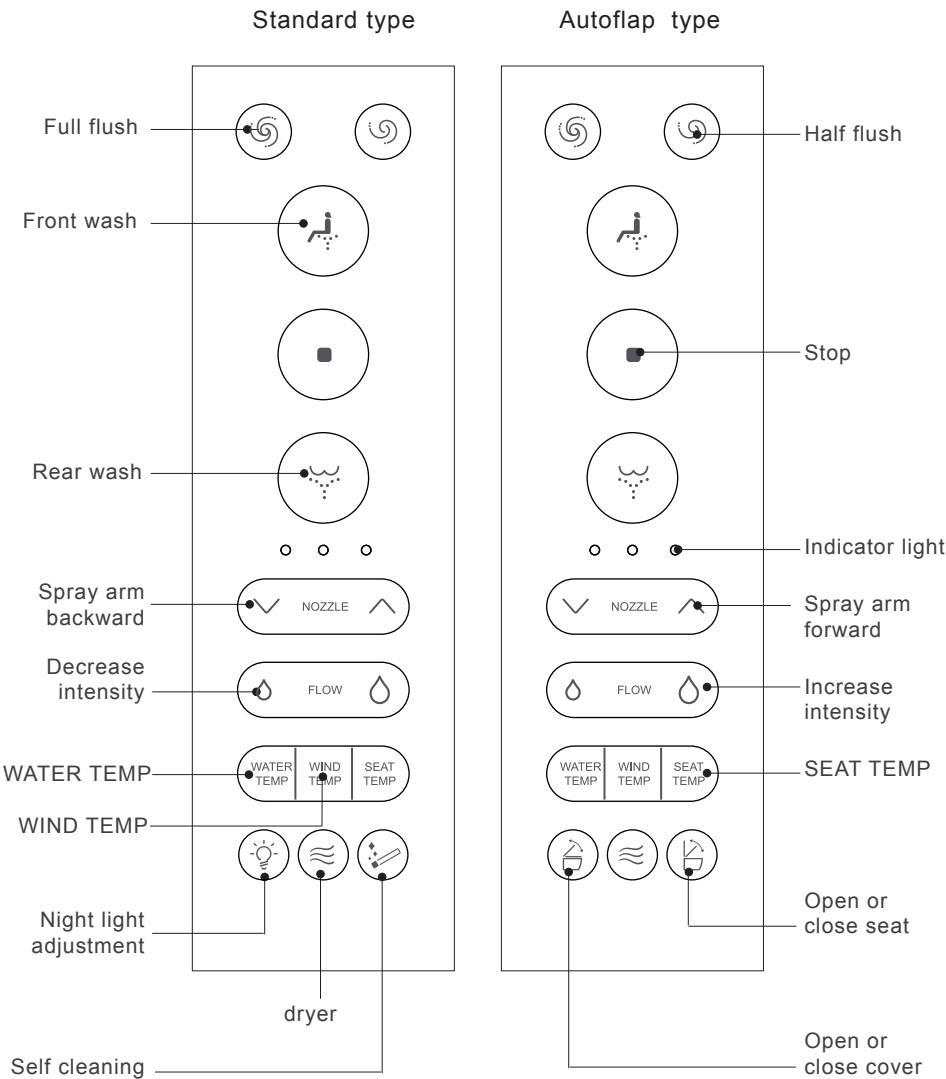

Product parts and functions (general)

 Full flush		Press "  , start full flush	Half flush		Press "  , start half flush
Front wash		When seated,press "  ,start front wash , press "  ,again ,enter front wash massage Press "  " turn off the front wash function.If not,stop washing after about 5 minutes.			
Rear wash		When seated,press "  ,start rear wash , press "  ,again ,enter rear wash massage Press "  " turn off the rear wash function.If not,stop washing after about 5 minutes.			
		Spraying, press "  , wash forward Press "  , wash backward The position of nozzle can be adjusted with five levels			
		Spraying, press "  , increase intensity press "  , decrease intensity The water pressure can be adjusted with five levels			
		WATER TEMP: Spraying,the water temperature can be adjusted with four levels: First: OFF (The indicator is off) 、 Second (Indicator light on 1) Third (Indicator lights on 2) 、 Fourth (Indicator lights on 3) levels shift: off—low—middle—high,four gear change WIND TEMP: Drying, the air temperature is adjustable in four levels: First: OFF (The indicator is off) 、 Second (Indicator light on 1) 、 Third (Indicator lights on 2) 、 Fourth (Indicator lights on 3) levels shift: off—low—middle—high,four gear change SEAT TEMP: Seat temperature adjustment, the seat temperature is adjustable in four levels: First: OFF (The indicator is off) 、 Second (Indicator light on 1) 、 Third (Indicator lights on 2) 、 Fourth (Indicator lights on 3) levels shift: off—low—middle—high,four gear change			
Dryer		When seated, press "  , start drying function, press "  " turn off the drying function. If not, it will be stopped after about 5 minutes.			
Night light adjustment		The night light brightness can be adjusted with four levels: levels shift: off—low—middle—high,four gear change			
Nozzle self cleaning		When unseated , the spray will self cleaning			
Open or close cover		When unseated , Open or close cover			
Open or close seat		When unseated , Open or close seat			
Stop		Press "  " turn off the wash function,dry function.			

Tips: 1. One click sound means valid operation, two click sound means invalid operation



Product parts and functions introduction

Stop



Preperation(Factory set frequency):

- 1.Power off toilet, press "STOP" button until temperature lights blinks.
- 2.Connect main power, when the temperature indicator light stop blinking,frequency setting is ok.

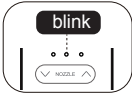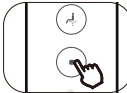

■ Extra functions (if power cut off for 30s, the factory settings can be restored after restart, and the following key combinations need to be reset to take effect.)


 + 	Turn on or off the prompt sound : First press button "  "without finger off, then press button "  "at 2-second intervals.	For Automatic Flap
 + 	Turn on or off automatic deodorization : First press button "  "without finger off, then press button "  "at 2-second intervals.	
 + 	Activate human body sensor when unseatd(Child use patterns): When unseated , first press button "  "without finger off, then press button "  "(decrease intensity button) at 2-second intervals.	
 + 	Turn on or off automatic flushing : First press button "  "without finger off, then press button "  "at 2-second intervals.	
 + 	Turn on or off spray self cleaning : When unseated: First press button "  "without finger off, then press button "  "at 2-second intervals.	
 + 	Adjust LED night light: First press button "  "without finger off, then press button "  "at 2-second intervals. levels shift: off—low—middle—high,four gear change	For Automatic Flap
 + 	Turn on or off the automatic flap function: First press button "  "without finger off, then press button "  "at 2-second intervals.	
 + 	Adjust the auto.flap distance: First press button "  "without finger off, then press button "  "at 2-second intervals. When "Di" sound is heard, it is the first gear; When "Di Di" sound is heard, it is second gear; When you hear the sound of "Di Di Di", it is the third gear	

Product parts and functions introduction


Foot sense flap and flush function

When lid and seat are closed, the foot approaching sense will trigger lid opening
When lid is open, seat is closed, the foot approaching sense will trigger seat opening.
When lid and seat are open, the foot approaching sense will trigger half flush.
(To avoid misoperation, it is not suggestive to have highly reflective objects in front of foot approaching sense.)


Auto.flap Product parts and functions introductions

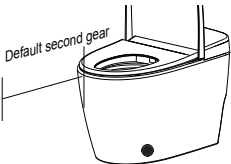


Sensing distance adjustment method:
Press the "Water Temperature" button first without letting go,
Then press the "Seat temperature" button,
When you hear the "Di Di" sound,
it is the first gear, about 0.5m
When you hear the "Di~Di Di " sound,
it's second gear, about 1.0m
When you hear the sound of "Di~Di Di Di",
it is the third gear, about 1.5m

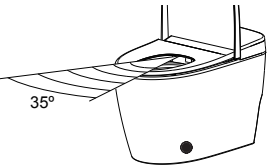

Sensible area:
about 35° at horizontal level

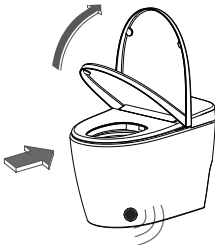


When lid and seat are closed,
the lid will be opened by human being
approaching with a certain moving speed
or the foot approaching sense.

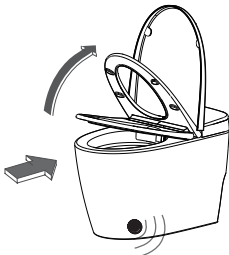

When lid is open, seat is closed,
the seat will be opened by foot
approaching sense.

When lid or seat is open,
the lid and seat will close automatically in 3 minutes
without seeing human being's movement.

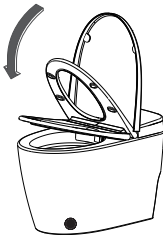


Product functions list

Function	Specification	Factory setting
Wash funtions		
Rear shower	Two shower modes (still/oscillation)	Still shower
Front shower	Two shower modes (still/oscillation)	Still shower
Water temperature adjustment	Three levels : OFF-1-2-3 Temperature range(from lab) : about 93.2°F-100.4°F (34°C--38°C) , 【about 82.4°F (28°C) at off level】	The second level
Nozzle position adjustment	Five levels of different nozzle positions for different needs	The third level
Instant heating	Heating water which flows into the toilet instantly to enjoy warm water shower	On
Spray pulsation	Internal air pump makes bubbles into water to enjoy spray impluse	On
Spray intensity adjustment	Five levels for spray intensity	The third level
Human-friendly hygiene designs		
Seat temperature adjustment	Three levels : OFF-1-2-3 Temperature range(from lab) : about 86°F-98.6°F (30°C--37°C)	The second level
Drying	Three levels : OFF-1-2-3	The second level
Sitting sensor	Avoid wrong operation by accident when not sitting	
Remote control	Use the relative functions by remote control	
Water spray	Rear shower 60s- oscillation rear shower 30s-drying 30s-stop	
Night light	Light inside the ceramic for user's convenience	
Self cleaning of the nozzle	Self cleaning of the nozzle when extending and retracting	
Foot sense flush	When the foot approaches the sensor within 5 cm, the automatic flushing function is activated (kick sensor is not allowed)	
Auto. flushing	Flush automatically in 10s after standing up from toilet seat	
No power flush	Without power, you can press the side standby flush button to flush (long press for more than 6 seconds)	
pre-wetting	After seating, the surface of the toilet will automatically flush for 1s, and the ceramic wall will be pre wetted for seating and moistening	
Smart button with energy saving functions	when unseated: long press smart button to start energy saving function	

Remark: The functions may vary with different type.

Specifications

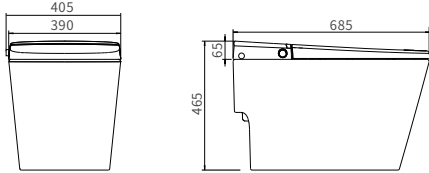Item	Description	
Voltage	120V~, 60Hz	
*Rated power	900W	
Water connection	Water pipe supply	
Water pressure requirment	0.07MPa(dynamic)-0.75MPa(static)	
Water supply temperature requirment	41-105.8°F (5-35°C)	
Environmental temperature requirment	32-104°F (0-40°C)	
Waterproof grade	IPX4	
Wash Function	Warm water temperature	4 adjustable gears
	Warm water volume	5 adjustable gears
	Heating mode	Instant heating
	Safety device	temperature Controller,NTC, Pressure stabilization valve,Thermal fuse
Toilet Seat Heating	Seater temperature	4 adjustable gears
	Safety device	Temperature controller, NTC and thermal fuse
	General heater power	50W
Dry	Warm air temperature	4 adjustable gears
	Air speed	≥0.2m³/min
	General heater power	200W
	Safety device	Temperature controller, NTC and thermal fuse
Product weight	48±2kg	
Product size		

*Rated power
 Under the condition of inlet water temperature of 59 ± 1 °F, inlet water pressure of 0.2 ±0.02Mpa and ambient temperature of 73.4 ± 2 °F, the product can be powered on, water temperature and seat cover temperature adjusted to the highest level, The reference effluent flow rate is about 500ml / min, and the average power of the product continuously and stably working for about 5min in a cleaning cycle is measured.)

Using Attentions

Please don't rely on cover when using product

*It may damage product.

Do not stand on the top of the product, seat or main body unit.

*Or it will damage or break the unit.

Please don't exposed product under sun

*It may cause fade , seat temperature instability.

Please don't spill urine on cover and nozzle

*It may contaminated the cover and nozzle

Don't hit the product forcefully

*Otherwise it may break or lead to water or electric leakage

Please use the radio far from the product

*The radio may cause noise

Please pull out the power plug when thundering and lightening

*Otherwise it may cause product damage

Please don't place stuff on the seat

*Otherwise it may cause induction failure to the seat.

Please pull out the power plug before cleaning the whole product

*Otherwise it may cause electric shock

Don't throw newspaper, diapers or the other easy blockage into the toilet

*Otherwise it may cause plugging up

Use neutral cleanser during cleaning and clean up in time

*Otherwise it may cause product damage or breakage

Do not spray water directly on the product when cleaning the product

*Otherwise it may cause malfunction to the product.

the appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Cleaning Attentions

The appearance of the electronic cover is clean (Power off)


1. Unplug the power plug
2. Wipe with sponge or smooth soft cloth dipped in soapy water or diluted neutral detergent, and then wipe with clean water.

This product is an electrical product. Please do not let water enter the body and seat ring or leave detergent between the seat ring and the body, which may cause failure or damage to the plastic parts.





Do not use rough dry cloth, nylon brush, sandpaper, etc. to wipe the plastic parts, which may cause scratches on the toilet.

Please do not use hydrogen chloride cleaner, insecticide and other non neutral cleaner products, banana water, decontamination powder, etc. to wipe after being diluted in water, which may cause damage to the toilet.

3. After cleaning, plug the power cord into the power socket and turn it on

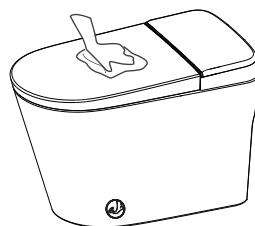

Cleaning filter screen

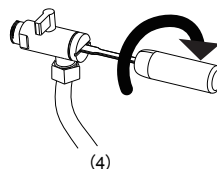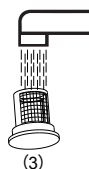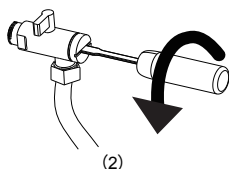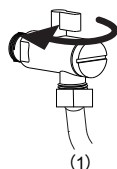


Nozzle cleaning (Power on)

1. When not seated, first press button **【●】** without finger off, then press button **【🚿】** at 2-second intervals, the spray arm will extend to maximum position. (It will withdraw automatically in 3 minutes)

2. Use a brush or soft cloth to clean the nozzle.

3. After cleaning, press any button, the spray arm will withdraw and self-clean.

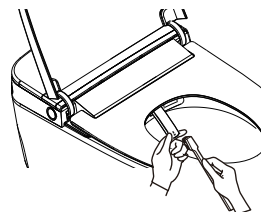

Warning: 1.Children shall not play with the appliance.

2.Children are not allowed to clean and maintain without supervision.

Trouble shooting

■ Checking firstly

Please check followings before judging something as fault.

Check power supply

*Make sure the product is connected to power.

Check water supply

*Make sure main supply valve is open.

*Confirm there are no leaks from hoses or water supply.

■ Fault diagnosis

Type	Problem	Factors to check
Unit operation	Rear shower or front shower does not work	*Check the remote control batteries are ok or not. *Be sure to sit on the seat correctly so that the body sensor switch will function properly.
	Rear shower or front shower shut off during use	*Maybe washing or drying time exceed the system default setting for safe single use, just press the button again. *Be sure to sit on the seat correctly so that the body sensor switch will function properly.
	Body unit shakes	*Tie the screws properly (do not over-tight).
	The product works disorder	*Unplug the product and restart.
Showering	The nozzle doesn't come out	*whether the skin touch the body sensor on the seat or not.
	Nozzle can't move to right washing area.	*Maybe you are sitting much too forward and the nozzle can't reach to the right position. *Check whether the nozzle position is adjusted to right position. *Check the supply water pressure is too low (<0.07MPa) or not.
	The water is leaking	*After checking whether water inlet joint is leaking.If water is leaking form the main unit ,disconnect and contact service personnel.
	The water does not spray as ordered	*Check the nozzle is clogged or not. *Be sure to sit on the seat correctly so that the body sensor switch will function properly.

Trouble shooting

Type	Problem	Factors to check
Showering	Water pressure is weak	*Check whether the water flow is setted at low. *Check whether the nozzle is clogged. *Check whether the water valve is fully open. *Check whether the water supply hose is leaking.
	Water not heated	*Check the water temperature is set at right level or not. *The heating system is damaged,please contact us for support.
Seat	Seat not heatable	*The seat temperature is set at low level.
Remote control	Remote control is insensitive	*Check the battery is enough or not. *Be sure the remote control is installed in the valid range.
Flushing	No auto.flushing	*Sitting period <10s *Drainage valve abnormal
	Water keep coming in toilet hole	*Inlet valve or drainage valve abnormal
	Foot sense flush not work	*During sitting, foot sense flush function is closed. *The color of shoes are too dark. *Foot sense time is too short (it is suggested to be more than 3s). *One Foot sense activates only one time of flush. *Foot sense distance is out of the effective area (it is suggested to be within 5cm). *There is something wrong with flushing function.
Automatic flapping	Auto flip initialization instructions: (if the automatic flapping funtion is abnormal, it shoud be initialized according to the following operations) Firstly, power off for more than 30s (ensure complete power off of the whole machine), Then power on again. Within the first 10s after power on, Press the button“  ” on the remote control to initialize the automatic flapping funtion; During initialization, the seat and lid are closed first, and then opened in sequence, Finally, the prompt tone of "Di ~ Di" is heard, indicating that the initialization is finish.	
After the above inspection, if the fault still cannot be eliminated, please contact our company after-sales service.		

Note: The effective prompt sound for seating induction is a short "di" sound.
 The above sensible distance may vary with different shoes' material、color and so on.

Requirements for energy efficiency and water efficiency grade

The energy efficiency and water efficiency grade of the company's intelligent toilet products meet the requirements of GB 38448 <Limits and Grades of Energy Efficiency and Water Efficiency of Intelligent Toilets>,The energy efficiency and water efficiency grade indicators of intelligent toilet are shown in the table below:

Energy efficiency and water efficiency grade of intelligent toilet			Level 1	Level 2	Level 3
Energy efficiency grade index	Energy consumption / (kW h)	With seat ring heating function	≤0.030	≤0.040	≤0.060
		Without seat ring heating function	≤0.010	≤0.020	≤0.030
Water efficiency grade index	Average water consumption for cleaning intelligent toilet /L		≤0.30	≤0.50	≤0.70
	*Average flushing water consumption of intelligent toilet /L		≤4.0	≤5.0	≤6.4
	*Water consumption for full flushing of double flush intelligent toilet /L		≤5.0	≤6.0	≤8.0
Tips1:***Applicable to integrated intelligent toilet Tips2: In each water efficiency grade, the average semi flushing water consumption of the double flushing intelligent toilet is not more than 70% of the maximum limit value of its full flushing water consumption (The energy efficiency and water efficiency grade of the product you purchased shall be subject to the energy efficiency and water efficiency grade marked on the product or package。)					

Environmental protection service life

Environmental protection service life

The number of years in this sign is based on the environmental protection service life of SJ/T 11364-2014 [Requirements for Restricting the Use of Hazardous Substances in Electronic and Electrical Products].

Only observe the precautions for the safety and use of such products recorded in the user manual. Within this period of time from the date of manufacture, there will be no leakage or mutation of harmful substances caused by the product, and no serious pollution to the environment or serious damage to the user's personal and property will occur.

[Environmental Protection Service Life] It is neither a safe service life nor a warranty period. If the product is not suitable for continued use and needs to be discarded, please follow the relevant laws and regulations on electronic and electrical product recycling for repair. Thank you for your cooperation.

Note: Depending on the model of the product, the product you purchased may not contain all of the above components.

Electronic and electrical hazardous substance limit indicator

Part name	Hazardous substances					
	Pb	Hg	Cd	(Cr) (VI)	PBB	PBDE
Angle valve	×	○	○	○	○	○
power cord	×	○	○	○	○	○
Circuit board	×	○	○	○	○	○
Grounding lug	×	○	○	○	○	○
Voltage stabilizing assembly	×	○	○	○	○	○
Motor assembly	×	○	○	○	○	○
Water inlet hose	×	○	○	○	○	○
Expansion bolt	×	○	○	○	○	○
Seating sensor	×	○	○	○	○	○
Temperature sensor	×	○	○	○	○	○
Temperature protector	○	○	×	○	○	○
○ : It means that the content of the harmful substance in all homogeneous materials of the component is below the limit specified in GB/T 26572. × : It indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26,572.						

Warranty card

Thank you for choosing our intelligent toilets. When you come up with a certain malfunction, please refer to operation manual to check and repair. When you are still not able to solve fault by yourself, please contact distributors or our appointed maintenance centers.

Customer	Name:	Tel:	Add:	
Distributor	Name:	Tel:	Add:	
Model No.			Series No.	
Buying date	(year)	(month)	(day)	Warranty period

I. Attention points about warranty card

1. Warranty card should be filled out.
2. Warranty card and receipt are basis of warranty. Within warranty period, please show your warranty card and receipt to maintainers.
3. Warranty card is not lost supplement. Please safekeeping.

II. Free maintenance:

Within warranty period, we will maintain the product free of charge if you operate the product correctly by instructions and attentions

III. Paid maintenance:

1. Out of warranty.
2. Within warranty period, but without receipt and this warranty card.
3. Malfunctions or damage by transportation, crashing after buying the product.
4. Within warranty period, malfunctions or damage by incorrect using, human or natural factors.
5. Malfunctions or damage by disassemble, refit or repair conducted by user himself.
6. Malfunctions or damage by incorrect maintenance.(e.g. direct spraying,no correct use or maintenance)
7. Malfunctions or damage by sands, impurities.(e.g. seal ring malfunction)
8. Relocation by customer's request.

Qualification certificate

This product has been inspected qualified for selling.

Inspection _____

Production date _____

