




1

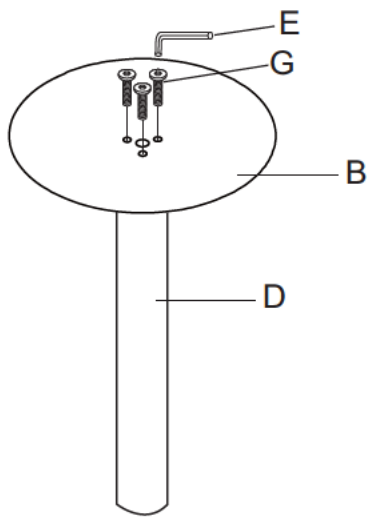


2

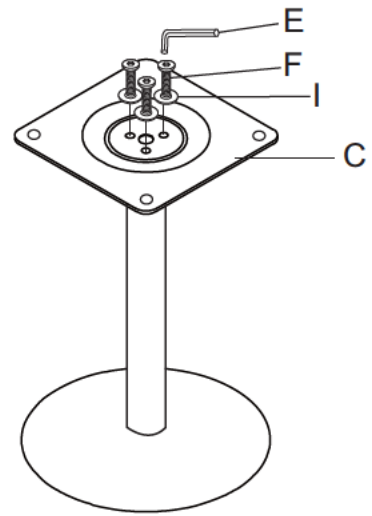

3

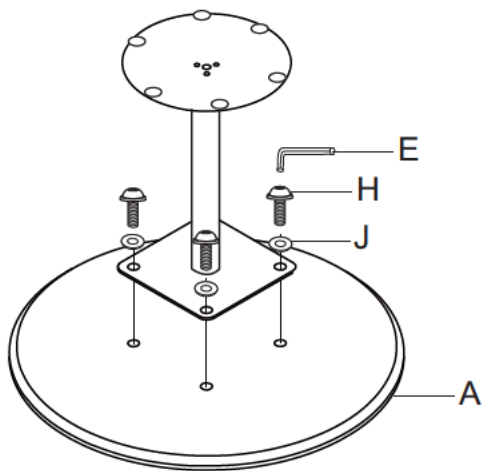

4

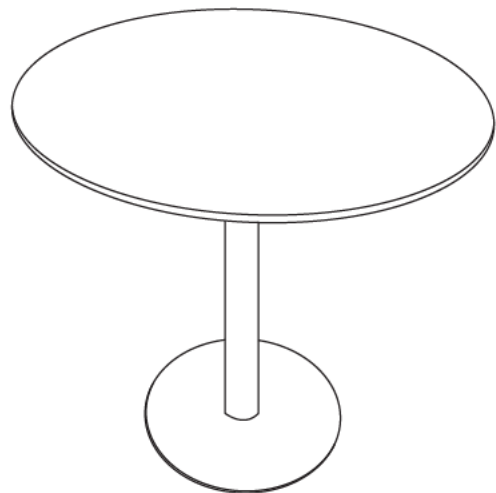

Ax1




Bx1



Cx1



 Dx1



Ex1




Fx3



Gx3



 Hx4



Ix3



Jx4



### SPARE Ersatzteile

Fx1



Gx1



Hx1



Ix1



Jx1

