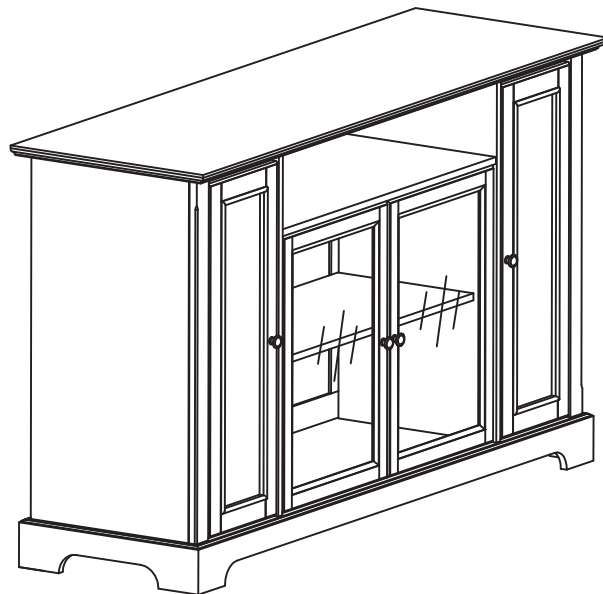 


60" TV Stand



Congratulations! You have purchased a stylish piece of us.
We strive to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Our Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.

Please see included Care and Maintenance Instructions for this Product.

Care and Maintenance Instructions

Keeping Your Furniture Beautiful

Quality furniture is a significant investment expected to last for generations. To maintain its beauty and help it last, furniture needs the right care. No finish is totally indestructible. But with regular care, the finish will last much longer, providing years of enjoyment to you.

Tips to Protect and Care for Your Furniture

1. Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2. Avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents and air conditioning units.
3. Avoid placing plastic or rubber materials (lamp bases, notebooks, placemats, etc.) on your furniture, as certain plastics contain ingredients that may damage the finish.
4. Periodically rotate accessories on furniture so they do not sit in the same spot all the time.
5. Use pads, cloth or felt to protect the furniture surface from plastic, rubber, hot dishes, beverages, bookends, flowerpots and vases.
6. Clean up spills immediately. Use a blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish. Alcohol, perfume, after-shave and medications can cause severe finish damage.
7. Use a protective pad when writing on the furniture surface.
8. Lift and place objects rather than dragging them across the furniture surface.
9. Avoid placing furniture directly under windows.

Wood Furniture Care: We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Clean the surface by rubbing in the direction of the grain. We recommend polishing your furniture approximately every six months, using a clean, soft, lint-free cloth and rubbing the polish in the direction of the grain. Guardsman furniture polish or any furniture polish that doesn't contain silicone is recommended.

Leather Furniture Care: Wipe spills immediately with clean cloth or sponge. For spots or stains and daily cleaning, clean with mild non-detergent soap. Rinse well, gently wipe off, and allow to air dry. Cleaning Butter, Oil or Grease from Leather: Wipe leather with a clean cloth, and leave alone. The oil will be absorbed by the leather. DO NOT APPLY WATER. Also, do not use saddle soap, cleaning solvents, furniture polish, oils, varnish, abrasive cleaners, ammonia or any other type of chemical solution.

Granite Furniture Care: Our granite is not sealed, so you may want to apply an over-the-counter sealant, which will provide a small amount of surface protection, but we still recommend cleaning spills promptly. Use a slightly damp cloth to clean as needed. Wipe dry. We also do not recommend using abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish. Be sure to use trivets, coasters, placemats, and adhesive felt pads to help prevent scratches.

Wicker Furniture Care: Regular cleaning is recommended for wicker, as it generally cannot endure harsh or abrasive treatments. This also minimizes mildew buildup. To remove dirt and debris, vacuum with a dust-brush attachment or use a dry paintbrush. Clean with a mild soap solution. Scrub, and rinse. Avoid using too much water, which can weaken the fibers. Avoid sitting on the wicker when still damp, which can cause wicker to sag.

Metal Furniture Care: Because most metals, except aluminum, are subject to rust, metal furniture is usually finished with layers of clear varnish, paint, or a durable powder coating. Use a mild soap solution, and scrub, rinse, and dry. After cleaning, apply a coat of quality liquid or paste auto wax with a lint-free cloth if recommended by the furniture's manufacturer. Use a silicone spray to lubricate swivels and glides on chairs.

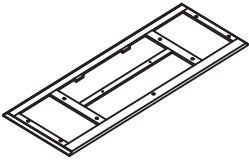 
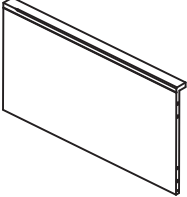 
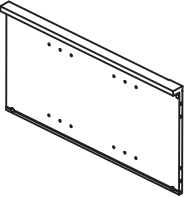 
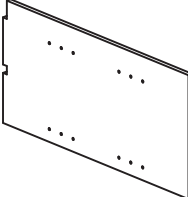 
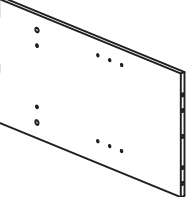 
 
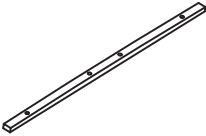 
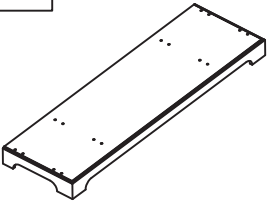 
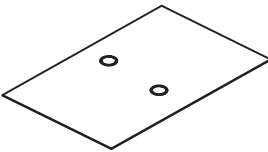 
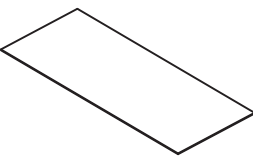 
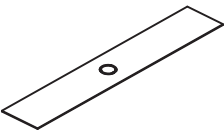 
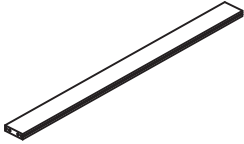 
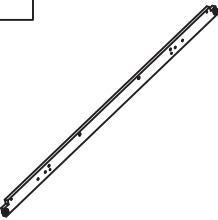 
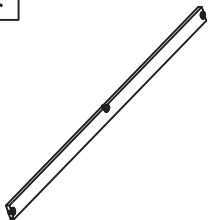 
 
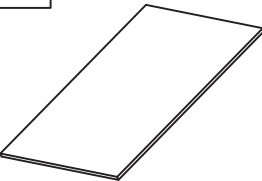 
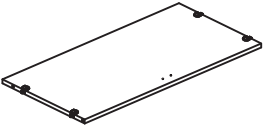 
 
Butcher Block Care: For best results, clean finished butcher block surfaces with soapy water or commonly available kitchen counter top cleaners. Do not use abrasives or powder cleansers. Do not allow moisture stand on the surface for prolonged periods of time. To sanitize, rinse the butcher block with white vinegar by using a vinegar-water solution in a spray bottle, spritz the butcher block all over. Let sit for a while. While that sits, make a lemon salt mixture by pouring about 1/4 cup salt into a bowl, and stir in enough lemon juice to make a paste, adjust the consistency as you go, to make a workable paste. The final step, using a scrub brush, thoroughly scrub your butcher block with the lemon-salt paste. If the paste gets too dry, sprinkle on a little more lemon juice. Rinse well, and squeegee off as much water as you can, and then let it dry overnight. Make sure to seal it before you get it dirty.

again. Pour out a small amount of oil, and rub it into the wood using a cloth or paper towel. As the oil soaks in, add more and continue rubbing and polishing with the grain until the oil is absorbed. The first time you seal your butcher block, it may take several applications before it stops "drinking" oil, but in later cleanings you'll just need to refresh it. Keep adding oil until no more soaks in, remove any excess with a cloth.










Outdoor Cushion Care: Please note our cushions are made from a polyester foam, and the covers are made from a moisture resistant polyester blend. This does not mean they are waterproof! Cushions should be stored and covered when not in use to protect them from rain, sunlight, and other staining agents. We do not recommend leaving cushions out in inclement weather, and if cushions become wet, please dry them immediately by removing the cushion from the cover so they can dry separately. Wring out any excess moisture before drying. Air dry only!

Outdoor Furniture Storage: We highly recommend storing any outdoor furniture during the winter and/or rainy seasons. Before storing your furniture, please ensure all moisture collected in the frame tubes has been drained out and dried. When outdoor furniture is not in use, we recommend covering all the furniture to protect it against the elements.

PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Side Panel 1 PC	Right Side Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
F 	G 	H 	I 	J 
Center Door 2 PCS	Top Rail 1 PC	Left Door 1 PC	Right Door 1 PC	Bottom Panel 1PC
K 	L 	M 	N 	O 
Middle Back Panel 1 PC	Side Back Panel 2 PCS	Middle Upper Back Panel 1 PC	Back Partition Rail 2 PCS	Back Middle Rail 1 PC
P 	Q 	R 	S 	T 
Front Top Rail 1 PC	Back Upper & Lower Rail 2 PCS	Side Adjustable Shelf 4 PCS	Middle Adjustable Shelf 1 PC	Fixed Shelf 1 PC
U  Support Leg 2 PCS				

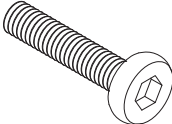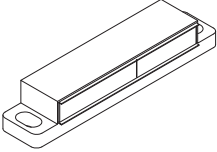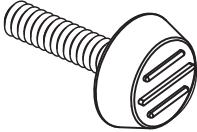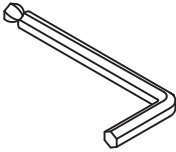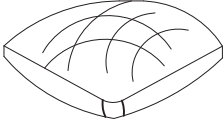         HARDWARE LIST

#1 	#2  1-3/4"*Ø1/4"*D11mm	#3 	#4  3/4"*Ø5/32"*D9mm	#5 
Wood Dowel 29 PCS(Extra 1)	Hex Socket Head Bolt 9 PCS(Extra 1)	Knob 4 PCS	Round Head Bolt 5 PCS(Extra 1)	Magnet 2 PCS
#6 	#7  14*Ø3*D6mm	#8 	#9  1-1/4"*Ø4*D8mm	#10 
Double Magnet 2 PCS	Round Head Screw 9 PCS(Extra 1)	Shelf Holder 20 PCS	Screw 9 PCS(Extra 1)	Adjustable Leveler 6 PCS
#11 	#12 			
Allen Wrench 1 PC	Safety Strap Kit 1 PC			


ADDITIONAL TOOLS (Not Provided)

 Note:It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

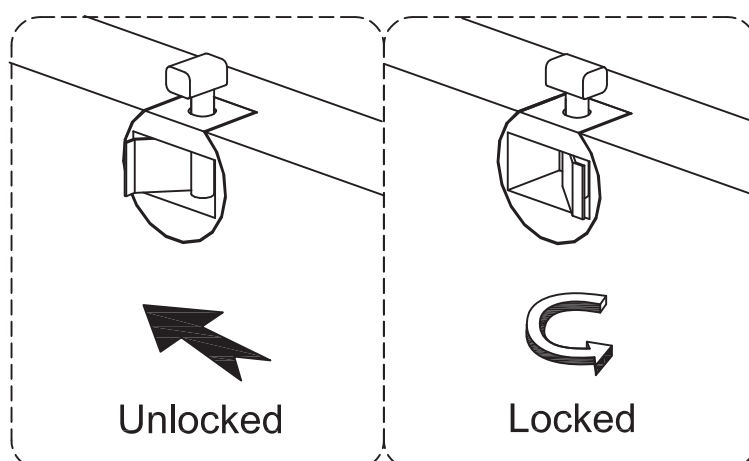 Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

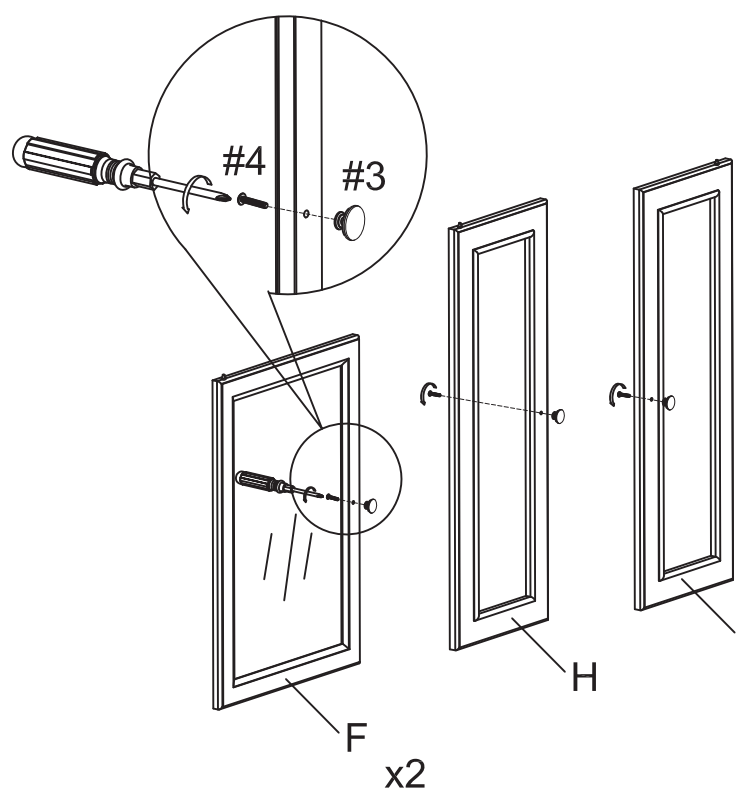 Step 1. Attach knobs (part #3) to center doors (part F), left door (part H) and right door (part I) using round head bolts (part #4) and Phillips head screwdriver.




#3  x4
#4  x4

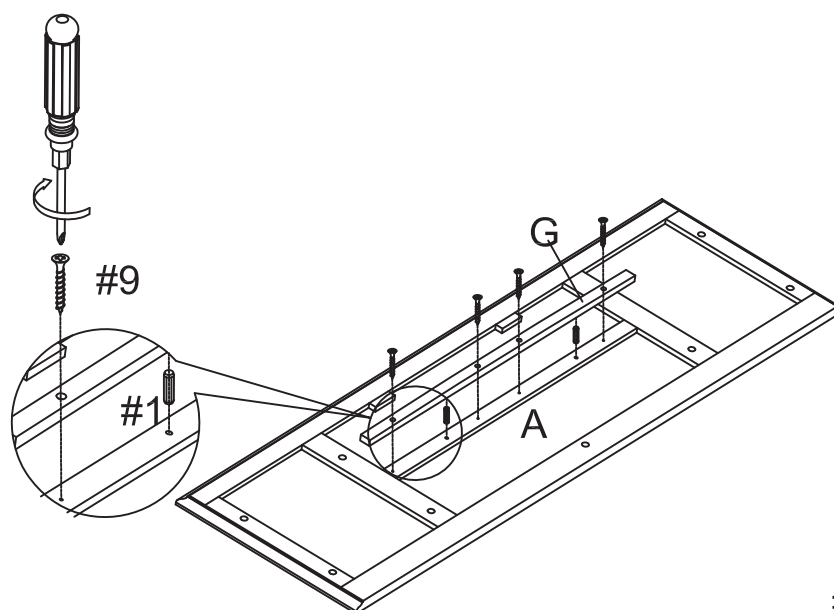 Step 2 . Attach top rail (part G) to top panel (part A) using wood dowels (part #1), screws (part #9), and Phillips head screwdriver.




#1  x2
#9  x4

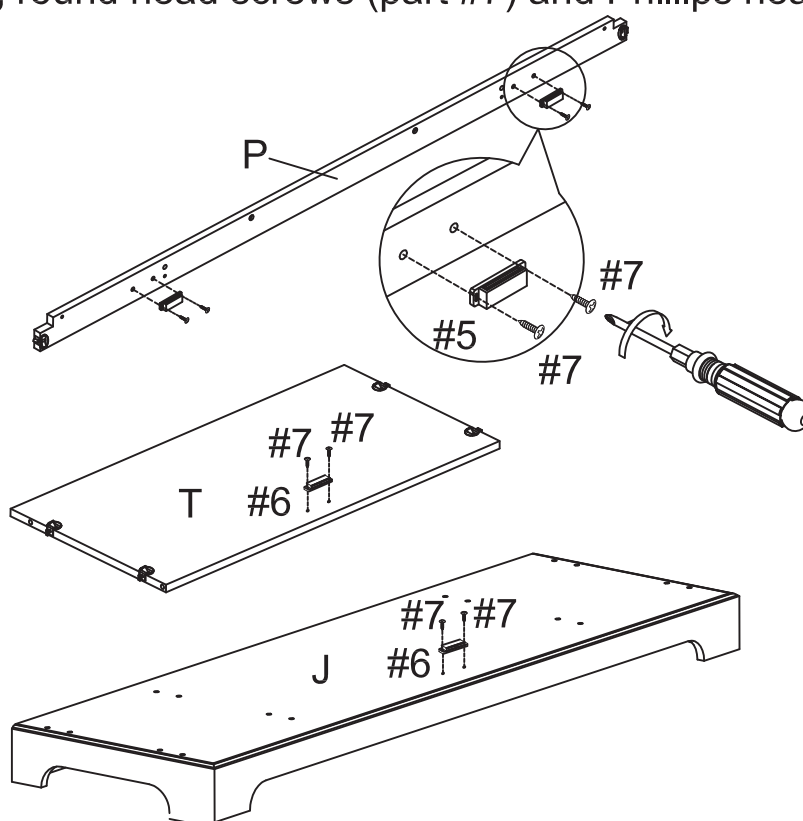 Step 3 . Attach magnets (part #5) to front top rail (part P) using round head screws (part #7) and Phillips head screwdriver. Attach double magnets (part #6) to fixed shelf (part T) and bottom panel (part J) using round head screws (part #7) and Phillips head screwdriver.




#5  x2
#6  x2
#7  x8

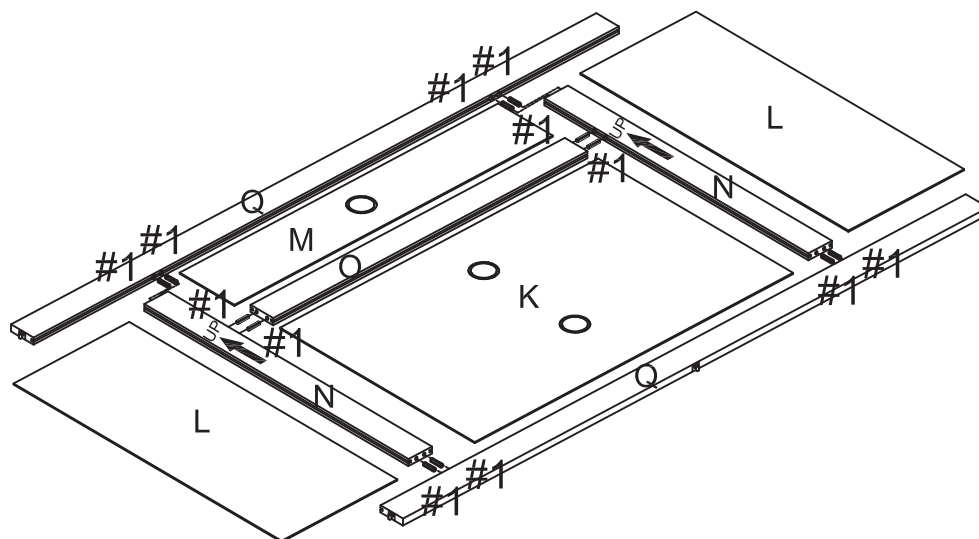 Step 4 . Attach back partition rails (part N) to back middle rail (part O) using wood dowels (part #1). Slide middle upper back panel (part M) and middle back panel (part K) into place. Attach back upper and lower rail (part Q) to back partition rails (part N) using wood dowels (part #1), and slide side back panels (part L) into place.




#1  x12

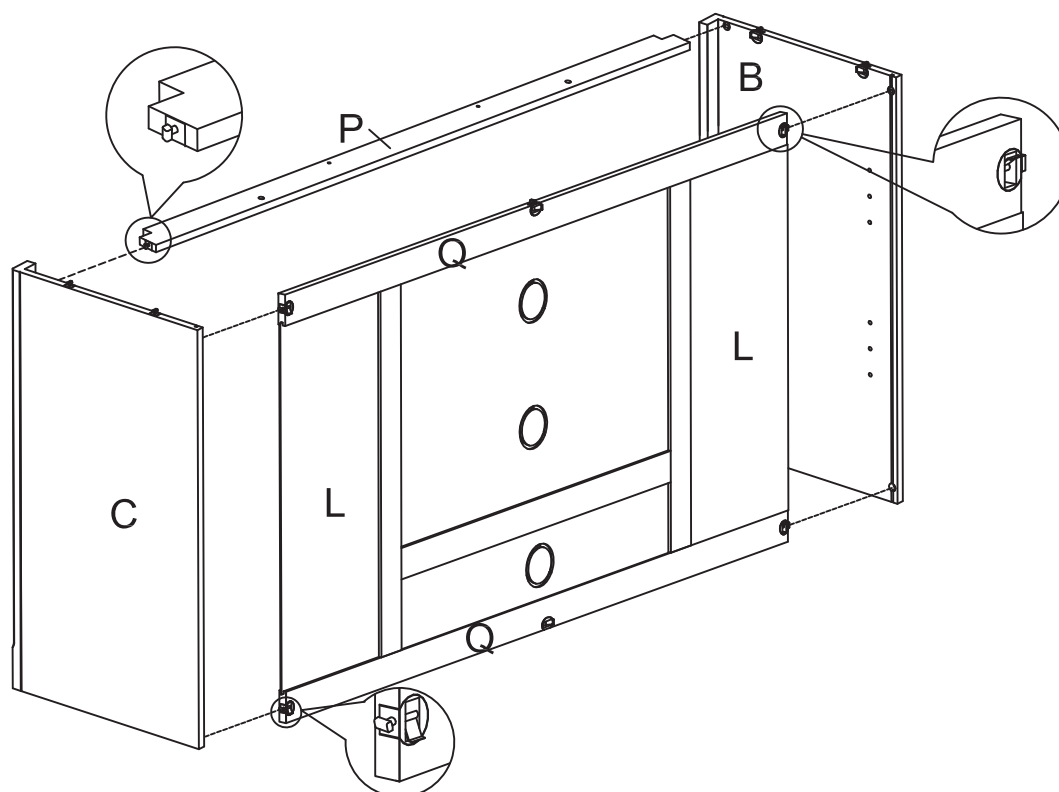 Step 5 .Carefully lift back panel assembly as shown. Attach left and right side panels (parts B & C) to back upper and lower rails (part Q) and front top rail (part P) as shown, and lock the hardware.




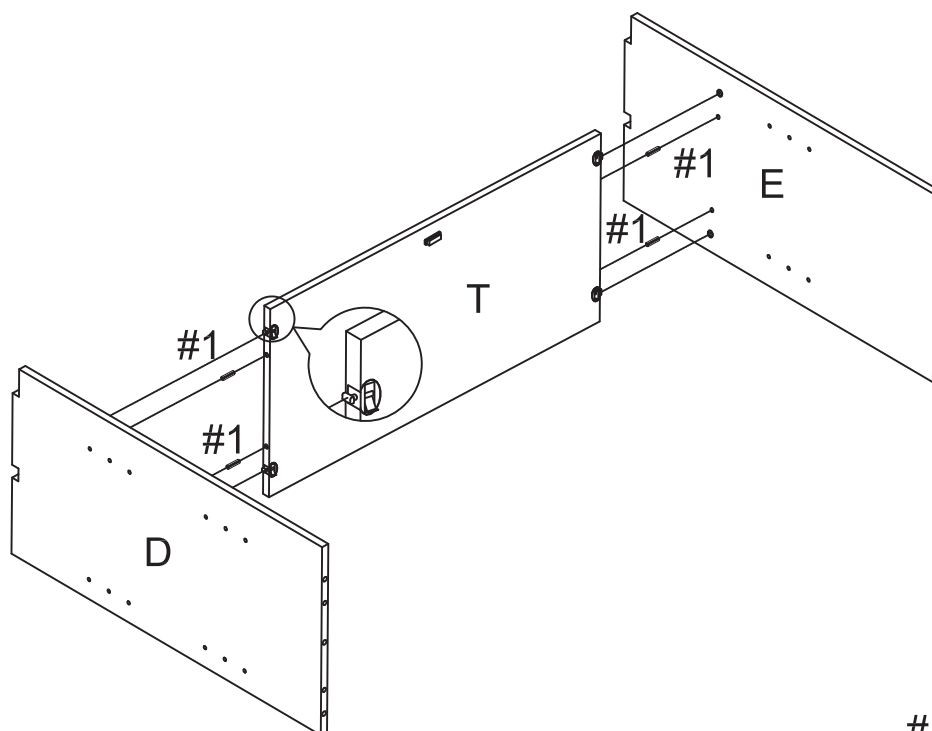 Step 6 . Attach left partition panel (part D) and right partition panel (part E) to fixed shelf (part T) using wood dowels (part #1), and lock the hardware.




#1  x4

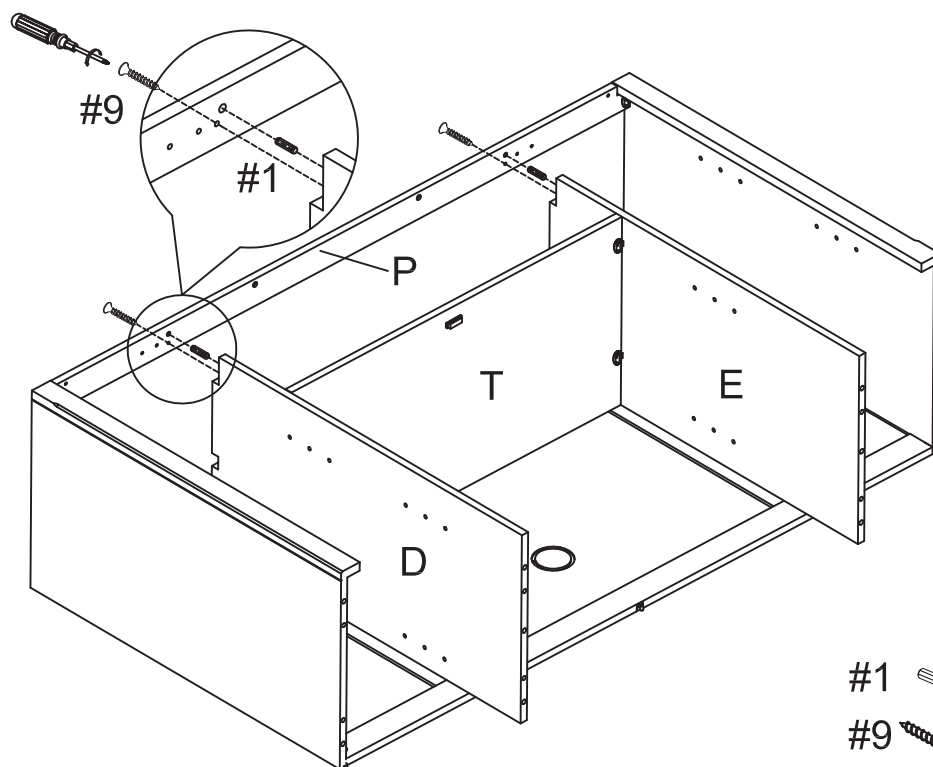 Step 7 . Carefully lay assembled unit from Step 5 on its back, and place assembled unit from Step 6 inside as shown. Attach left partition panel (part D) and right partition panel (part E) to front top rail (part P) using wood dowels (part #1), screws (part #9), and Phillip head screwdriver.




#1  x2
#9  x2

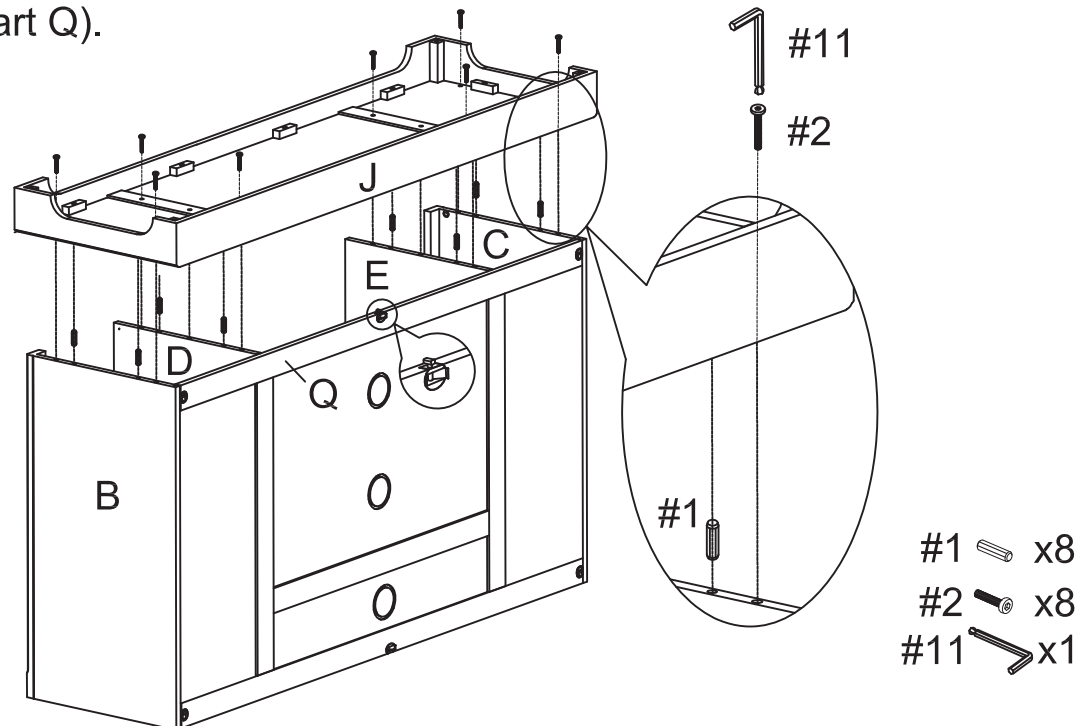 
Step 8 . Carefully turn assembled unit upside down on a soft surface such as carpet as shown below. Attach bottom panel (part J) to left side panel (part B), right side panel (part C), left partition panel (part D), right partition panel (part E) and back upper and lower rail (part Q) using wood dowels (part #1), hex socket head bolts (part #2), and allen wrench (part #11). Lock the hardware on back upper and lower rail (part Q).



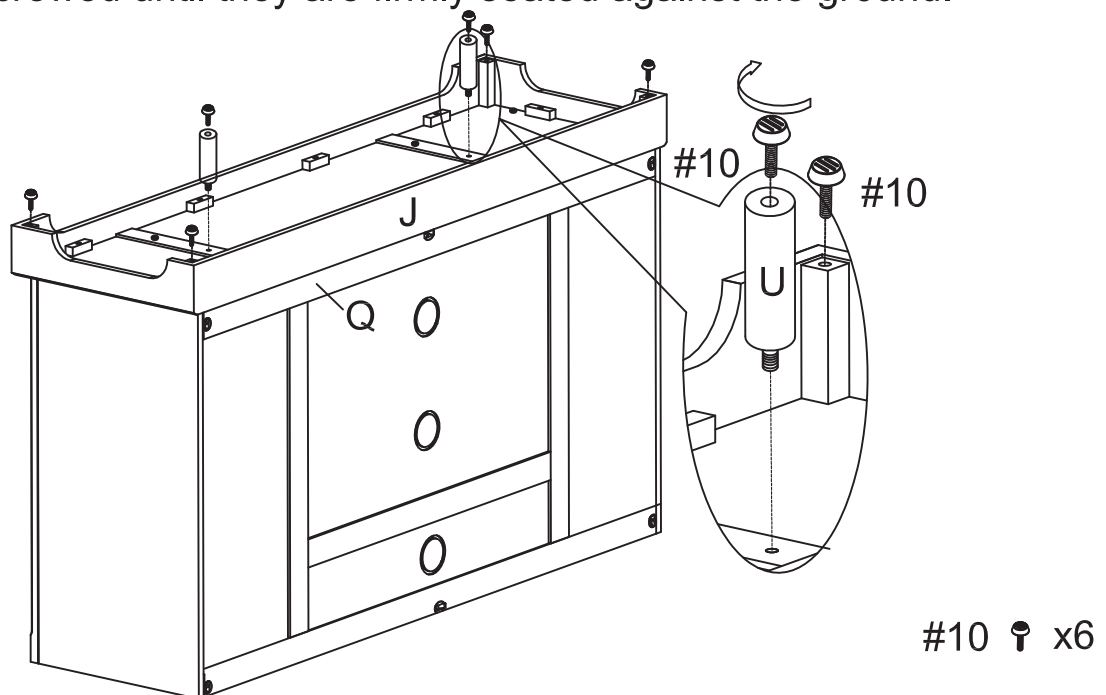 
Step 9 . Screw support legs (part U) into bottom panel (part J). Screw adjustable levelers (part #10) into bottom panel (part J) and support legs (part U) as shown. **IMPORTANT:** Once unit is fully assembled, make sure adjustable levelers (part #10) on support legs (part U) are unscrewed until they are firmly seated against the ground.



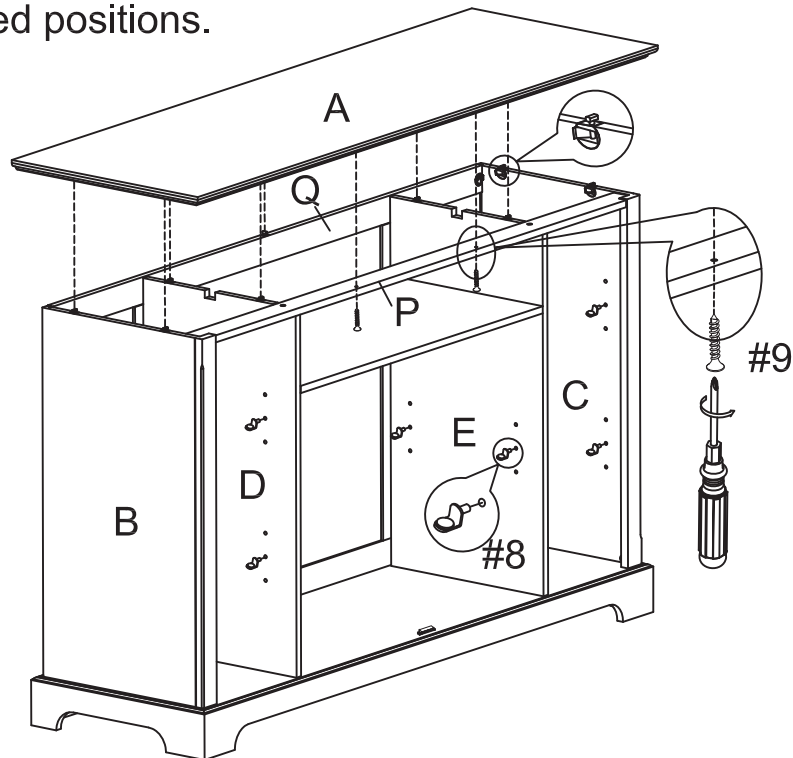 
Step 10 . Carefully turn the unit upright as shown below. Attach top panel (part A) to left side panel (part B), right side panel (part C), left partition panel (part D), right partition panel (part E) and back upper and lower rail (part Q) by locking the hardware. Attach top panel (part A) to front top rail (part P) using screws (part #9) and Phillips head screw driver. Place shelf holders (part #8) into desired positions.





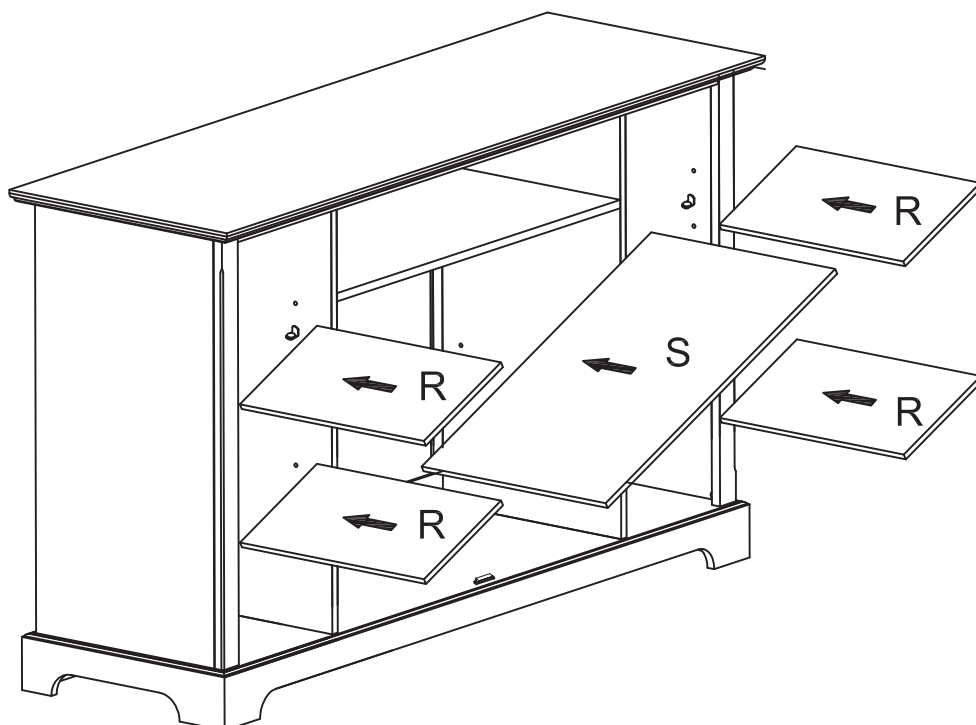 Step 11 . Insert side adjustable shelves (part R) and middle adjustable shelf (part S) into place.



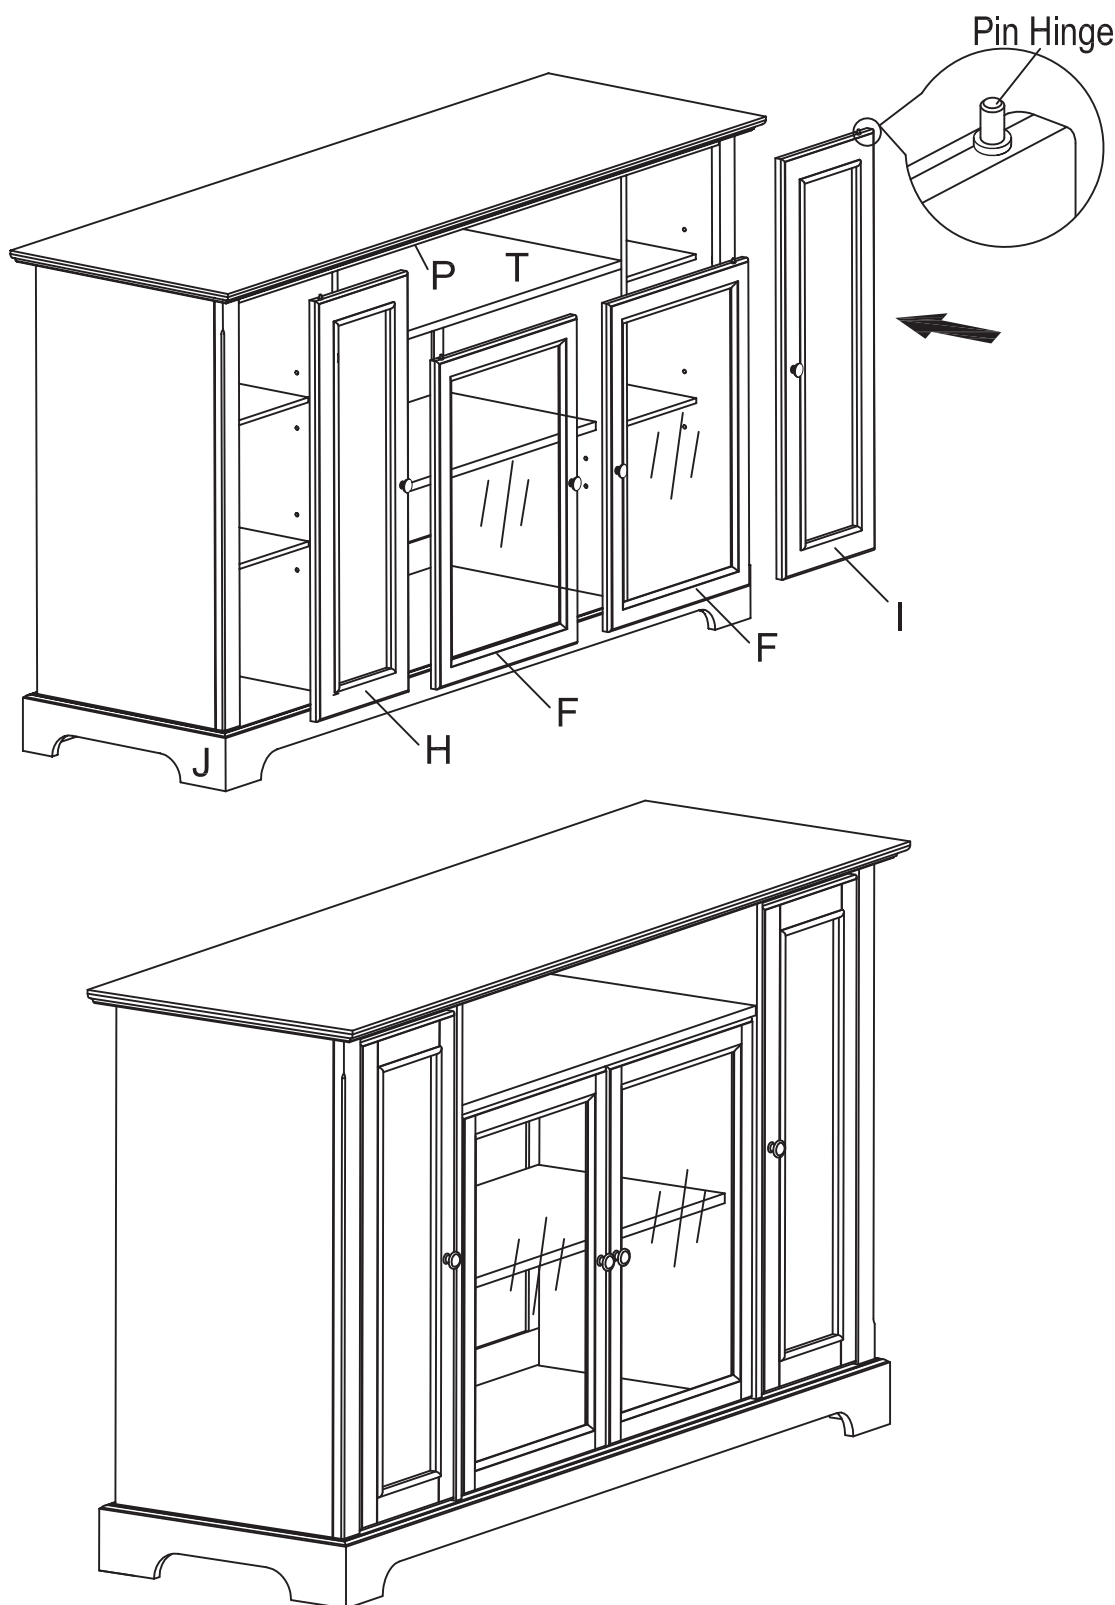   Step 12 . Install center, left and right doors (parts F, H & I) by placing the bottom pin hinges (pre-installed in doors) in the pre-drilled holes of bottom panel (part J), and then depressing the top spring-loaded hinges so they can be placed in the pre-drilled holes of fixed shelf (part T) and front top rail (part P). **IMPORTANT:** Once unit is fully assembled, make sure adjustable levelers (part #10) on support legs (part U) are unscrewed until firmly seated against the ground.




#12	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
SAFETY STRAP KIT 1 PC	WALL ANCHOR Ax1 PC	WASHER Bx2PCS	SHORT SCREW Cx1PC	LONG SCREW Dx1PC	SAFETY WALL STRAP Ex1PC

1.) Insert short screw (part C) through washer (part B) and safety wall strap (part E), and attach to top panel (part A) using Phillips head screwdriver.

2.) Drill a 11/32" (6 mm) hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety strap is attached. Tap wall anchor (part A) into the hole.

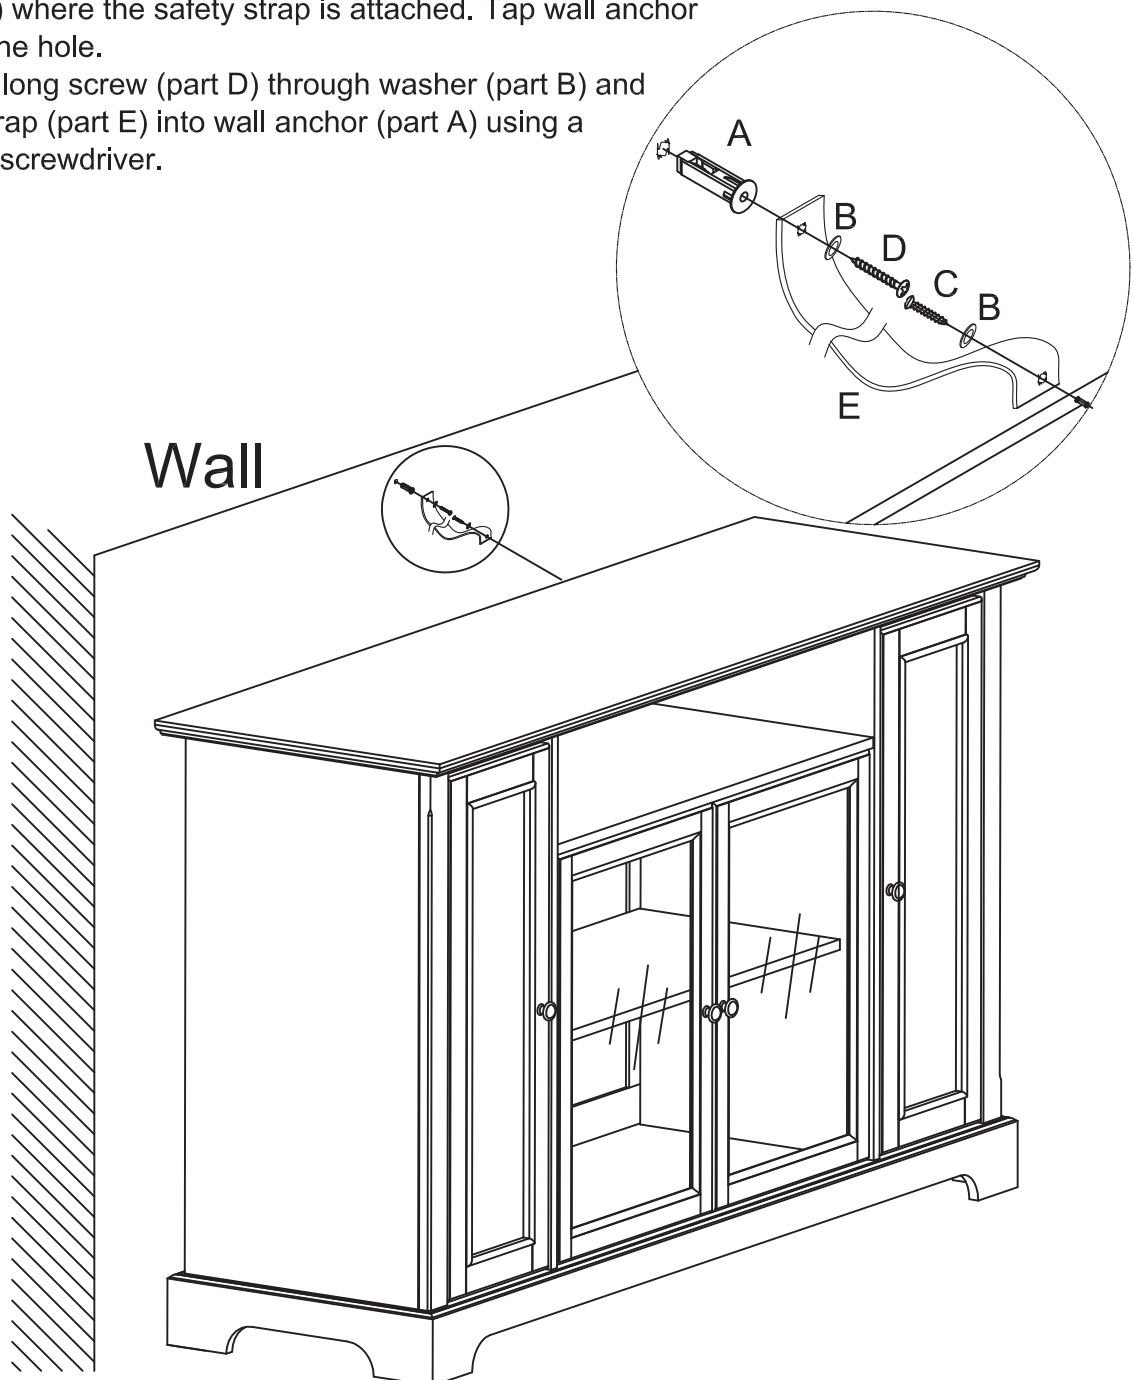 3.) Insert long screw (part D) through washer (part B) and safety wall strap (part E) into wall anchor (part A) using a Phillips head screwdriver.



Limited Manufacturers Warranty

Our Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.

RETURNS POLICY

- Please note: This policy applies **ONLY** to products purchased directly through us. If purchased through a retailer please reference that retailer's return policy. Clearance items, used, demo, or products marked as 'Sold As Is' may not be returned or exchanged because all Clearance sales are final.
 - Return Authorizations (RA) for all our products **MUST** be requested within 15 days of product delivery date.
 - All returns must be authorized through our Consumer Service Team and must be for valid reasons associated with defects, damages, mislabeling or misrepresentation of the product. Requests for Return Authorizations (RA) resulting from 'Buyer's Remorse', partially assembled products, or products displaying damage from neglect or abuse on the part of the consumer will not be approved. Products returned without an RA will not be eligible for a refund.
 - For any questions about or to be issued a Return Authorization (RA) number, please call our Consumer Services Team, or contact us via our website.
 - We recommend keeping the original box and packaging so that any returns can be repacked and shipped safely. If the original box and packaging has been discarded or recycled, or if the original packaging is not available, then the responsibility of securely repacking the product is the responsibility of the consumer. Authorized returns must meet the following conditions for a refund to be processed:
 1. The Product must be in new/unused condition
 2. The Product must be returned with all accessories and parts securely packed in the original box and packaging, or packaging provided by the consumer that prevents damage during return shipping.
 - Shipping charges back to us will be deducted from the refund amount, and will be equal to the shipping charges on the original sales order.
- Our returns are subject to a 15% restocking fee for all authorized returns. This restocking fee covers the costs associated with inspecting and returning the product to stock, and will be deducted from the refund amount.
- We will waive the restocking fee if the product is exchanged for another product of equal or greater value. Any price differences will be charged accordingly, and fees associated with shipping will still be applicable.
 - Authorized returns are inspected immediately upon receipt. Any approved exchanges, credits and refunds will be issued for the purchase price of the item(s) at that time less any applicable fees; taxes are refunded in accordance with state law.
 - Refunds and credits are issued based on the payment method used at the time of purchase. Please allow up to 21 days following receipt of the authorized return (not including weekends and holidays) for any credit or refund to show up on a credit card statement. A copy of the refund transaction can be requested from our Consumer Services Team member.

CANCELLATION POLICY

Our products usually ship within two business days. If you change your mind about a purchase, please contact our Consumer Services as soon as possible. If we are able to stop the order before it has been released for shipment, we will cancel the order without penalty. If the item has already shipped, please see our Returns Policy above for more information.

FREIGHT DAMAGE OR DEFECTS

On occasion, freight damage and factory defects may occur, and we will do our best to promptly replace any parts that are covered by our limited warranty included for all furniture products. Please note that parts replaced under warranty will be shipped via Ground Shipping only. Replacement parts will not be expedited unless the consumer is willing to pay for the extra charges. (See Warranty Policy Page). Please take pictures or note any damage upon delivery and provide this information to our Consumer Services Team member when you contact us. With this feedback, we will continue to improve our products, packaging and shipping methods, and when necessary, we will file claims with the shipping company.