


ASSEMBLY INSTRUCTIONS

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing


 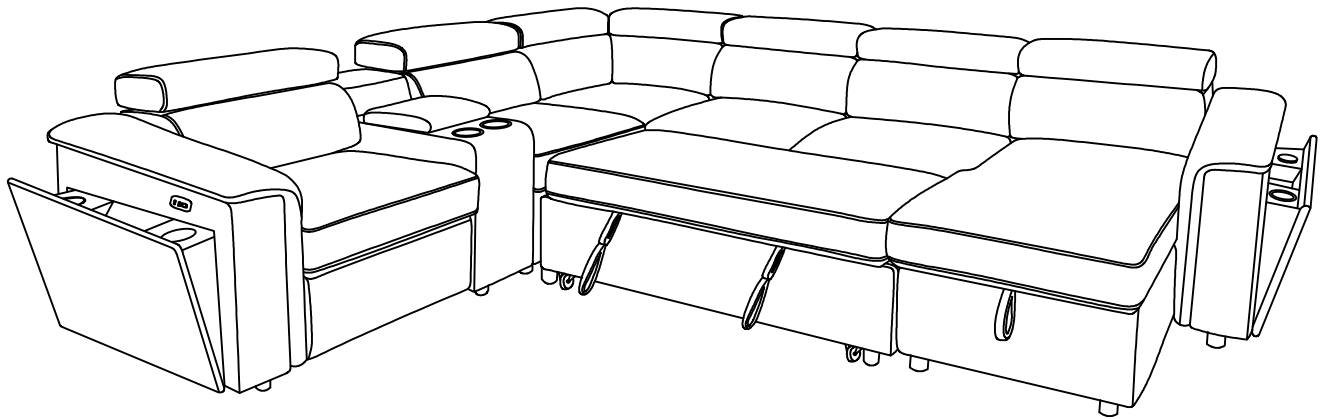



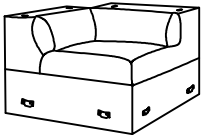
 

 
 









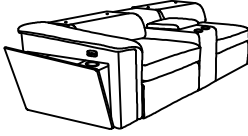


PARTS LIST


NO	SKETCH	QTY	DESCRIPTION	NO	SKETCH	QTY	DESCRIPTION
A		1PC	Left loveseat	E		1PC	Right arm of chaise
B		1PC	Wedge	F		5PCS	Head rest
C		1PC	Pullout sleep	G		2PCS	Head rest of wedge
D		1PC	Right chaise with Storage	H		1PC	Back rest of right chaise

 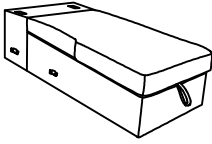 HARDWARE LIST


NO	SKETCH	QTY	DESCRIPTION	NO	SKETCH	QTY	DESCRIPTION
K		21PCS	Legs	O		1PC	Wireless Charger Adapter
L		4PCS	Roller	P		2PCS	KD bowl
M		1PC	Adapter	Q		16PCS	Screw M4 x 25mm
N		1PC	Plug with wire				

DESCRIPTION	PART	HARDWARE
Left Loveseat		 F x 2PCS  K x 7PCS  M x 1PC  N x 1PC
Wedge		 G x 2PCS  K x 4PCS
Pullout sleep		 F x 2PCS  K x 4PCS  L x 4PCS  Q x 16PCS
Right chaise with Storage		 F x 1PC  H x 1PC  K x 6PCS  O x 1PC  P x 2PCS
Right arm of chaise		


STEP 1# Attach the legs (K) into the Left loveseat (A), as shown below.

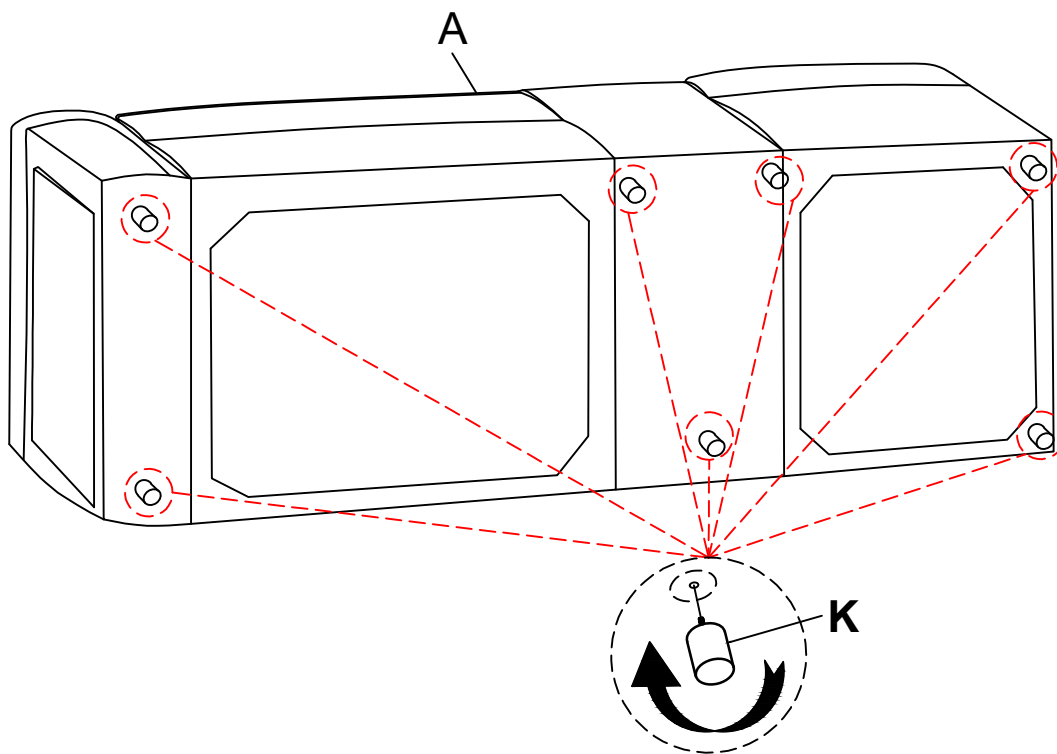


STEP 2# Attach the legs (K) into the Wedge (B), as shown below.

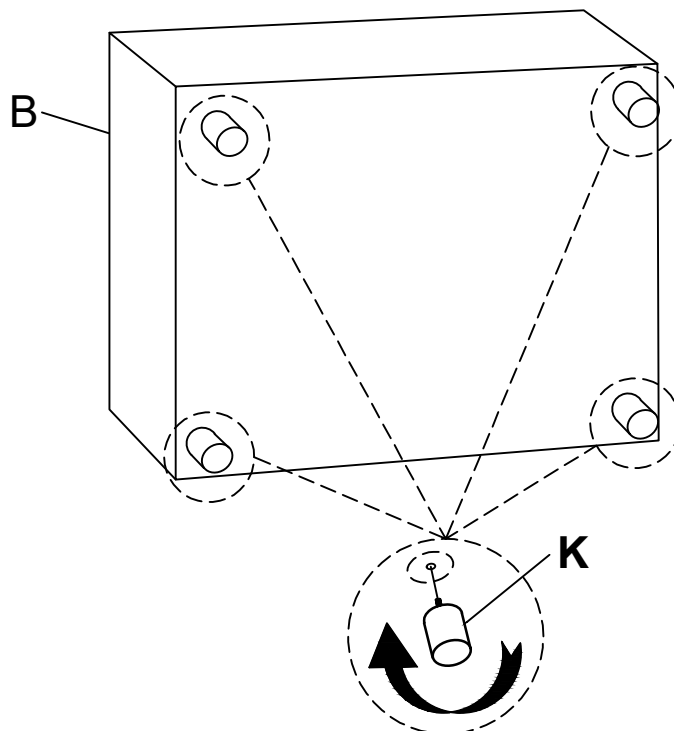


STEP 3# Attach the legs (K) and Roller (L) into the Loveseat (C), as shown below.

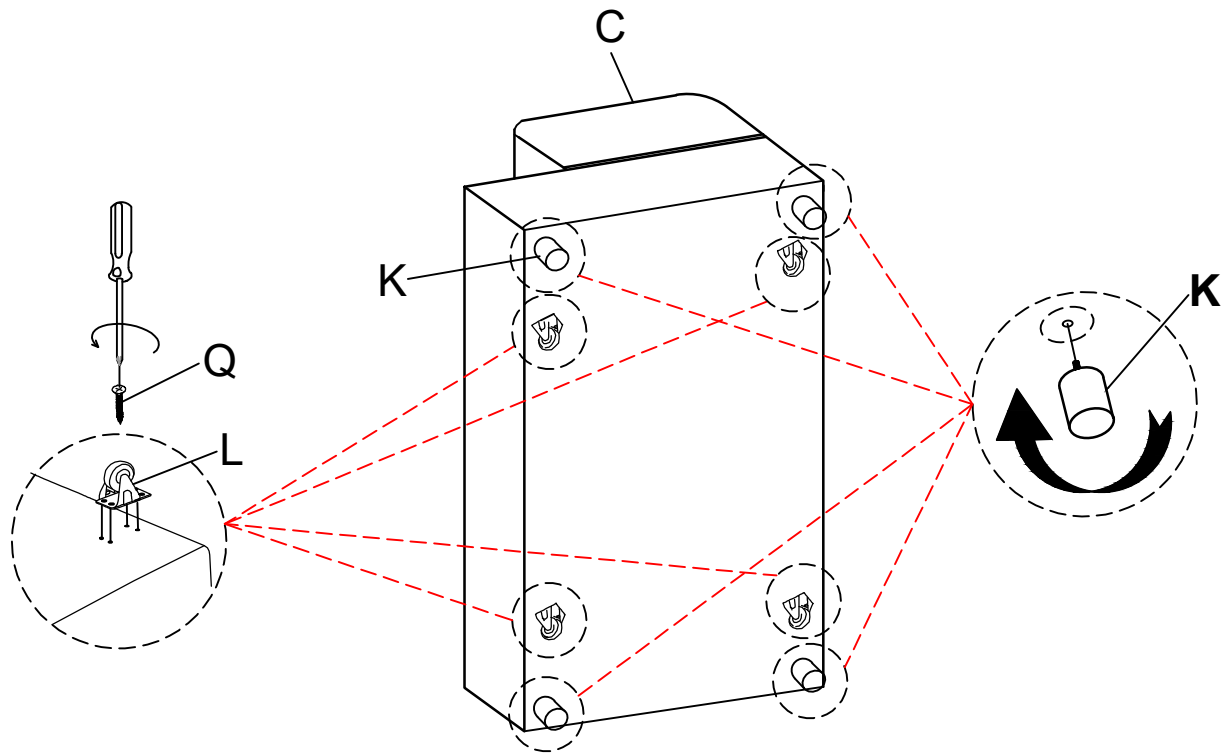


STEP 4# Attach the legs (K) into the Right chaise (D) and Right arm of chaise, as shown below.

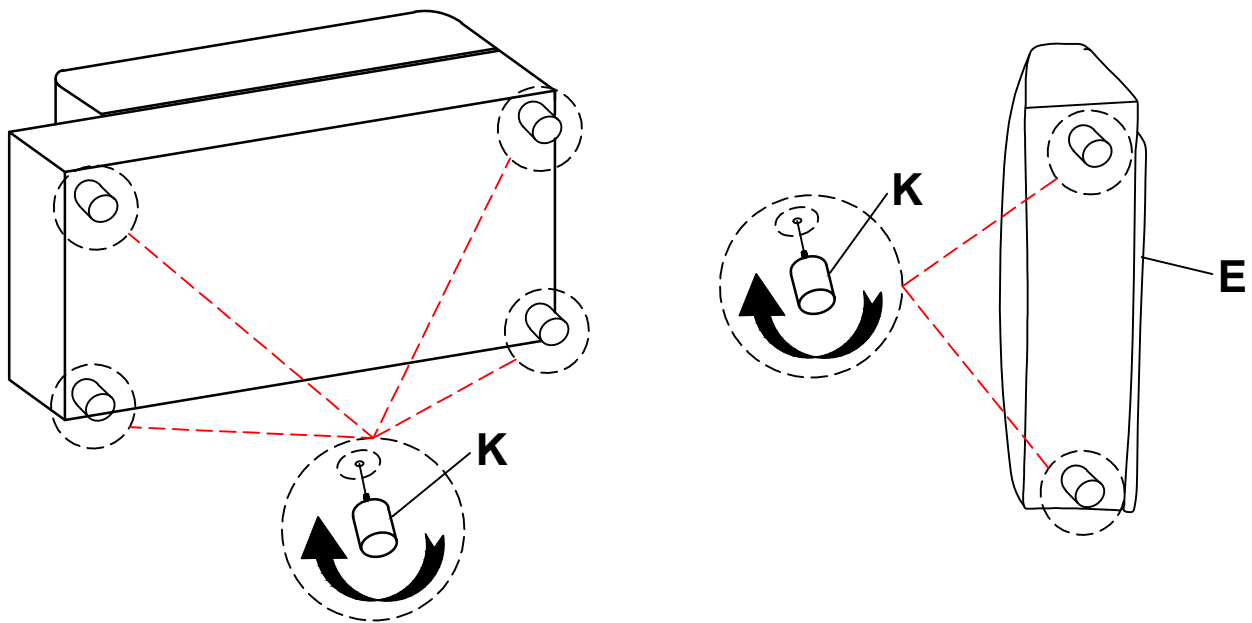


STEP 5# Attach the Back rest of right chaise (H) into the Right chaise (D), as shown below.

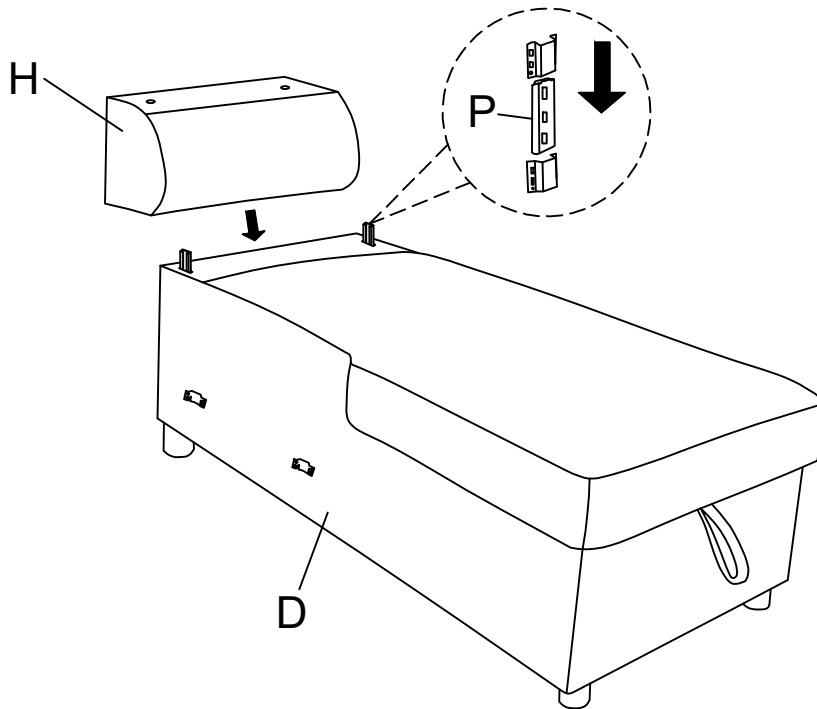



STEP 6# Connect the Left loveseat (A), Wedge (B), Loveseat (C), Right chaise (D) and the Right arm of chaise (E) together as shown below diagram.

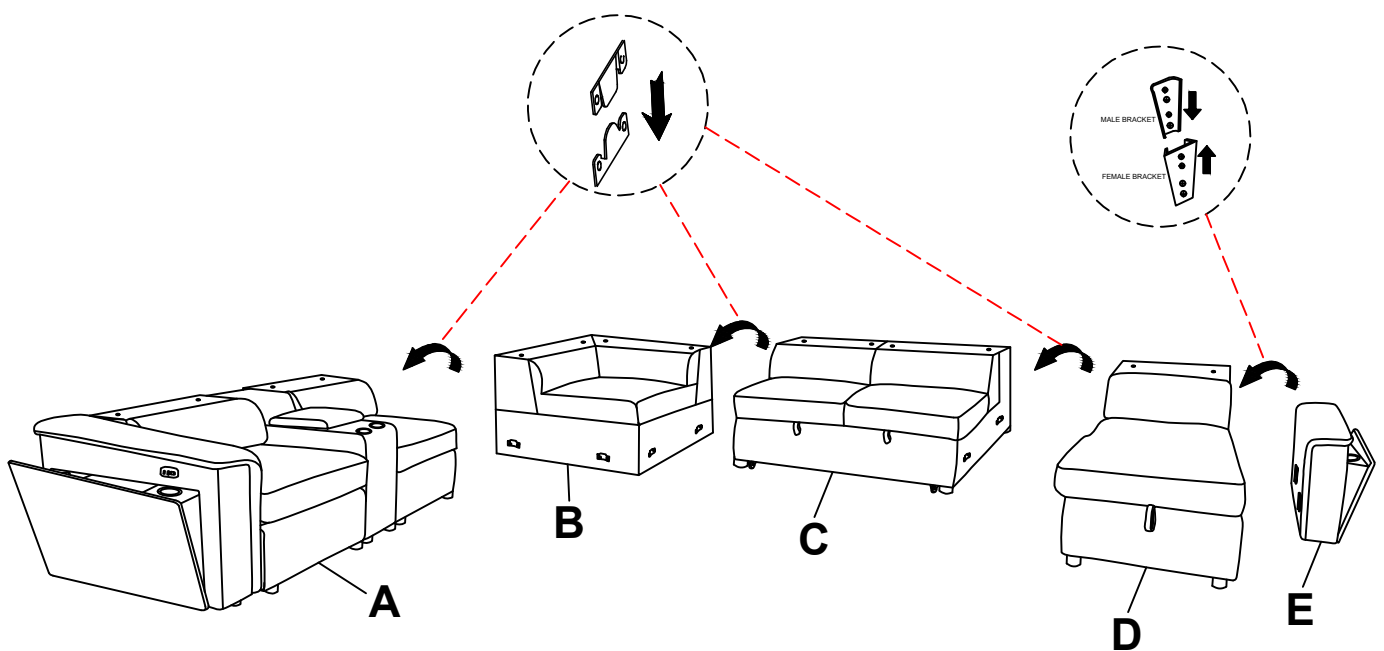

STEP 7# Attach the Head rest (F)(G) into the Left loveseat (A), Wedge (B), Loveseat (C) and Right chaise (D) as shown below diagram.

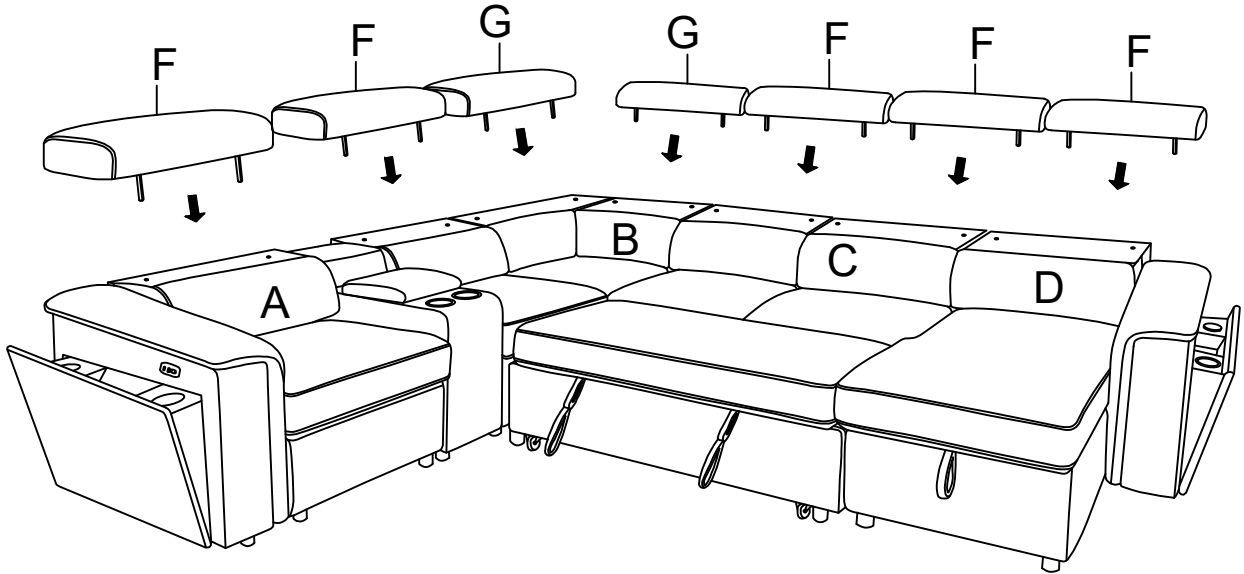

STEP 8# Use adapter (M) and Plug with wire (N) to connect with power then press the button on/off to open the footrest as shown below diagram. Use the Wireless Charger Adapter (O) to connect to the Wireless Charging source on the Right arm of chaise as shown below diagram.

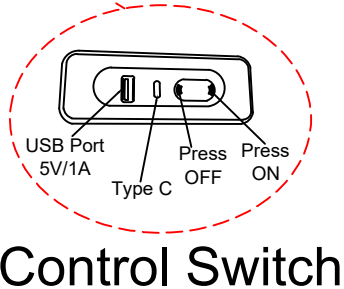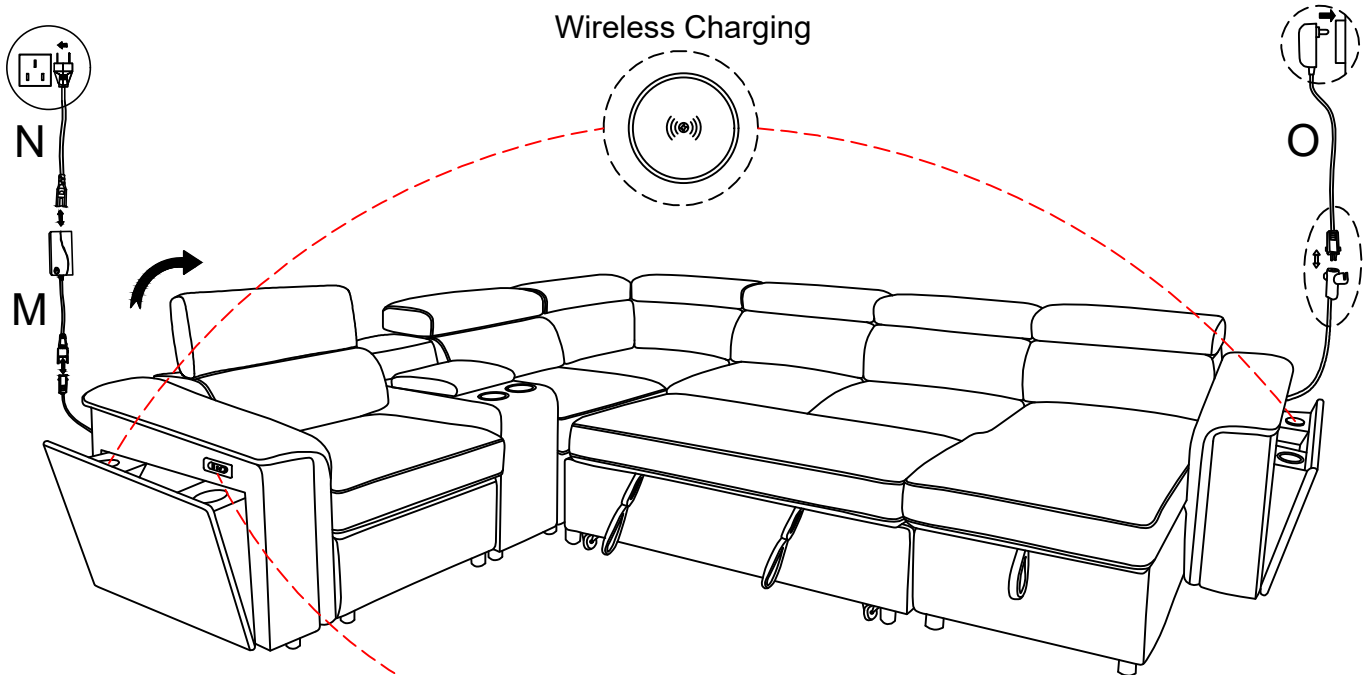

Control Switch



- Disconnect the electrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Plug directly into a wall outlet. Do not use an extension cord or adaptor
- Check the condition of the power transformers, electrical cords, plugs and connectors monthly. Keep the power adaptor and electrical cords away from heat sources. Never operate the unit with a damaged power adaptor, electrical cord, plug or connector.
- Before moving the product, please disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening or movement. Never move the product by the mechanism, legrest, handle, or reclining back. Do not attempt to disassemble or service the adaptor or motor. No serviceable parts are inside.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor.
- Do not place cord under carpet or in location where it could become worn.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the chair.

PLEASE KEEP ASSEMBLY INSTRUCTION FOR FUTURE REFERENCE