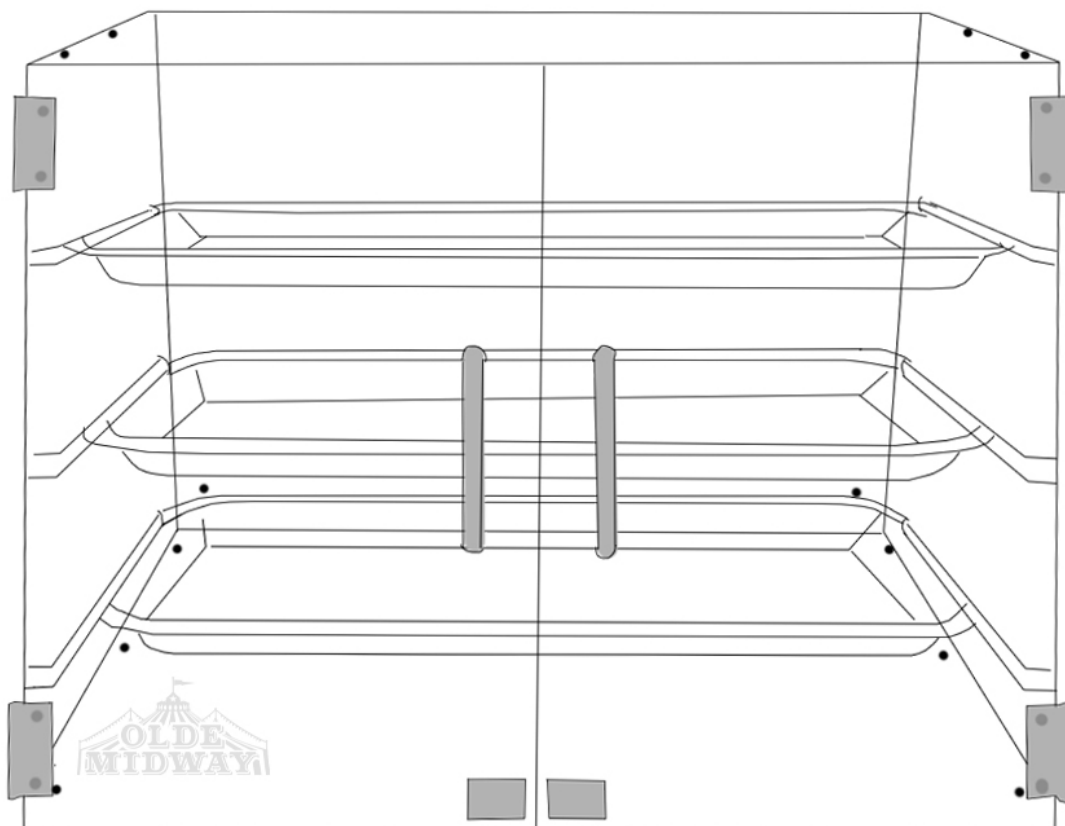 




3-Tier Bakery Display



BKR-3TR

**INSTRUCTION
MANUAL**

WARNING

Misuse of this machine may result in serious injury.

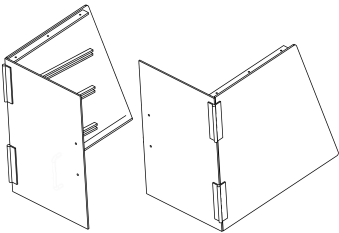
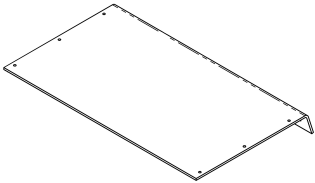
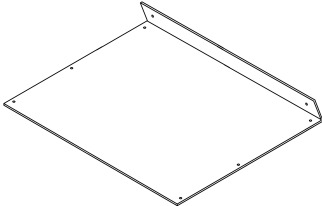
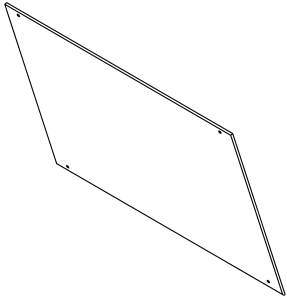
READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.

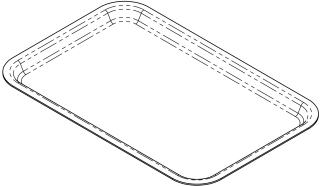
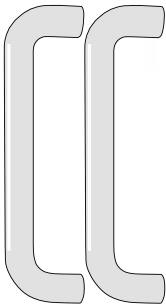
RETAIN THIS MANUAL FOR FUTURE REFERENCE.

- This ice shaver machine is not a toy. Please keep away from children.
- This machine should not be operated by anyone under the age of 18.
- Do not use ice shaver machine for anything other than its intended purpose. This machine should never be modified.
- Make sure ice shaver machine is plugged into a grounded outlet with appropriate electrical supply. Always make sure the wall outlet being used is properly grounded.
- Take proper safety precautions when using this machine. Keep hands, foreign objects, and metallic debris away from the ice shaver area and inside the hopper while the machine is in use.
- Sharp Blades - Do not place hands in or near the ice shaver area or inside the hopper while the motor is running. The cutting blades are very sharp, always be careful when using and cleaning.
- Always use the machine in a clean, dry area. Do not use near water.
- Do not leave machine unattended while powered on. Unplug main power cord from outlet while not in use and before cleaning.
- Always use handles and controls to operate. Allow hot parts to cool down before moving or cleaning.
- Always place ice shaver machine on a secure, level, and stable surface.
- To avoid any risk of electrical shock, do not immerse cord or plug in water.
- Do not operate the machine if damage to cord or plug is present.
- Do not clean ice shaver machine with steel wool.
- Do not use harsh chemicals or abrasive cleaners that can contaminate the ice.
- Do not spray controls or outside of machine with liquids or cleaning agents. Doing so could cause a short circuit or electric shock.

Parts List

Note: Identify and locate all parts and hardware necessary to operate this item.

			
Side Panels with Hinges 2 PCS	Top Panel 1 PC	Bottom Panel 1 PC	Back Panel 1 PC

			
Trays 3 PCS	Handles 2 PCS	Screws 4 PCS	Bolts 16 PCS

Spring Washers 16 PCS	Locking Nuts 16 PCS

Initial Setup Instructions

1. Set ice shaver machine on a level, dry surface. Remove all packing material. This machine has sharp cutting blades, be careful while handling. After the initial setup, maintain a regular care and maintenance plan.
2. Before use, the machine needs to be properly cleaned and dried thoroughly. **DO NOT CLEAN THE MACHINE WITH STEEL WOOL.** To clean, use soapy water with a soft cloth or sponge; rinse thoroughly. The unit should then be dried completely. DO NOT use harsh cleaners or abrasive chemicals that can contaminate the ice. DO NOT spray controls or outside of unit with liquids or cleaning agents.
3. Position the ice shaver machine so there is sufficient space to work around the unit. Keep the front of the ice shaver machine clear during operation.
4. Keep the ice shaver machine away from open flames, electric burners, or excessive heat.
5. Use only grounded outlets with appropriate electrical supply. Do not use an extension cord with this machine.
6. **NOTE:** This ice shaver machine is intended for crushing ice cubes for use in beverages. Ice cubes should be a maximum of 2 inches in diameter. Any pieces larger than 2 inches should be broken up before processing through the machine.

Operating Instructions

STEP 1: On the top of the machine, open the lid cover and wipe the inside and hopper with a clean, dry cloth.

STEP 2: Carefully check that the ice cutting blade is firmly installed.

STEP 3: Plug into a grounded 120v electrical outlet only. Do not use an extension cord with this machine.

STEP 4: Open ice shave lid cover and add ice cubes into the hopper and close the lid. Make sure the ice cubes are evenly distributed. Place a cup or bowl directly under the ice chute.

STEP 5: Flip the switch to ON to start the machine. Ice cubes will travel through the hopper and the cutting blade. **NOTE: The motor will not start unless the lid cover is closed.**

STEP 6: Shaved ice will drop through the ice chute. Turn the blade adjustment knob for desired ice thickness.

STEP 7: Once a sufficient amount of ice has been shaved, flip the switch to OFF. Remove the cup or bowl from the bottom of ice chute. Flavor and enjoy.

NOTE:

Use the REVERSE function to adjust the rotation of ice shaver should ice become jammed.

A drain hose is included and should be attached to the drain fitting to remove any water from inside the ice shaver machine.

Cleaning & Maintenance

It is recommended that the ice shaver machine be cleaned after each use.

- Make sure the machine is turned **OFF** and it is unplugged.
- Allow the machine to cool completely.
- Do not immerse the cord, plug or any part of the machine in water or other liquid.
- Do not spray controls or outside of unit with liquids or cleaning agents. Doing so could cause liquid to enter the machine and cause a short circuit or an electric shock.
- Use the included drain hose to remove any water from inside the ice shaver machine.
- Be careful when cleaning the sharp cutting blade.
- Clean all surfaces using soapy water using a soft cloth or sponge; rinse thoroughly. **NEVER USE STEEL WOOL TO CLEAN THE MACHINE, THIS WILL SCRATCH THE SURFACES.**
- Remove drip tray grid and rinse out tray with soapy water. Wipe down with soft cloth.
- Do not use abrasive chemicals or cleaners on any part of the machine. This can contaminate the ice.
- After cleaning, make sure the unit is completely dry before storing.



Olde Midway features a full line of concession equipment and accessories.

OldeMidway.com