 


ASSEMBLY INSTRUCTION





CHEST - 2459-30

Caution: Please read instructions thoroughly before unpacking assembly pars. Sharp exposed staple tips can cause injury, therefor, for your protection, please remove any exposed staled used in packing.




- 1 We recomend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury or persons during assembly
 - 2 Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 - 3 Please do not over tighten screw of bolts
 - 4 Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assembly your newly purchased product correctly an efficiently
- . Do not allow children to cimb on furniture.
 - . Do not television sets on top of chest, door chest, and/or dressers.
 - . Please place heaviest objects the lowest drawers.
 - . Please have no more than drawer open at a time.

No	Part List	Q.ty
(A)	 Chest	1
(B)	 Legs	4

STEP 1

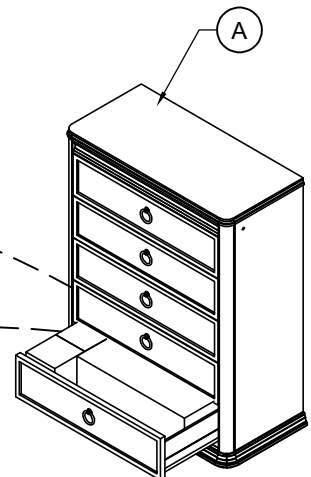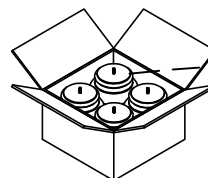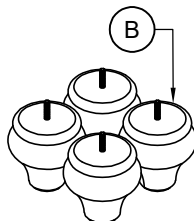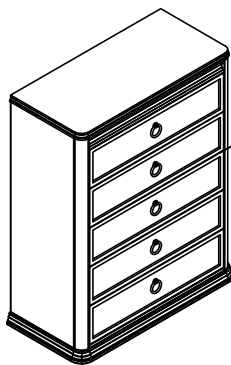

STEP 2

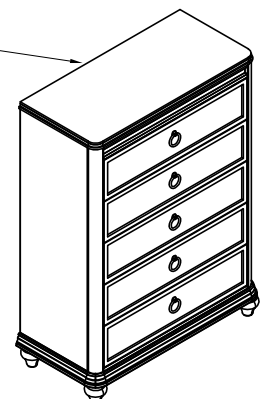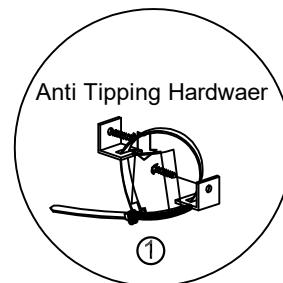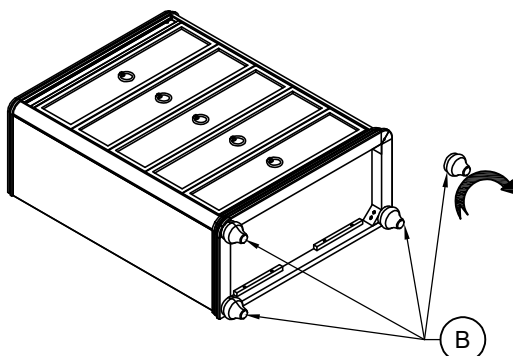

Remark: there is a tip restraint kit provided on the back of this product. please read the directions thoroughly an install immediately when placed in home

Assembly Completed