




INSTALLATION

Product Manual

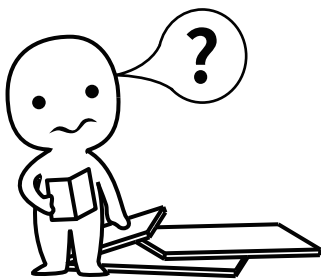


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

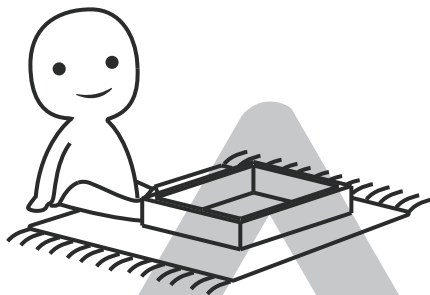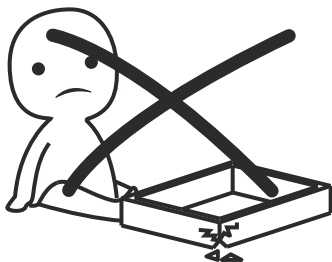



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

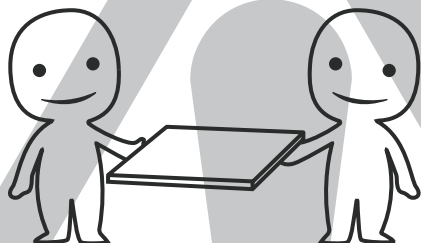

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

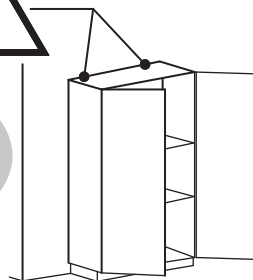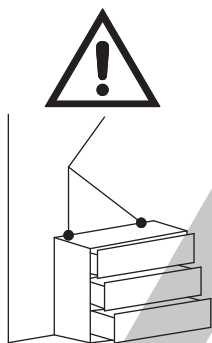

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

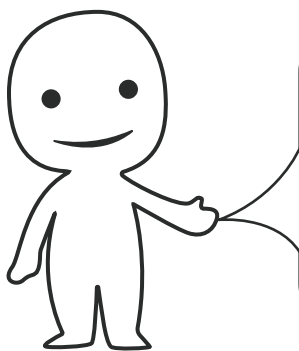


Please prepare the following tools

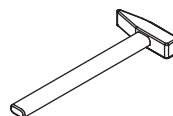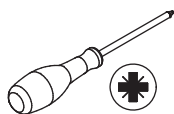


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 24

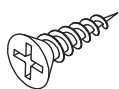


CRD3512A

B x 16

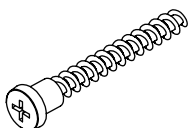

CRC0540A

C x 51

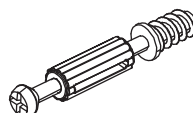


CRA0635A

D x 51




CRB1595A

E x 1

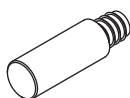


M5 mm

F x 6

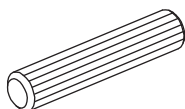


CRF0630A

G x 4

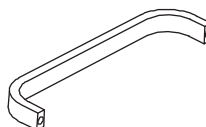


M4 x 96 mm

H x 8

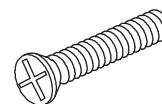


CRE0420A

I x 2

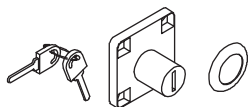


J x 8

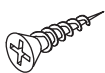


CRD3520A

K x 2

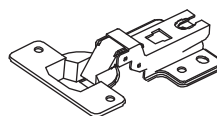


DGA861C

L x 1

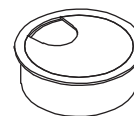

Ø 60 mm

M x 20

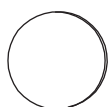

Ø 20 x 1 mm

N x 12




CRD3514A


25 x 6



12"(3008)

26 x 1

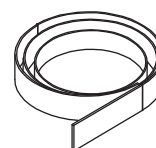

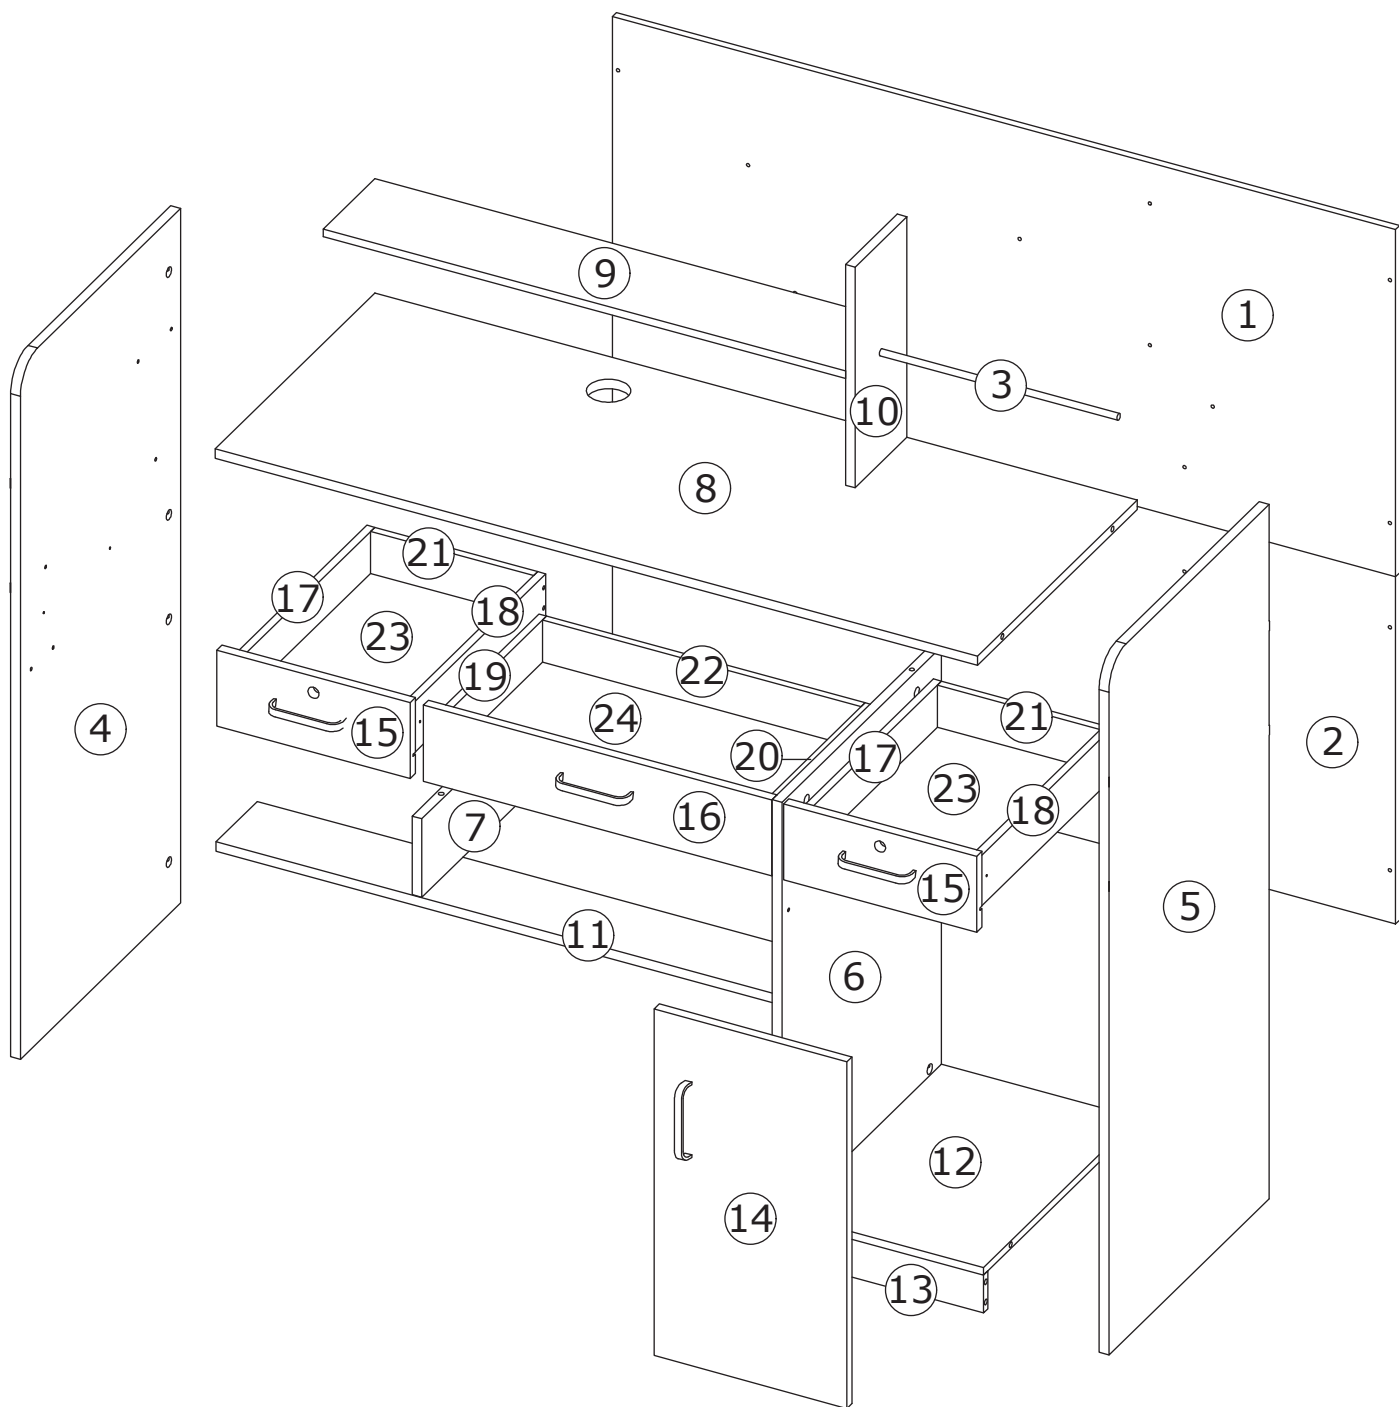


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


*This is a permanent label.
Do not remove!*

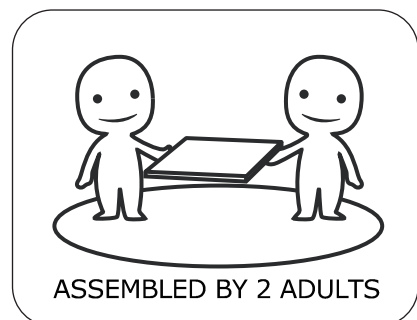


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

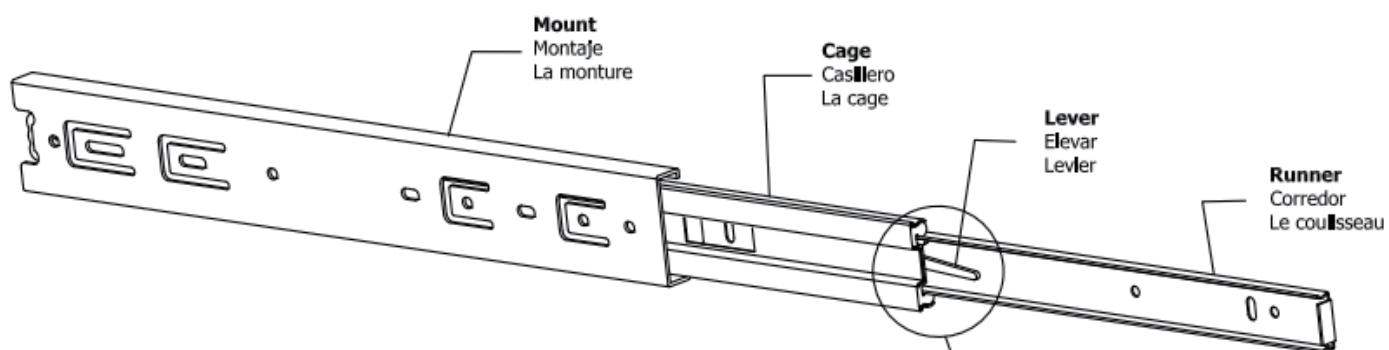


STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

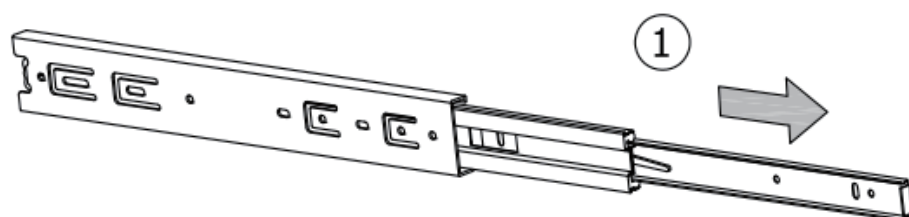

STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

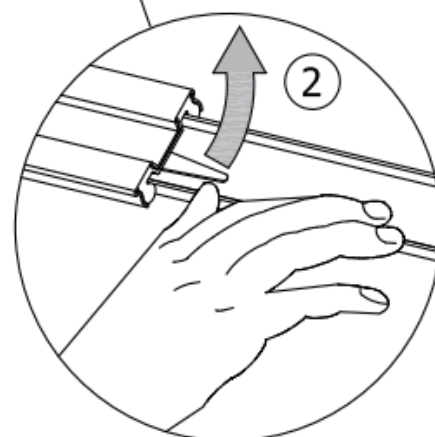


STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

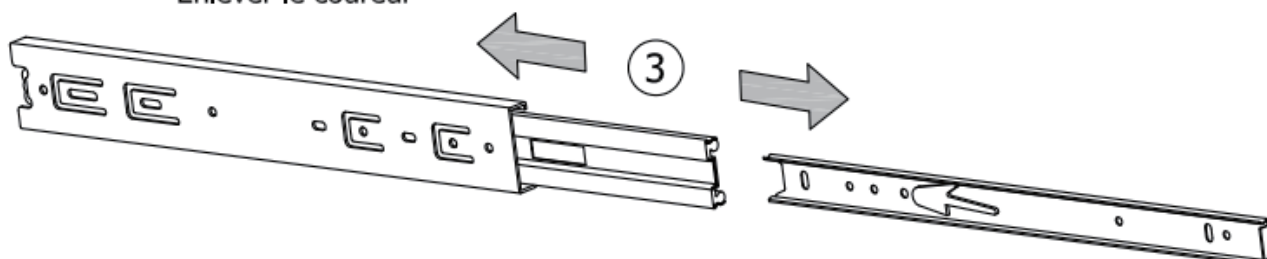



1




Separate glide at first, fix slide rail 25 to **both sides** of plate 7 with screw(A) as shown.

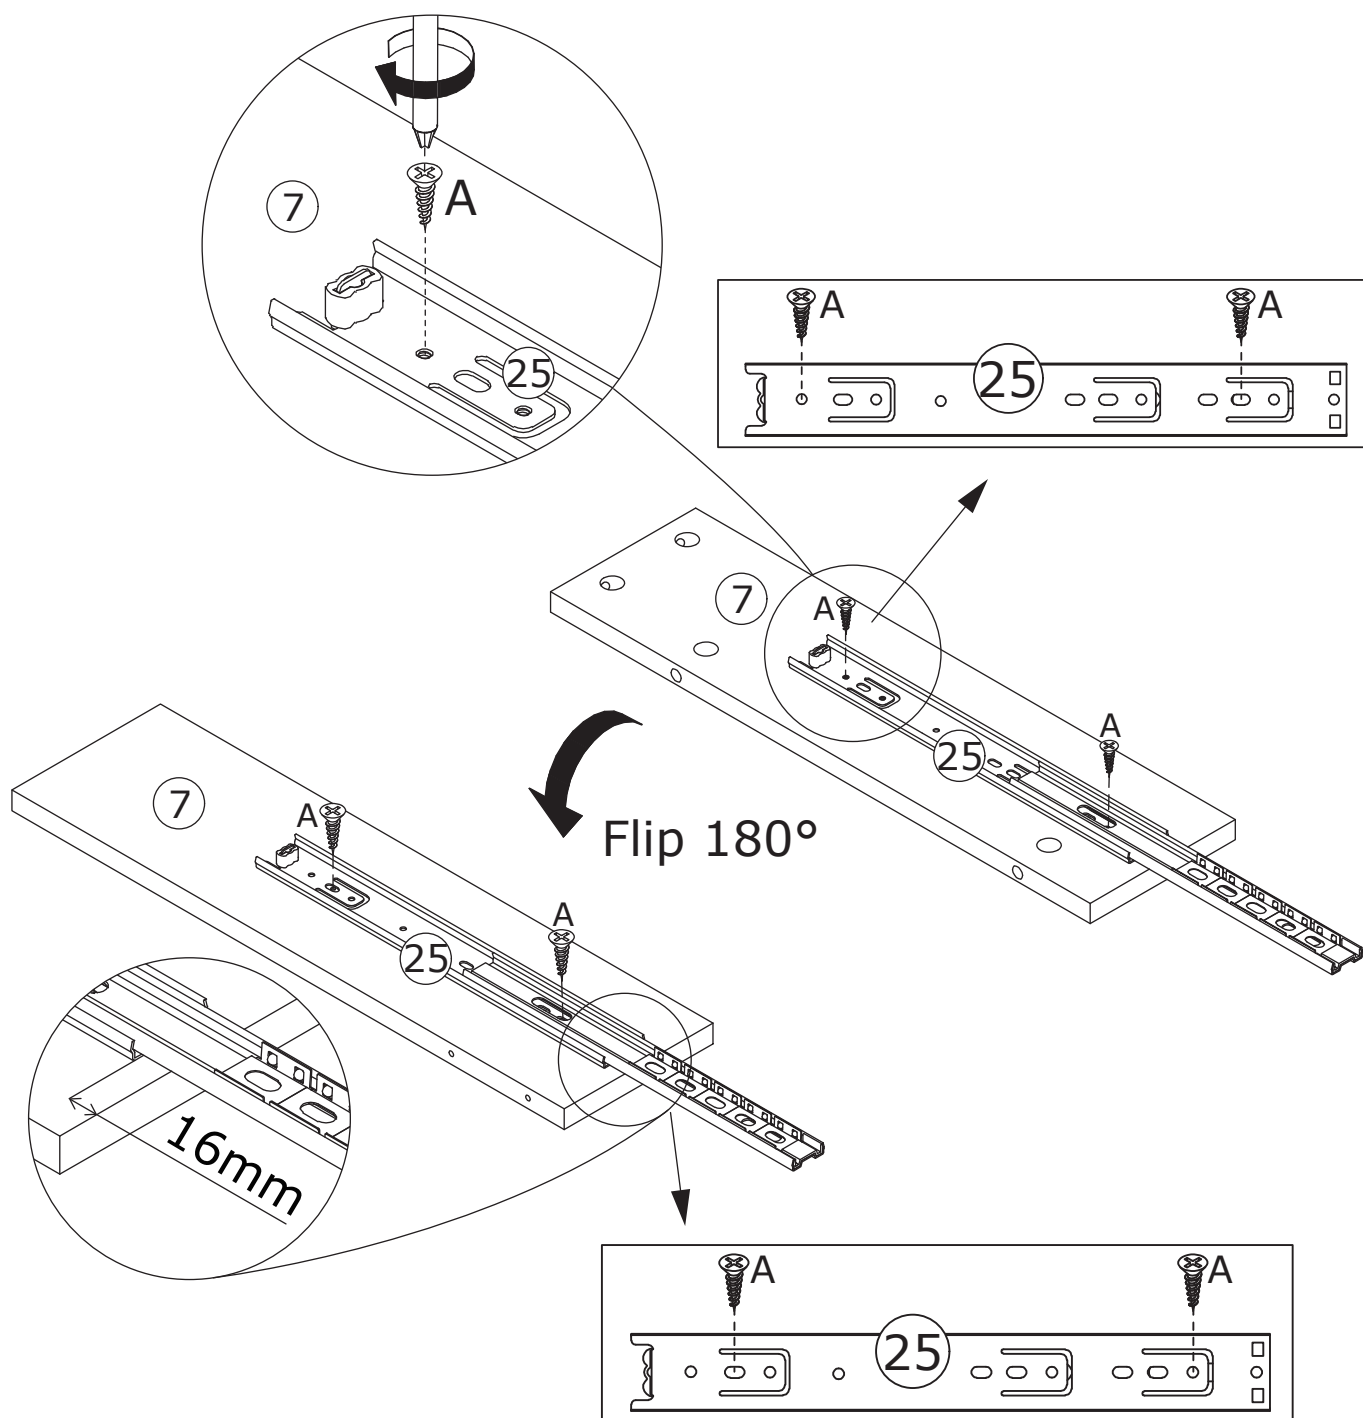



2

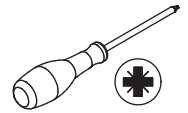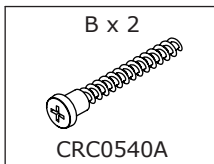



Attach plate 7 to plate 11 and fix with screw(B) as shown.

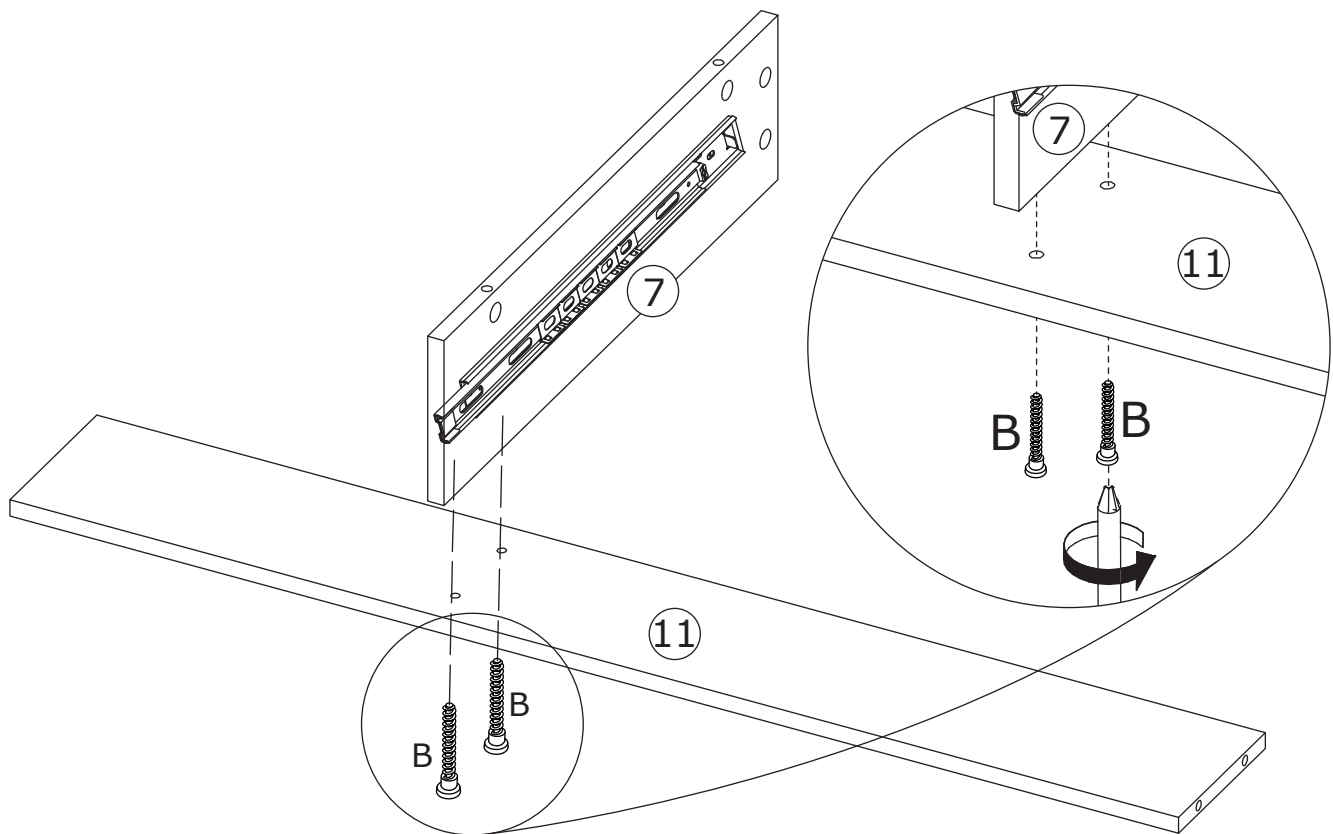



3

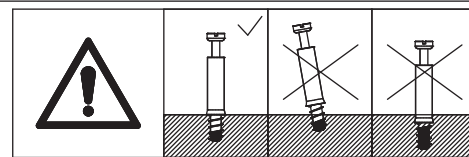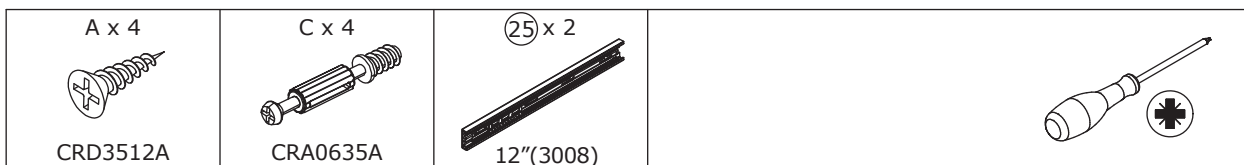

Fix slide rail 25 to plate 6 with screw(A) as shown.
Screw eccentric rod(C) into plate 6 at first.
Flip to back, fix slide rail 25 and screw eccentric rod(C) into as well.

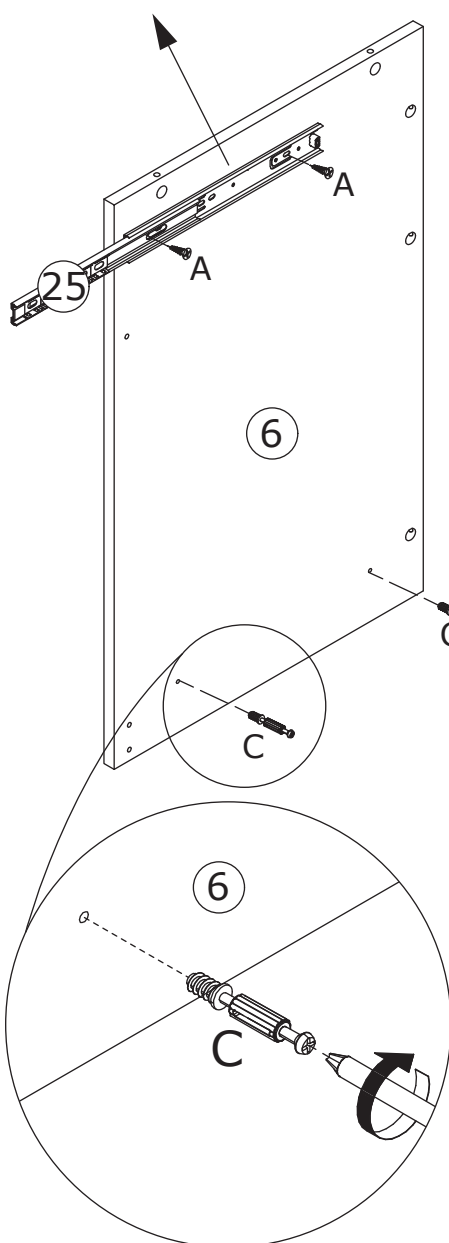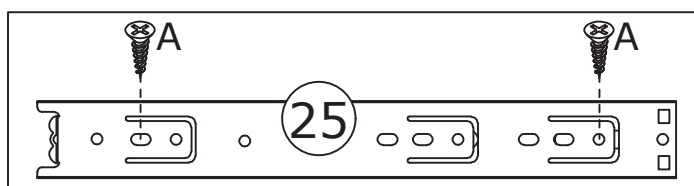

180°



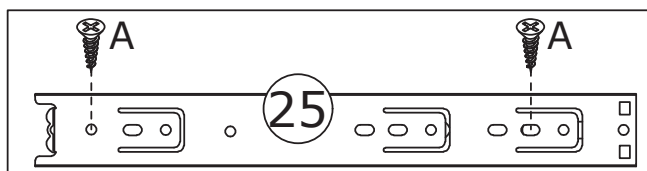
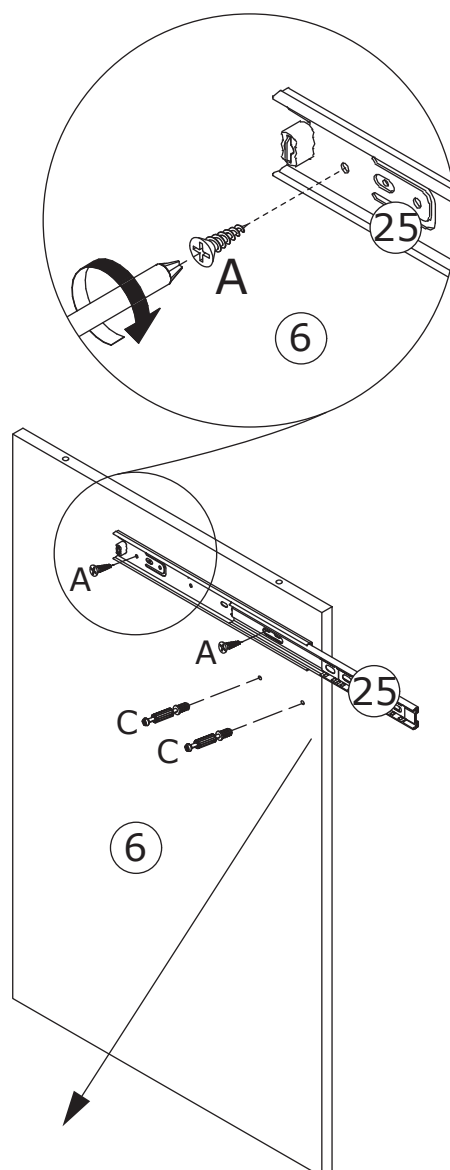


4


D x 2






CRB1595A

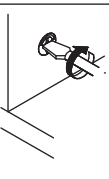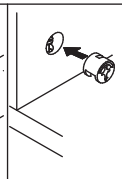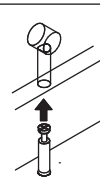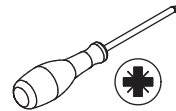


Attach plate 6 to plate 11, add cam lock(D) into plate 11 and turn clockwise to tighten as shown.

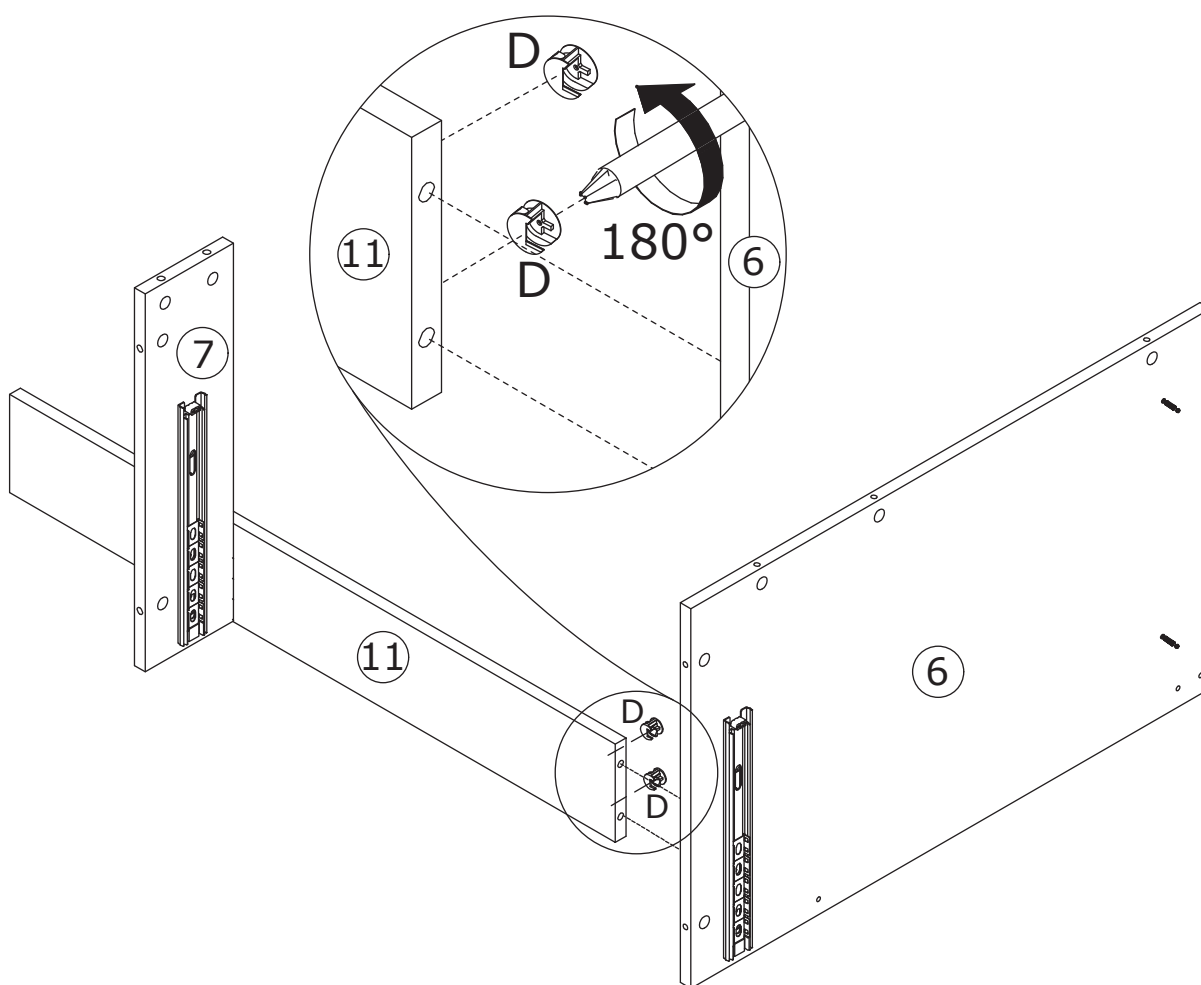


5

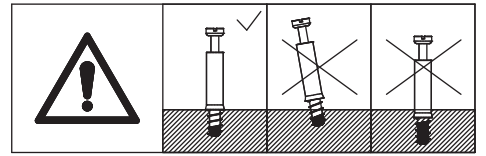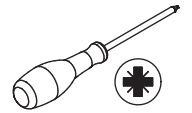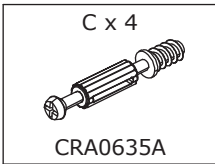


Screw eccentric rod(C) into plate 8 as shown.

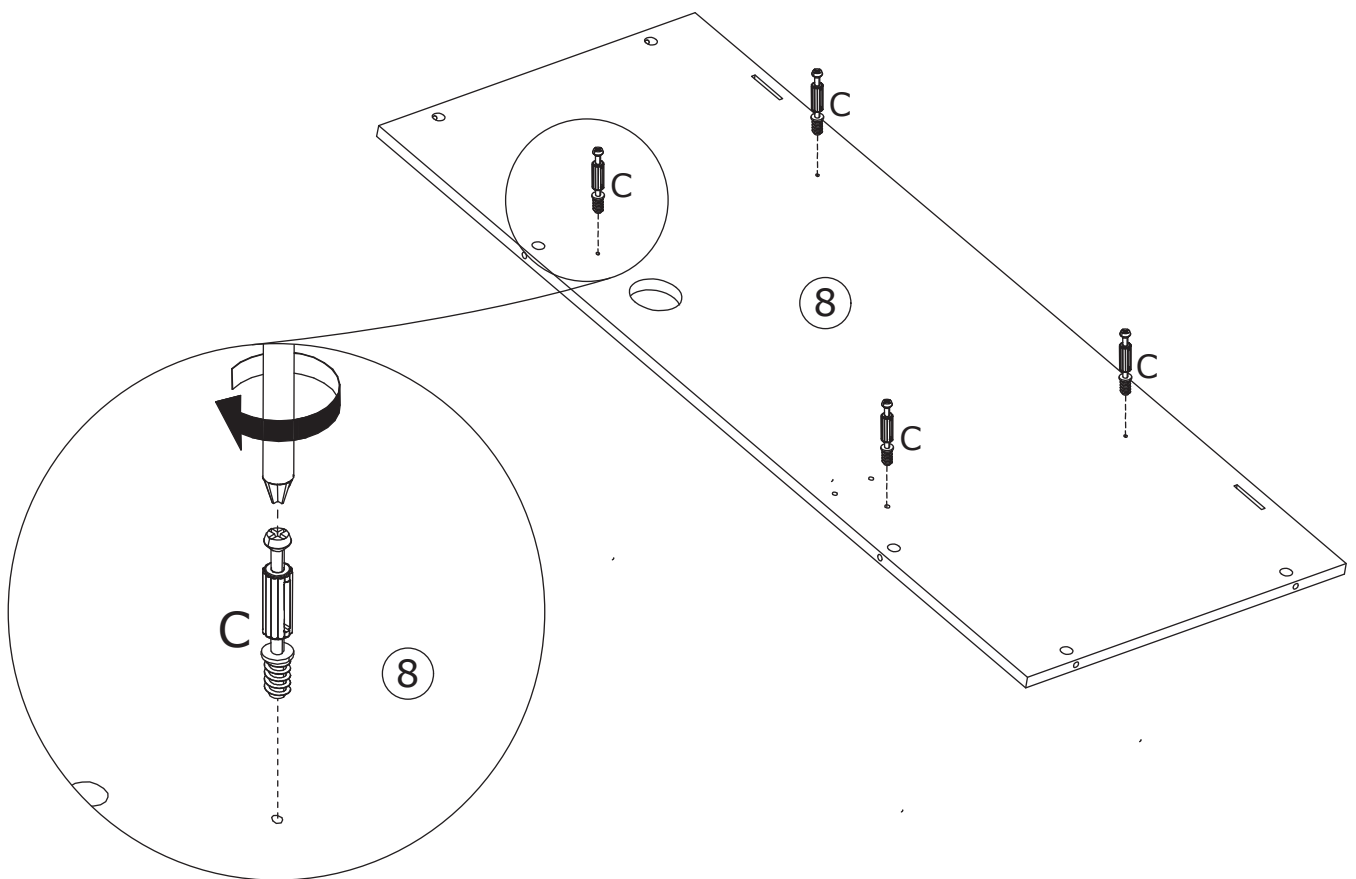


6
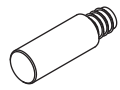
<p>D x 4</p>  <p>CRB1595A</p>	<p>E x 1</p>  <p>M5 mm</p>	
--	---	---


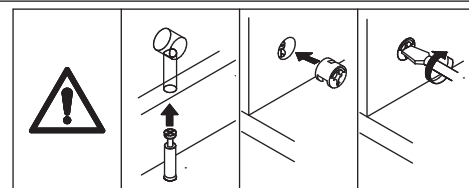


Attach plate 8 to plate 6 and 7, add cam lock(D) into plate 6,7 and turn clockwise to tighten as shown.



Insert screw(E) into the corresponding hole in plate 6 as shown.

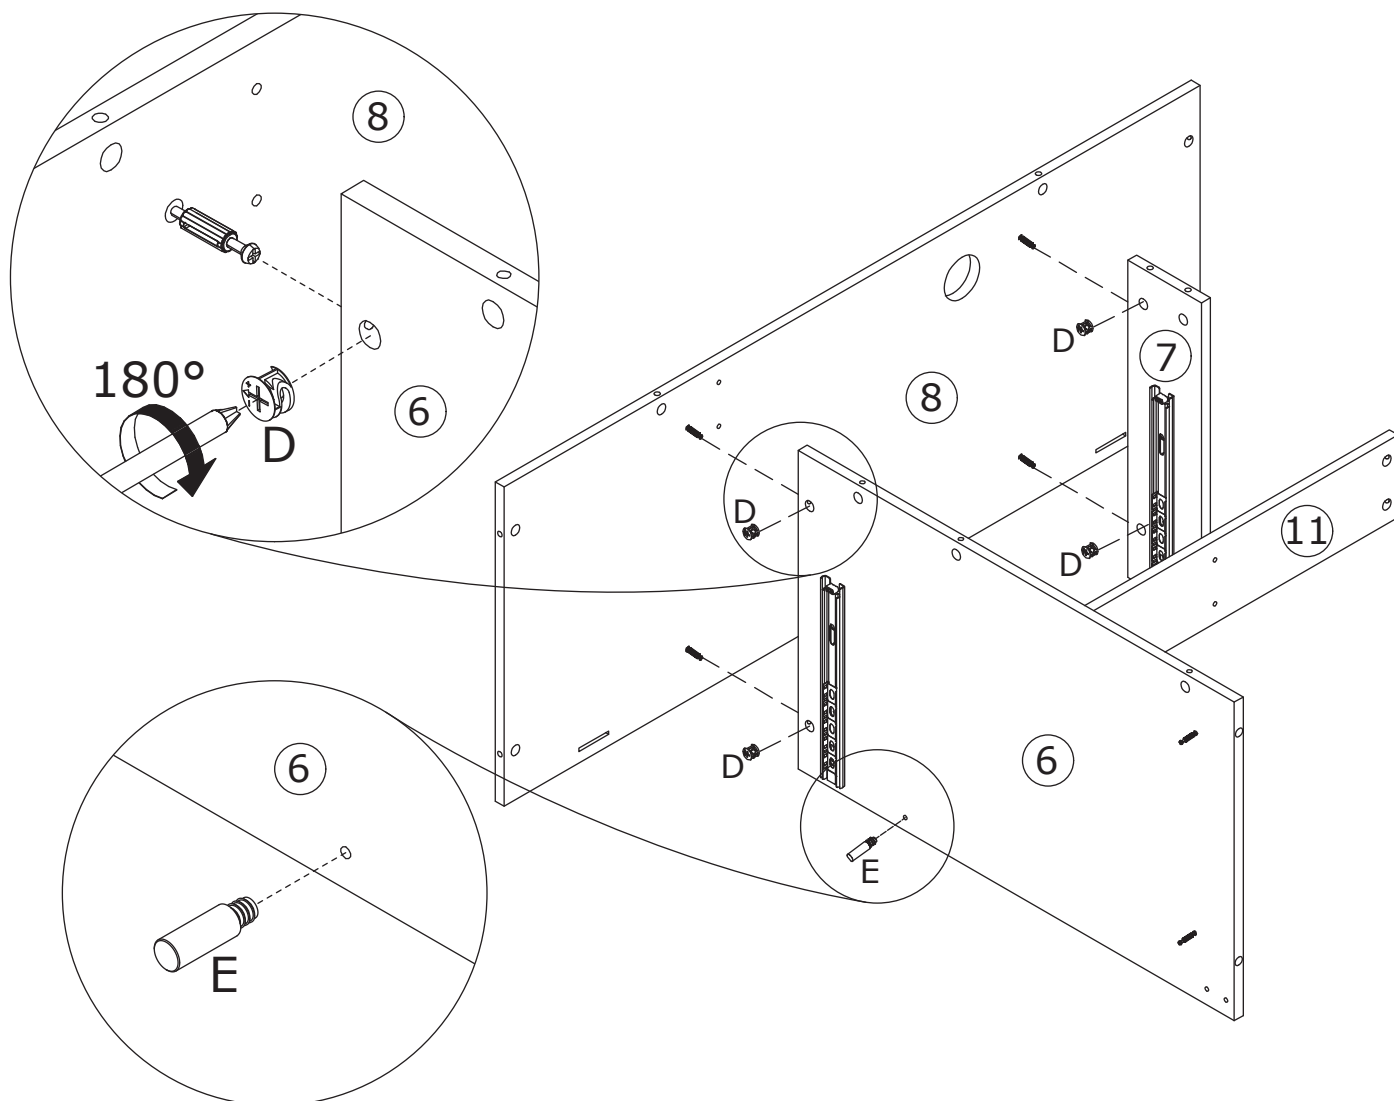



7

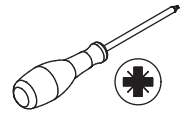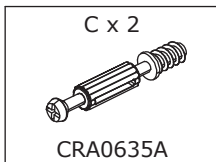



Screw eccentric rod(C) into plate 10.

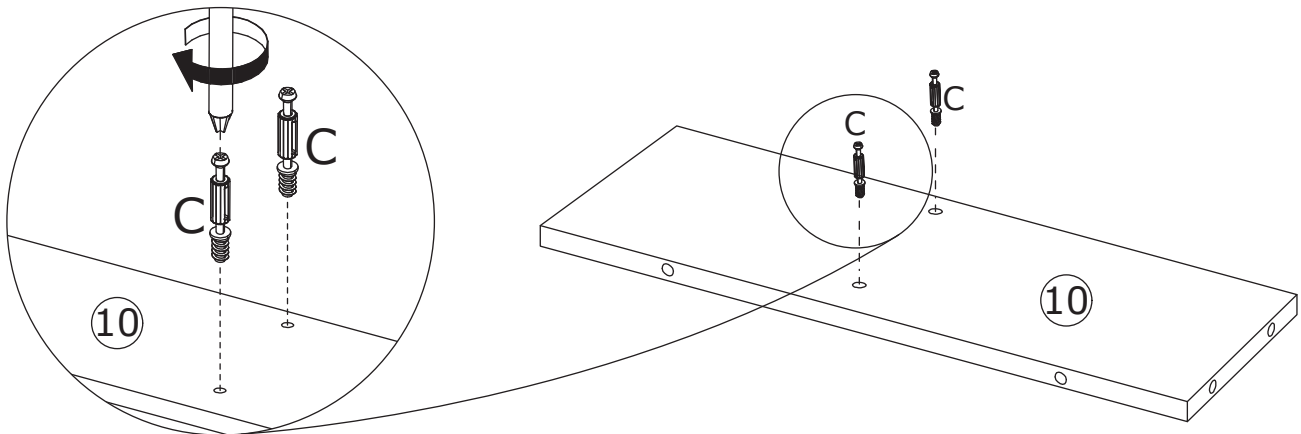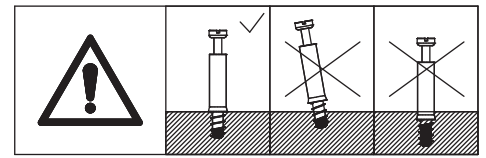


8

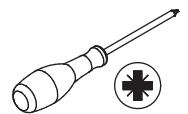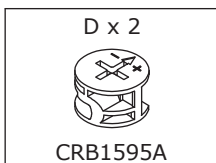





Attach plate 10 to plate 9, add cam lock(D) into plate 9 and turn clockwise to tighten as shown.

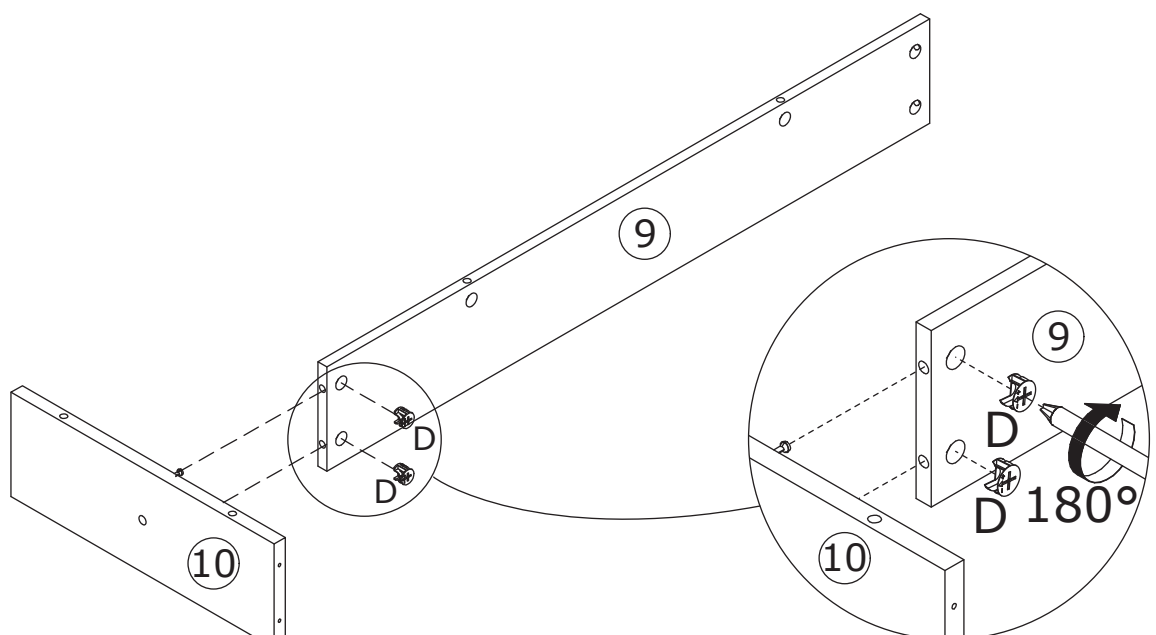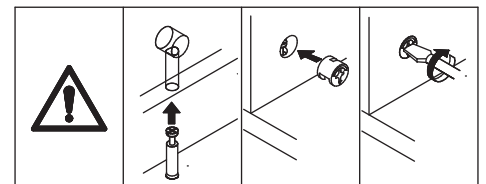

9

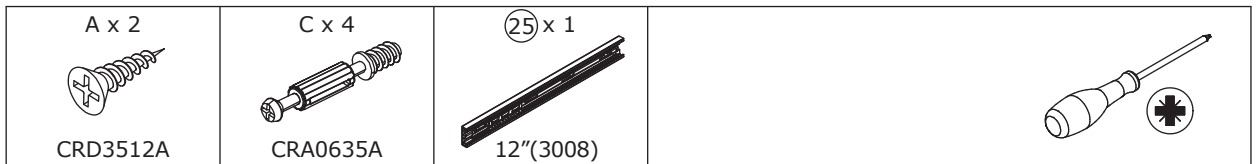

Fix slide rail 25 to plate 5 with screw(A).
Screw eccentric rod(C) into plate 5 as
shown.

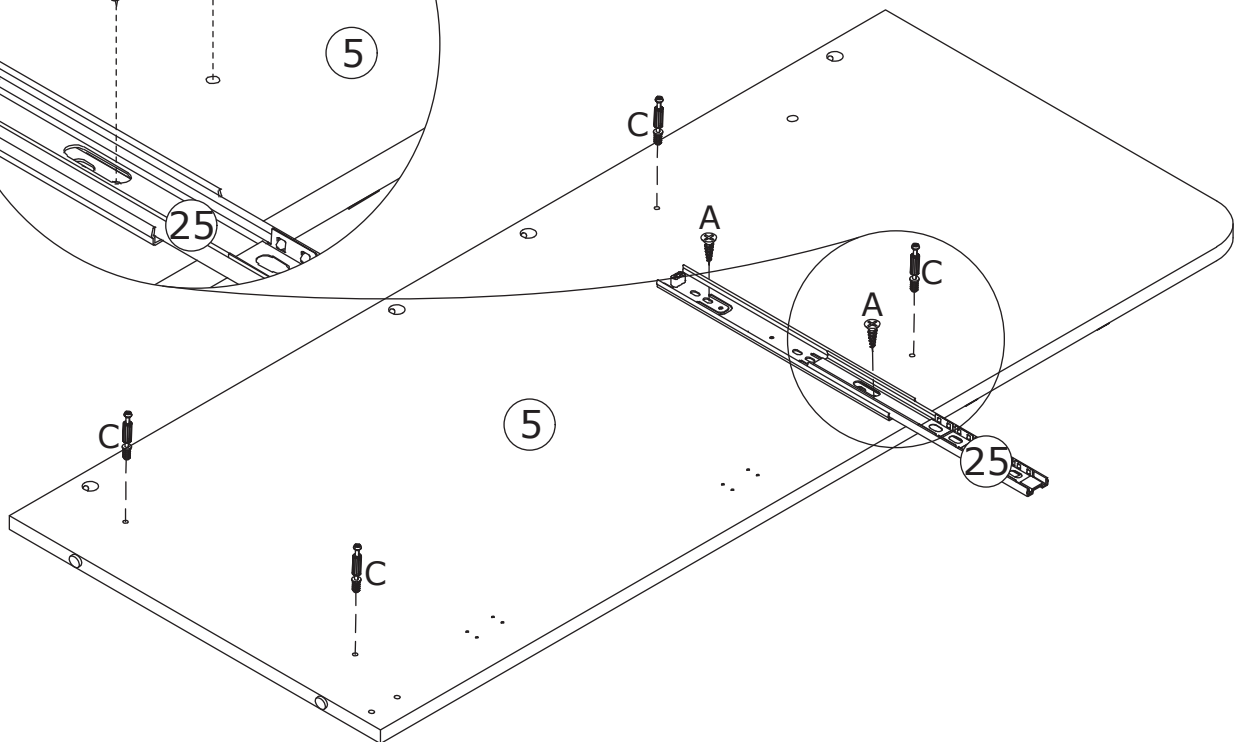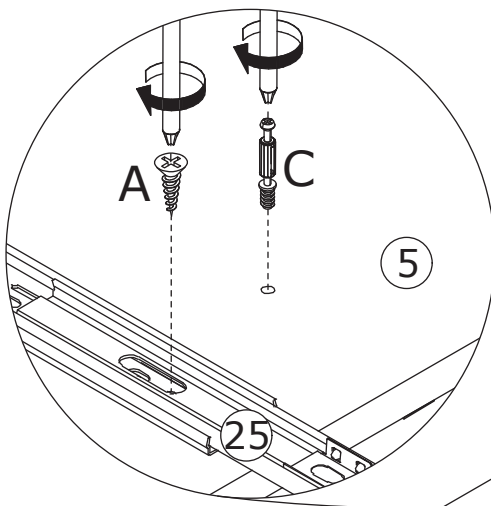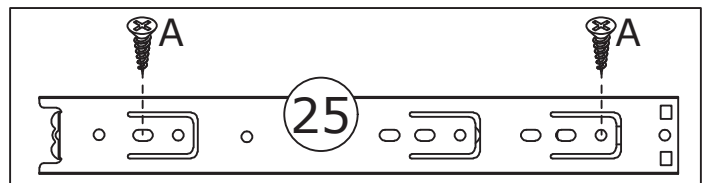
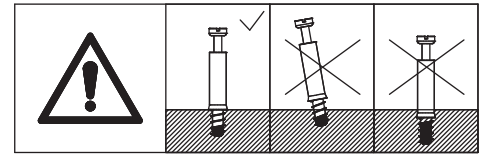


10



A x 2
CRD3512A

C x 6
CRA0635A



25 x 1
12"(3008)

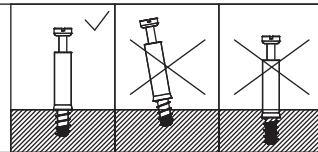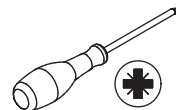



Fix slide rail 25 to plate 4 with screw(A).
Screw eccentric rod(C) into plate 4 as
shown.

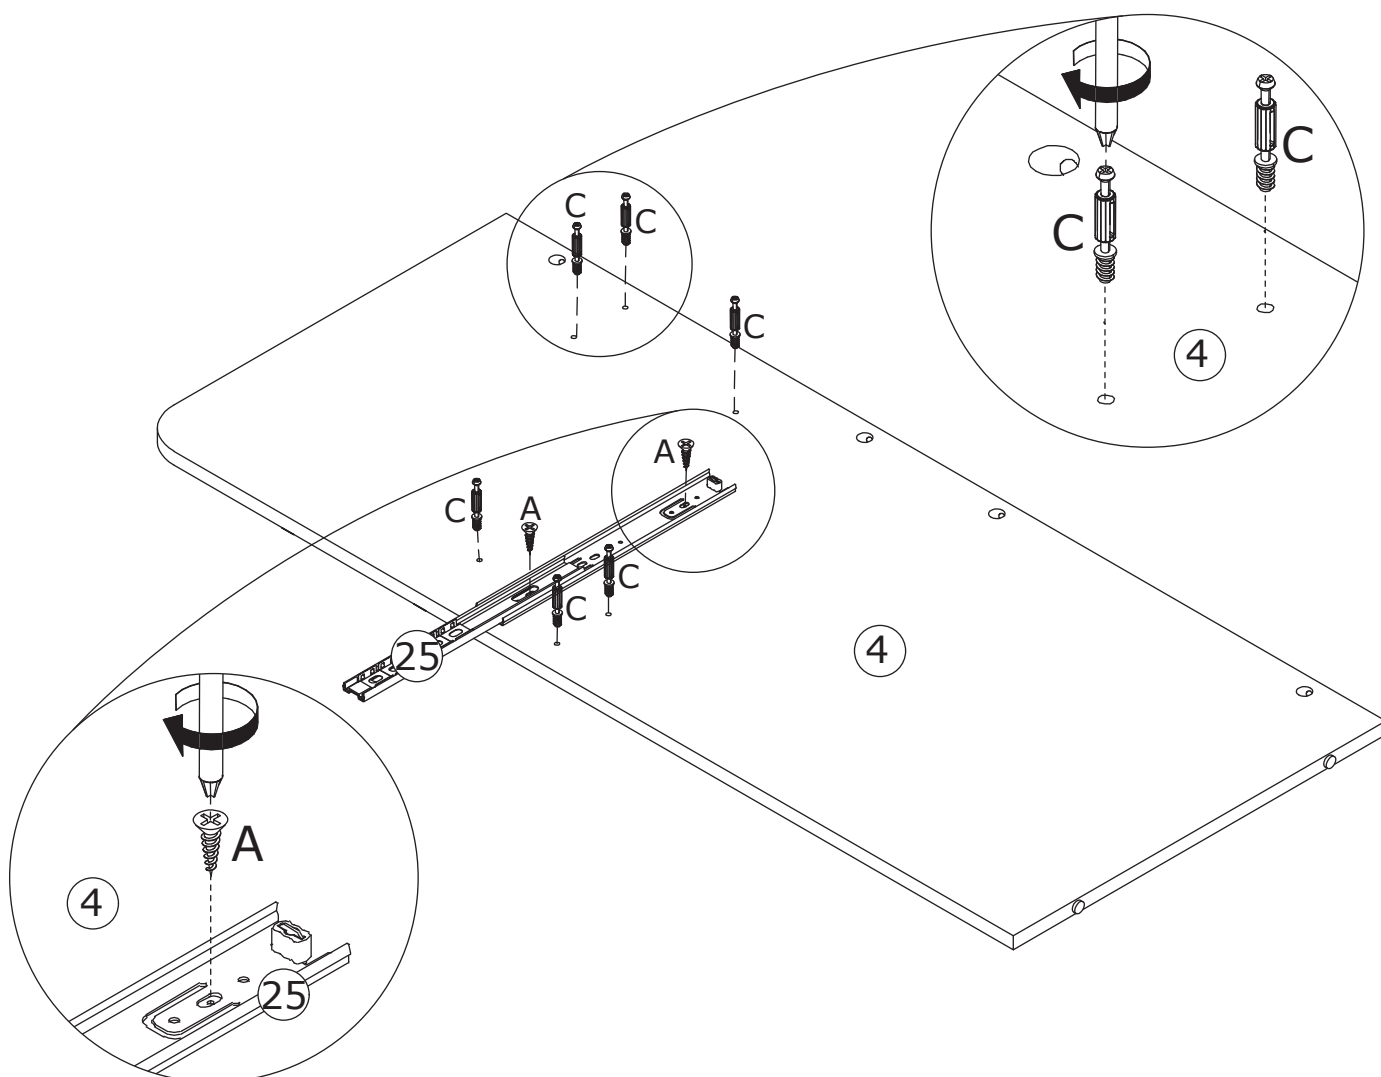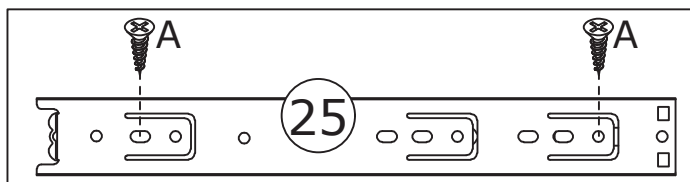

11

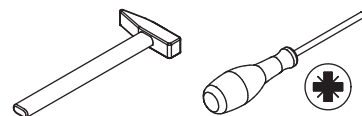
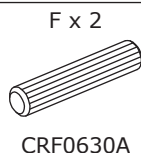


Attach plate 13 to plate 6 with wooden dowel(F) at first.
 Attach plate 12 to plate 6, turn cam lock(D) clockwise to tighten.
 Attach plate 10 to plate 8 and fix with screw(B) as shown.

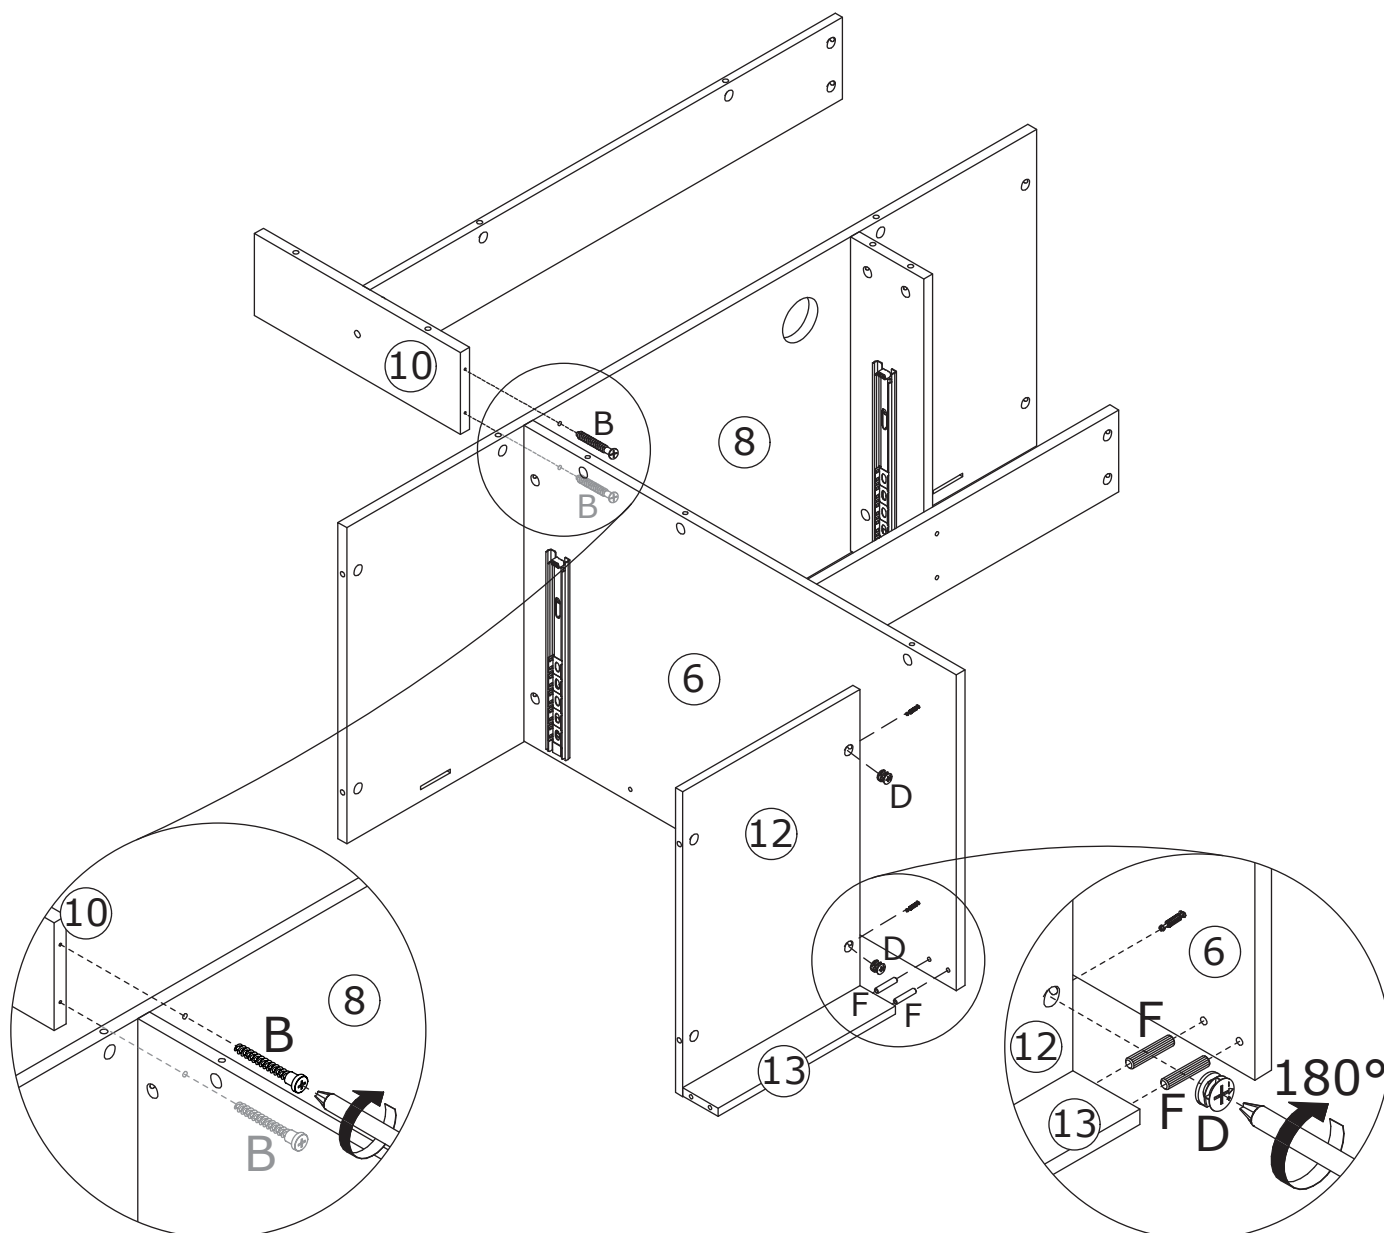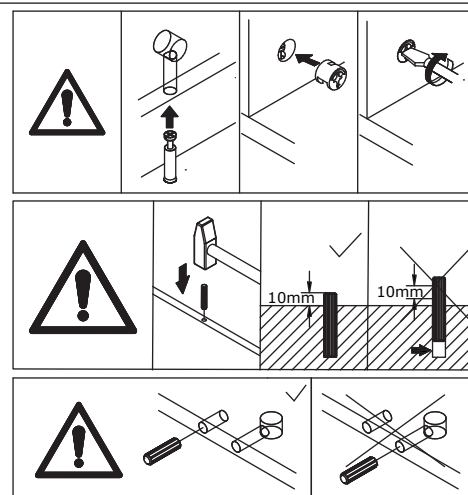


12

D x 6
CRB1595A

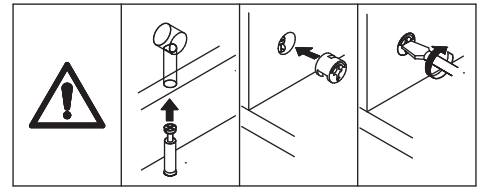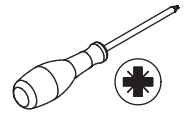

Attach plate 4 to the component and turn cam locks(D) clockwise to tighten as shown.

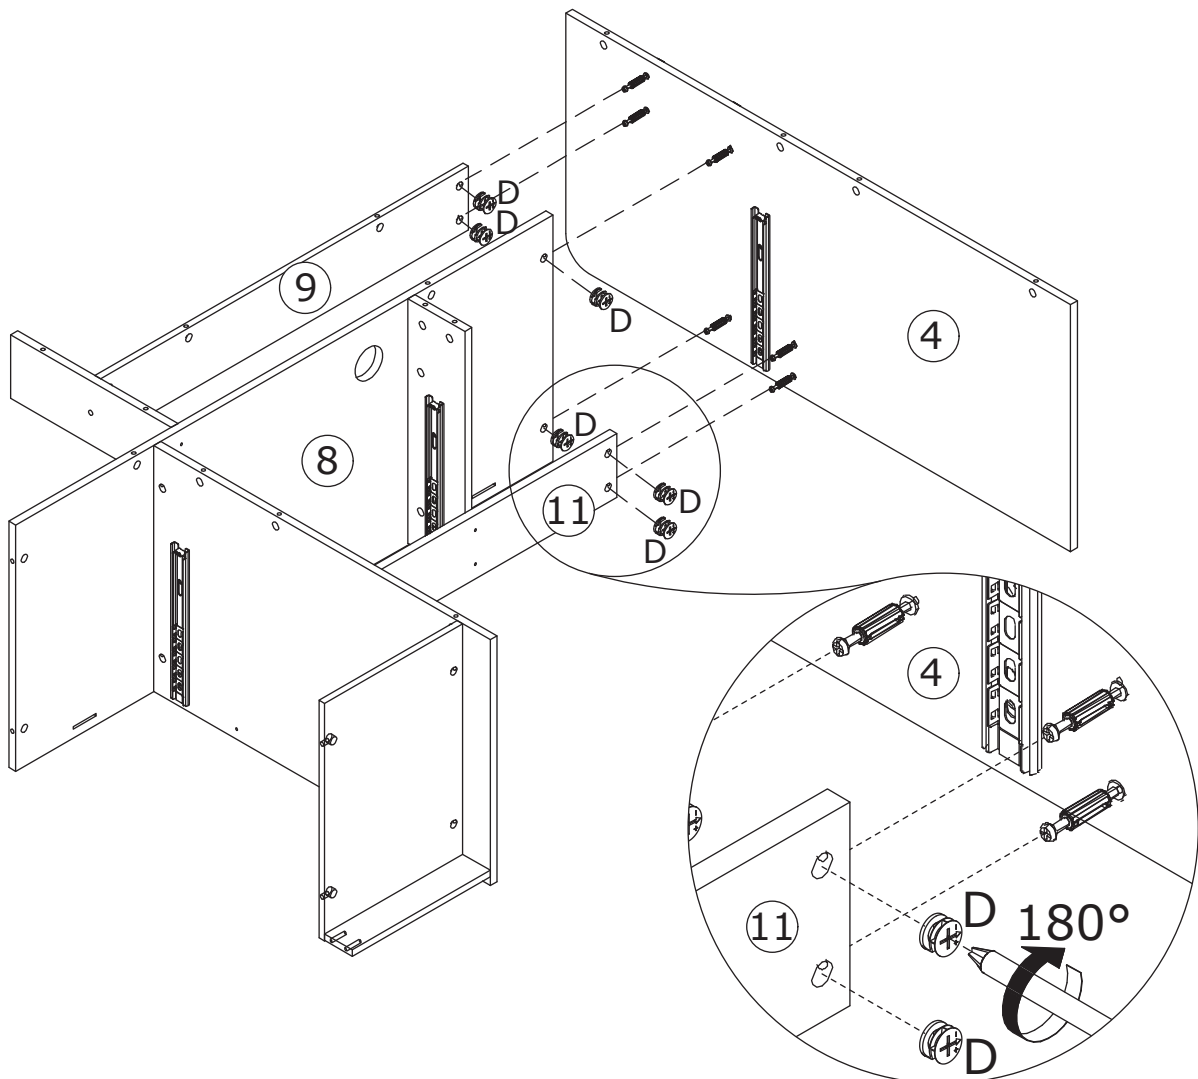


13

D x 4




CRB1595A

F x 2


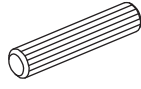


CRF0630A



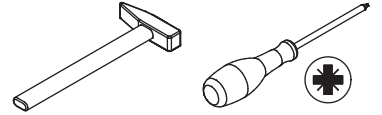


Insert wooden dowel(F) into plate 13 at first.


Attach plate 5 to rod 3 and plate 8, 12, turn cam lock(D) clockwise to tighten as shown.

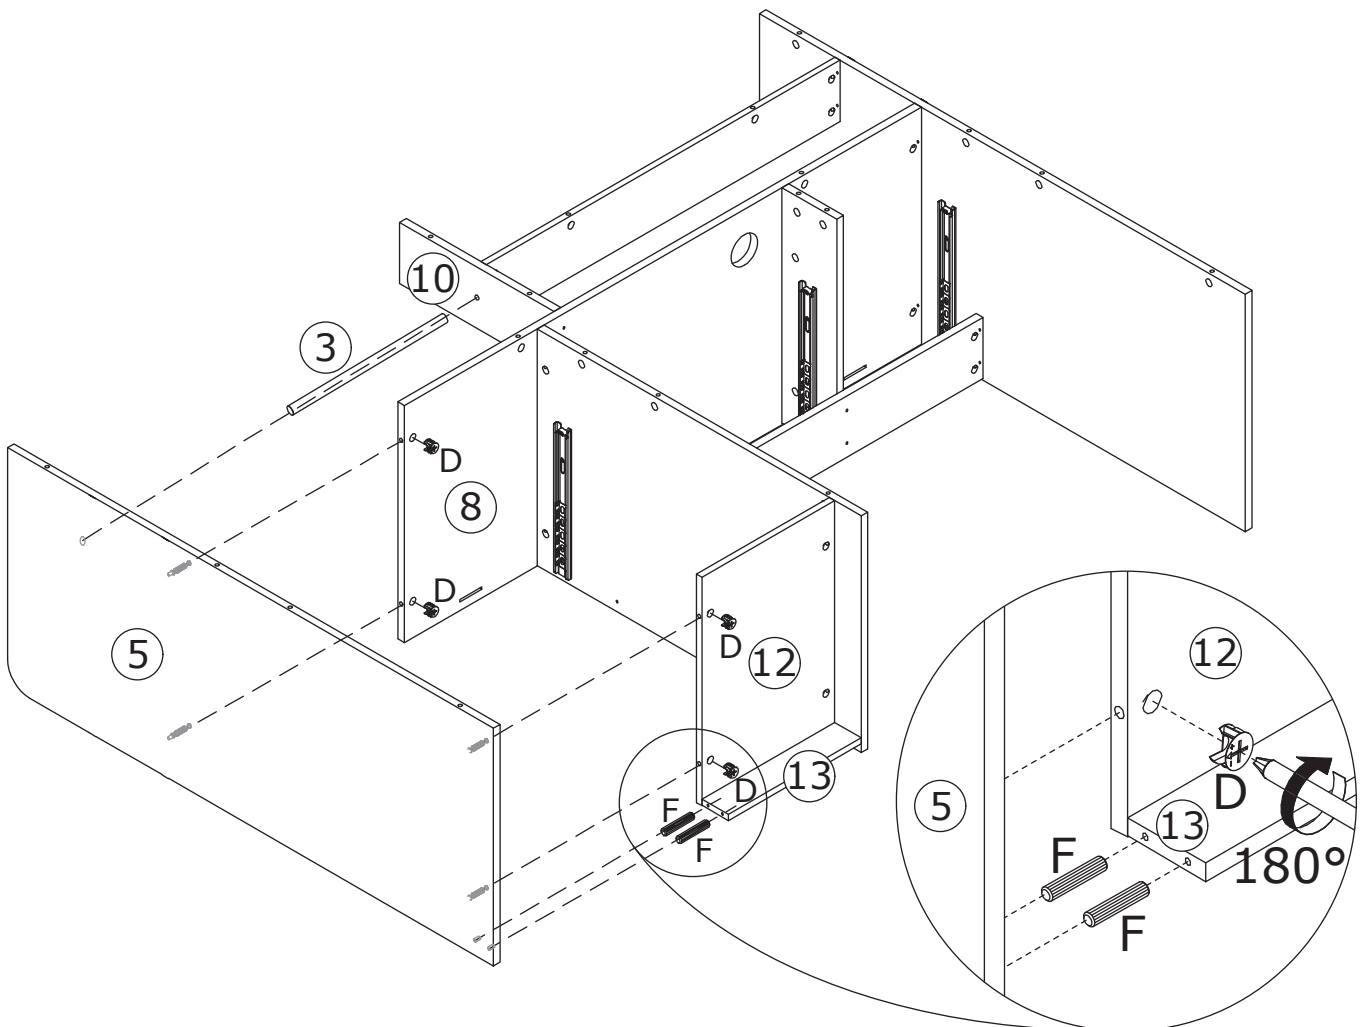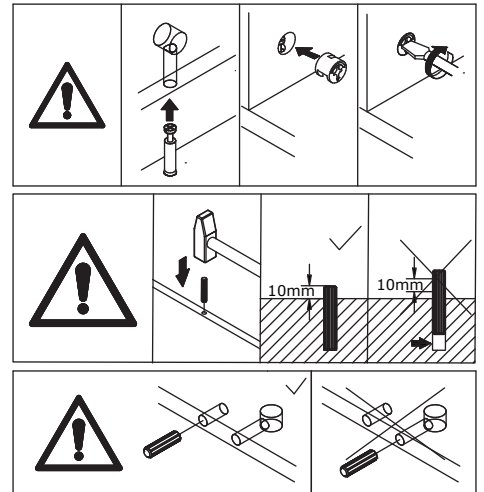



14

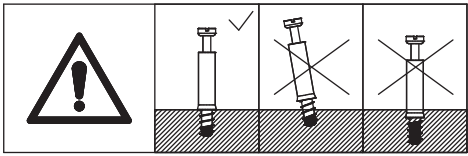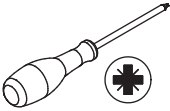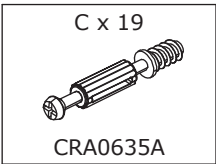



Screw eccentric rod(C) into plate 1 and 2 as shown.

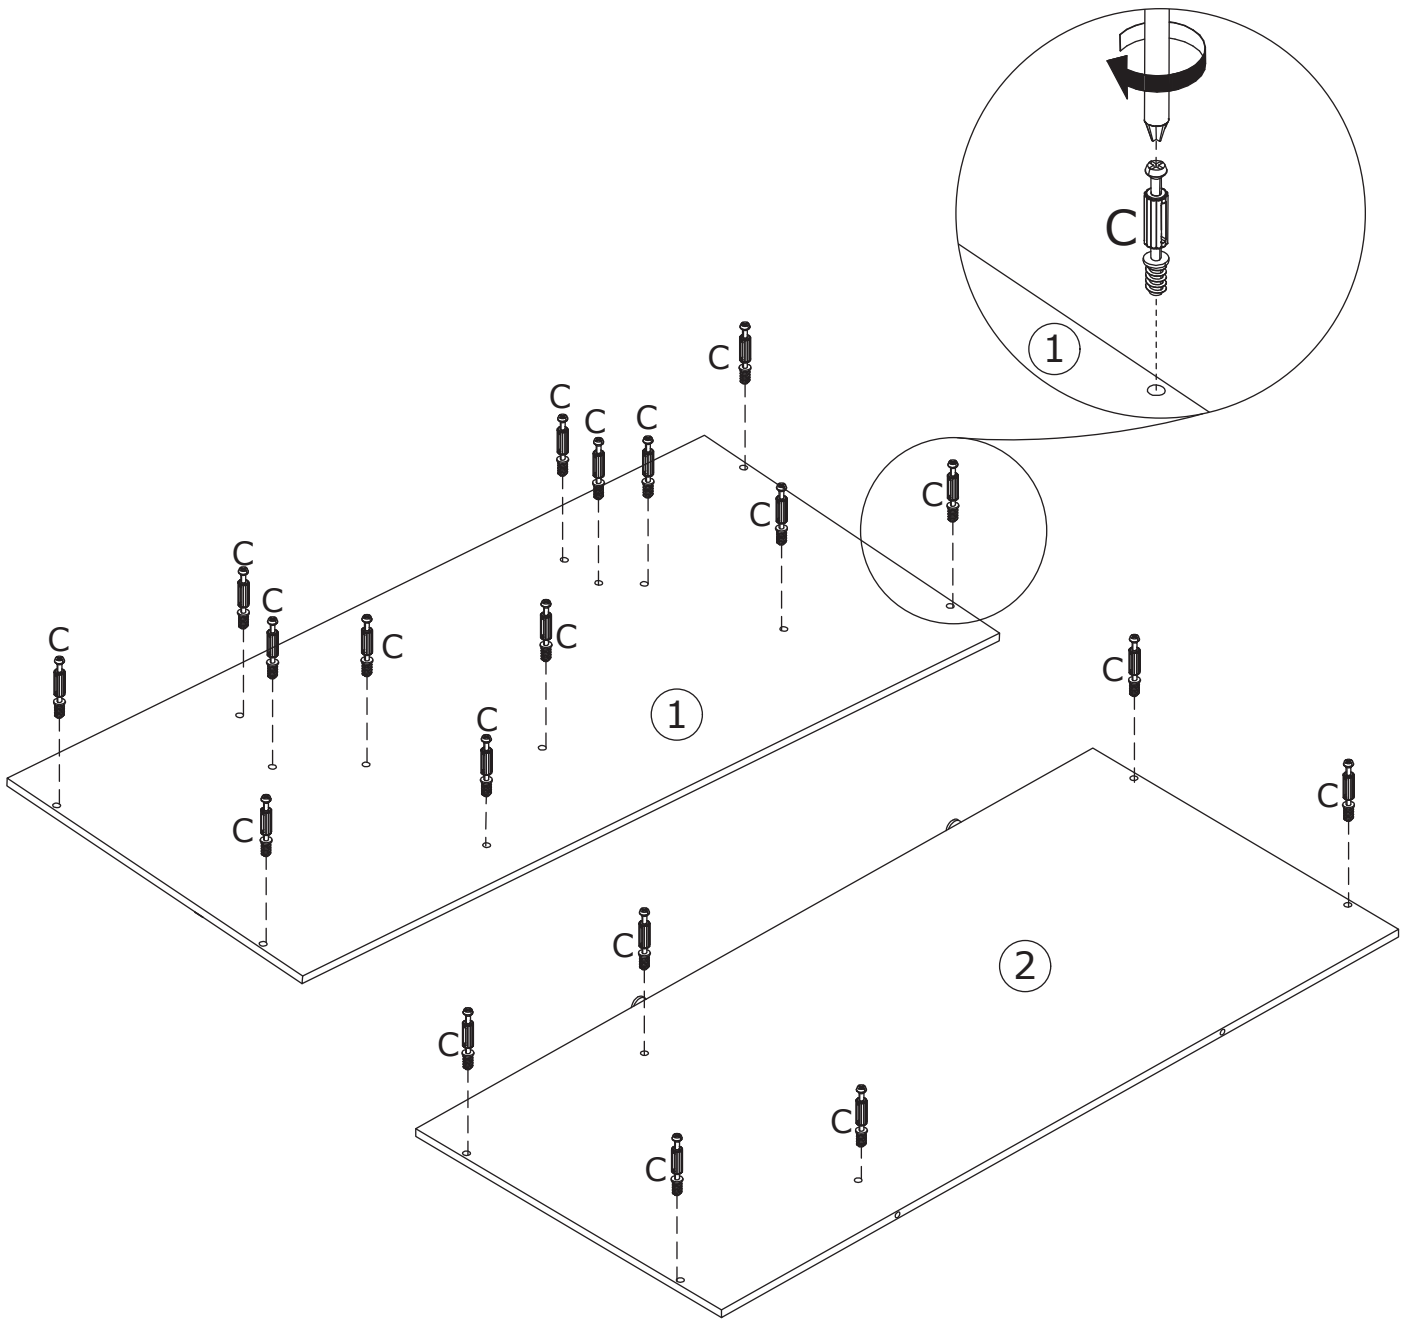

15

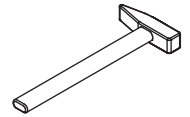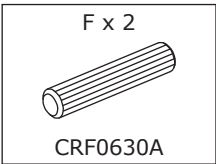

Connect plate 1 and 2 with wooden dowel(F) as shown.

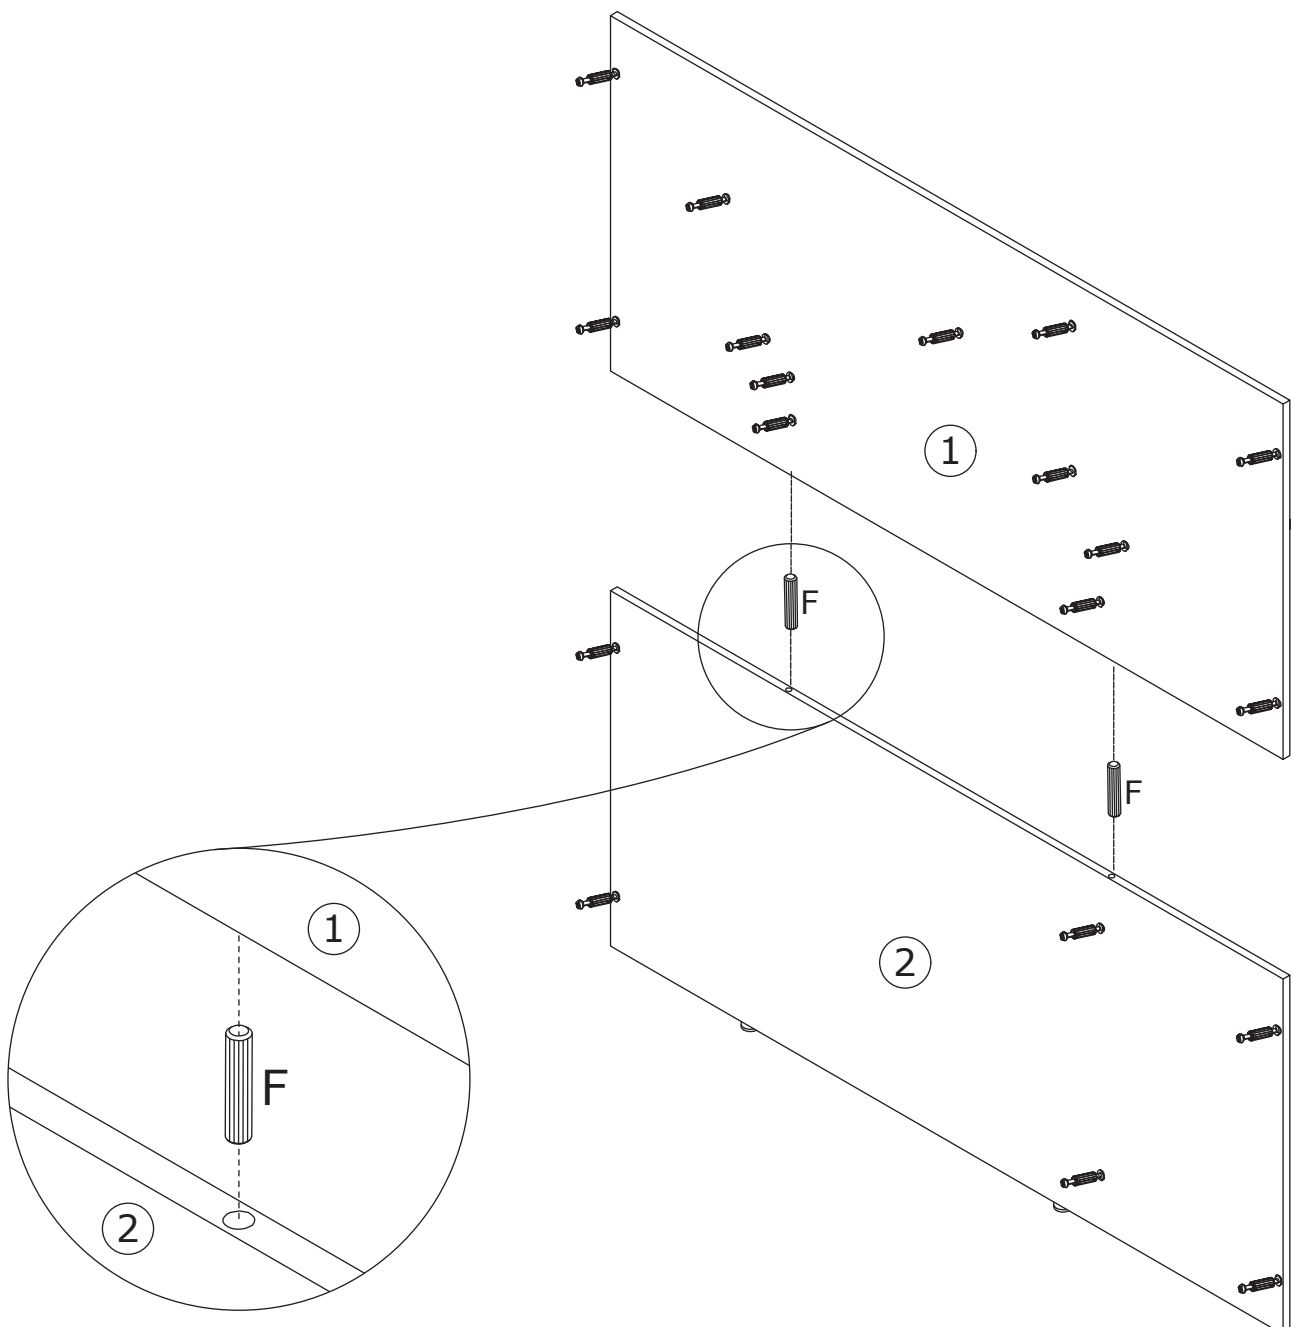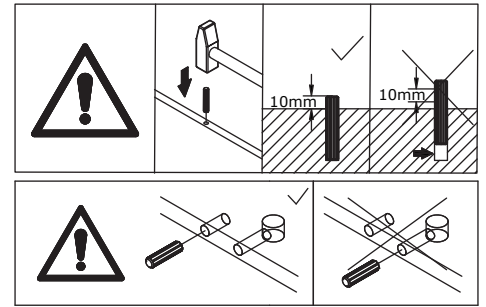


16




D x 19





CRB1595A

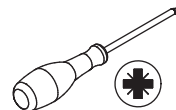


Attach plate 1 and 2 to the front of the component and turn cam lock(D) clockwise to tighten as shown.

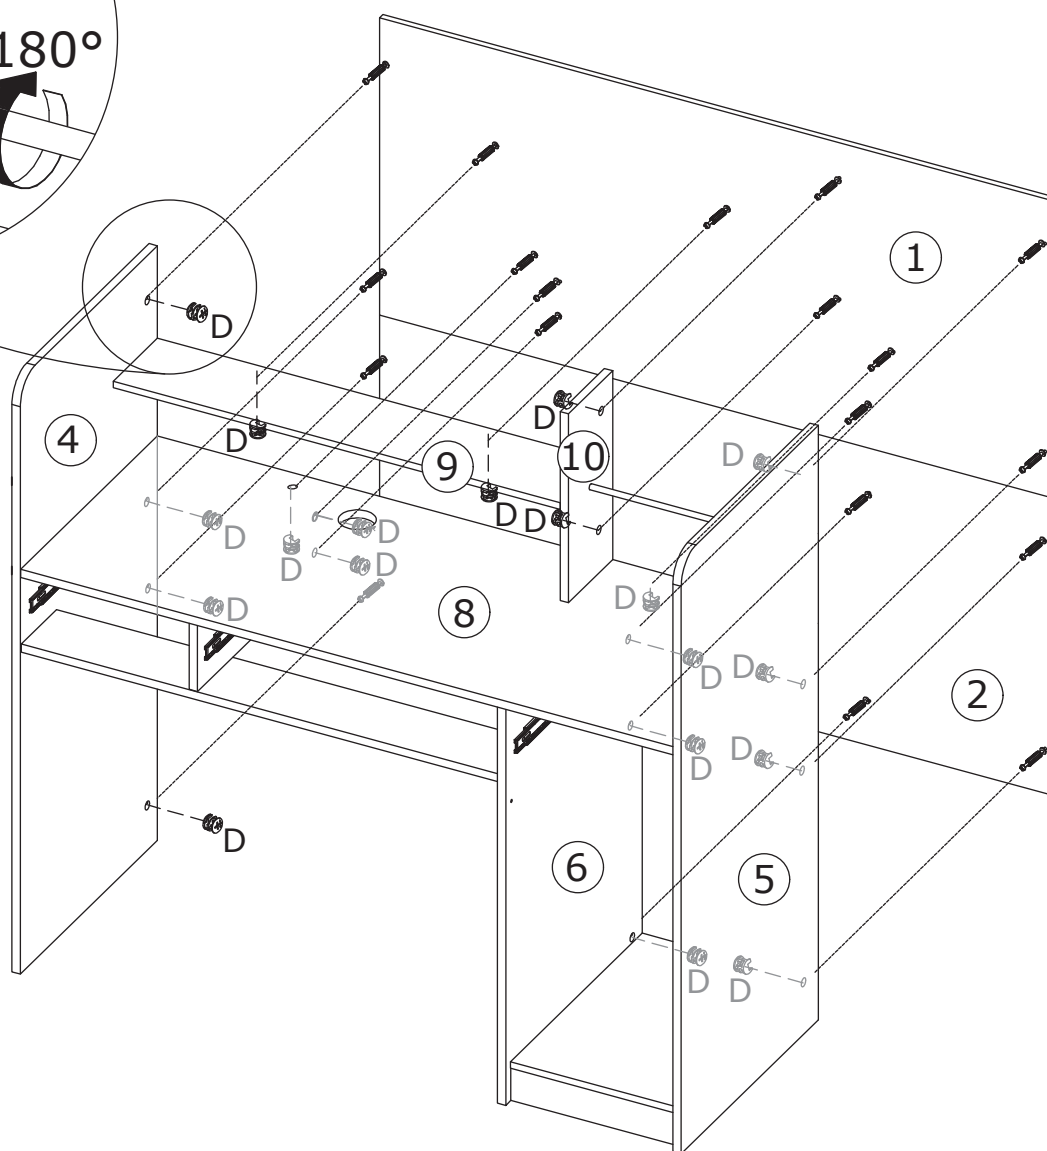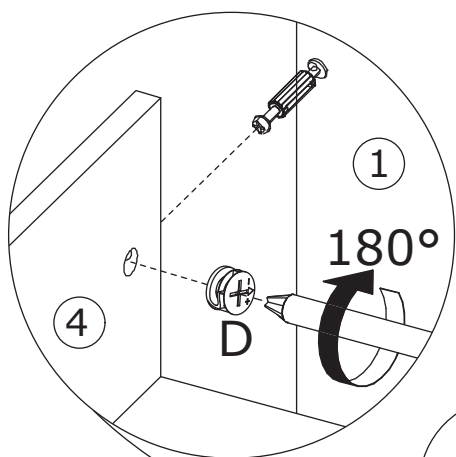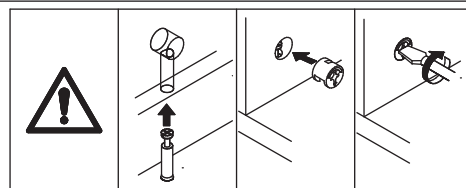

17

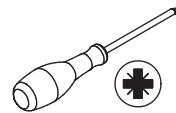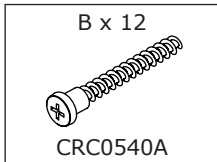


Fix plate 17 and 18 to plate 21; plate 19 and 20 to plate 22 with screw(B) as shown.

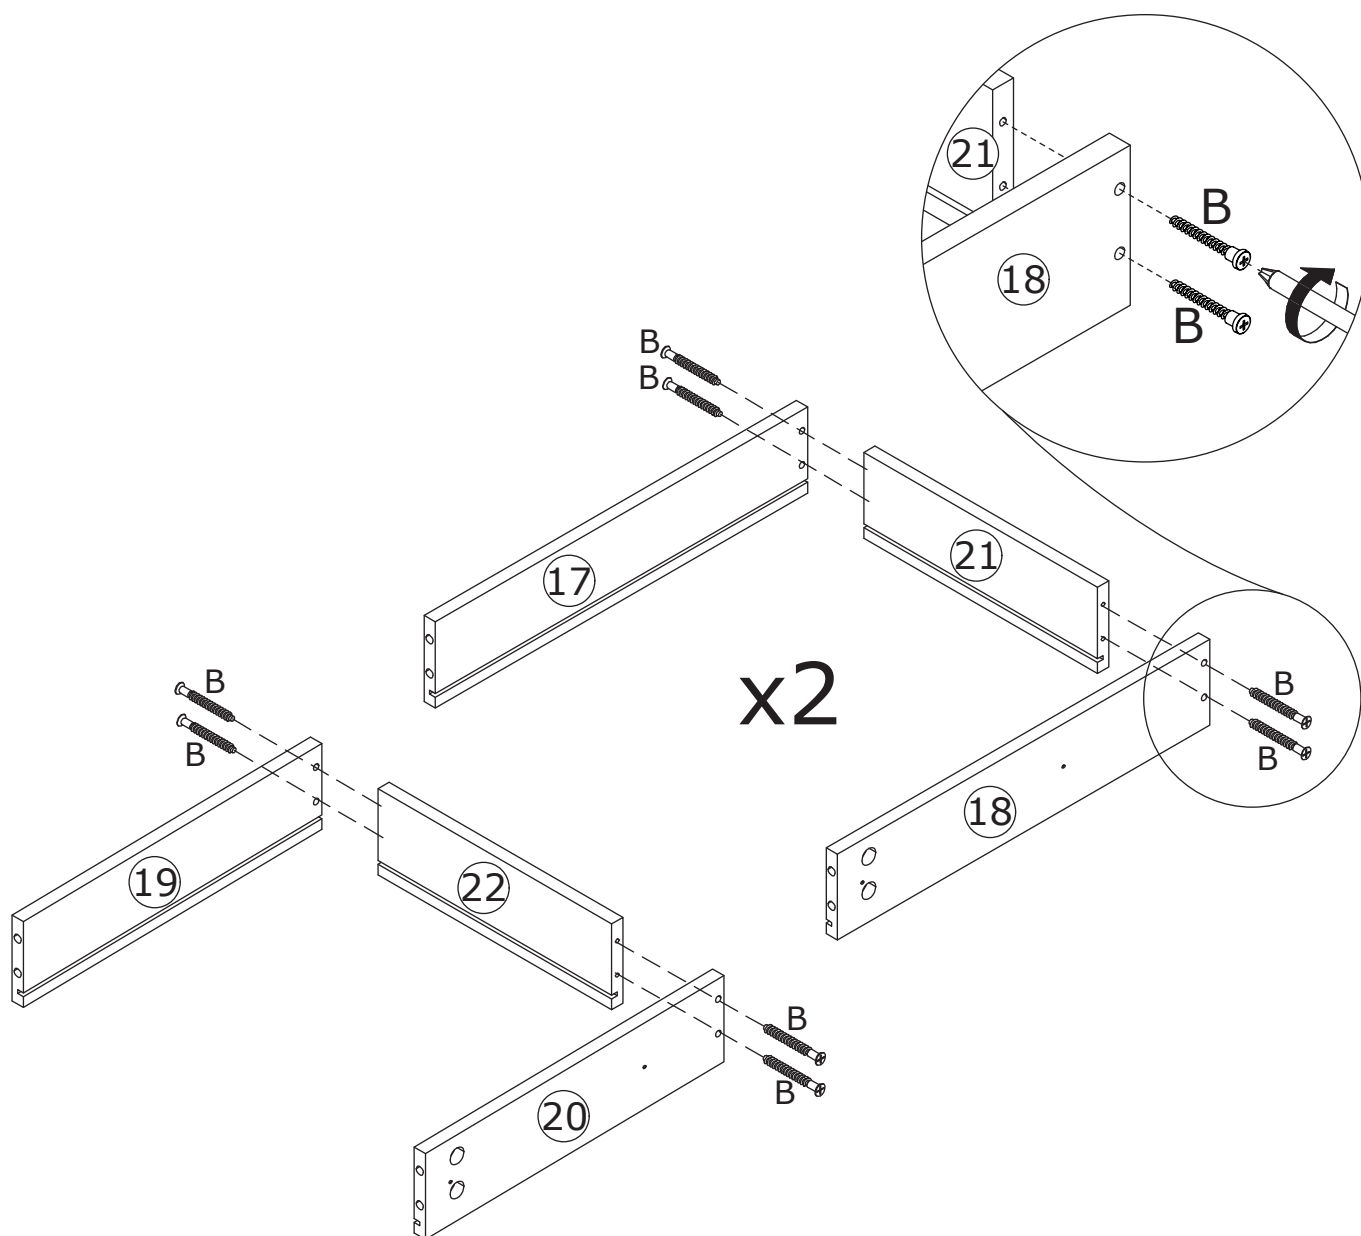



18

Slide plate 23 and 24 along available grooves respectively as shown.

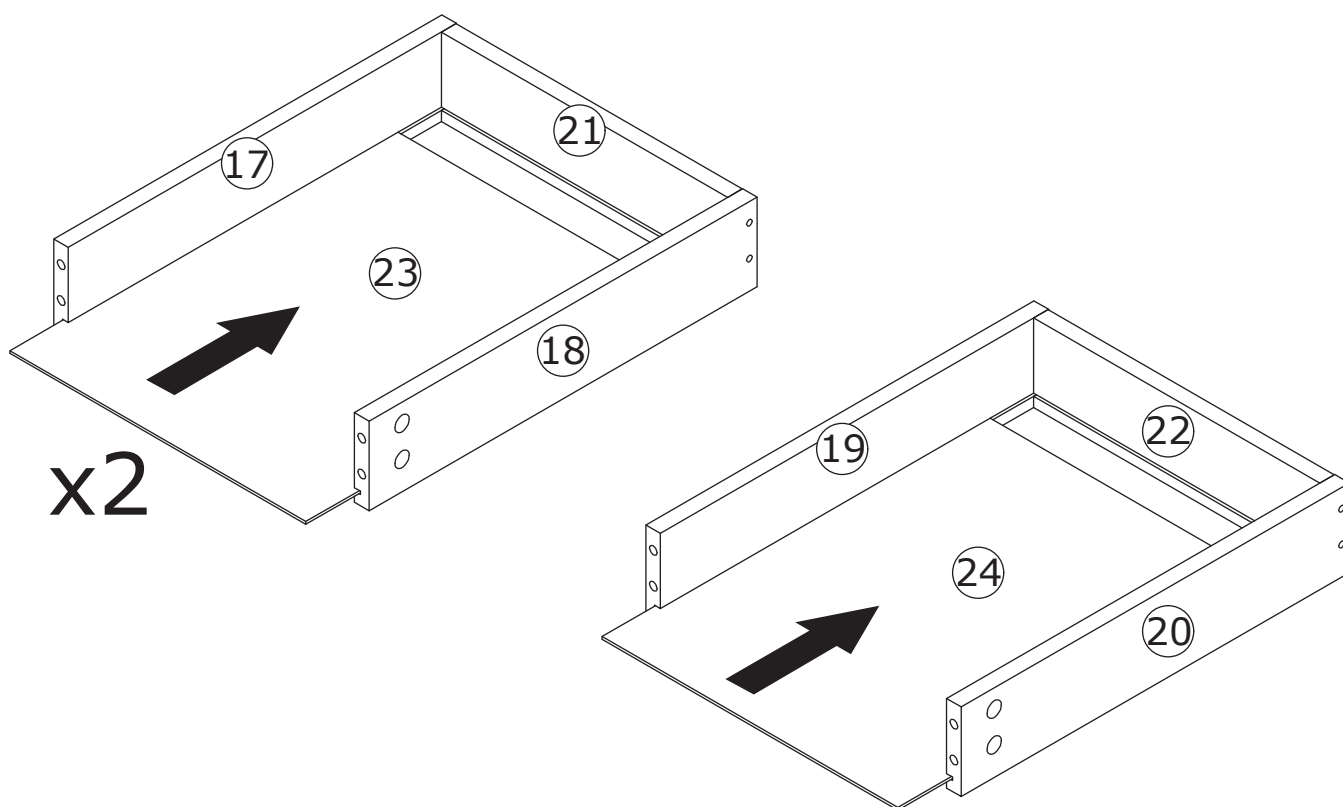


19

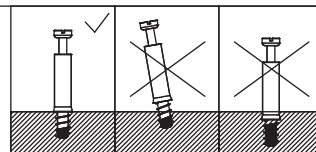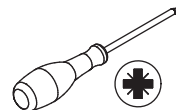



C x 12
CRA0635A

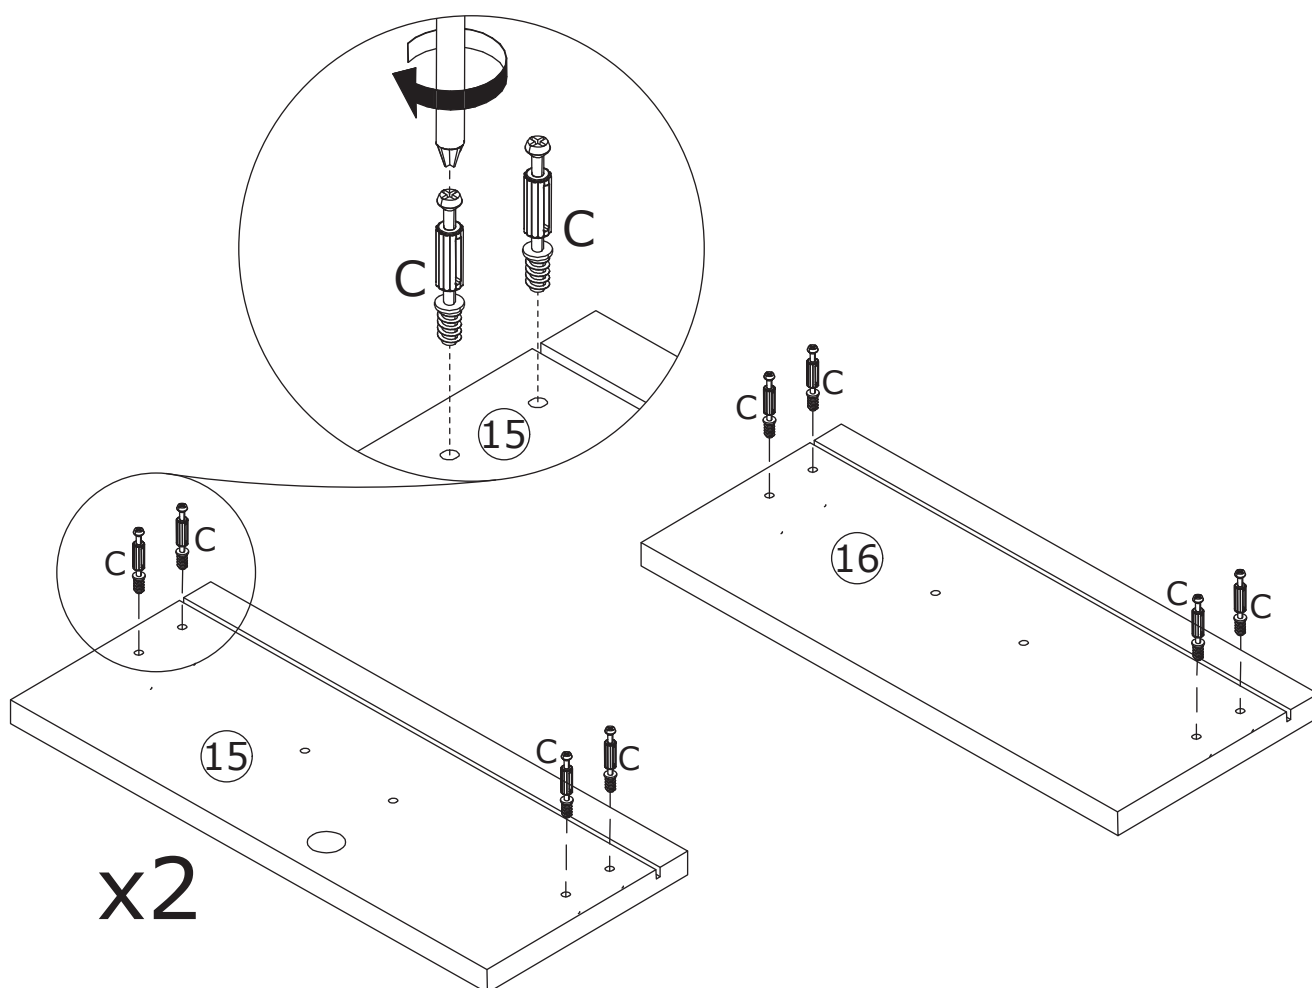


Screw eccentric rod(C) into plate 15 and 16 as shown.




20
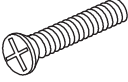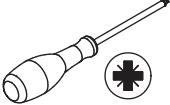
<p>D x 12</p>  <p>CRB1595A</p>	<p>G x 3</p>  <p>M4 x 96 mm</p>	<p>H x 6</p>  <p>CRE0420A</p>	
---	--	--	---

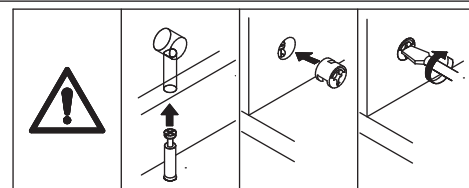


Attach plate 15 and 16 to plate 17, 18 and 19, 20, turn cam lock(D) clockwise to tighten as shown.


Fix handle(G) with screw(H) as shown.

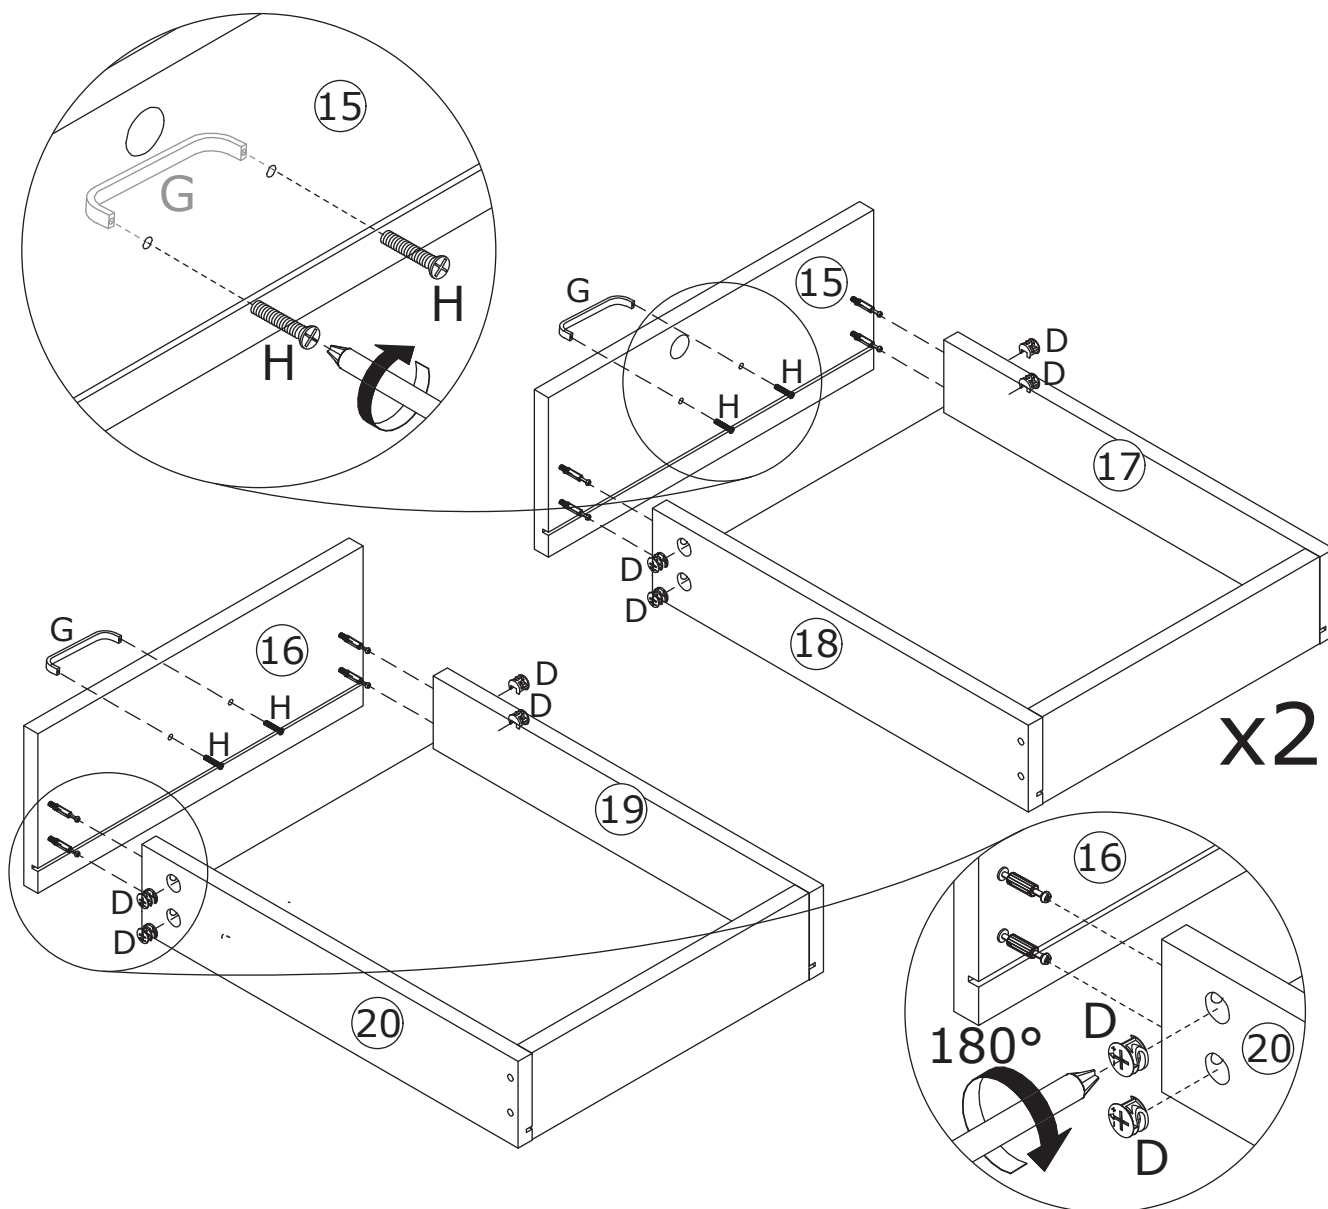

21

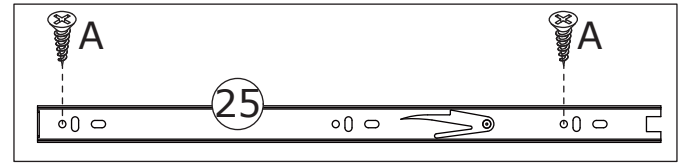


Fix track 25 to plate 17, 18, 19 and 20 with screw(A) as shown.

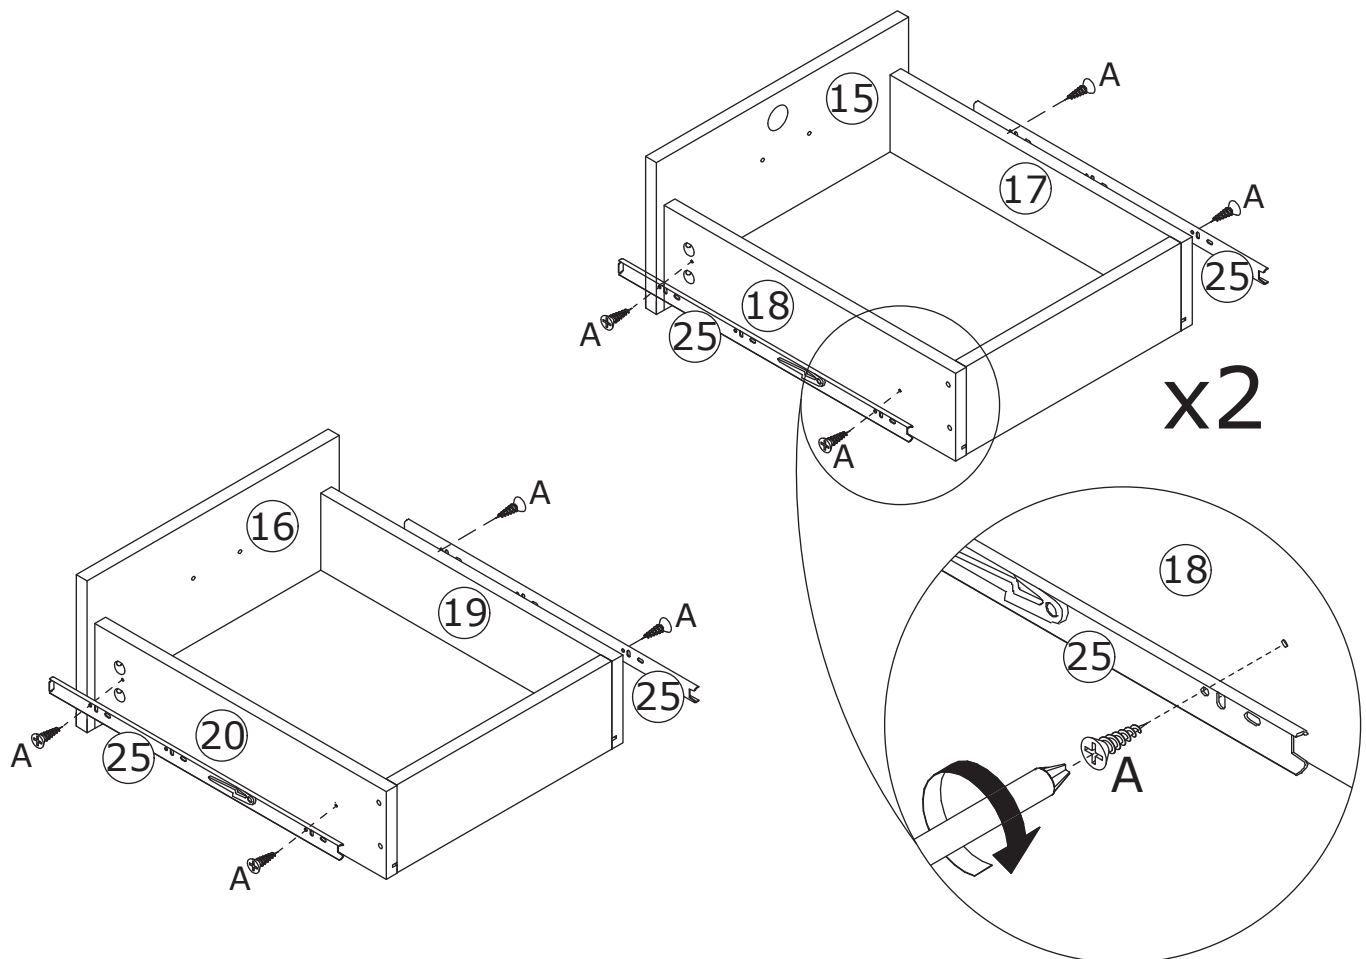


22


I x 2




J x 8




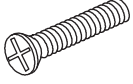
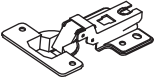
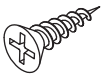
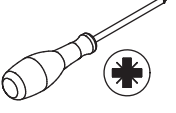
CRD3520A

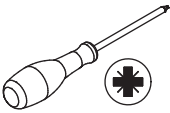


Fix lock(I) to plate 15 with screw(J) as shown.

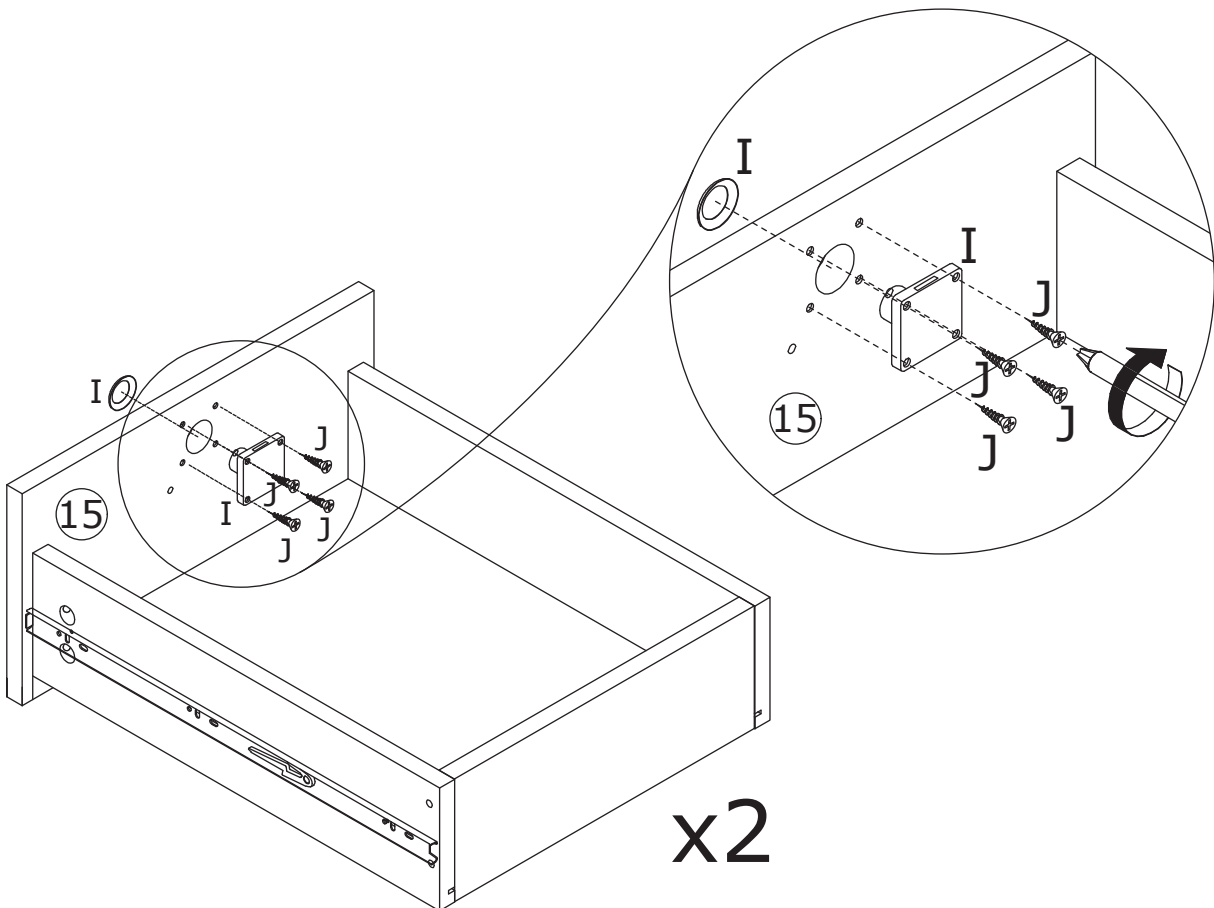

23


<p>G x 1</p>  <p>M4 x 96 mm</p>	<p>H x 2</p>  <p>CRE0420A</p>	<p>K x 2</p>  <p>DGA861C</p>	<p>N x 4</p>  <p>CRD3514A</p>	
--	--	---	---	---

Fix hinge(K) to plate 14 with screw(N) as shown.
Fix handle(G) with screw(H) as shown.

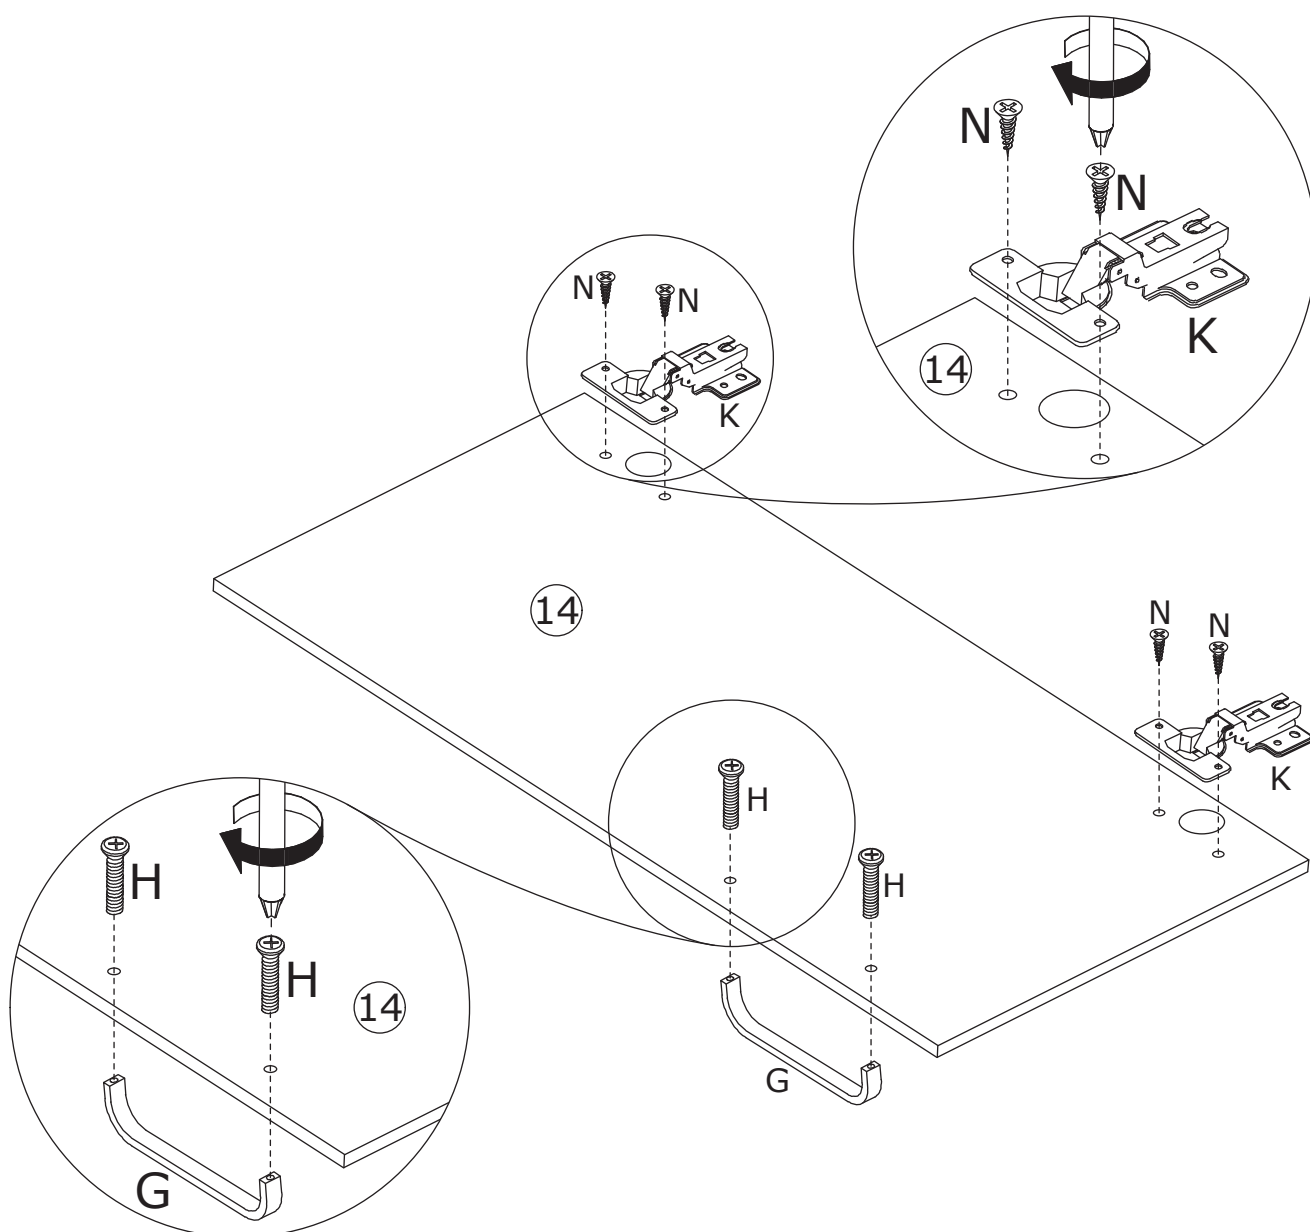


24


N x 8

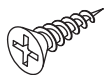


CRD3514A

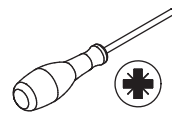



Attach plate 14 to plate 5 by fixing hinges with screw(N) as shown.

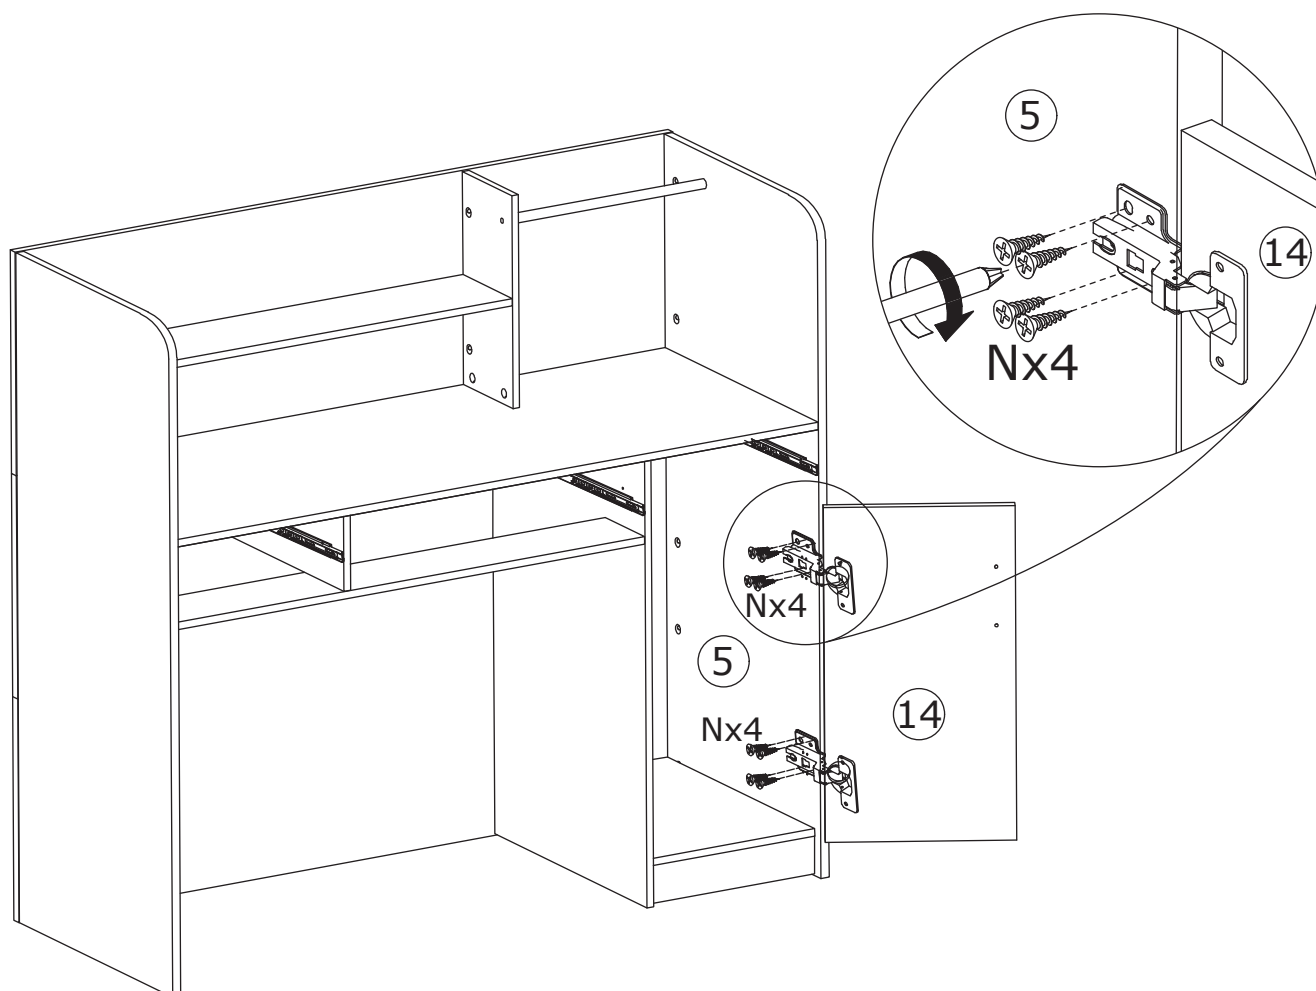

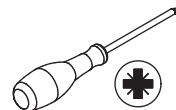


If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

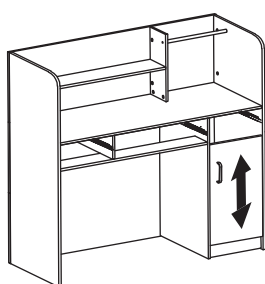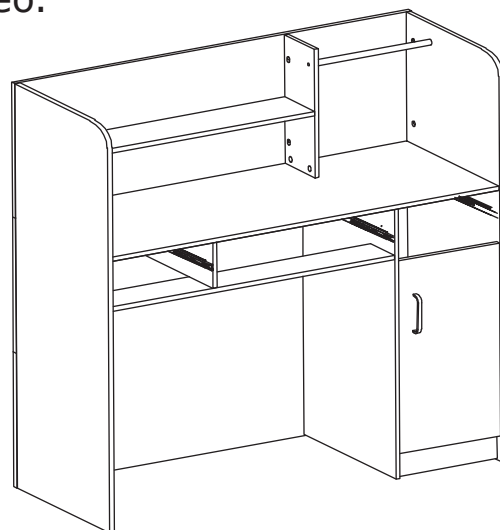



I

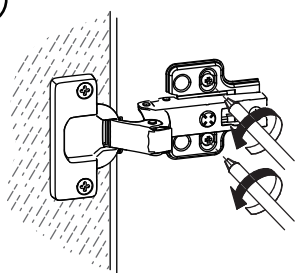


II

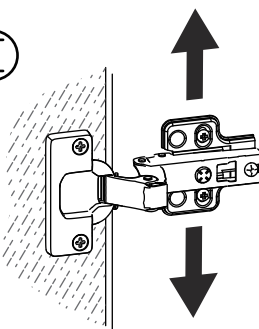


III

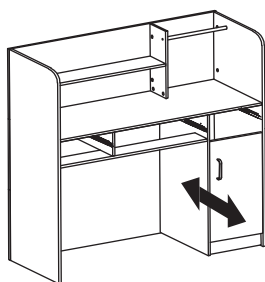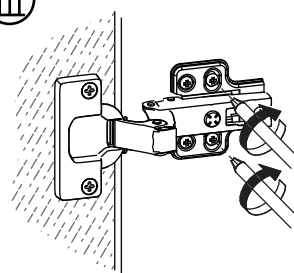



I

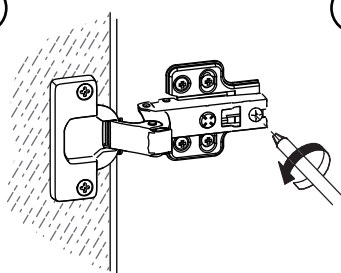


II

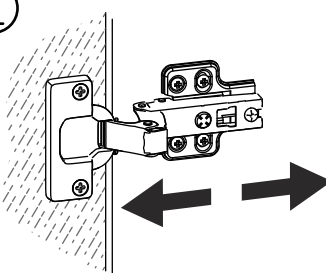


III

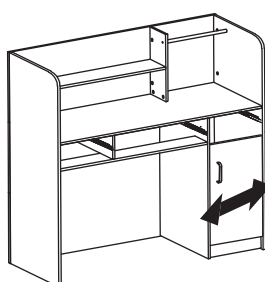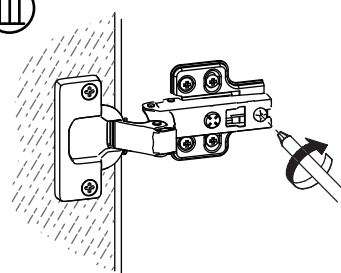

I

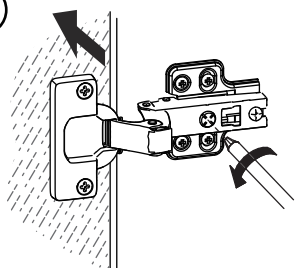






II

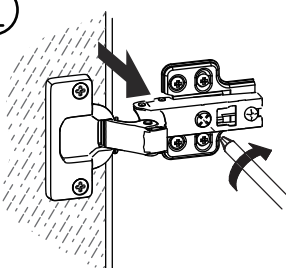


26

<p>L x 1</p>  <p>Ø 60 mm</p>	<p>M x 20</p>  <p>Ø 20 x 1 mm</p>	
---	--	--

Cover cam lock holes using sticker(M).
Put wire box(L) to the hole as shown.

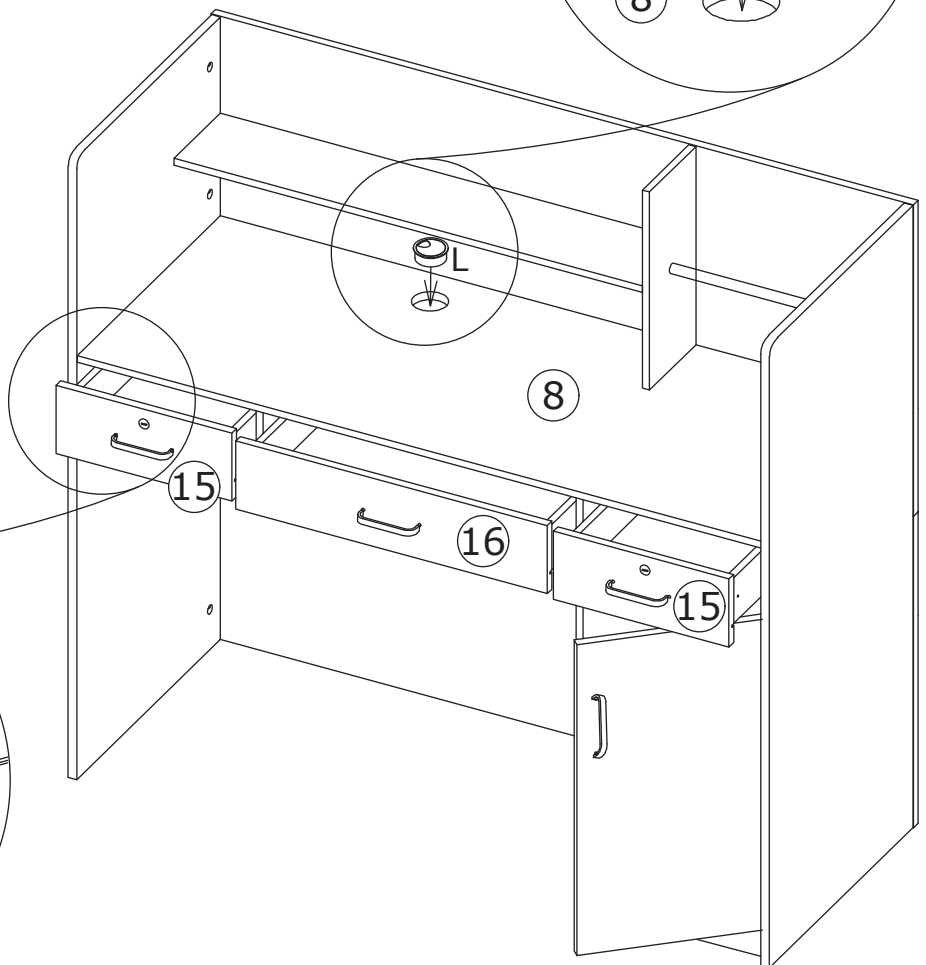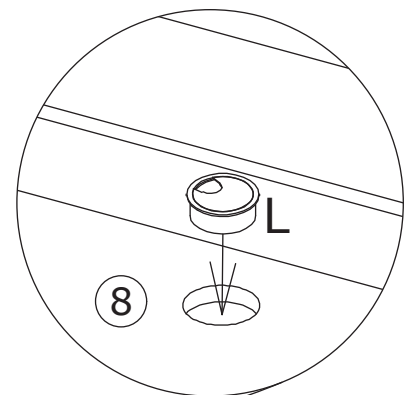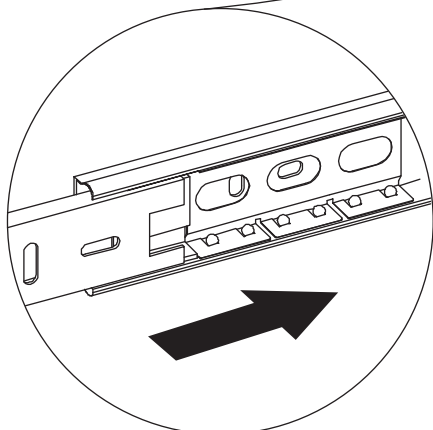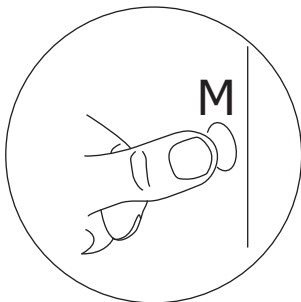
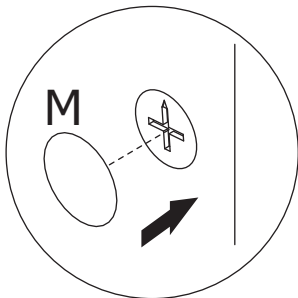


27

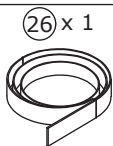

Tips:

Paste the decorative strip in a reasonable position.
Attached picture for suggestion, you can adjust it
according to your request.

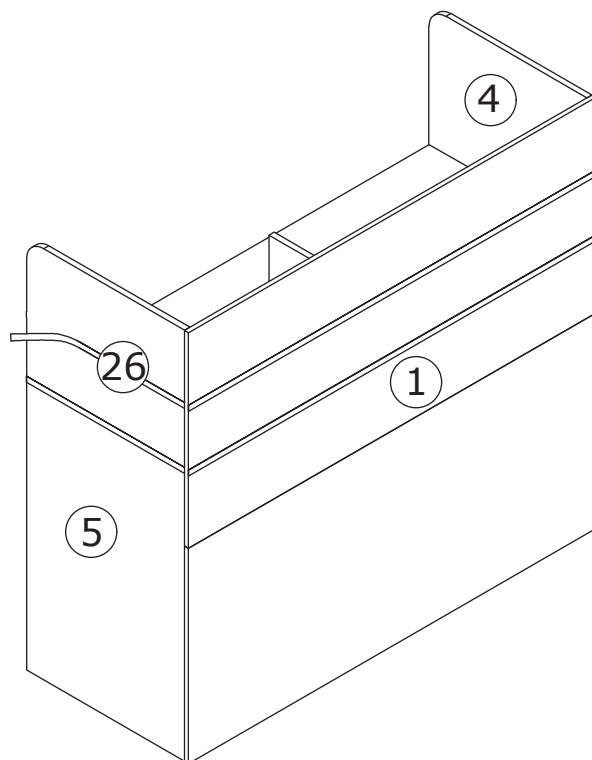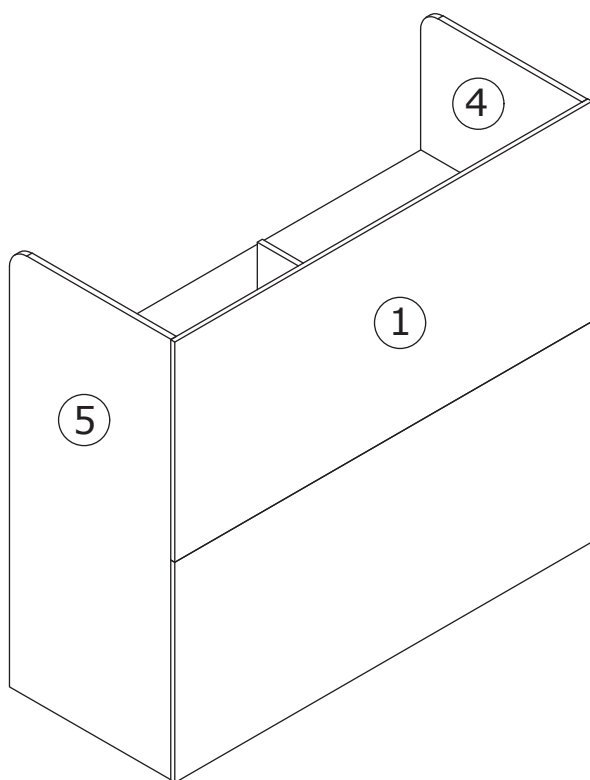

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.