 


INSTRUCTION MANUAL

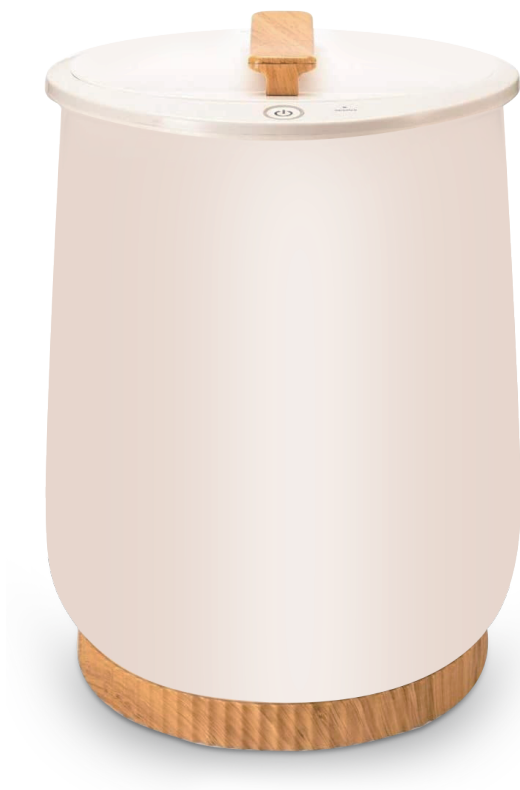

Towel Warmer

Model: E1819N

- 1.Single Button Control
- 2.Ideal Size for Two Extra-large Bath Towels
- 3.Features Fragrance

TABLE OF CONTENTS

3	Caution
3	Important Safety Instructions
4	Warning
5	FCC Information
6	Towel Warmer Package Details
7	Location of Parts and Controls
8	Set Up
8	Using the Towel Warmer
9	Fragrant Disc Instructions
10	Care and Maintenance
10	Specifications
11	Special Features and Benefits
12	Warranty

WARNING:

Be sure to read all instructions, warnings and precautions carefully before using this product.

Failure to do so could result in injury to you or damage to the unit.

CAUTION

TO REDUCE THE RISK OF SERIOUS INJURY, PLEASE NOTE THAT THIS IS NOT A TOY. DO NOT ALLOW CHILDREN TO OPERATE OR PLAY NEAR THE TOWEL & BLANKET WARMER.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

ALL OF THE SAFETY AND OPERATING INSTRUCTIONS SHOULD BE READ, ADHERED TO AND FOLLOWED BEFORE THE UNIT IS OPERATED.

•FOR HOUSEHOLD USE ONLY

•FOR ADULT USE ONLY

•FOR DRY FABRIC ITEMS ONLY

•**SAVE THESE INSTRUCTIONS.**

WARNING



WARNING: To reduce risk of fire, electric shock, or serious injury to persons when using the appliance, follow basic precautions including the

Read all instructions before using the appliance.

- Always unplug the unit from the electrical outlet immediately after using.
- Do not use appliance for anything other than its intended use.
- Do not place or store the unit where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the unit.
- This unit should never be left unattended when plugged in.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Use this unit for its intended use as described in this manual.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over a table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

•SAVE THESE INSTRUCTIONS.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TOWEL & BLANKET WARMER


PACKAGE DETAILS

NO.	ACCESSORY NAME	QUANTITY
1	Single TouchTowel & Blanket Warmer	1
2	User Manual	1

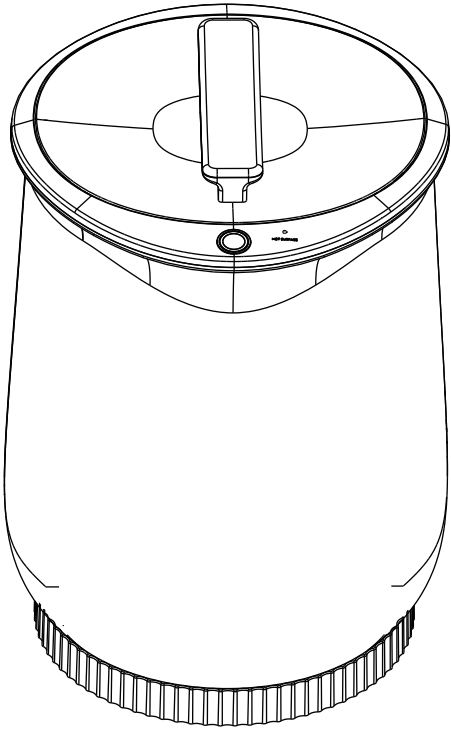 

LOCATION OF PART & CONTROLS

NO.	PART NAME
1	On/Off Button
2	LED Ring
3	Hot Surface Indicator
4	Lid
5	Handle
6	Fragrant Disc Holder
7	Power Cord

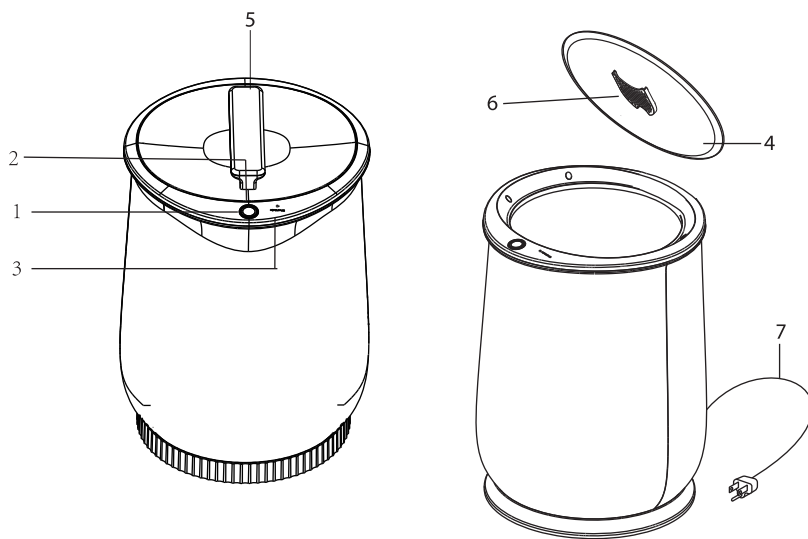 

SET UP

1. Open the Lid and remove any packaging contents.
2. Place the Towel Warmer on a dry, level, hard surface.
3. Insert Plug into a standard 240V outlet.

USING THE TOWEL & BLANKET WARMER

The Towel & Blanket Warmer can comfortably warm up two large cotton bath towels or a personal throw blanket.

 
1. Insert the power cord into an electrical outlet.
2. Open the LID and place ONLY DRY towel(s) or blanket inside.
***NOTE: Placing damp or wet towels inside the towel warmer can damage the unit and pose serious safety risks.**
3. Close the LID.
4. Press the ON/OFF BUTTON. The LED ring will turn red, indicating that the unit is heating.
5. When the temperature of the INTERIOR SURFACE exceeds 122°F / 50°C, the HOT SURFACE INDICATOR will light up. When lit, the INTERIOR SURFACE of the Towel Warmer is unsafe to touch.
6. 15 minutes is typically sufficient for heating 2 bath towels.
***Note: The Towel Warmer could reach approximately 266°F / 130°C and remain hot for the duration of the heating cycle.**
7. Open LID to remove towel(s) or blanket.
***Note: To avoid damage to the unit, gently raise the lid when removing items.**
8. Press the ON/OFF BUTTON at any time to stop or start the heating cycle.
9. The unit will automatically turn off after 60 minutes.
10. After the heating cycle is complete, the INTERIOR SURFACE of the Towel & Blanket Warmer will remain dangerous to touch until the HOT SURFACE INDICATOR turns off.

FRAGRANT DISC INSTRUCTIONS

This fragrance disc additionally design is for some users who like to use aromatherapy tablets or essential oils when warming towels.

PS: Aromatherapy tablets, fragrance disc or essential oils are not included with the product

- 1.Remove the Fragrance Disc from its sealed plastic bag.
- 2.Slide it into the Fragrance Disc Holder located on the underside of the lid.

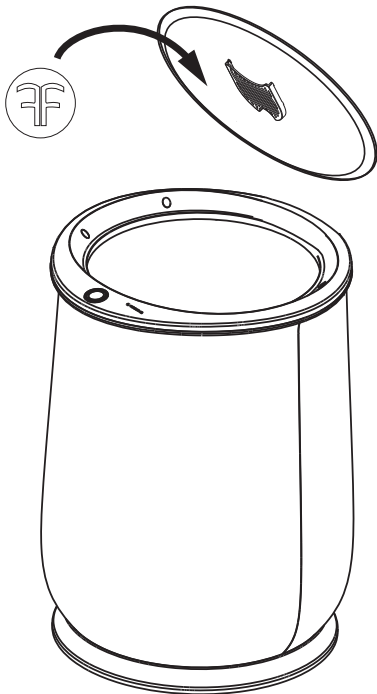

- The Fragrance Disc is an innovative air freshener for your home, which also effectively eliminates odors.
- Fragrant is a breakthrough in the home fragrance world! Prepare fragrance disc and use with this product will bring you better enjoy experience.

FRAGRANT DISC INSTRUCTIONS

1. Use cotton or cotton blend towels or fabrics.
2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Use only with DRY fabrics. Note: Do NOT use with damp or wet articles.
4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.
5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.
*Note: Condensation on the lid and interior of the product is normal.
6. When used with the Towel & Blanket Warmer, the Fragrance Disc may warp over time.
7. The Fragrance Disc can last for up to two years at room temperature. The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer. Replace the disc when you no longer smell the scent.

CARE AND MAINTENANCE


REMOVE THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE CLEANING.
WIPE WITH A DRY CLOTH ONLY WHEN UNIT IS COOL TO THE TOUCH.

SPECIFICATIONS

SPECIFICATIONS	North America	European	UK	Japan
Rated Voltage	120V AC	230V AC	230V AC	100V AC
Frequency	60Hz	50/60HZ	50Hz	50/60Hz
Wattage Max	450W	400W	450W	330W
Weight	4.8kg (10.6lbs)	4.8kg (10.6lbs)	4.8kg (10.6lb8)	4.8kg (10.6lbs)
Dimensions	19"(h)x13"(w) x13"(d)	19"(h)x13"(w) x13"(d)	19"(h)x13"(w) x13"(d)	19"(h)x13"(w) x13"(d)

SPECIAL FEATURES AND BENEFITS

 - The generous cavity has the capacity to hold two large bath towels or one personal throw blanket.
- The simple, single-touch controls provide you with up to 60 minutes of warming.
- Add a fresh, odor-neutralizing scent to your towels and blankets by inserting a Fragrance Disc into the disc holder.
- The double walled insulated lid keeps heat in while remaining cool to the touch.

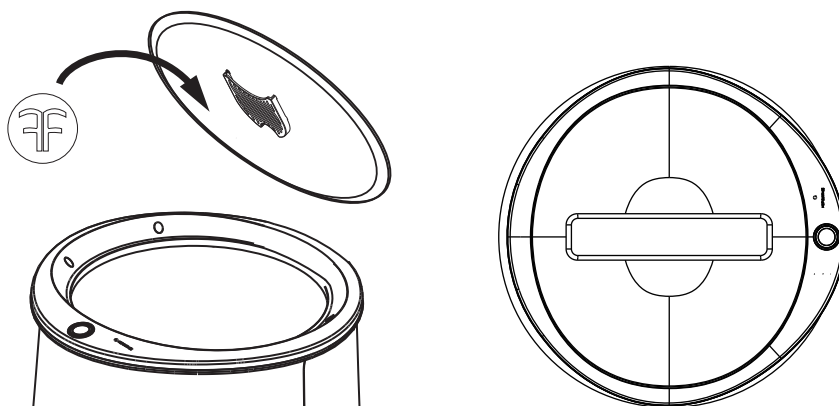

WARRANTY

ONE YEAR LIMITED WARRANTY

Thanks to buy our towel warmer,if you find out any quality problem,please provide the images and video to show the problem during one year;We will let our engineer check and confirm;And then help you to solve the problem;Enjoy your SPA time.